


# 0.584.004 Programming Instructions

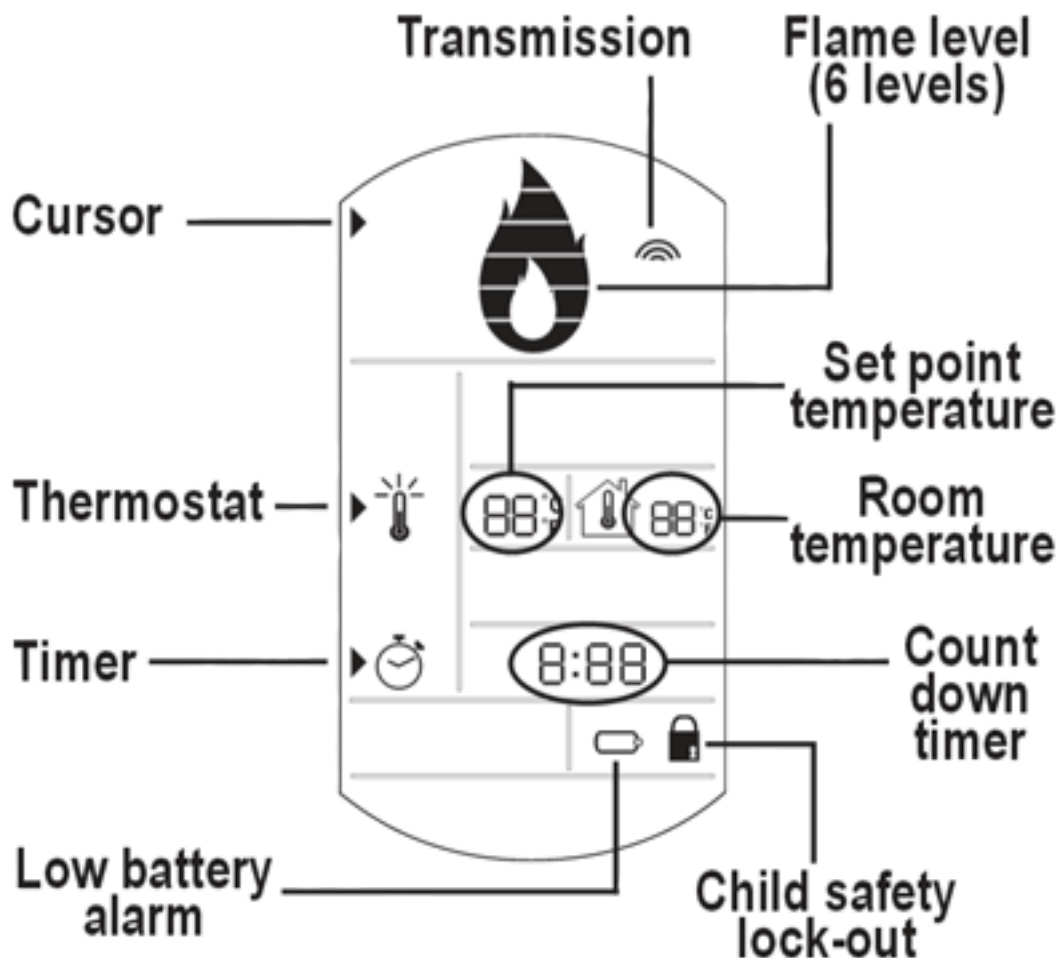

- 1) Use the UP or DOWN key on the Transmitter until the cursor (small triangle) is left of the clock icon.
  - 2) Press the LEFT key ten times.
  - 3) Use the UP or DOWN key to change the channel to: 005
  - 4) Press the LEFT key once more to exit programming.
- \*Pressing the RIGHT key in programming mode changes from Fahrenheit to Celsius and back.