



Illustrated Parts List

Model Series

126T00

TYPE NUMBERS
0004 through 7932.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing	7
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	5
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

126T00

 
1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.







1058 OPERATOR'S MANUAL



















1330 REPAIR MANUAL

1019 LABEL KIT

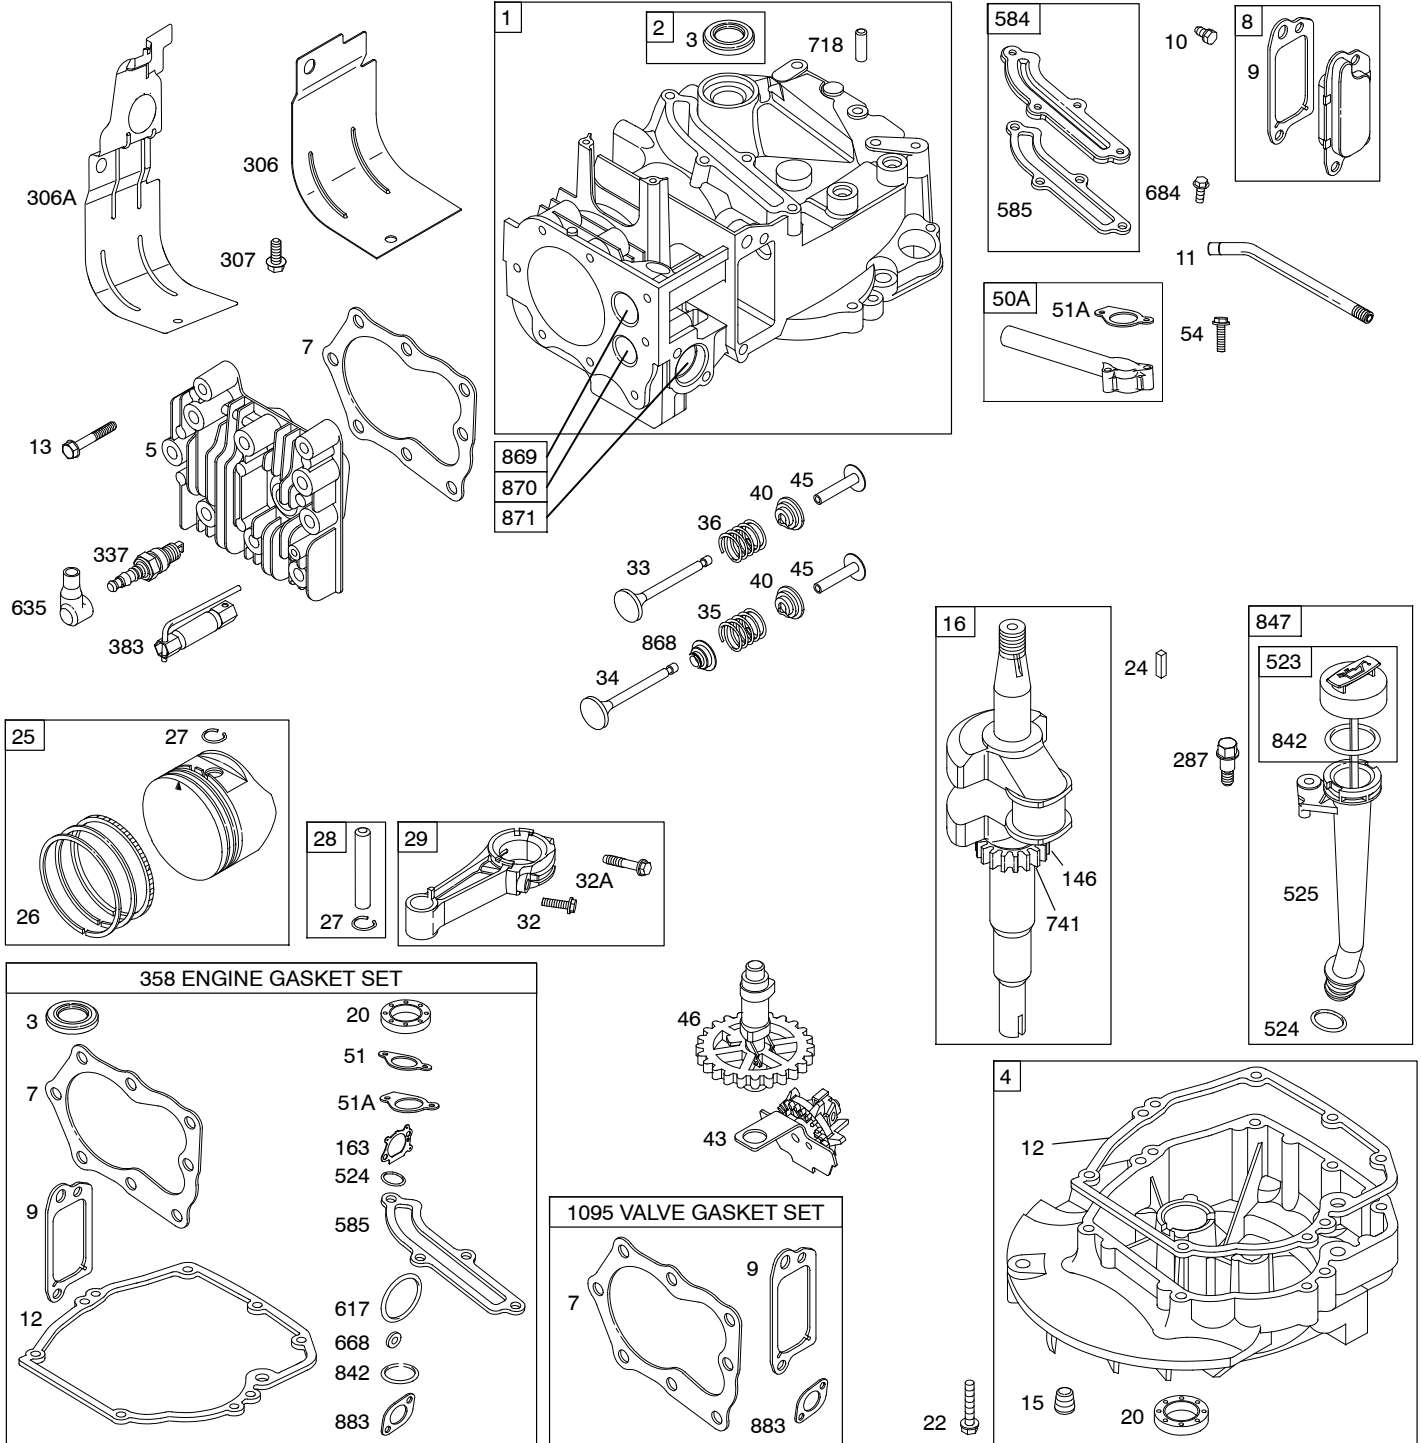


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3728-2 Assemblies include all parts shown in frames. 11/02/2011

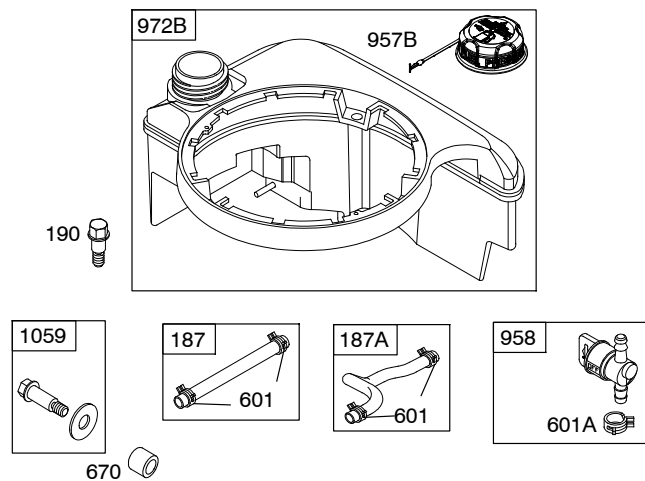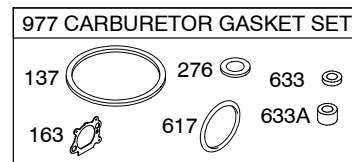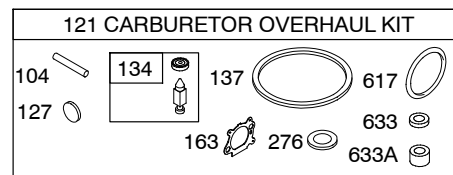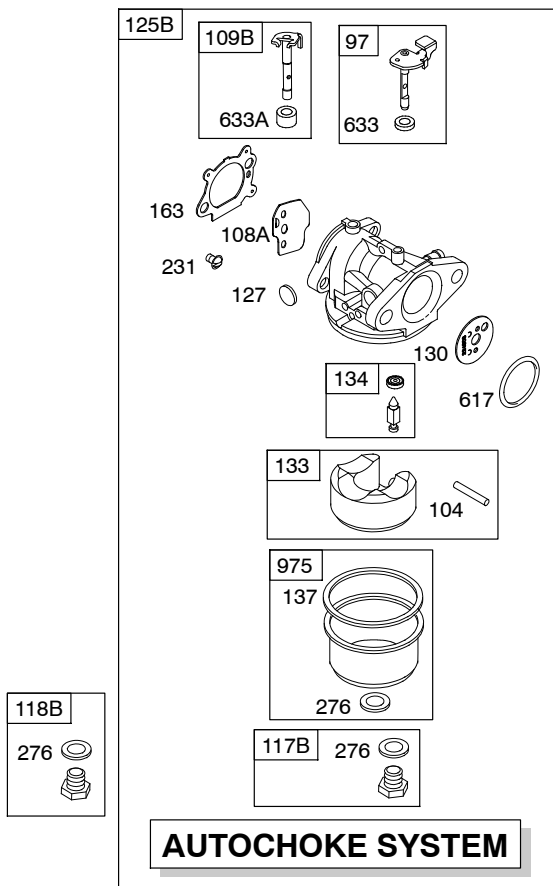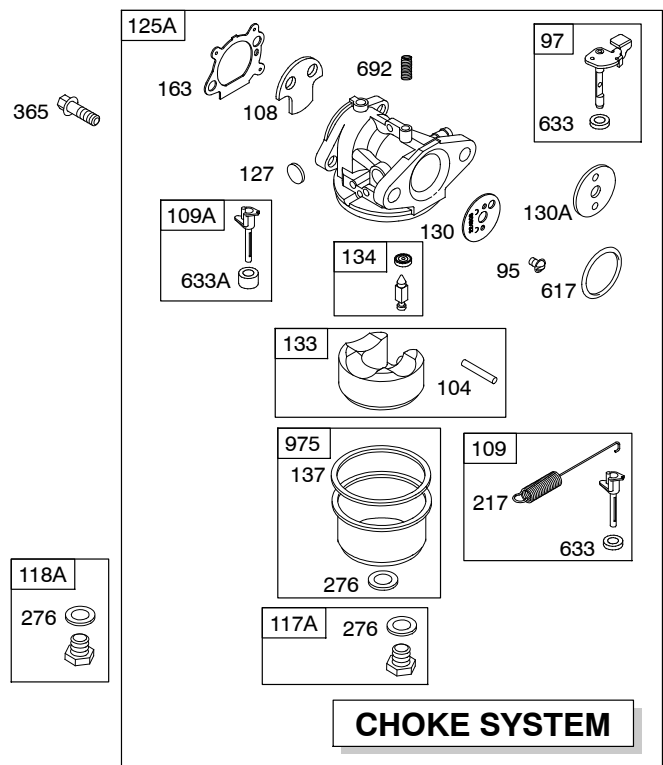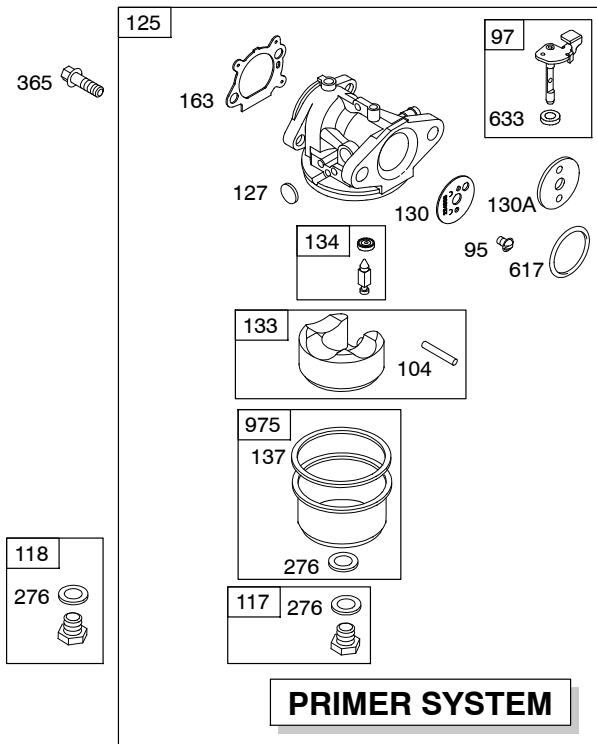      


 
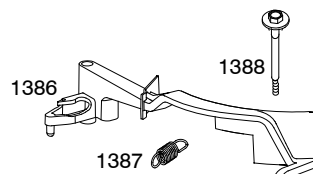 
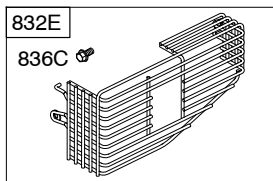 
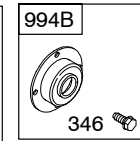 
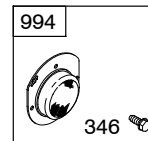 
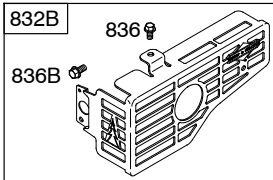 
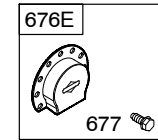 
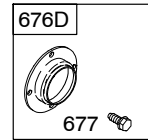 
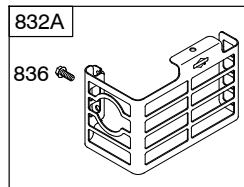 
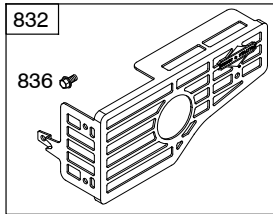 
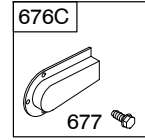 
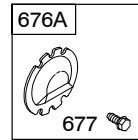 
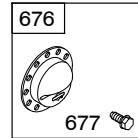 
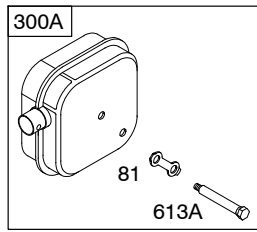 
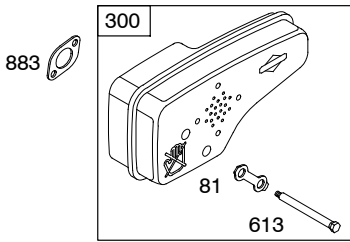 
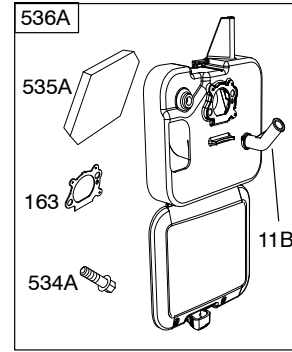 
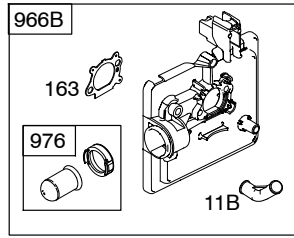 
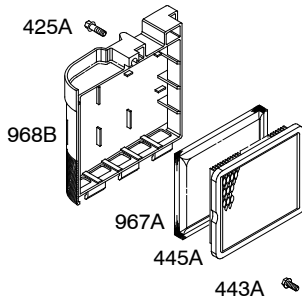 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-4 Assemblies include all parts shown in frames. **11/02/2011**










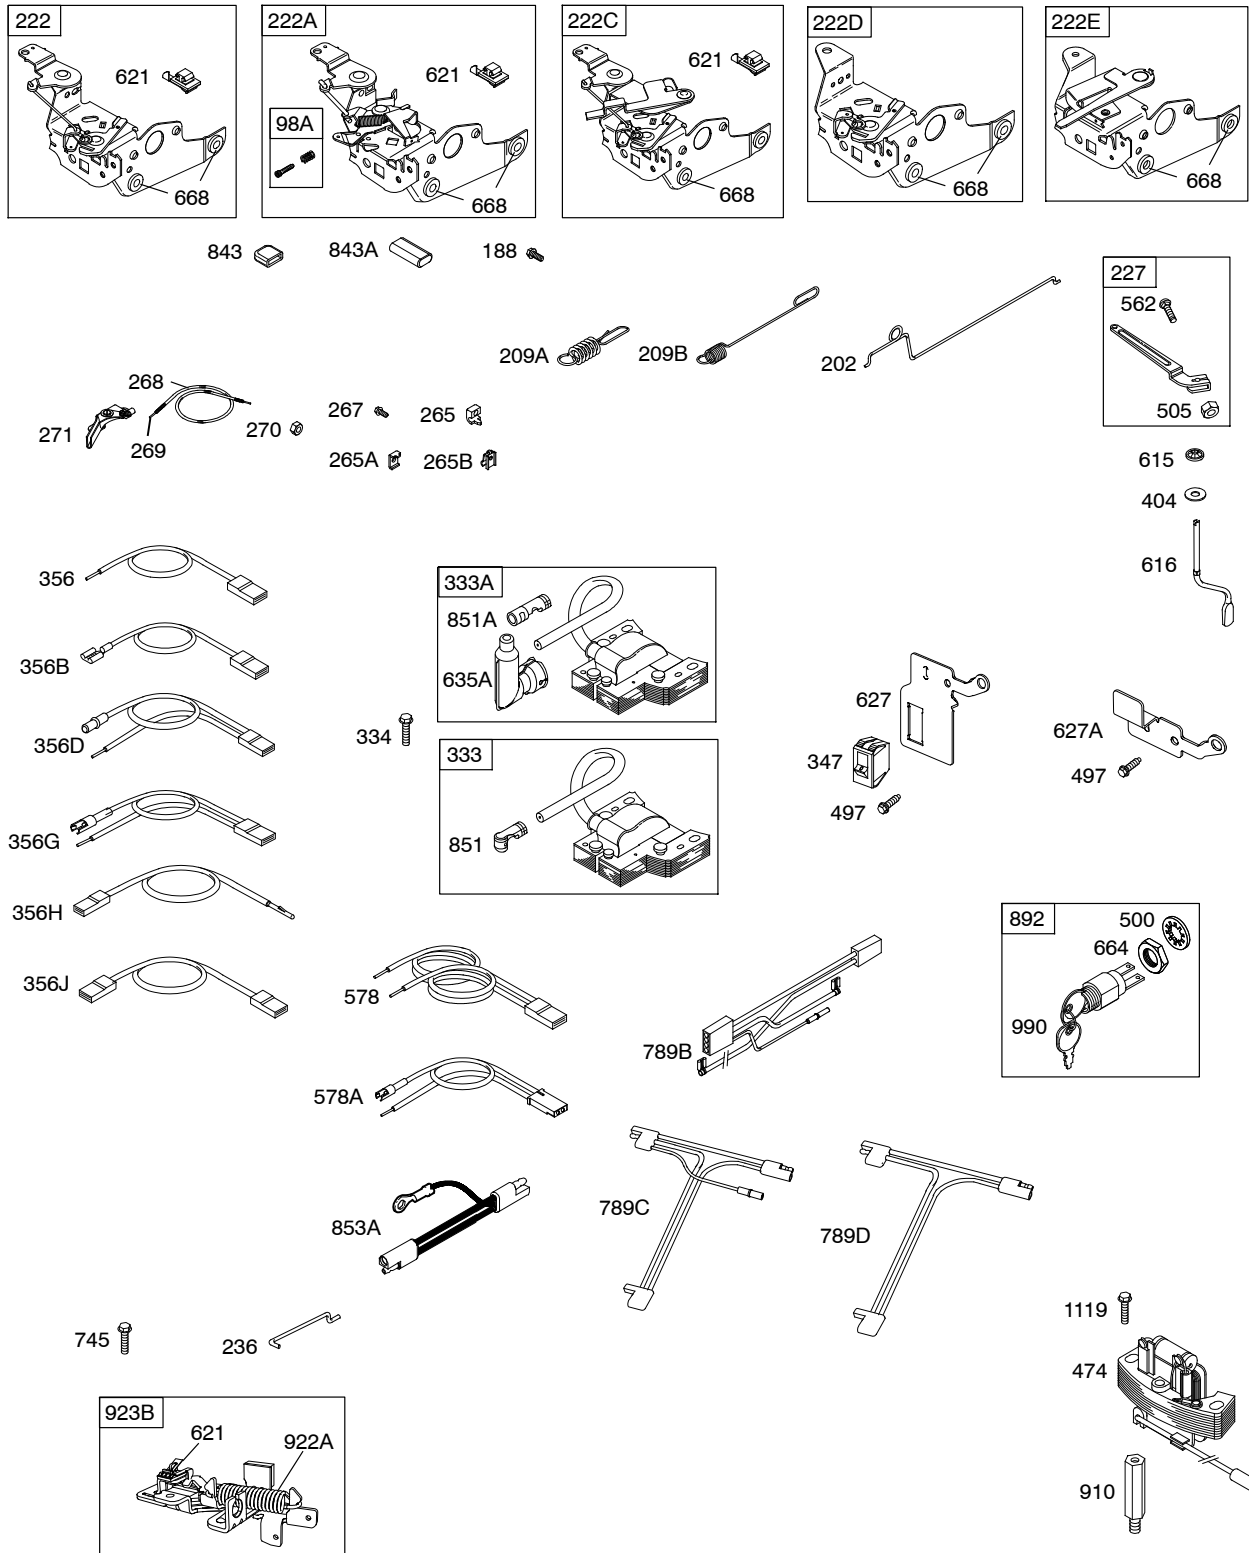 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-5 Assemblies include all parts shown in frames. **11/02/2011**

                   126T00

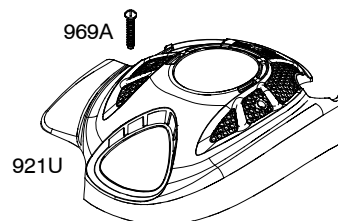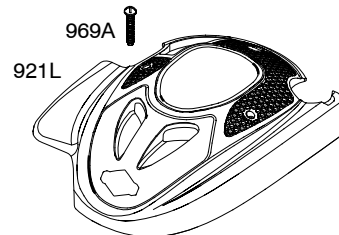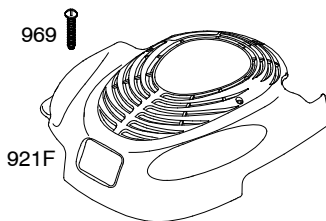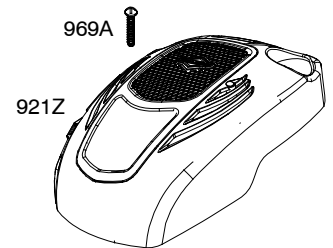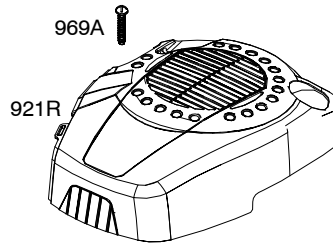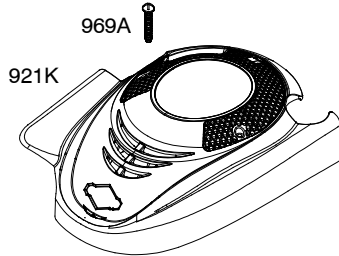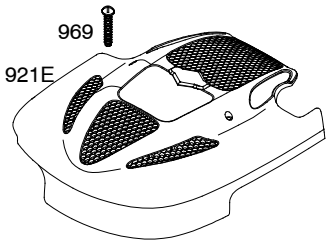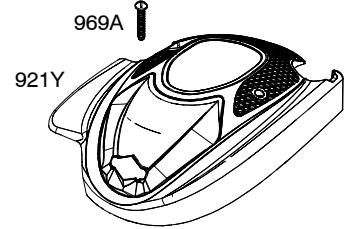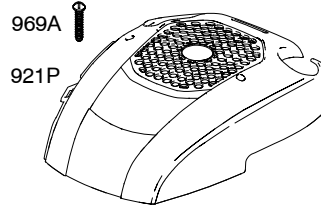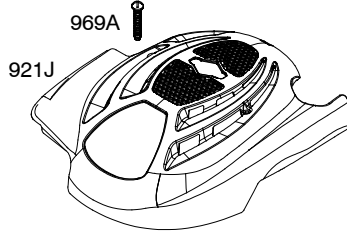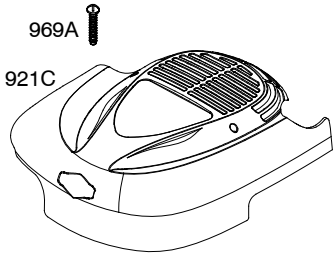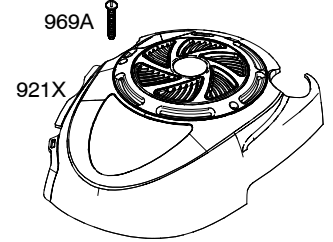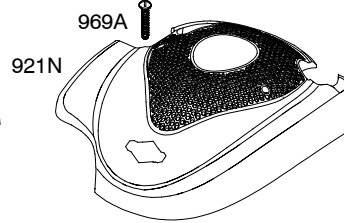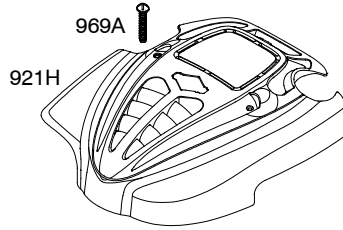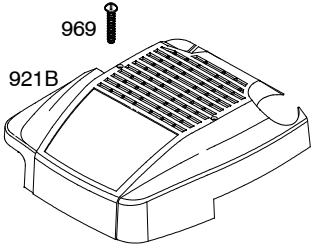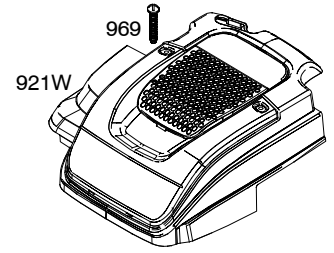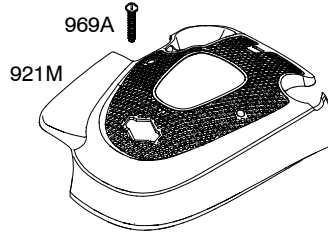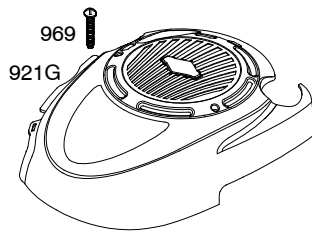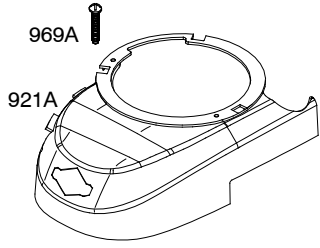

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-6 Assemblies include all parts shown in frames. 11/02/2011

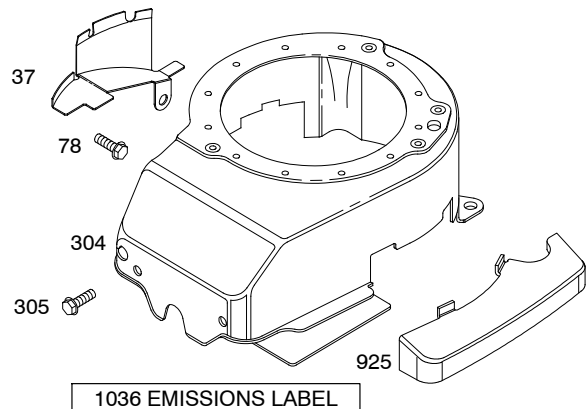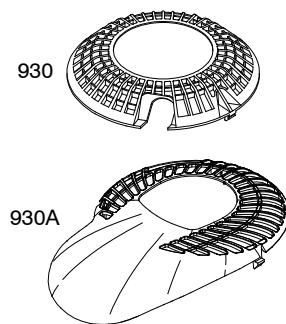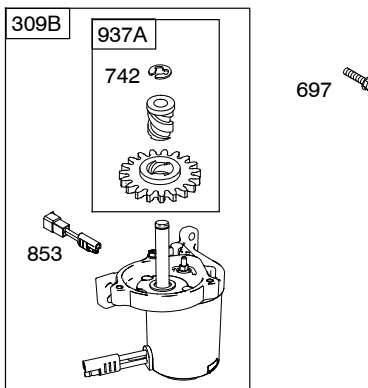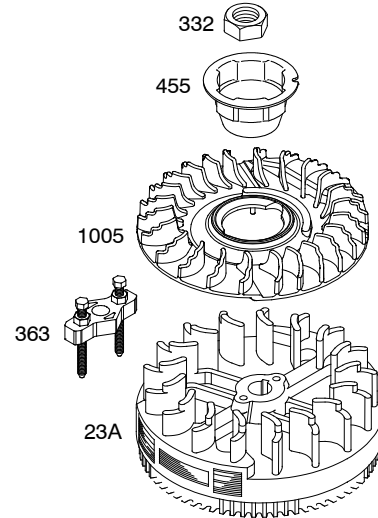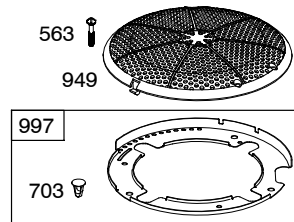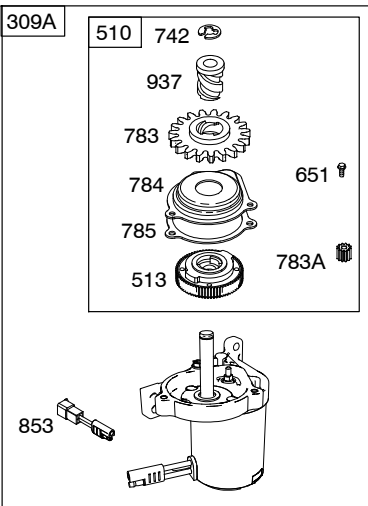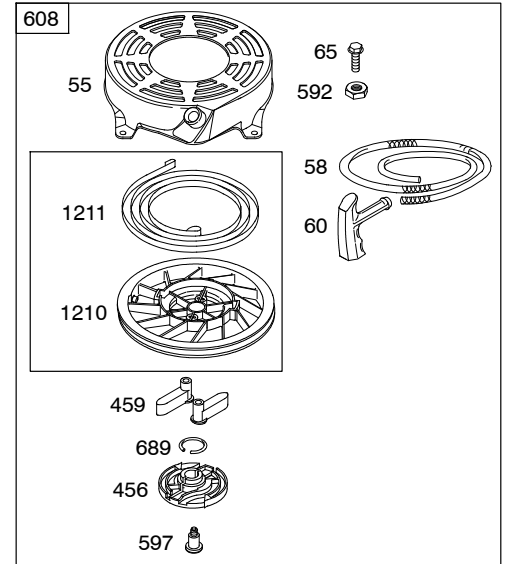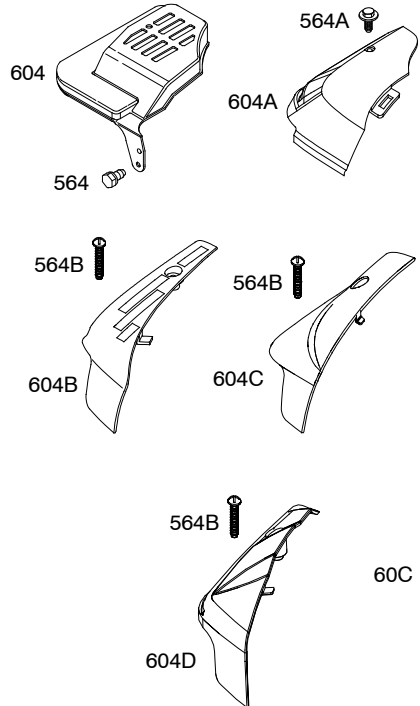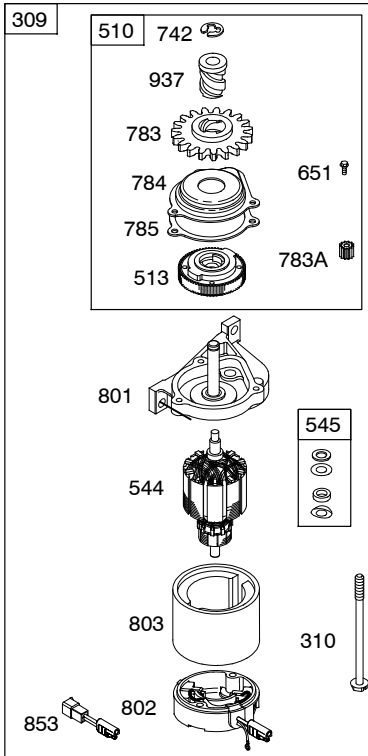          

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-7 Assemblies include all parts shown in frames. **11/02/2011**

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590401	Cylinder Assembly (Used After Code Date 11063000). ----- Note ----- 697322 Cylinder Assembly (Used Before Code Date 11070100).	7	★ 799875	Gasket-Cylinder Head (Used After Code Date 11063000). ----- Note ----- 692249 Gasket-Cylinder Head (Used Before Code Date 11070100).	10	691125	Screw (Breather Assembly)
2	399269	Kit-Bushing/Seal (Magneto Side)	8	590395	Breather Assembly (Used After Code Date 11063000). ----- Note ----- 695250 Beather-Assembly (Used Before Code Date 11070100).	11	691781	Tube-Breather
3	★299819S	Seal-Oil (Magneto Side)				11B	691923	Tube-Breather
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0006, 0007, 0122, 0394.	9	★ 699472	Gasket-Breather (Used After Code Date 11063000). ----- Note ----- 699833 Gasket-Beather (Used Before Code Date 11070100).	12	★692232	Gasket-Crankcase (Cylinder Head)
5	590411	Head-Cylinder (Used After Code Date 11063000). ----- Note ----- 691160 Head-Cylinder (Used Before Code Date 11070100).				13	590422	Screw (Used After Code Date 11063000). ----- Note ----- 690912 Screw (Cylinder Head) (Used Before Code Date 11070100).
						15	691680	Plug-Oil Drain (Square Socket)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	691450	Crankshaft ----- Note ----- 691451 Crankshaft Used on Type No(s). 0004,0010,0011,0015, 0050,0060,0121,0135, 0138,0148,0153,0158, 0159,0169,0172,0173, 0192,0194,0197,0199, 0203,0213,0217,0235, 0243,0253,0254,0258, 0275,0276,0278,0279, 0281,0284,0286,0291, 0294,0307,0318,0319, 0329,0339,0341,0359, 0366,0377,0380,0381, 0383,0392,0396,0454, 0475,0479,0487,0491, 0555,0615,0660,0826, 1064,1172,1724,1728, 1729,1750,1767,1791, 1802,1807,1817,1820, 1822,1824,1833,1963, 2003,2004,2011,2016, 2021,2022,2034,2041, 2091,2388,3281,4011, 4021,4121,4175,4199, 4244,4329,4568,4824, 4852,5213,5244,5329, 6015,6021,6172,6194, 6199,6217,6235,6243, 6244,6254,6258,6275, 6276,6281,6286,6307, 6319,6339,6615,6824, 7341,7381,7852. 797372 Crankshaft Used on Type No(s). 0114,0128,0129,0130, 0295,0301,0304,0305, 0321,0342,0343,0344, 7128,7129,7304,7305, 7344. 694850 Crankshaft Used on Type No(s). 0289,0298. 696290 Crankshaft Used on Type No(s). 0297,0335. 795499 Crankshaft Used on Type No(s). 0190,0222,0256,0261, 0326,0330,0331,0332, 0374,0379,0403,5332, 7261,7326,7330,7374, 7403.			797018 Crankshaft Used on Type No(s). 0309,0312,0313,0349, 0365,0366,5313,7366. 691452 Crankshaft Used on Type No(s). 0007,0016,0122,0126, 0127,0147,0150,0151, 0154,0163,0164,0168, 0198,0218,0221,0242, 0246,0255,0257,0262, 0277,0279,0280,0282, 0290,0306,0311,0317, 0333,0357,0367,0370, 0375,0391,0393,0394, 0397,0402,0480,0568, 0680,0878,1727,1733, 1734,1737,1738,1739, 1740,1748,1749,1794, 1801,1803,1804,1805, 1808,1810,1814,1816, 1818,1821,1823,1825, 1826,1827,1829,1830, 1831,1832,1835,1837, 1839,1844,1845,1846, 1847,1849,1852,1853, 1904,1914,1917,1926, 1941,1958,1965,1966, 1992,1995,2006,2008, 2010,2112,2014,2015, 2017,2023,2027,2035, 2148,2149,2304,3198, 3279,3280,4015,4135, 4163,4164,4169,4242, 4680,4816,4823,4825, 4829,4830,4837,4849, 4995,5262,5823,6126, 6135,6169,6198,6218, 6242,6277,6280,6317, 6333,6357,6367,6375, 6621,6623,6657,6679, 6680,6695,6816,6825, 6829,6830,6837,6845, 6849,6941,7306,7878. 797681 Crankshaft Used on Type No(s). 0006,0018,0334,0523, 6356.			694849 Crankshaft Used on Type No(s). 0005,0131,0179,0188, 0191,0260,0356,2013. 695242 Crankshaft Used on Type No(s). 0026. 696009 Crankshaft Used on Type No(s). 0031,0115,0123,0124, 0125,0139,0181,0182, 0183,0184,0193,0204, 0206,0207,0216,0219, 0220,0224,0231,0233, 0236,0239,0240,0241, 0271,0285,0299,0303, 0322,0323,0324,0325, 0327,0328,0336,0362, 0373,0933,1426,1840, 1841,3205,3206,3212, 3216,3217,4181,4183, 4184,4216,4219,4231, 4233,4236,4240,4241, 5123,5184,5207,5216, 5217,5219,5226,5238, 5239,5240,5285,5322, 5323,5324,5373,5507, 5517,5519,5523,5524, 5540,5573,5584,5585, 6336,6603,6628,7183, 7193,7206,7212,7216, 7233,7241,7325,7841. 791061 Crankshaft Used on Type No(s). 0030,0116,0209,0225, 0227,0230,0234,0237. 694478 Crankshaft Used on Type No(s). 0521,0538. 691454 Crankshaft Used on Type No(s). 0283,0539,1706,4706, 6246,6539,6683,6706. 694079 Crankshaft Used on Type No(s). 1701. 797019 Crankshaft Used on Type No(s). 0364.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	★399781S	Seal-Oil (PTO Side)	25	590404	Piston Assembly (Standard) (Used After Code Date 11063000).	26	590402	Ring Set (Standard) (Used After Code Date 11063000).
22	691092	Screw (Crankcase Cover/ Sump)			----- Note ----- 797302 Piston Assembly (Standard) (Used After Code Date 09041600 and Before Code Date 11070100).			----- Note ----- 797304 Ring Set (Standard) (Used After Code Date 09041600 and Before Code Date 11070100).
23A	691987	Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). 0004, 0005, 0006, 0007, 0010, 0030, 0050, 0114, 0116, 0122, 0128, 0129, 0130, 0131, 0164, 0169, 0179, 0188, 0190, 0191, 0192, 0198, 0203, 0209, 0213, 0222, 0225, 0227, 0230, 0234, 0237, 0256, 0261, 0281, 0282, 0289, 0290, 0291, 0295, 0298, 0301, 0304, 0305, 0309, 0312, 0317, 0321, 0326, 0330, 0331, 0332, 0334, 0335, 0342, 0343, 0344, 0364, 0365, 0366, 0374, 0375, 0379, 0394, 0403, 0523, 0826, 0933, 1064, 1137, 1802, 1807, 1822, 1849, 2013, 2016, 3198, 3281, 4164, 4242, 4824, 4849, 5213, 5332, 6198, 6242, 6281, 6317, 6375, 6824, 6849, 7128, 7129, 7261, 7304, 7305, 7326, 7330, 7344, 7366, 7374, 7403.			795429 Piston Assembly (Standard) (Used After Code Date 07090300 and Before Code Date 09041700).			795431 Ring Set (Standard) (Used After Code Date 07090300 and Before Code Date 09041700).
24	222698S	Key-Flywheel			791097 Piston Assembly (Standard) (Used Before Code Date 07090400).			791098 Ring Set (Standard) (Used Before Code Date 07090400).
					590405 Piston Assembly (.020" Oversize) (Used After Code Date 11063000).			590403 Ring Set (.020" Oversize) (Used After Code Date 11063000).
					797303 Piston Assembly (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).			797305 Ring Set (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100).
					795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).			795432 Ring Set (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).
					791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	27	691588	Lock-Piston Pin (Used After Code Date 09041600).
								----- Note ----- 691866 Lock-Piston Pin (Used Before Code Date 09041700).

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-10 Assemblies include all parts shown in frames. 11/02/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
28	298909	Pin-Piston (Used After Code Date 09041600). ----- Note ----- 499423 Pin-Piston (Used Before Code Date 09041700).	43	691997	Slinger-Governor/Oil ----- Note ----- 691486 Slinger-Governor/Oil Used on Type No(s). 0321.	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic) 795881 Shaft-Throttle Used on Type No(s). 0007, 0192, 0122, 0213, 5213.
29	797306	Rod-Connecting (Used After Code Date 09041600). ----- Note ----- 499424 Rod-Connecting (Used Before Code Date 09041700).	45	690548	Tappet-Valve	98A	493280	Kit-Idle Speed
32	691664	Screw (Connecting Rod)	46	691449	Camshaft	104	691242	Pin-Float Hinge
32A	695759	Screw (Connecting Rod)	50A	794305	Manifold-Intake	108	691182	Valve-Choke ----- Note ----- 695807 Valve-Choke Used on Type No(s). 7129.
33	590394	Valve-Exhaust (Used After Code Date 11063000). ----- Note ----- 260651S Valve-Exhaust (Used Before Code Date 11070100).	51	★272199S	Gasket-Intake	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- Note ----- 790844 Valve-Choke (Used Before Code Date 08031300). 799465 Valve-Choke Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.
34	590393	Valve-Intake (Used After Code Date 11063000). ----- Note ----- 262652S Valve-Intake (Used Before Code Date 11070100).	51A	★794306	Gasket-Intake	109	494218	Shaft-Choke
35	691270	Spring-Valve (Intake)	54	691650	Screw (Intake Manifold)	109A	498593	Shaft-Choke
36	691270	Spring-Valve (Exhaust)	55	691421	Housing-Rewind Starter	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- Note ----- 790843 Shaft-Choke (Used Before Code Date 08031300).
37	694086	Guard-Flywheel	58	697316	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0201, 0208, 0234, 0263, 0264, 0266, 0268, 0479, 0487, 0491, 4132, 5132, 5208, 5264, 5266, 5566, 7263.			
40	692194	Retainer-Valve	60	281434S	Grip-Starter Rope			
			60C	799716	Grip-Starter Rope			
			65	690837	Screw (Rewind Starter)			
			78	691108	Screw (Flywheel Guard)			
			81	691740	Lock-Muffler Screw			
			95	691636	Screw (Throttle Valve)			

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498978	Jet-Main (Standard) ----- Note ----- 692677 Jet-Main (Standard) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 494870 Jet-Main (Standard) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761. 798661 Jet-Main (Standard) Used on Type No(s). 0391, 0393, 5507, 6015, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.	117B	498977	Jet-Main (Standard) (Used After Code Date 08061900). ----- Note ----- 691428 Jet-Main (Standard) (Used After Code Date 07020600 and Before Code Date 08062000). 697355 Jet-Main (Standard) (Used Before Code Date 07020700). 695042 Jet-Main (Standard) Used on Type No(s). 0343, 0344, 7344. 797574 Jet-Main (Standard) Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.			590440 Jet-Main (Standard) Used on Type No(s). 0376, 0377, 0383, 0384, 0390, 0392, 0396, 0397, 0399, 0406, 0480, 1616, 1624, 5317, 5519, 5522, 5523, 5524, 5540, 5563, 5566, 5373, 5584, 5585, 5594, 6021, 6135, 6150, 6151, 6155, 6169, 6172, 6175, 6194, 6199, 6217, 6218, 6229, 6235, 6241, 6242, 6246, 6254, 6258, 6275, 6276, 6277, 6286, 6307, 6317, 6319, 6333, 6336, 6339, 6356, 6357, 6367, 6375, 6539, 6603, 6610, 6615, 6621, 6623, 6628, 6657, 6659, 6680, 6694, 6695, 6816, 6824, 6825, 6829, 6830, 6837, 6845, 6847, 7128, 7177, 7183, 7193, 7196, 7206, 7212, 7215, 7216, 7233, 7241, 7242, 7261, 7263, 7268, 7287, 7288, 7304, 7305, 7306, 7308, 7310, 7315, 7316, 7325, 7326, 7330, 7338, 7340, 7351, 7355, 7368, 7369, 7374, 7381, 7403, 7435, 7594, 7852, 7932.
117A	498981	Jet-Main (Standard) ----- Note ----- 697355 Jet-Main (Standard) Used on Type No(s). 0007, 0122, 0192, 0213, 5213. 797574 Jet-Main (Standard) Used on Type No(s). 7129. 798661 Jet-Main (Standard) Used on Type No(s). 0394.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-12 Assemblies include all parts shown in frames. 11/02/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	498975	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 798660 Jet-Main (High Altitude) Used on Type No(s). 0391, 0393, 5507, 6015, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.	118B	694250	Jet-Main (High Altitude) (Used After Code Date 08061900). ----- Note ----- 695042 Jet-Main (High Altitude) (Used After Code Date 07020600 and Before Code Date 08062000). 692677 Jet-Main (High Altitude) (Used Before Code Date 07020700). 694975 Jet-Main (High Altitude) Used on Type No(s). 0343, 0344, 7344. 797575 Jet-Main (High Altitude) Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.			798661 Jet-Main (High Altitude) Used on Type No(s). 0376, 0377, 0383, 0384, 0390, 0392, 0396, 0397, 0399, 0406, 0480, 1616, 1624, 5317, 5519, 5522, 5523, 5524, 5540, 5563, 5566, 5373, 5584, 5585, 5594, 6021, 6135, 6150, 6151, 6155, 6169, 6172, 6175, 6194, 6199, 6217, 6218, 6229, 6235, 6241, 6242, 6246, 6254, 6258, 6275, 6276, 6277, 6286, 6307, 6317, 6319, 6333, 6336, 6339, 6356, 6357, 6367, 6375, 6539, 6603, 6610, 6615, 6621, 6623, 6628, 6657, 6659, 6680, 6694, 6695, 6816, 6824, 6825, 6829, 6830, 6837, 6845, 6847, 7128, 7177, 7183, 7193, 7196, 7206, 7212, 7215, 7216, 7233, 7241, 7242, 7261, 7263, 7268, 7287, 7288, 7304, 7305, 7306, 7308, 7310, 7315, 7316, 7325, 7326, 7330, 7338, 7340, 7351, 7355, 7368, 7369, 7374, 7381, 7403, 7435, 7594, 7852, 7932.
118A	494870	Jet-Main (High Altitude) ----- Note ----- 692677 Jet-Main (High Altitude) Used on Type No(s). 0007, 0122, 0192, 0213, 5213. 797575 Jet-Main (High Altitude) Used on Type No(s). 7129. 590441 Jet-Main (High Altitude) Used on Type No(s). 0394.						

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	498260	Kit-Carburetor Overhaul	125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600).		799866	Carburetor (Autochoke System) Used on Type No(s). 0376, 0377, 0383, 0384, 0390, 0392, 0396, 0397, 0399, 0406, 0480, 1616, 1624, 5317, 5519, 5522, 5523, 5524, 5540, 5563, 5566, 5373, 5584, 5585, 5594, 6021, 6135, 6150, 6151, 6155, 6169, 6172, 6175, 6194, 6199, 6217, 6218, 6229, 6235, 6241, 6242, 6246, 6254, 6258, 6275, 6276, 6277, 6286, 6307, 6317, 6319, 6333, 6336, 6339, 6356, 6357, 6367, 6375, 6539, 6603, 6610, 6615, 6621, 6623, 6628, 6657, 6659, 6680, 6694, 6695, 6816, 6824, 6825, 6829, 6830, 6837, 6845, 6847, 7128, 7177, 7183, 7193, 7196, 7206, 7212, 7215, 7216, 7233, 7241, 7242, 7261, 7263, 7268, 7287, 7288, 7304, 7305, 7306, 7308, 7310, 7315, 7316, 7325, 7326, 7330, 7338, 7340, 7351, 7355, 7368, 7369, 7374, 7381, 7403, 7435, 7594, 7852, 7932.
125	498170	Carburetor (Primer System) ----- Note ----- 694882 Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 790821 Carburetor (Primer System) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761. 799868 Carburetor (Primer System) Used on Type No(s). 0391, 0393, 5507, 6015, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.			790845 Carburetor (Autochoke System) (Used Before Code Date 07020700). 798280 Carburetor (Autochoke System) Used on Type No(s). 0343, 0344, 7344. 799464 Carburetor (Autochoke System) Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.			
125A	792253	Carburetor (Choke System) ----- Note ----- 790978 Carburetor (Choke System) Used on Type No(s). 1746, 1801, 1802, 1803, 1804, 1805. 795882 Carburetor (Choke System) Used on Type No(s). 0007, 0122, 0192, 0213, 5313. 799869 Carburetor (Choke System) Used on Type No(s). 7129. 799870 Carburetor (Choke System) Used on Type No(s). 0394.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-14 Assemblies include all parts shown in frames. 11/02/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
127	●694468	Plug-Welch	133	398187	Float-Carburetor	187	791766	Line-Fuel (Cut to Required Length)
130	696564	Valve-Throttle	134	●398188	Kit-Needle/Seat	187A	791873	Line-Fuel (Molded)
		----- Note -----	137	●796610	Gasket-Float Bowl (1/8" Thick)	188	693399	Screw (Control Bracket)
		799466 Valve-Choke			----- Note -----	190	690940	Screw (Fuel Tank)
		Used on Type No(s).			693981 Gasket-Float Bowl (1/16" Thick)	202	691829	Link-Mechanical Governor
		3198, 3279, 3280,	146	690979	Key-Timing			
		3281, 6198, 6280,	163	●272653	Gasket-Air Cleaner			
		6281, 6679, 6683,						
		6706.						
130A	691203	Valve-Throttle						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209A	795883	Spring-Governor		691852	Spring-Governor		691290	Spring-Governor
209B	691292	Spring-Governor			Used on Type No(s).			Used on Type No(s).
		----- Note -----			0150,0151,0154,0155,			0005,0114,0129,0130,
		699056 Spring-Governor			0158,0159,0163,0164,			0131,0169,0179,0188,
		Used on Type No(s).			0168,0180,0182,0183,			0191,0197,0295,0301,
		0004,0015,0016,0018,			0184,0198,0207,0208,			0304,0305,0321,0342,
		0025,0026,0030,0031,			0217,0218,0221,0230,			0343,0344,2013,7129,
		0060,0062,0101,0126,			0231,0233,0234,0235,			7304,7305,7344.
		0138,0140,0143,0144,			0240,0241,0257,0258,			791157 Spring-Governor
		0148,0165,0166,0173,			0261,0268,0274,0278,			Used on Type No(s).
		0177,0194,0242,0243,			0279,0280,0282,0286,			1746,1801,1803,1804,
		0244,0248,0284,0318,			0303,0308,0319,0322,			1805.
		0362,0370,0372,0375,			0324,0325,0326,0328,			691835 Spring-Governor
		0378,0379,0391,0392,			0332,0333,0336,0341,			Used on Type No(s).
		0393,0454,0475,0479,			0351,0355,0357,0367,			1802.
		0480,0487,0491,0548,			0390,0396,0680,1706,			790944 Spring-Governor
		0615,0625,0660,0662,			1727,1728,1729,1739,			Used on Type No(s).
		0675,0677,0678,0709,			1740,1748,1749,1794,			0523.
		0761,0763,0782,0795,			1807,1814,1818,1820,			795879 Spring-Governor
		0841,0842,0849,0856,			1821,1822,1823,1824,			Used on Type No(s).
		0863,0867,0875,0878,			1825,1830,1831,1832,			0007,0122,0192,0213.
		0880,0890,0893,0909,			1833,1835,1840,1841,			0394,5213.
		0932,1024,1044,1045,			1844,1846,1847,1914,			691291 Spring-Governor
		1047,1055,1070,1071,			1958,2006,2010,2015,			Used on Type No(s).
		1111,1133,1135,11136,			2016,2021,2023,2035,			0006,0010,0011,0050,
		1184,1225,1252,1297,			3198,3279,3280,4015,			0297,0313,0335,0349,
		1298,1343,1346,1347,			4021,4135,4150,4151,			0521,0538,0826,1064,
		1349,1350,1395,1401,			4163,4164,4168,4169,			1137,5313.
		1426,1443,1446,1525,			4171,4183,4184,4231,			691851 Spring-Governor
		1527,1561,1576,1586,			4233,4240,4241,4680,			Used on Type No(s).
		1601,1701,1926,2388,			4706,4823,4825,4830,			0121,0132,0133,0134,
		3205,3212,3216,3217,			5184,5207,5208,5240,			0143,0165,0187,0201,
		3709,3761,3763,3841,			5264,5266,5322,5332,			0263,0264,0266,0272,
		3842,3849,4242,4244,			5507,5522,5540,5584,			0316,0334,0363,0364,
		4248,4678,5216,5217,			6021,6150,6151,6169,			0368,0369,3139,3140,
		5244,5248,5252,5349,			6198,6217,6218,6235,			4121,4132,5132,5563,
		5395,5426,5517,5678,			6258,6280,6286,6319,			5566,7263,7272,7316,
		5856,6015,6126,6135,			6333,6336,6357,6367,			7368,7369.
		6194,6242,6243,6244,			6603,6621,6623,6628,			
		6375,6615,7177,7212,			6657,6679,6680,6706,			
		7878,7932.			6825,6830,7183,7196,			
					7233,7241,7261,7268,			
					7308,7325,7326,7341,			
					7351,7355,7374,7381,			
					7841.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
217	690354	Spring-Choke Return	227	690783	Lever-Governor Control	269	691026	Wire-Control (Cut to Required Length)
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	231	691636	Screw (Choke Valve)	270	691027	Nut (Control Wire Casing)
222A	692021	Bracket-Control (Remote, Choke A Matic, Non Compliance)	236	691826	Link-Lockout	271	691028	Lever-Control
		----- Note -----	265	690798	Clamp-Casing	276	◆271716	Washer-Sealing
		790982 Bracket-Control	265A	691024	Clamp-Casing	287	690940	Screw (Dipstick Tube)
		Used on Type No(s). 1746, 1801, 1803, 1804, 1805.	267	691044	Screw (Casing Clamp)	291	790830	Thermostat
222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)	268	691025	Casing-Control Wire (Cut to Required Length)			
		----- Note -----						
		795880 Bracket-Control						
		Used on Type No(s). 0007, 0122, 0192, 0213, 0394, 5213.						
222D	793754	Bracket-Control (Fixed Speed)						
222E	692982	Bracket-Control (Manual Friction, 5 Position Manual Choke)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-17 Assemblies include all parts shown in frames. 11/02/2011

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0030,0031,0114,0121, 0123,0124,0125,0128, 0130,0132,0133,0140, 0143,0144,0150,0151, 0158,0159,0161,0164, 0165,0166,0168,0172, 0173,0175,0177,0180, 0181,0183,0190,0191, 0193,0194,0196,0198, 0200,0201,0203,0208, 0215,0216,0217,0218, 0219,0220,0218,0221, 0222,0224,0225,0227, 0230,0231,0233,0234, 0235,0236,0237,0239, 0240,0241,0245,0246, 0247,0248,0251,0253, 0254,0255,0256,0257, 0258,0261,0263,0264, 0265,0266,0267,0268, 0271,0275,0276,0277, 0279,0280,0281,0282, 0283,0284,0285,0286, 0287,0288,0289,0291, 0294,0295,0298,0299, 0301,0303,0304,0305, 0306,0307,0308,0309, 0310,0311,0312,0315, 0316,0317,0318,0319, 0321,0322,0323,0324, 0325,0326,0327,0328, 0330,0331,0332,0333, 0336,0338,0339,0340, 0342,0344,0351,0355, 0356,0357,0359,0362, 0363,0364,0365,0367, 0368,0369,0370,0372,			0373,0374,0375,0376, 0377,0378,0384,0383, 0379,0390,0392,0395, 0396,0397,0399,0400, 0401,0402,0403,0406, 0454,0475,0480,0487, 0491,0539,0548,0555, 0615,0625,0660,0662, 0675,0677,0678,0709, 0782,0795,0849,0856, 0863,0867,0875,0880, 0890,0893,0932,0933, 0985,0992,1003,1006, 1024,1044,1045,1047, 1055,1071,1133,1135, 1155,1163,1164,1184, 1225,1229,1241,1242, 1252,1297,1298,1343, 1346,1347,1349,1350, 1394,1395,1401,1426, 1435,1446,1561,1586, 1594,1616,1624,1706, 1738,1807,1808,1823, 1825,1827,1831,1845, 1847,1849,1851,1963, 1965,2011,2015,2016, 2017,2021,2022,2034, 2041,3205,3206,3212, 3216,3217,3279,3280, 3281,3709,3849,4011, 4015,4021,4121,4132, 4135,4150,4151,4163, 4164,4169,4171,4175, 4181,4183,4184,4199, 4216,4219,4231,4233, 4236,4240,4241,4242, 4248,4329,4410,4568, 4678,4680,4706,4816, 4823,4824,4825,4829, 4830,4837,4849,4852,			4995,5123,5132,5184, 5208,5216,5217,5219, 5239,5248,5252,5264, 5266,5285,5322,5323, 5324,5332,5349,5373, 5394,5395,5400,5426, 5517,5519,5522,5523, 5524,5540,5563,5566, 5573,5584,5585,5594, 5678,5823,5856,6021, 6135,6150,6151,6155, 6169,6172,6175,6194, 6198,6199,6217,6218, 6229,6235,6241,6242, 6246,6254,6258,6275, 6276,6277,6280,6281, 6286,6307,6317,6319, 6333,6336,6339,6356, 6357,6367,6375,6539, 6603,6610,6615,6621, 6623,6628,6657,6659, 6679,6680,6683,6694, 6695,6706,6816,6824, 6825,6829,6830,6837, 6845,6849,7128,7177, 7183,7193,7196,7206, 7212,7215,7216,7233, 7241,7242,7261,7263, 7268,7287,7288,7304, 7305,7306,7308,7310, 7315,7316,7325,7326, 7330,7338,7340,7344, 7351,7355,7368,7369, 7374,7381,7403,7435, 7594,7852,7932. 792677 Muffler Used on Type No(s). 0329,0343,1003,1844, 5329.
						300A	494343S	Muffler

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	790826	Housing-Blower ----- Note ----- 493293 Housing-Blower Used on Type No(s). 0015,0016,0018,0025, 0026,0060,0062,0115, 0139,0147,0162,0171, 0173,0204,0206,0226, 0238,0244,0479,0841, 1701,1727,1728,1733, 1734,1740,1767,1791, 1794,1801,1803,1804, 1805,1810,1814,1821, 1832,1833,1840,1904, 1914,1958,1992,1995, 2003,2004,2006,2008, 2010,2023,2304,2388, 3841,5062. 493294 Housing-Blower Used on Type No(s). 0004,0005,0006,0007, 0010,0050,0116,0122, 0129,0131,0169,0179, 0187,0188,0192,0197, 0203,0209,0213,0242, 0252,0272,0289,0290, 0291,0297,0298,0309, 0312,0313,0334,0335, 0349,0365,0366,0394, 0521,0523,0538,0826, 0878,1064,1137,1377, 1378,1380,1729,1802, 1822,1839,1926,1941, 2013,2014,2027,3139, 3140,5213,5313,6941, 7129,7272,7366,7380, 7878.			790983 Housing-Blower Used on Type No(s). 0132,0140,0143,0166, 0181,0182,0183,0184, 0220,0224,0279,0329, 0475,0660,0662,0880, 0893,0933,1070,1071, 1136,1738,1739,1808, 1823,1826,1847,2015, 2017,5823. 695892 Housing-Blower Used on Type No(s). 0011,0101,0117,0126, 0134,0135,0138,0145, 0146,0148,0153,0154, 0174,0176,0199,0207, 0243,0251,0341,0391, 0393,0397,0399,0401, 0404,0406,0568,0680, 0761,0763,0842,0951, 1009,1037,1172,1616, 1624,1724,1737,1742, 1746,1749,1818,1820, 1830,1837,1841,1850, 1852,1917,1966,2012, 2035,2148,2149,3761, 3763,3842,4162,4244, 5207,5244,5507,6015, 6126,6243,6244,7174, 7341,7404,7841.			791291 Housing-Blower Used on Type No(s). 0030,0114,0128,0130, 0164,0190,0191,0222, 0225,0227,0230,0234, 0237,0256,0258,0260, 0261,0277,0281,0282, 0295,0301,0304,0305, 0316,0321,0326,0330, 0331,0332,0342,0343, 0344,0363,0364,0368, 0369,0374,0375,0379, 0380,0396,0403,0480, 1750,1807,1817,1824, 1849,1851,2016,2034, 3281,4164,4242,4824, 4849,5332,5563,6242, 6258,6277,6281,6317, 6375,6824,6849,7128, 7261,7304,7305,7316, 7326,7330,7344,7368, 7369,7374,7403.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	333	590454	Armature-Magneto			1739,1748,1749,1750,
306	690450	Shield-Cylinder	333A	590455	Armature-Magneto			1807,1808,1816,1823,
306A	790836	Shield-Cylinder			----- Note -----			1824,1825,1826,1827,
307	690345	Screw (Cylinder Shield)			793354 Armature-Magneto			1829,1831,1835,1837,
309	695550	Motor-Starter (Used Before Code Date 07052900).			Used on Type No(s). 0121,0150,0151,0154, 0158,0159,0163,0164, 0168,0171,0172,0194,			1844,1845,1846,1847, 1849,1850,1853,1917, 1941,1963,1965,2011, 2015,2016,2017,2021,
309A	795092	Motor-Starter (Used After Code Date 07052800 and Before Code Date 10112800).			0198,0217,0218,0221, 0235,0246,0253,0254, 0255,0257,0258,0260, 0262,0275,0276,0277, 0278,0279,0280,0281, 0282,0283,0286,0294, 0303,0307,0311,0317, 0319,0320,0328,0333, 0336,0357,0359,0367, 0372,0375,0380,0381, 0395,0400,0539,0615, 0680,0875,0893,0909, 1111,1164,1229,1241, 1343,1586,1594,1706,			3280,3281,4011,4015, 4021,4121,4135,4163, 4164,4175,4199,4242, 4680,4706,4810,4816, 4823,4824,4825,4829, 4830,4837,4849,4852, 4995,5262,5400,5394, 5823.
309B	799045	Motor-Starter (Used After Code Date 10112700). ----- Note ----- 799045 Motor-Starter Used on Type No(s). 0328.						
310	692327	Bolt (Starter Motor)						
332	690662	Nut (Flywheel)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
334	691061	Screw (Magneto Armature)	455	791960	Cup-Flywheel	564	690664	Screw (Control Cover)
337	799876	Plug-Spark (Used After Code Date 11063000).	456	692299	Plate-Pawl Friction	564A	691142	Screw (Control Cover)
		----- Note -----	459	281505S	Plate-Ratchet	564B	698589	Screw (Control Cover)
		802592S Plug-Spark (Resistor) (Used Before Code Date 11070100).	474	691991	Alternator	578	398153	Wire-Assembly
		697451 Plug-Spark (EMS) (Used Before Code Date 11070100).	497	690664	Screw (Stop Switch Bracket)	578A	696031	Wire-Assembly
346	690661	Screw (Spark Arrester)	500	691086	Washer (Key Switch)	584	697734	Cover-Breather Passage
347	691396	Switch-Rocker	505	691251	Nut (Governor Control Lever)	585	*691879	Gasket-Breather Passage
356	692390	Wire-Stop	510	795093	Drive-Starter	592	690800	Nut (Rewind Starter)
356B	693010	Wire-Stop	513	692358	Clutch-Drive	597	691696	Screw (Pawl Friction Plate)
356D	496381	Wire-Stop	523	499621	Dipstick	601	791850	Clamp-Hose
356G	695283	Wire-Stop	524	*692296	Seal-Dipstick Tube	601A	691038	Clamp-Hose
356H	690791	Wire-Stop	525	495265	Tube-Dipstick	604	691757	Cover-Control
356J	691423	Wire-Stop	534A	798294	Screw (Air Cleaner)	604A	691344	Cover-Control
358	590508	Gasket Set-Engine	535A	797301	Filter-Air Cleaner Foam	604B	790703	Cover-Control
363	19069	Flywheel Puller	536A	798293	Cleaner-Air	604C	792418	Cover-Control
365	691688	Screw (Carburetor)	544	690786	Armature-Starter	604D	793770	Cover-Control
383	89838S	Wrench-Spark Plug	545	492919	Washer Set	608	497680	Starter-Rewind
404	690272	Washer (Governor Crank)	562	92613	Bolt (Governor Control Lever)			----- Note -----
425A	690670	Screw (Air Cleaner Cover)	563	691138	Screw (Debris Guard Screen)			791363 Starter- Rewind Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0201, 0208, 0234, 0263, 0264, 0266, 0268, 0479, 0487, 0491, 4132, 5132, 5208, 5264, 5266, 5566, 7263.
443A	692523	Screw (Air Cleaner Primer Base)						
445A	491588S	Filter-Air Cleaner Cartridge						

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
613	691340	Screw (Muffler) ----- Note ----- 790833 Screw (Muffler) Used on Type No(s). 0030,0031,0114,0121, 0123,0124,0125,0128, 0130,0132,0133,0140, 0143,0144,0150,0151, 0158,0159,0161,0164, 0165,0166,0168,0172, 0173,0175,0177,0180, 0181,0183,0190,0191, 0193,0194,0196,0198, 0200,0201,0203,0208, 0215,0216,0217,0218, 0219,0220,0218,0221, 0222,0224,0225,0227, 0230,0231,0233,0234, 0235,0236,0237,0239, 0240,0241,0245,0246, 0247,0248,0251,0253, 0254,0255,0256,0257, 0258,0261,0263,0264, 0265,0266,0267,0268, 0271,0275,0276,0277, 0279,0280,0281,0282, 0283,0284,0285,0286, 0287,0288,0289,0291, 0294,0295,0298,0299, 0301,0303,0304,0305, 0306,0307,0308,0309, 0310,0311,0312,0315, 0316,0317,0318,0319, 0321,0322,0323,0324, 0325,0326,0327,0328, 0330,0331,0332,0333, 0336,0338,0339,0340, 0342,0344,0351,0355, 0356,0357,0359,0362, 0363,0364,0365,0367,			0368,0369,0370,0372, 0373,0374,0375,0376, 0377,0378,0379,0383, 0384,0390,0392,0395, 0396,0397,0399,0400, 0401,0402,0403,0454, 0475,0480,0487,0491, 0539,0548,0555,0615, 0625,0660,0662,0675, 0677,0678,0709,0782, 0795,0849,0856,0863, 0867,0875,0880,0890, 0893,0932,0933,0985, 0992,1003,1006,1024, 1044,1045,1047,1055, 1071,1133,1135,1155, 1163,1164,1184,1225, 1229,1241,1242,1252, 1297,1298,1343,1346, 1347,1349,1350,1394, 1395,1401,1426,1435, 1446,1561,1586,1594, 1616,1624,1706,1738, 1807,1808,1823,1825, 1827,1831,1845,1847, 1849,1851,1963,1965, 2011,2015,2016,2017, 2021,2022,2034,2041, 3205,3206,3212,3216, 3217,3279,3280,3281, 3709,3849,4011,4015, 4021,4121,4132,4135, 4150,4151,4163,4164, 4169,4171,4175,4181, 4183,4184,4199,4216, 4219,4231,4233,4236, 4240,4241,4242,4248, 4329,4410,4568,4678, 4680,4706,4816,4823, 4824,4825,4829,4830, 4837,4849,4852,4995, 5123,5132,5184,5208,				5216,5217,5219,5239, 5248,5252,5264,5266, 5285,5322,5323,5324, 5332,5349,5373,5394, 5395,5400,5426,5517, 5519,5522,5523,5524, 5540,5563,5566,5573, 5584,5585,5594,5678, 5823,5856,6021,6135, 6150,6151,6155,6169, 6172,6175,6194,6198, 6199,6217,6218,6229, 6235,6241,6242,6246, 6254,6258,6275,6276, 6277,6280,6281,6286, 6307,6317,6319,6333, 6336,6339,6356,6357, 6367,6375,6539,6603, 6610,6615,6621,6623, 6628,6657,6659,6679, 6680,6683,6694,6695, 6706,6816,6824,6825, 6829,6830,6837,6845, 6849,7128,7177,7183, 7193,7196,7206,7212, 7215,7216,7233,7241, 7242,7261,7263,7268, 7287,7288,7304,7305, 7306,7308,7310,7315, 7316,7325,7326,7330, 7338,7340,7344,7351, 7355,7368,7369,7374, 7381,7403,7435,7594, 7852,7932 792678 Screw (Muffler) Used on Type No(s). 0329,0343,1003,1844, 5329.
						613A	691653	Screw (Muffler)	

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-22 Assemblies include all parts shown in frames. 11/02/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
615	690340	Retainer-Governor Shaft	741	797521	Gear-Timing (Metal) (Used After Code Date 08021700).	836	690664	Screw (Muffler Guard)
616	698801	Crank-Governor				836B	691147	Screw (Muffler Guard)
617	★◆270344	Seal-O Ring (Intake Manifold)			----- Note -----	836C	790745	Screw (Muffler Guard)
621	692310	Switch-Stop			795755 Gear-Timing (Plastic) (Used After Code Date 08021700).	842	★691031	Seal-O Ring (Dipstick Tube)
627	792565	Bracket-Stop Switch			794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000 and Before Code Date 08021800).	843	691884	Sleeve-Lever (Speed Control)
627A	793211	Bracket-Stop Switch			790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100).	843A	691895	Sleeve-Lever (Choke)
633	◆691321	Seal-Choke/Throttle Shaft			691830 Gear-Timing (Uses Woodruff Key)	847	692047	Dipstick/Tube Assembly
633A	◆693867	Seal-Choke/Throttle Shaft				851	493880S	Terminal-Spark Plug
635	66538S	Boot-Spark Plug				851A	692424	Terminal-Spark Plug
635A	793351	Boot-Spark Plug				853	695268	Adapter-Wire
651	691660	Screw (Starter Gear Cover)						----- Note -----
664	691087	Nut (Key Switch)						698471 Adapter-Wire Used on Type No(s). 4244,.5244, 6244
668	★493823	Spacer						799467 Adapter-Wire Used on Type No(s). 0363, 0376, 5563.
670	692294	Spacer-Fuel Tank	742	93941	Retainer-E Ring	853A	695897	Adapter-Wire
676	396548	Deflector-Muffler	745	691648	Screw (Brake)	868	590410	Seal-Valve (Used After Code Date 11063000).
676A	393756	Deflector-Muffler						----- Note -----
676C	493871	Deflector-Muffler						697338 Seal-Valve (Used Before Code Date 11070100).
676D	497682	Deflector-Muffler	783	691918	Gear-Pinion	869	691155	Seat-Valve (Intake)
676E	393760	Deflector-Muffler	783A	691269	Gear-Pinion	870	690380	Seat-Valve (Exhaust)
677	690661	Screw (Muffler Deflector)	784	795095	Cover-Starter Gear			
684	690345	Screw (Breather Passage Cover)	785	692352	Gasket-Starter Cover			
689	691855	Spring-Friction	789B	792685	Harness-Wiring			
692	690572	Spring-Detent	789C	796385	Harness-Wiring			
697	691127	Screw (Drive Cap)	789D	796574	Harness-Wiring			
703	696309	Clip	801	690782	Cap-Drive			
718	690959	Pin-Locating	802	695267	Cap-End			
			803	695266	Housing-Starter			
			832	590486	Guard-Muffler (Used After Code Date 11063000).			
					----- Note -----			
					499034 Guard-Muffler (Used Before Code Date 11070100).			
			832A	691424	Guard-Muffler			
			832B	497683	Guard-Muffler			
			832E	793568	Guard-Muffler			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
871	590409	Bushing-Valve Guide (Exhaust) (Used After Code Date 11063000). ----- Note ----- 590409 Bushing-Valve Guide (Intake) (Used After Code Date 11063000). 262001 Bushing-Valve Guide (Exhaust) (Used Before Code Date 11070100). 63709 Bushing-Valve Guide (Intake) (Used Before Code Date 11070100).	922A	692135	Spring-Brake	970	691669	Screw (Air Cleaner Primer Bracket)
			923	691994	Brake			
			923B	796136	Brake (Rewind Starter) ----- Note ----- 796387 Brake (Electric Starter) 798276 Brake (Used on Type No(s). 0198,0317, 3198, 6198, 6317).	972B	699374	Tank-Fuel (Plastic)
			925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note ----- 690595 Cover-Linkage (Used Before Code Date 07072300).	975	493640	Bowl-Float
			930	691919	Guard-Rewind	976	694395	Primer-Carburetor
			930A	691345	Guard-Rewind	977	498261	Gasket Set-Carburetor
			937	691325	Spline-Starter	990	691959	Key Set
			937A	799420	Spline-Starter	994	398067	Arrestor-Spark
			946	691738	Stop-Rope	994B	792245	Arrestor-Spark
			949	696306	Guard-Debris Screen	997	696310	Shield-Debris
			957B	699985	Cap-Fuel Tank (Plastic)	1005	691346	Fan-Flywheel
			958	698183	Valve-Fuel Shut Off (Plastic)	1019	694881	Kit-Label
			966B	792040	Base-Air Cleaner Primer ----- Note ----- 795259 Base-Air Cleaner Primer (Used on Type No(s). 0406, 1064, 1155, 6155).	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
			967A	493537S	Filter-Pre Cleaner	1058	380567	Operator's Manual (Used After Code Date 11063000). ----- Note ----- 277039 Operator's Manual (Used Before Code Date 11070100).
			968B	692298	Cover-Air Cleaner	1059	692311	Kit-Screw/Washer
			969	690700	Screw (Blower Housing Cover)	1095	59050	Gasket Set-Valve
			969A	691138	Screw (Blower Housing Cover)	1119	692979	Screw (Alternator)
						1210	498144	Pulley/Spring Assembly (Pulley)
						1211	498144	Pulley/Spring Assembly (Spring)
						1319	794467	Label-Warning
						1330	270962	Manual-Repair
						1386	790848	Vane-Air (Autochoke System)
						1387	790849	Spring-Air Vane
						1388	790850	Screw (Air Vane)
883	691881	Gasket-Exhaust						
892	690646	Switch-Key						
910	691094	Stud (Alternator)						
921A	695886	Cover-Blower Housing						
921B	692931	Cover-Blower Housing						
921C	695889	Cover-Blower Housing						
921E	696262	Cover-Blower Housing						
921F	697343	Cover-Blower Housing						
921G	790701	Cover-Blower Housing						
921H	790037	Cover-Blower Housing						
921J	790036	Cover-Blower Housing						
921K	699984	Cover-Blower Housing						
921L	791026	Cover-Blower Housing						
921M	792652	Cover-Blower Housing						
921N	792675	Cover-Blower Housing						
921P	792687	Cover-Blower Housing						
921R	793771	Cover-Blower Housing						
921U	794355	Cover-Blower Housing (Used After Code Date 09010800).						
921W	796921	Cover-Blower Housing (Used After Code Date 09010800). ----- Note ----- 796571 Cover-Blower Housing (Used Before Code Date 09010900).						
921X	796706	Cover-Blower Housing						
921Y	798277	Cover-Blower Housing						
921Z	798302	Cover-Blower Housing						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-24 Assemblies include all parts shown in frames. 11/02/2011

