


## Installing Minimum Rate Screw into New Control Valve

1. Remove blue plug from new control valve.
2. Using a flat screwdriver, carefully remove minimum rate screw from old control valve.
3. Insert minimum rate screw into hole on new control valve where blue plug was previously removed. Using a flat blade screwdriver, push in minimum rate screw and turn clockwise until snug.

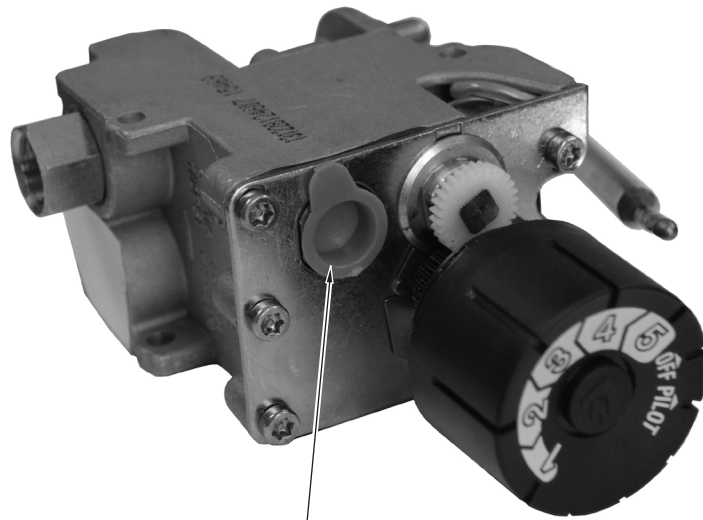

Blue Plug  
Minimum Rate Screw Location