



Suburban Model DNV40N DYNAVENT Model DNV40P FORM 2078-B 7-91

PARTS LIST


DNV40N
DNV40P

Item No.	Description	Part No.	Item No.	Description	Part No.
3	Insulation, Cabinet Back	070541	53	Screw #10 x 3/8 (2 Required)	121252
4	Cabinet Assembly Complete	100896	54	Cover, Junction Box	090211
5	Insulation, Cabinet Top	070510	55	Screw #10 x 1/4 (2 Required - Chamber to Radiation Shield Bottom)	121577
6	Insulation, Sides (Right and Left Side)	070511	56	Nut, 10 - 24 Hex (4 Required - 2 Per Burner)	120717
7	Shield, Bottom Plenum	280498	57	Burner Assembly, Left	010621
8	Screw #8 x 3/8 Black Oxide (2 Required)	121520	58	Burner Assembly, Right	010622
9	Nameplate	190425	59	Gasket, Manifold	070591
10	Screw #8 x 3/8 Gold Head (3 Required)	121467	60	Manifold Assembly	170791
11	Front Grill Assembly	030638	61	Orifice, Main Burner - LP Gas Only (2 Required)	180188
12	Thermostat	160902	62	Orifice, Main Burner - Natural Gas Only (2 Required)	180189
15	Screw #6 x 3/8 (Flame Probe)	121502	63	Screw #10 x 1/2 (6 Required)	121388
16	Flame Sensing Probe	231444	64	Valve (LP Gas Only)	160822
17	Screw #6 x 3/8 (2 Required) (Glo-Bar Retainer)	121502	65	Valve (Natural Gas Only)	160821
18	Retainer, Glo-Bar	062445	66	Street Ell 90°	170012
19	Screw #8 x 3/8 (2 Required)	120158	67	Pipe, Gas Inlet	170687
20	Door, Burner Access	030528	68	Screw #10 x 1/2	121388
21	Screw #10 x 1/2 (4 Required)	121388	69	Clamp, Gas Inlet Pipe	062180
22	Glass Disc	310026	70	Ell 90°	170082
23	Cover Plate	290120	71	Gasket, Combustion Air Cover	070570
24	Gasket, Burner Access Door	070398	72	Screw #10 x 3/8	121252
25	Glo-Bar	230811	73	Wheel, Room Air (CW Rotation)	350088
26	Gasket, Ignitor Spacer	070814	74	Housing, Room Air Blower (Left Side)	390328
26A	Gasket, Glo Bar	070568	75	Nut, 10 - 24 Hex Keps (3 Required)	120717
27	Bushing with Terminals	230844	76	Screw #10 x 3/8 (4 Required)	121252
28	Gasket, Radiation Shield Front	070607	77	Fastener, Tinnerman (2 Required)	121661
29	Combustion Chamber/Radiation Shield Assembly	020982	78	Microswitch Assembly	230681
30	Clamp, Wire (2 Required)	061663	79	Screw #2 - 56 x 5/8 (2 Required)	121247
31	Screw #10 x 3/8 (2 Required)	121252	80	Gasket, Intake Tube	070537
32	Screw #10 x 3/8 (2 Required)	121252	81	Screw #8 x 1/2 (1 Req'd - Capacitor Clamp to Combustion Air Housing)	120615
33	Limit Switch	230560	82	Combustion Air Cover Assembly	390205
34	Bracket, Module Board Mounting	062563	83	Screw #10 x 1/2 (3 Required)	121388
35	Screw #8 x 3/8 (2 Required)	120158	84	Gasket, Combustion Air Crossover	070420
36	Spacer Panel (4 Required)	121632	85	Housing, Combustion Air and Motor Cover Assembly	390318
37	Module Board	230954	86	Screw #10 - 24 x 1/2 (2 Required)	121227
38	Screw #6 x 5/8 (2 Required)	121357	87	Bushing, Universal	070362
39	Screw #10 x 3/4 (4 Required - 2 Per Exhaust)	121224	88	Gasket, Combustion Air Housing	070406
40	Gasket, Exhaust Tube (2 Required - 1 Per Tube)	070537	89	Screw #8 x 3/8 (10 Required)	120158
41	Screw #6 x 5/8 (2 Required)	121357	90	Clamp, Wire	061663
42	Screw #10 x 3/8 (2 Required)	121252	91	Capacitor	231036
43	Screw #6 x 1/2 (2 Required)	121372	92	Clamp, Capacitor	062691
44	Terminal Block	231144	93	Boot, Capacitor	231231
45	Relay, Time Delay	230625	94	Bushing, Motor (2 Required)	070563
46	Transformer Assembly	231164	95	Motor	231136
47	Screw #8 x 3/8 (2 Required)	120158	96	Bracket, Motor Support	062307
48	Bracket, Transformer and Relay Mounting	062837	97	Nut, 10 - 24 Hex Keps (2 Required)	120717
49	Screw #10 x 3/8 (3 Required)	121252	98	Gasket, Motor	070165
50	Clamp, Wire 5/8" Diameter (5 Required)	062694	99	Wheel, Combustion Air	350085
51	Screw #10 x 3/8 (3 Required - Chamber to Radiation Shield)	121252	100	Screw #10 x 3/8 (3 Required)	121252
52	Bushing, Strain Relief (2 Required)	230555	101	Housing, Room Air Blower (Right Side)	390201
			102	Wheel, Room Air (CCW Rotation)	350087
				Valve, Manual Shut-Off (Not Shown)	160554

  
SUBURBAN MODEL DNV40N FORM 2078-B
 DYNAVENT MODEL DNV40P 7-91

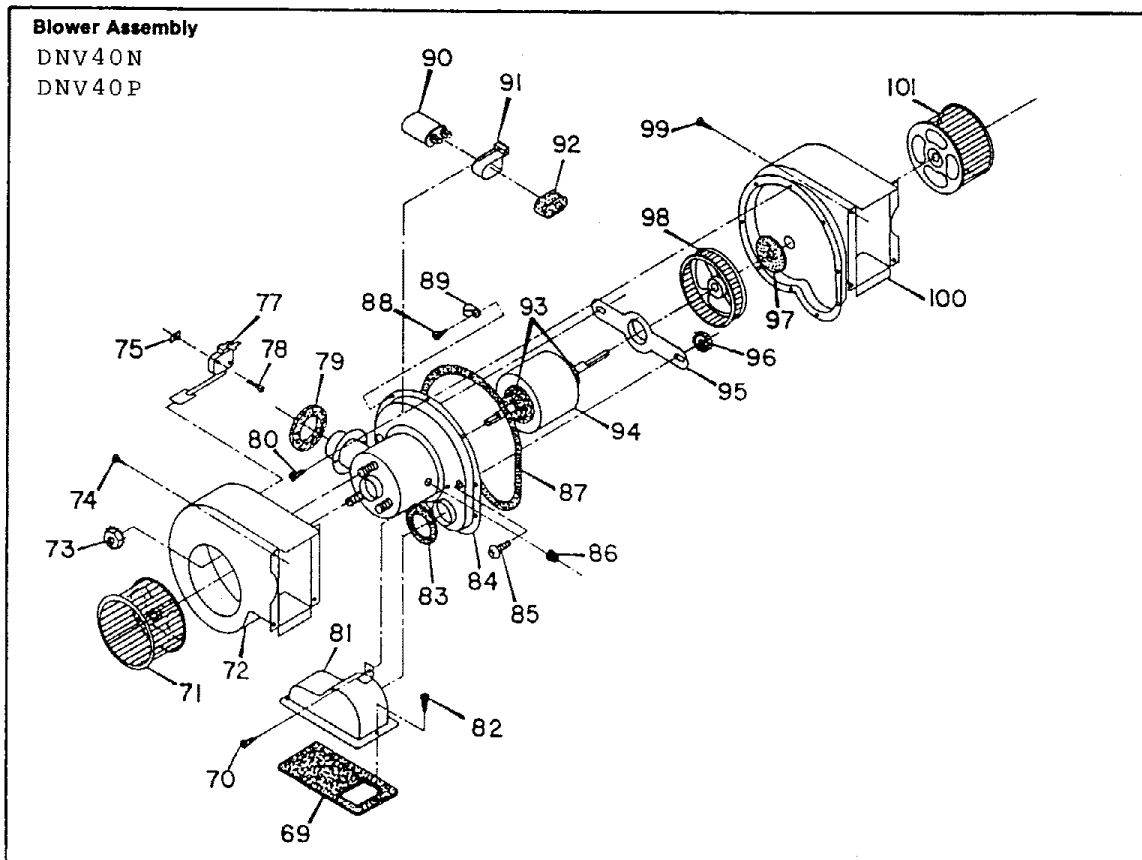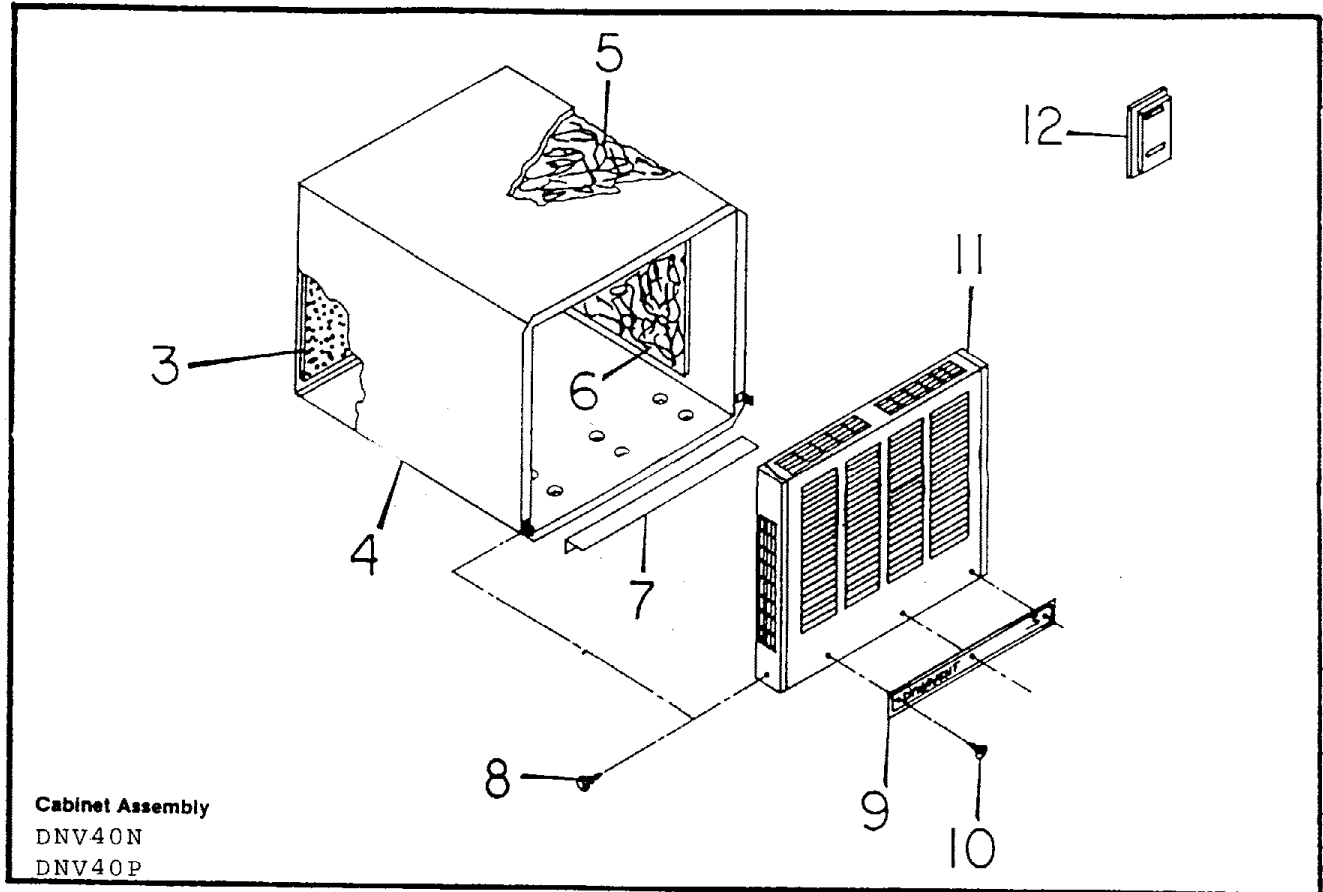

 SUBURBAN MODEL DNV40N FORM 2078-B
 DYNAVENT MODEL DNV40P 7-91

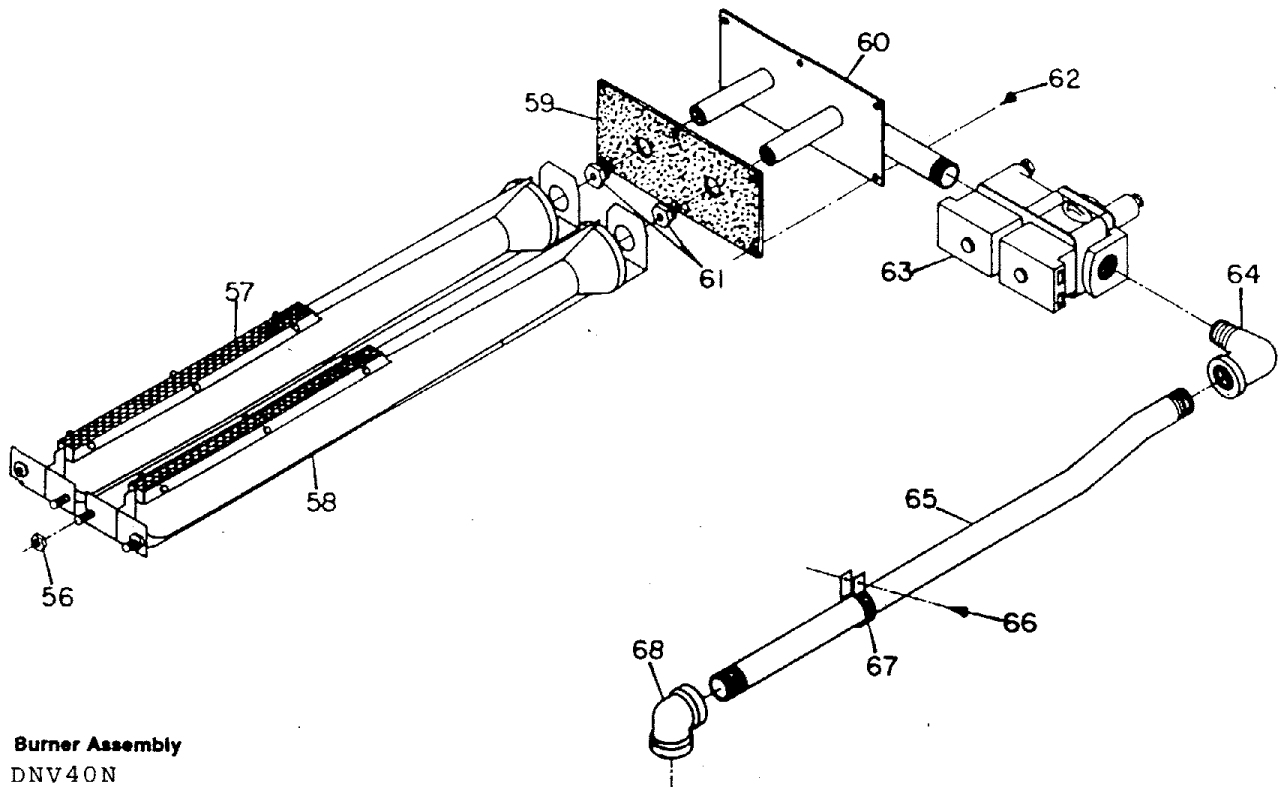

Burner Assembly
 DNV40N
 DNV40P

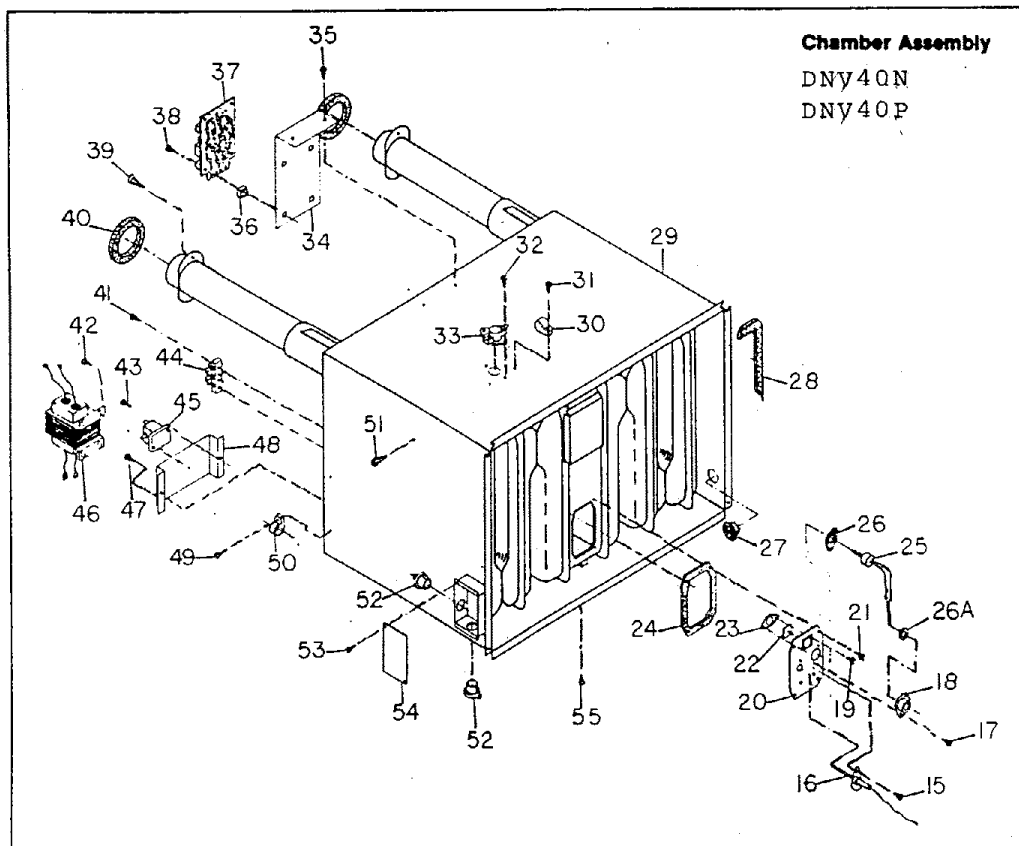 

Chamber Assembly
 DNV40N
 DNV40P

SUBURBAN MODEL DNV40N DYNAVENT MODEL DNV40P FORM 2078-B 7-91

