



10T500

Illustrated Parts List

Model Series

10T500

TYPE NUMBERS
0100 through 3840.

TABLE OF CONTENTS


Air Cleaner	6
Blower Housing/Shrouds	7
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

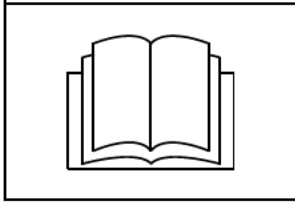

1330 REPAIR MANUAL

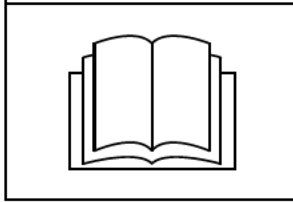


1319 WARNING LABEL






WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refuelling.
	Engines emit carbon monoxide. DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.


358 ENGINE GASKET SET

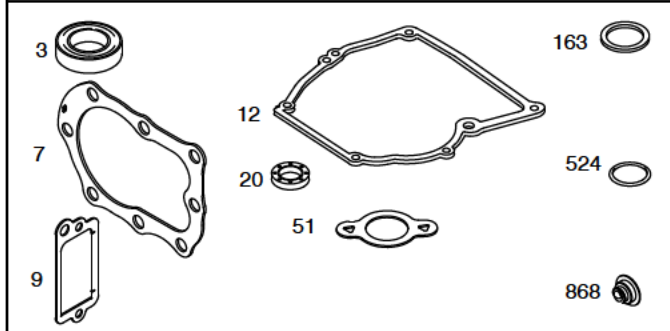


1095 VALVE GASKET SET

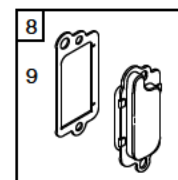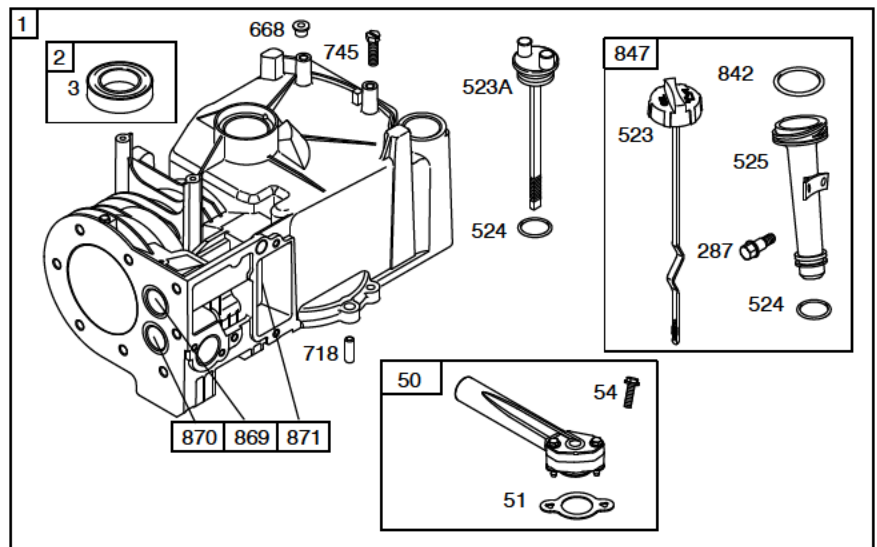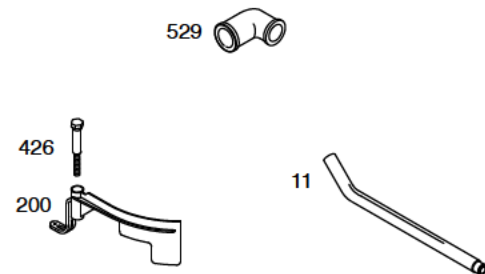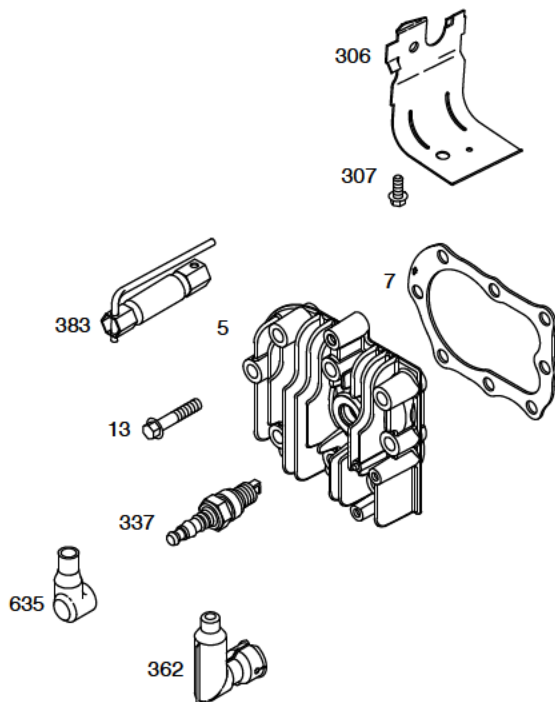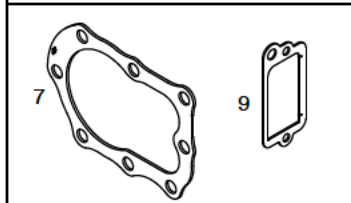


10

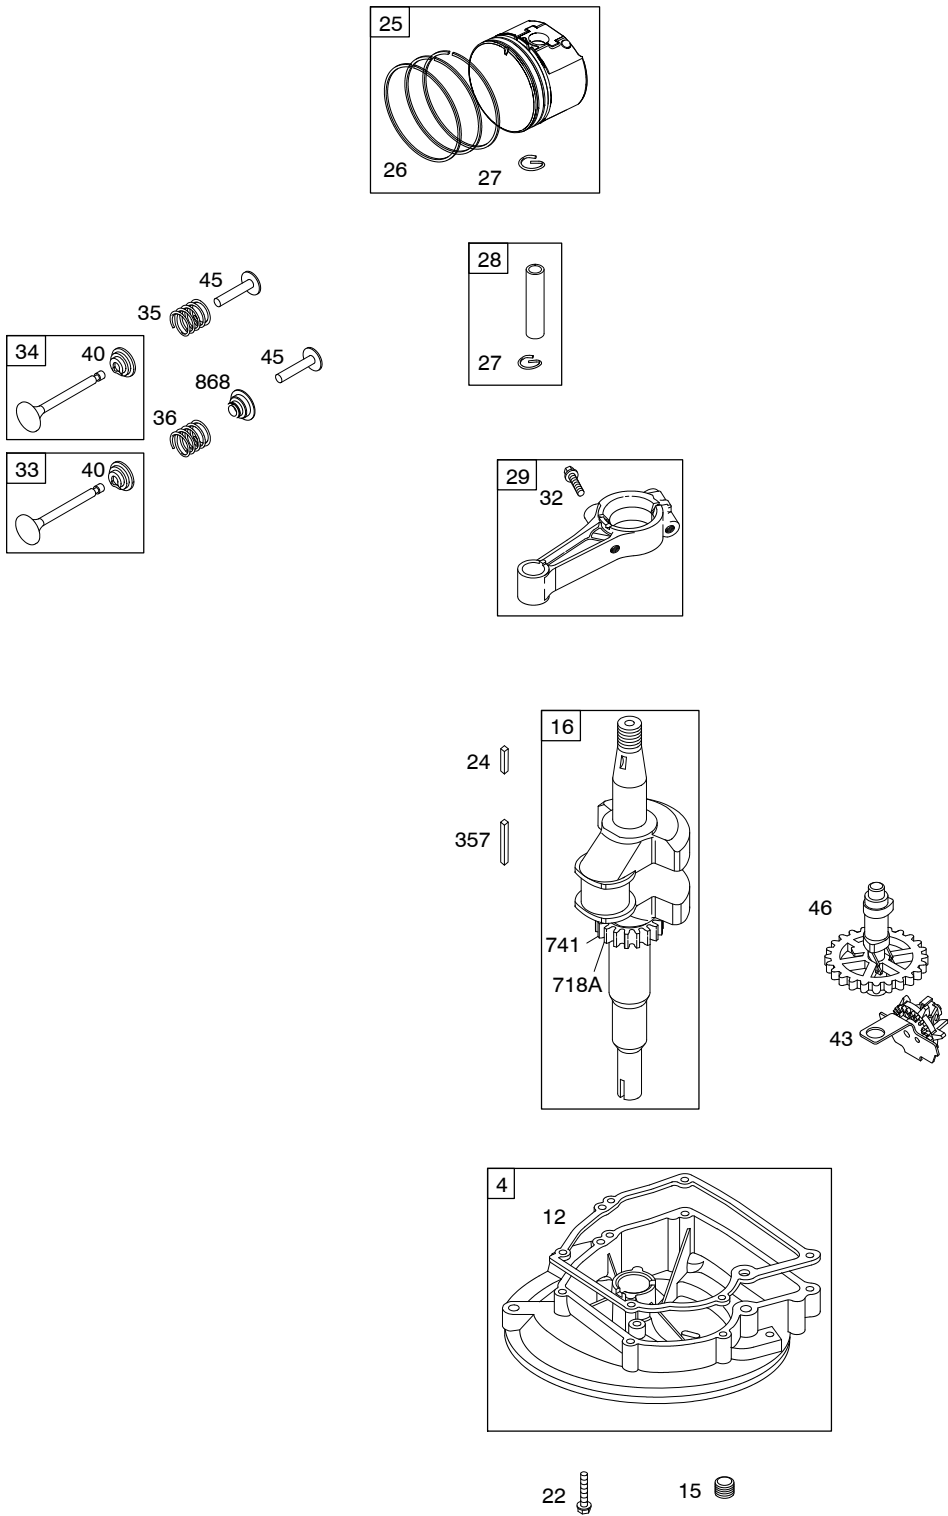


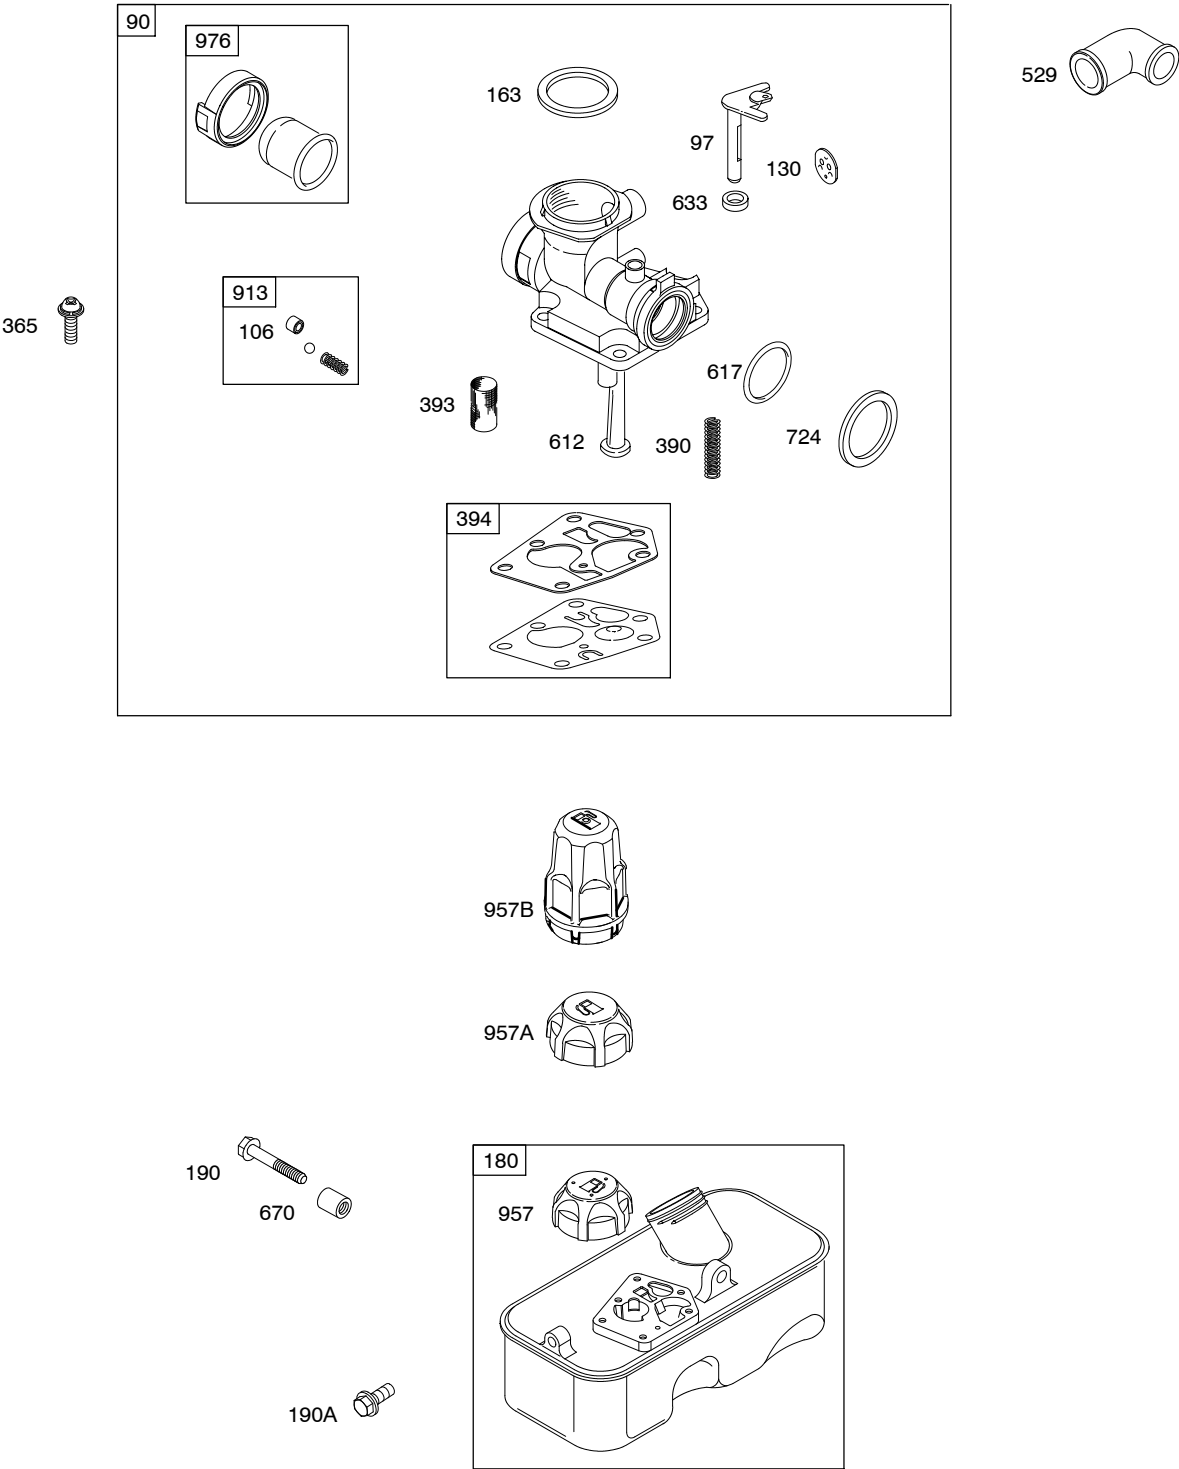

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.










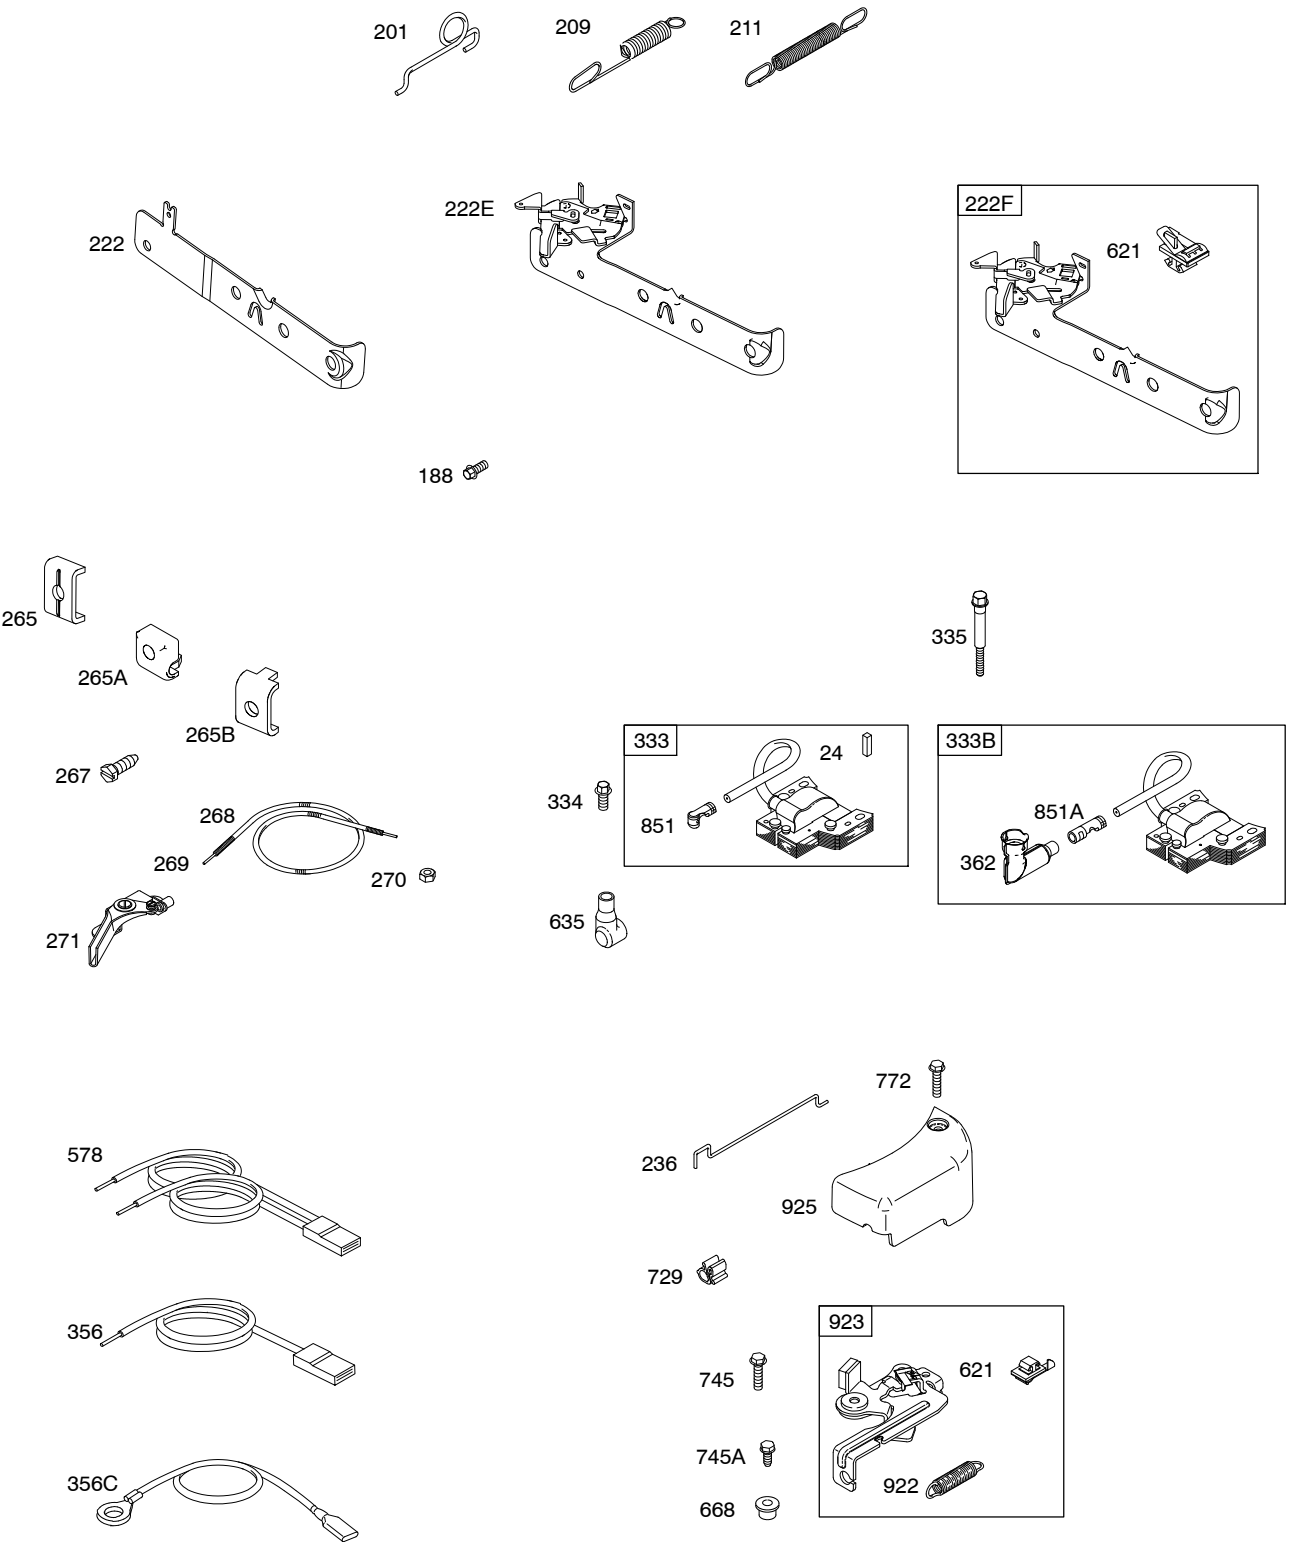


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

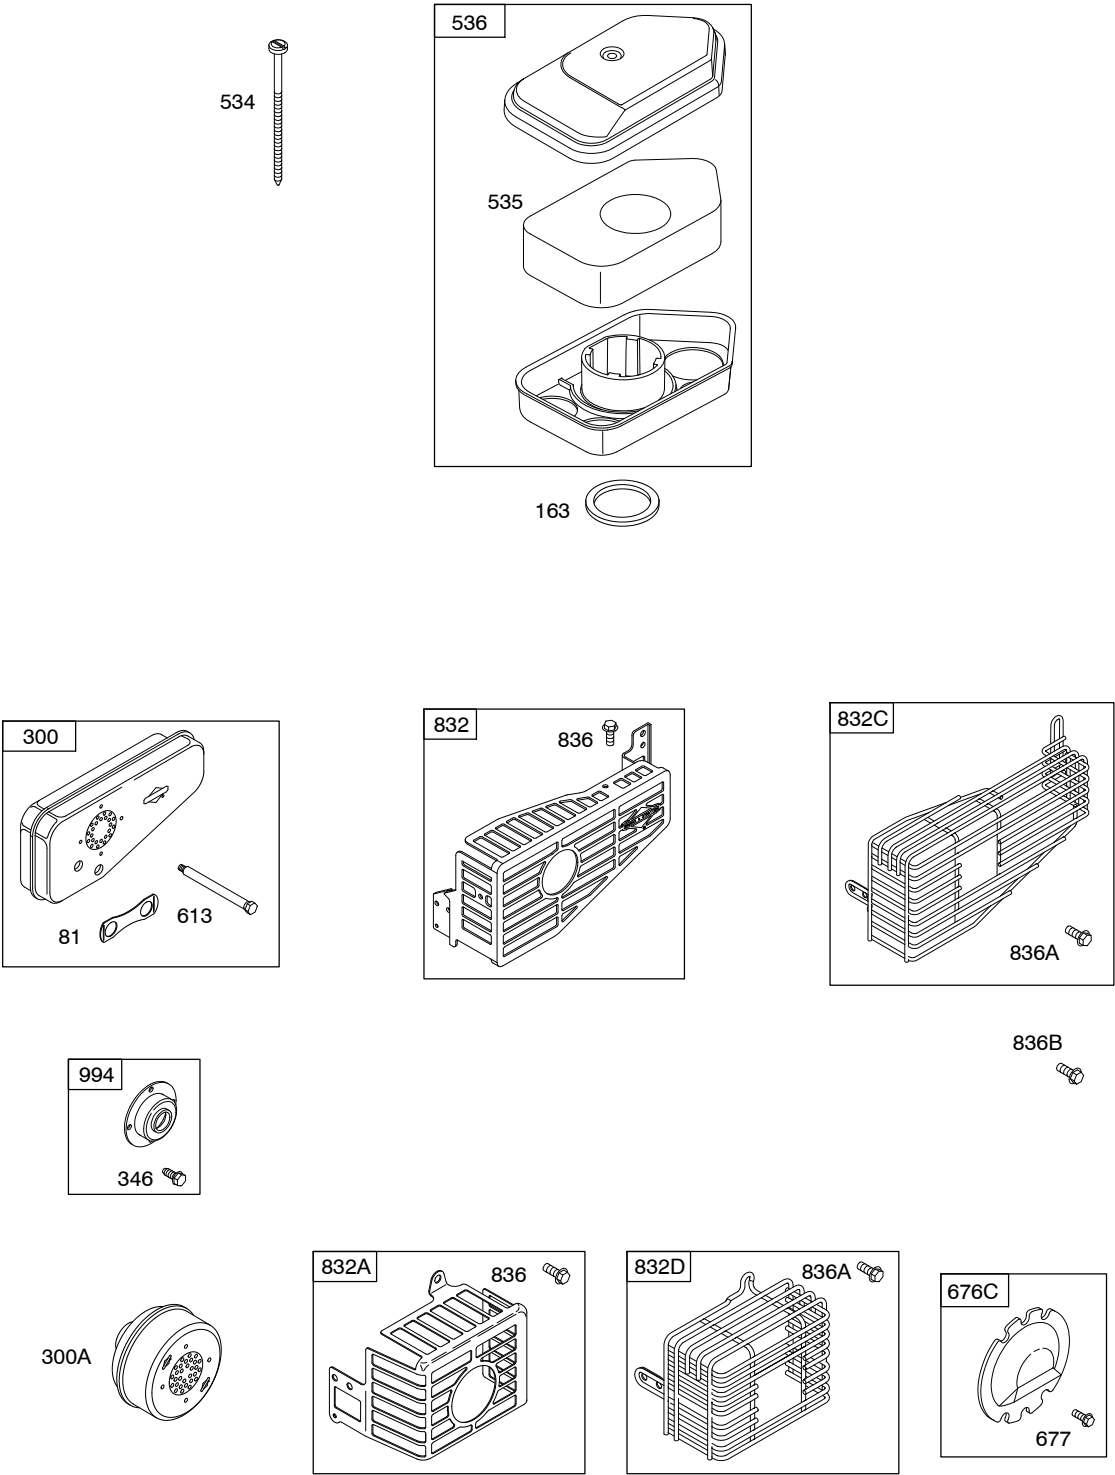

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

1036 EMISSIONS LABEL

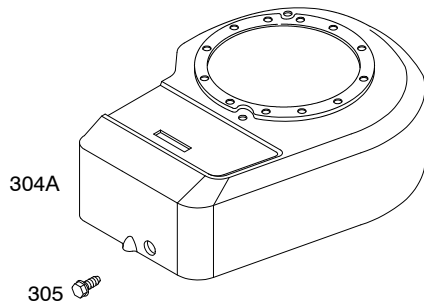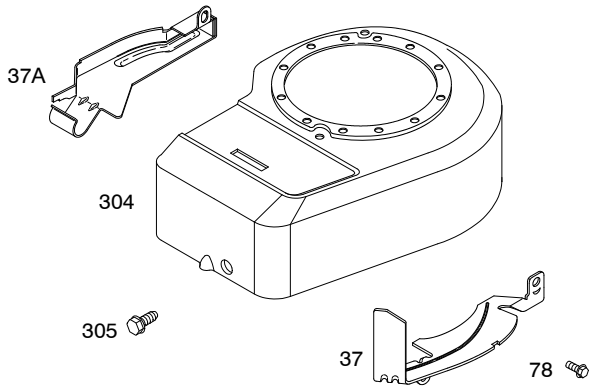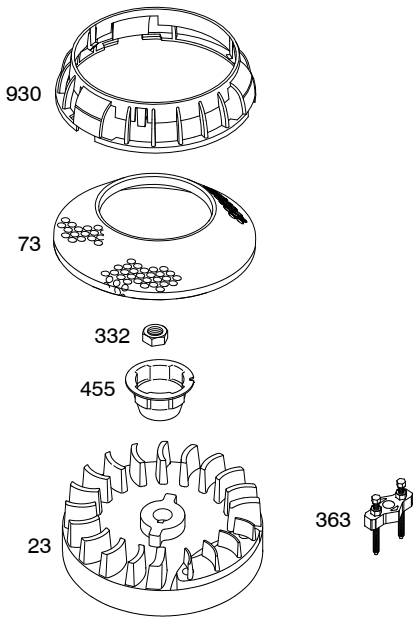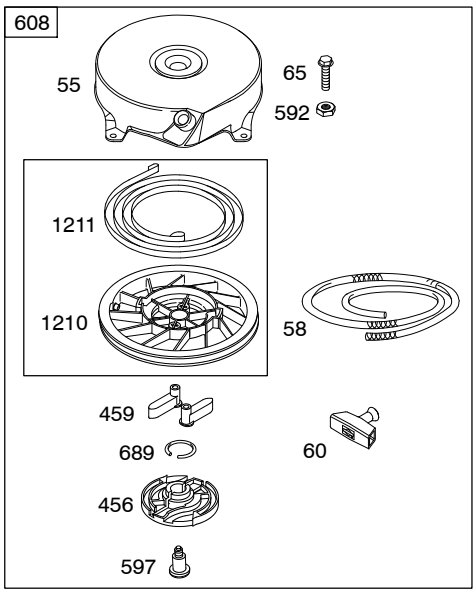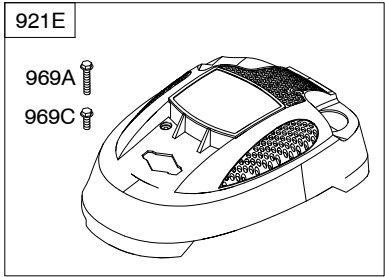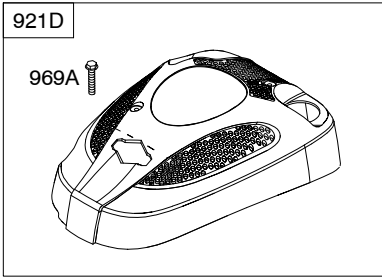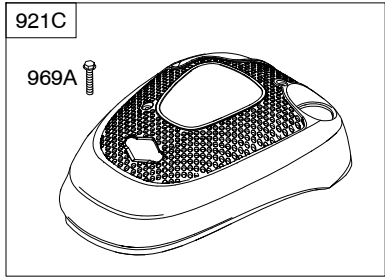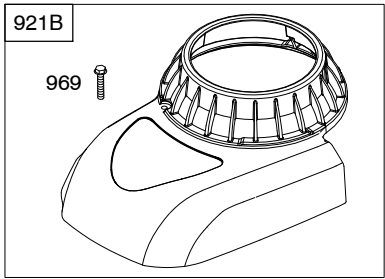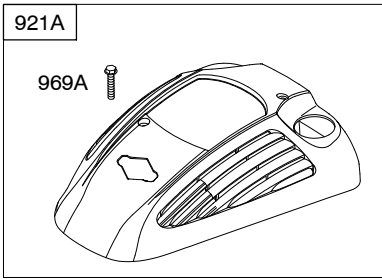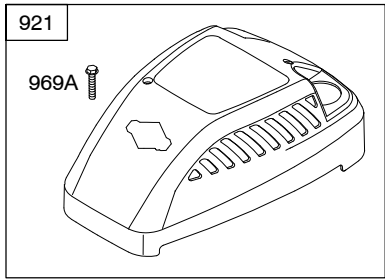

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	16	796219	Crankshaft			796216 Crankshaft
2	796961	Kit-Bushing/Seal (Magnetos Side)			Used on Type No(s). 0222.			Used on Type No(s). 0100, 0111, 0112,
3	299819S	Seal-Oil (Magnetos Side)			----- Note -----			0113, 0114, 0117,
4	798264	Sump-Engine			796218 Crankshaft			0120, 0136, 0139,
5	790169	Head-Cylinder			Used on Type No(s).			0141, 0142, 0143,
7	698717	Gasket-Cylinder Head			0121, 0123, 0130,			0144, 0153, 0157,
8	791781	Breather Assembly			0146, 0178, 0197,			0158, 0161, 0162,
9	695890	Gasket-Breather			0204, 0206, 0212,			0166, 0168, 0169,
10	691666	Screw (Breather Assembly)			0214, 0216, 0501, 0550.			0171, 0173, 0174,
11	691245	Tube-Breather			796217 Crankshaft			0175, 0176, 0177,
12	692218	Gasket-Crankcase (.015" Thick)			Used on Type No(s).			0179, 0180, 0183,
		(Standard)			0115, 0116, 0118,			0184, 0186, 0187,
		----- Note -----			0127, 0132, 0133,			0188, 0189, 0195,
		270895 Gasket-			0137, 0140, 0145,			0205, 0207, 0208,
		Crankcase			0147, 0150, 0155,			0210, 0215, 0217,
		(.005" Thick)			0170, 0172, 0181,			0218, 0220, 0246,
		270896 Gasket-			0190, 0191, 0193,			0253, 0254, 0255,
		Crankcase			0198, 0199, 0200,			0257, 0259, 0262,
		(.009" Thick)			0202, 0203, 0209,			0263, 1111, 1486,
13	691640	Screw (Cylinder Head)			0213, 0221, 0250,	20	391483S	Seal-Oil (PTO Side)
15	691680	Plug-Oil Drain			0251, 0252, 0256,	22	692551	Screw (Crankcase Cover/Sump)
					0258, 0260, 0457,	23	795549	Flywheel
					0495, 0500, 0264,			----- Note -----
					0265, 0609, 0764,			795695 Flywheel
					0833, 0838, 0840,			Used on Type No(s).
					0869, 0931, 0998,			0113, 0116, 0120,
					1000, 1022, 1023,			0121, 0123, 0130,
					1041, 1053, 1056,			0133, 0143, 0146,
					1058, 1096, 1264,			0161, 0162, 0166,
					1303, 1316, 1336,			0174, 0175, 0178,
					1414, 2008, 2010,			0186, 0195, 0197,
					2011, 2027, 2028,			0204, 0206, 0212,
					2034, 2035, 3764,			0213, 0214, 0215,
					3838, 3840.			0216, 0217, 0220,
								0254, 0255, 0550.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	55	692144	Housing-Rewind Starter	60	691915	Grip-Starter Rope
25	795691	Piston Assembly (Standard)	58	697316	Rope-Starter (88 5/8" Long) Used on Type No(s). 0100, 0111, 0112, 0115, 0117, 0118, 0120, 0121, 0127, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0181, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0215, 0218, 0221, 0222, 0246, 0250, 0251, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 2110, 3764, 3838, 3840. ----- Note ----- 691921 Rope-Starter (70" Long) Used on Type No(s). 0113, 0114, 0116, 0123, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0254, 0255, 0550.	65	690837	Screw (Rewind Starter)
	----- Note -----					73	699850	Screen-Rotating
	795689 Piston Assembly (.020" Oversize)					78	692198	Screw (Flywheel Guard)
26	795690	Ring Set (Standard)				81	691179	Lock-Muffler Screw
	----- Note -----					90	795477	Carburetor
	795688 Ring Set (.020" Oversize)					97	691931	Shaft-Throttle
27	691588	Lock-Piston Pin				106	691901	Seat-Inlet
28	699659	Pin-Piston (Standard)				130	691190	Valve-Throttle
29	699654	Rod-Connecting				163	271139S	Gasket-Air Cleaner
32	691664	Screw (Connecting Rod)				180	494406	Tank-Fuel
33	296676	Valve-Exhaust				188	692198	Screw (Control Bracket)
34	296677	Valve-Intake				190	691640	Screw (Fuel Tank) (1 3/4" Long)
35	690520	Spring-Valve (Intake)				190A	691108	Screw (Fuel Tank) (9/16" Long)
36	690520	Spring-Valve (Exhaust)				200	691912	Blade-Governor
37	691209	Guard-Flywheel (Muffler Side)				201	690347	Link-Air Vane
37A	690482	Guard-Flywheel (Carburetor Side)						
40	692194	Retainer-Valve						
43	698690	Slinger-Governor/Oil						
45	691762	Tappet-Valve						
46	691998	Camshaft						
50	699644	Manifold-Intake						
51	699649	Gasket-Intake						
54	691111	Screw (Intake Manifold)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3718-9	Assemblies include all parts shown in frames.	10/13/2010
---------------	--	-------------------

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	691297	Spring-Governor Used on Type No(s). 0100, 0115, 0116, 0150, 0161, 0162, 0186, 0215, 0222, 0250, 0255, 0260, 0263, 0457E1, 0495E1, 0500E1, 0501, 1041, 1264, 1303, 1316, 1414, 1486, 2028. ----- Note ----- 691297 Spring- Governor (Used Before Code Date 07092400). Used on Type No(s). 0457B1, 0495B1, 0500B1. 691297 Spring- Governor (Used After Code Date 07111500). Used on Type No(s). 0457B1, 0495B1, 0500B1, 1022, 1023, 1053, 1058, 3838. 691862 Spring- Governor Used on Type No(s). 0123, 0130, 0178, 0197, 0206, 0212, 0214, 0216, 0220, 0550. 690254 Spring- Governor Used on Type No(s). 0111, 0112, 0113, 0118, 0120, 0132, 0137, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0200, 0202, 0203, 0217, 0218, 0221, 0246, 0251, 0252, 0253, 0254, 0258, 0259, 0264, 0609, 2008, 2010, 2011, 2027, 2035, 2110.			690254 Spring- Governor (Used Before Code Date 07092400). Used on Type No(s). 0998, 1111. 690254 Spring- Governor (Used After Code Date 07111500). Used on Type No(s). 0998, 1111. 690251 Spring- Governor Used on Type No(s). 0114, 0117, 0127, 0136, 0139, 0140, 0141, 0142, 0144, 0145, 0177, 0183, 0184, 0199, 0205, 0207, 0208, 0209, 0210, 0256, 0257, 0262, 0265, 0764, 0838, 0840, 1096, 1336, 2034. 690251 Spring- Governor (Used Before Code Date 07092400). Used on Type No(s). 0869, 0931, 1000, 3764, 3838, 3840. 690251 Spring- Governor (Used After Code Date 07111500). Used on Type No(s). 0833, 0869, 0931, 1000, 1056, 3764, 3840. 690250 Spring- Governor Used on Type No(s). 0121E1, 0133, 0204, 0213. 690250 Spring- Governor (Used Before Code Date 07092400). Used on Type No(s). 0121B1.			690250 Spring- Governor (Used After Code Date 07111500). Used on Type No(s). 0121B1. 795160 Spring- Governor (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840. 211 691859 Spring-Governed Idle

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	698725	Bracket-Control (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.		691446	Bracket-Control (Used After Code Date 07111500). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.	267	691044	Screw (Casing Clamp)
222E	691446	Bracket-Control Used on Type No(s). 0100, 0111, 0112, 0118, 0121E1, 0132, 0136, 0137, 0141, 0144, 0145, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0221, 0246, 0250, 0251, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457E1, 0495E1, 0500E1, 0501, 0609, 0764, 0838, 0840, 1041, 1096, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2035, 2110.	222F	691445	Bracket-Control Used on Type No(s). 0113, 0114, 0115, 0116, 0117, 0120, 0123, 0127, 0130, 0133, 0139, 0140, 0142, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0183, 0184, 0186, 0195, 0197, 0200, 0206, 0210, 0212, 0213, 0214, 0215, 0216, 0217, 0218, 0220, 0222, 0254, 0255, 0257, 0260, 0262, 0264, 0550, 2028, 2034.	268	691025	Casing-Control Wire (Cut To Required Length)
		----- Note ----- 691446 Bracket- Control (Used Before Code Date 07092400). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0869, 0931, 0998, 1000, 1111, 3764, 3838, 3840.	236	691867	Link-Lockout Used on Type No(s). 0139, 0140.	269	691026	Wire-Control (Cut To Required Length)
			265	692179	Clamp-Casing Used on Type No(s). 0116, 0142, 0144, 0145, 0166, 0183, 0184.	270	691027	Nut (Control Wire Casing)
			265A	690798	Clamp-Casing Used on Type No(s). 0100, 0117, 0120, 0132, 0139, 0140, 0150, 0162, 0179, 0195, 0198, 0199, 0200, 0205, 0207, 0208, 0209, 0213, 0215, 0218, 0220, 0256, 0264, 2011, 2028.	271	691028	Lever-Control
			265B	691024	Clamp-Casing Used on Type No(s). 0115, 0118, 0127, 0147, 0210, 0257, 0260, 0262, 2034.	287	691002	Screw (Dipstick Tube)
						300	692307	Muffler (Super Lo Tone) Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120, 0121, 0127, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0212, 0213, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0609, 0833, 0838, 0931, 0998, 1000, 1111, 1336, 2011, 2027, 2028, 2034, 2035, 2110, 3838.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300A	394569S	Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0181, 0206, 0214, 0215, 0216, 0222, 0246, 0250, 0251, 0457, 0495, 0500, 0501, 0550, 0764, 0840, 0869, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1414, 1486, 2008, 2010, 3764, 3840.	304A	694236	Housing-Blower (Compliance Engines) Used on Type No(s). 0111, 0112, 0118, 0132, 0137, 0144, 0145, 0147, 0150, 0157, 0158, 0169, 0170, 0171, 0172, 0173, 0176, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0205, 0207, 0208, 0209, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2035, 2110, 3764, 3838, 3840.	333	793281	Armature-Magneto
						333B	793352	Armature-Magneto Used on Type No(s). 0111, 0112, 0113, 0114, 0116, 0118, 0120B2, 0123, 0132, 0133, 0137, 0139, 0140, 0142, 0143, 0146, 0147, 0162, 0166, 0168, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0215, 0216, 0217, 0218, 0220, 0221, 0222, 0253, 0254, 0255, 0256, 0258, 0259, 0264, 0265, 0609, 0833, 0840, 0869, 0998, 1000, 1041, 1111, 1264, 1414, 2008, 2010, 2011, 3840.
304	694051	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0113, 0114, 0115, 0123, 0127, 0130, 0142, 0143, 0146, 0162, 0175, 0177, 0183, 0184, 0200, 0206, 0210, 0214, 0218, 0220, 0222, 0257, 0260, 0262, 0550, 2028, 2034. ----- Note ----- 691484 Housing- Blower (Compliance Engines) Used on Type No(s). 0100, 0136, 0139, 0140, 0141, 0153, 0155, 0168, 0179, 0221, 0246, 0250, 0251, 1111.			----- Note ----- 692536 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0116, 0117, 0120, 0121, 0133, 0161, 0166, 0174, 0178, 0186, 0195, 0197, 0204, 0212, 0213, 0215, 0216, 0217, 0254, 0255.	334	691061	Screw (Magneto Armature) (1" Long)
			305	692198	Screw (Blower Housing)	335	691107	Screw (Magneto Armature With Air Vane) (1 15/16" Long)
			306	690400	Shield-Cylinder			
			307	690345	Screw (Cylinder Shield)			
			332	690662	Nut (Flywheel)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	796112S	Plug-Spark ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0100, 0115, 0117, 0120B1, 0127, 0136, 0141, 0144, 0145, 0150, 0153, 0155, 0157, 0158, 0161, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0183, 0184, 0210, 0246, 0250, 0251, 0252, 0257, 0260, 0262, 0263, 0208, 2034, 2110.	455	691236	Cup-Flywheel	524	691876	Seal-Dipstick Tube
			456	692299	Plate-Pawl Friction	525	691320	Tube-Dipstick
			459	281505S	Pawl-Ratchet	529	692189	Grommet
			523	692040	Dipstick Used on Type No(s). 0111, 0112, 0115, 0117, 0118, 0120, 0123, 0127, 0130, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0150, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0175, 0177, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0191, 0193, 0195, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0495, 0500, 0550, 0609, 0764, 0833, 0838, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2028, 2035, 2110, 3764, 3838.	534	691417	Screw (Air Cleaner)
346	690661	Screw (Spark Arrester) Used on Type No(s). 0222, 0833.				535	698369	Filter-Air Cleaner Foam
356	692390	Wire-Stop				536	698472	Cleaner-Air
356C	793399	Wire-Stop				578	398153	Wire Assembly
357	692191	Key-Drive Pulley Used on Type No(s). 0197.				592	690800	Nut (Rewind Starter)
358	699933	Gasket Set-Engine				597	691696	Screw (Pawl Friction Plate)
362	793351	Shield-Spark Plug						
363	19069	Puller-Flywheel						
365	790029	Screw (Carburetor)						
383	89838S	Wrench-Spark Plug						
390	691839	Spring-Choke Diaphragm						
393	691837	Screen-Carburetor						
394	795083	Diaphragm-Carburetor						
426	691107	Screw (Governor Blade)	523A	691913	Dipstick Used on Type No(s). 0100, 0113, 0114, 0116, 0121, 0133, 0153, 0155, 0157, 0161, 0162, 0166, 0174, 0176, 0178, 0179, 0189, 0190, 0197, 0198, 0199, 0203, 0204, 0205, 0207, 0208, 0209, 0212, 0213, 0215, 0216, 0217, 0221, 0246, 0250, 0251, 0254, 0255, 0457, 0501, 2027, 2034.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	499706	Starter-Rewind (88 5/8" Rope) Used on Type No(s). 0100, 0111, 0112, 0115, 0117, 0118, 0120, 0121, 0127, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0144, 0145, 0146, 0147, 0150, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0215, 0218, 0221, 0222, 0246, 0250, 0251, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 1486, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 2110, 3764, 3838, 3840. ----- Note ----- 690101 Starter- Rewind (70" Rope) Used on Type No(s). 0113, 0114, 0116, 0123, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0254, 0255, 0550.	612	496046S	Tube-Pick Up	832A	699670	Guard-Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0206, 0216, 0250, 0550.
			613	691413	Screw (Muffler)			
			617	270344S	Seal-O Ring (Intake Manifold)	832C	790743	Guard-Muffler Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2011, 2027, 2034, 2035, 2110.
			621	692310	Switch-Stop			
			633	691321	Seal-Choke/Throttle Shaft (Throttle)	832D	790744	Guard-Muffler Used on Type No(s). 0181, 0214, 0222, 0246, 0251, 2008, 2010.
			635	66538S	Boot-Spark Plug			
			668	692889	Spacer			
			670	691633	Spacer-Fuel Tank			
			676C	393756	Deflector-Muffler Used on Type No(s). 0215.			
			677	690661	Screw (Muffler Deflector) Used on Type No(s). 0215.			
			689	691855	Spring-Friction			
			718	690959	Pin-Locating (Cylinder)			
			718A	499047	Pin-Locating (Crankshaft)			
			724	697478	Retainer-Seal			
			729	690586	Clip-Wire			
			741	796210	Gear-Timing (Used After Code Date 08071300).			
			741	691805	Gear-Timing (Used Before Code Date 08071400).			
			745	691146	Screw (Brake) (7/8" Long)			
			745A	690859	Screw (Brake) (1/2" Long)			
			772	691111	Screw (Linkage Cover)			
			832	699299	Guard-Muffler (Super Lo Tone) Used on Type No(s). 0100, 0120B1, 0127, 0144, 0145, 0263.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836	690664	Screw (Muffler Guard) Used on Type No(s). 0100, 0120B1, 0123, 0127, 0130, 0144, 0145, 0178, 0206, 0216, 0250, 0263, 0550.	836B	691125	Screw (Muffler Guard) (5/8" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2008, 2010, 2011, 2027, 2034, 2035, 2110.	921A	793973	Cover-Blower Housing Used on Type No(s). 0111, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0173, 0181, 0184, 0193, 0200, 0202, 0206, 0214, 0218, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0263, 0264, 0495, 0609, 0838, 0931, 1053, 1058, 1096, 2008, 2011, 2035, 3838.
836A	790745	Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0214, 0215, 0217, 0218, 0220, 0221, 0222, 0246, 0251, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2008, 2010, 2011, 2027, 2034, 2035, 2110.	842	691870	Seal-O Ring (Dipstick Tube)	921B	699796	Cover-Blower Housing Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 2027, 2028, 2034, 3764, 3840.
			847	691440	Dipstick/Tube Assembly	921C	792273	Cover-Blower Housing Used on Type No(s). 0500, 1023, 1041.
			851	493880S	Terminal-Spark Plug	921D	795397	Cover-Blower Housing Used on Type No(s). 0115, 0147, 0220, 0260, 0265.
			851A	692424	Terminal-Spark Plug	921E	796066	Cover-Blower Housing Used on Type No(s). 0147, 0210.
			868	697338	Seal-Valve	922	692135	Spring-Brake
			869	699641	Seat-Valve (Intake)	923	691487	Brake
			870	699642	Seat-Valve (Exhaust)	925	691349	Cover-Linkage
			871	699643	Bushing-Valve Guide (Exhaust)	930	691348	Guard-Rewind Used on Type No(s). 0100, 0116, 0117, 0120, 0133, 0139, 0140, 0141, 0153, 0155, 0161, 0162, 0166, 0174, 0176, 0179, 0186, 0195, 0197, 0213, 0217, 0221, 0246, 0250, 0251, 0254, 0255.
					----- Note ----- 63709 Bushing-Valve Guide (Intake)			
			913	494409	Seat-Check Valve			
			921	694044	Cover-Blower Housing Used on Type No(s). 0171, 0172, 0175, 0177, 0183, 2010, 2110.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	497929S	Cap-Fuel Tank	969A	799014	Screw (Blower Housing Cover) (Used After Code Date 10061300) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838. ----- Note ----- 694046 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838.	969C	799015	Screw (Blower Housing Cover) (Used After Code Date 10061300) Used on Type No(s). 0147, 0210. ----- Note ----- 796065 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0147, 0210. 976 694394 Primer-Carburetor 994 792245 Arrester-Spark Used on Type No(s). 0222, 0833. 1036 Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 1058 277038 Operator's Manual 1095 498526 Gasket Set-Valve 1210 499901 Pulley/Spring Assembly (Pulley) 1211 499901 Pulley/Spring Assembly (Spring) 1319 794467 Label-Warning 1330 270962 Repair Manual
957A	791129	Cap-Fuel Tank Used on Type No(s). 0121, 0130, 0178, 0186, 0197, 0204, 0212, 0216, 0550.						
957B	792878	Cap-Fuel Tank ----- Note ----- 792878 Cap-Fuel Tank Used on Type No(s). 0121, 0123, 0130, 0178, 0186, 0197, 0204, 0206, 0212, 0214, 0216, 0550.						
969	799013	Screw (Blower Housing Cover) Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 2027, 2028, 2034, 3764, 3840.						

