
ITEM #0309527



WOOD FIREPLACE MANTEL


MODEL #SSFBD28TCM-6-CC


Español p. 13

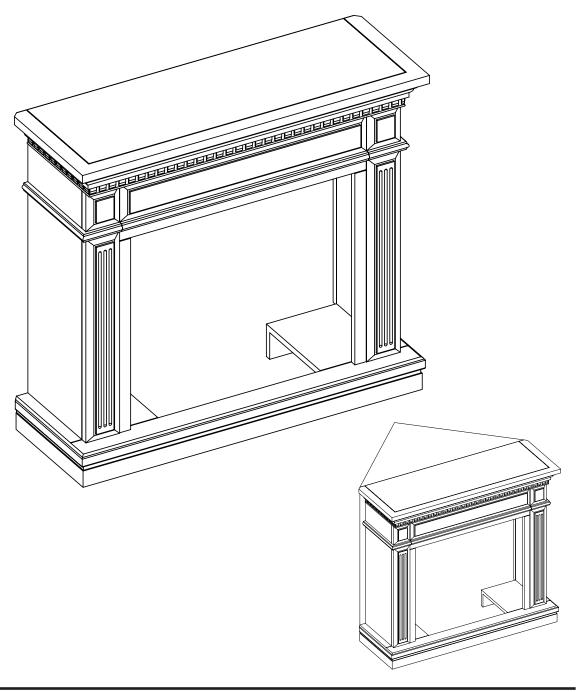



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-573-0674, 8:00 a.m - 4:30 p.m., EST, Monday - Friday or e-mail customerservice@usaprocom.com.

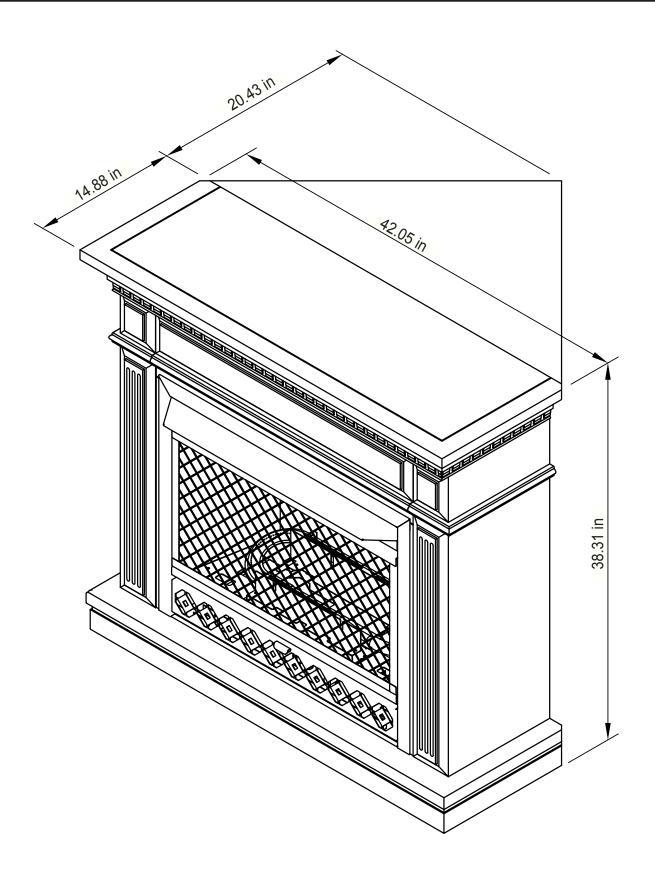

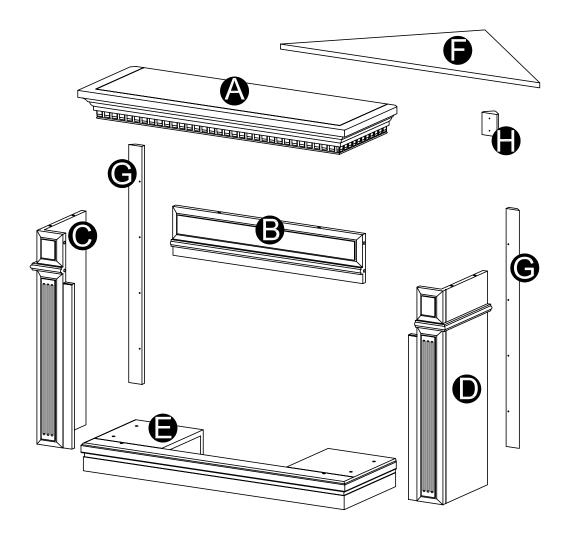

PART	DESCRIPTION	Quantity
Α	Тор	1
В	Panel	1
С	Left Side Panel	1
D	Ride Side Panel	1
E	Base	1
F	Top Triangle Panel	1
G	Backboard	2
Н	Set Square Support	1

HARDWARE CONTENTS

<u>Part</u>	Description	Quanti	Picture ty (Show	e n to size)	Part	Description	Quantity	Picture (Showr	n to size)
AA	Cam Dowel	22			F	ST4 Screw % in.	18		
ВВ	Cam Lock	22			GG	Mounting Bracket	3	(not actual	al size)
CC	Wall Anchor	2			HH	Red Key	1		ŕ
DD	ST4 Screw 1 3/8 in.	8			-				
EE	ST4 Screw 2 3/8 in.	2							



WARNINGS AND CAUTIONS

WARNING

- When tightening screws, do not overtighten. This may cause threads to strip. We recommend using a hand-powered screwdriver rather than a power screwdriver.
- · Do not force screws into holes.

CAUTION

• For corner installations (optional); if baseboards are installed where the fireplace is intended to be displayed, then the fireplace will not fit flush against the wall. For a proper flush fit, you may need to remove part of the baseboard moulding if necessary.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


Estimated Assembly Time: 60 minutes

Tools Required for Assembly: Philips Screwdriver, Flathead Screwdriver, Drill, and Tape


Measure




1. Insert Cam Locks (BB) into left side and right side of Panel (B). Screw in Cam Dowels (AA) into Left Side Panel (C) and Right Side Panel (D) by tightening the Cam Locks (BB) as shown in Fig.1

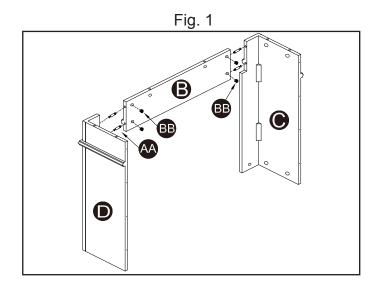

Hardware Used

 


2. Insert Cam Locks (BB) into Left Side Panel (C) and Right Side Panel (D). Screw in Cam Dowels (AA) into Base (E). Attach Base (E) into assembled frame (B,C,D) by tightening the Cam Locks (BB) as shown in Fig. 2.

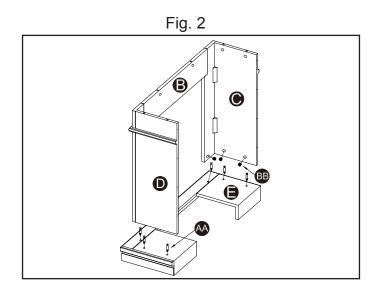

A Skip to step 5 for Corner Mantel Installation.


Hardware Used Cam Dowel x6 x6 Cam Lock

3. Insert Cam Locks (BB) into Left Side Panel (C), Right Side Panel (D) and Panel (B). Screw in Cam Dowels (AA) into Top (A). Attach Top (A) into assembled frame by tightening the Cam Locks (BB) as shown in Fig. 3.

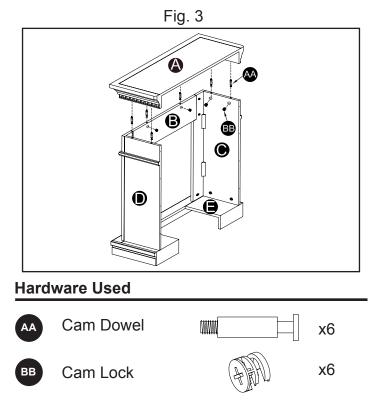


4. Place insert (sold separately) into the mantel as shown in Fig. 4.



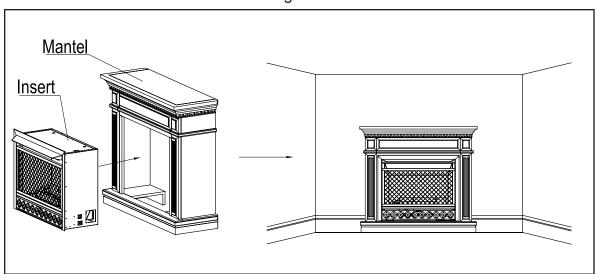

5. Turn the Top (A) over. Using the Mounting Bracket (GG), connect the Top (A) to the Top Triangle Panel (F) with ST4 Screw -5/8 in. (FF) as shown in Fig. 5.


6. Insert Cam Locks (BB) into Left Side Panel (C), Right Side Panel (D) and Panel (B). Screw in Cam Dowels (AA) into Top (A). Attach assembled top into assembled frame by tightening the Cam Locks (BB) as shown in Fig. 6.

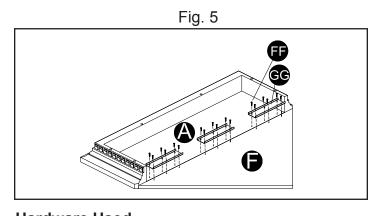


FF ST4 Screw - 5/8 in. x 18

Mounting
Bracket x 3

Fig. 6

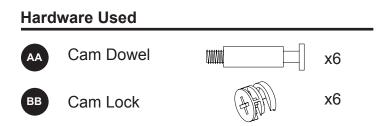


7. Attach the left and right Backboard (G) trim pieces to the back of the fireplace with ST4 Screw - 1 1 1/18 in. (DD) as shown in Fig. 7.

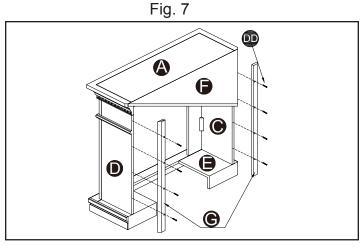

Hardware Used

ST4 Screw - 1 3/8 in.


8. Drill two holes (5/16 in.) in the corner where the fireplace is to be displayed. Drill the first hole 34 $\frac{1}{8}$ in. from the ground up; and the second hole 36 $\frac{7}{8}$ in. from the ground up as shown in Fig. 8. Put the Wall Anchors (CC) in the holes by pinching the anchor tabs together.

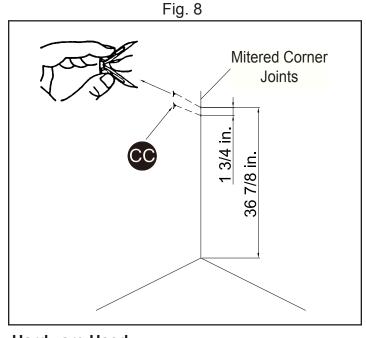

Hardware Used



9. Attach the triangular wood block to the holes drilled in step 8 with ST4 Screw - 2 3/8 in. (EE) as shown in Fig. 9. This block is used to support the Set Square Support (H). For thin walls, insert red key (HH) into wall anchor and push to "pop" open anchor wings.

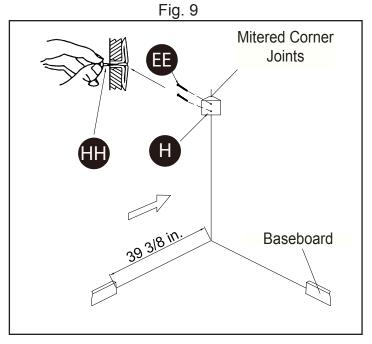


Hardware Used

ST4 Screw - 2 3/8 in. Service x 2

HH Red Key x 1

10. Push fireplace into corner so that the Top Triangle Panel (F) is resting on top of the Set Square Support (H) as shown in Fig. 10.

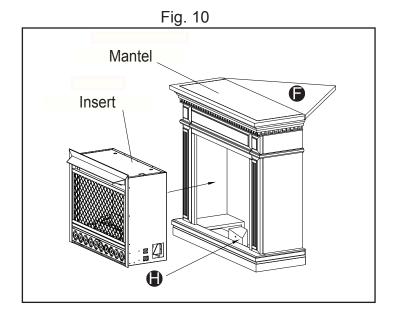

REPLACEMENT PARTS

NOTE: Use only original replacement parts. This will protect your warranty coverage for parts replaced under warranty.

PARTS UNDER WARRANTY

Call Customer Service toll free at (1-866-573-0674) for referral information.

When calling Customer Service, have ready:

- Your name
- Your address
- Model and serial number of your heater
- How heater was malfunctioning
- Type of gas used (Propane/LP or Natural gas/NG)
- Purchase date
- Usually, we will ask you to return the defective part to the factory

PARTS NOT UNDER WARRANTY

Call Customer Service toll free at (1-866-573-0674) for referral information.


When calling Customer Service have ready:

- Model number of your heater
- The replacement part number


REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at 1-866-573-0674, 8:00 a.m - 4:30 p.m., EST, Monday - Friday or e-mail <u>customerservice@usaprocom.com.</u>


Part	Description	Part #
AA	Cam Dowel	GB/T 6478 - 2001
BB	Cam Lock	GB/T 6478 - 2001
CC	Wall Anchor	ML066 - 01
DD	ST4 Screw 1 3/8 in.	GB/T 951 - 4 x 35
EE	ST4 Screw 2 3/8 in.	GB/T950 - 4.8 x 60
FF	ST4 Screw 5/8 in.	GB/T 951 - 4 x 16
GG	Mounting Bracket	SJ 002
HH	Red Key	ML067 - 01

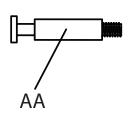




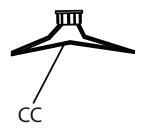

 

 



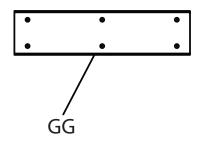



2-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from defects in workmanship and material present at time of shipment from the factory for two (2) years from the date of purchase. This warranty applies only to the original purchaser. The manufacturer agrees to correct such defect at no charge or, at our option, replace the product with a comparable or superior model.

To obtain warranty service, call our customer service department at 1-866-573-0674. You may be required to present a copy of your sales receipt as proof of purchase. All costs of removal and reinstallation are the expressed responsibility of the purchaser. Any damage to the product by accident, misuse, improper installation, or by affixing accessories not produced by the manufacturer, are the purchaser's responsibility. The manufacturer assumes no responsibility whatsoever for installation during the warranty period.

There is no further expressed warranty. The manufacturer disclaims any and all implied warranties. The manufacturer shall not be liable for incidental, consequential, or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights, and you also have other rights which vary from state to state. This warranty supersedes all prior warranties.

Printed in China