



AK6 OUTSIDE AIR KIT

For Wood Burning Fireplaces

Installation Instructions

The outside air vent is installed through a ventilated crawl space. Install outside air vent termination in a location that would not eventually be obstructed by bushes, snow or other obstructions. Vent must be located near fireplace to make flex duct installation easier. Flex duct supplied measures approximately 10" compressed and up to approximately 3 feet extended.

1. Remove outer wrapper cover. Cut out any visible insulation (insulated models only) that may obstruct airflow.

2. Extend flex duct to attach air inlet tube. Insert inner tab of inlet tube into mating slot next to opening. Place outer tab of inlet tube over mating hole next to opening and secure with screws provided. Seal any remaining gaps around inlet tube with metal tape, screws or tie straps.

