

PARTS LIST

This list contains replaceable parts used in your burner system. When ordering parts, follow the instructions listed under *Replacement Parts* on page 23 of this manual.


SBVRBN SBVRBP

KEY				
NO.	PART NUMBER	DESCRIPTION	QTY.	
1	**	Firebox Assembly	1	
2	105795-01	Glass Door Assy	1	
3	106836-02CK	Rear Cover	1	
4	M11084-46	Screw, Hex	11	
5	106794-01	Grate Assembly	1	
6	099998-01	On/Off Switch	1	
7	103284-07	Wire Harness	1	
8	103284-06	Wire Harness	1	
9	11200	Screw	2	
10	14574	Spillswitch	1	
11	M11084-43	Switch Screw	2	
12	105468-01	Valve Bracket	1	
13	105489-01	Valve, Natural	1	
	14584	Valve, Propane/LP	1	
14	105488-01	Pilot Assembly, Natural	1	
	105488-02	Pilot Assembly, Propane/LP	1	
15	102445-01	Ignitor, Piezo	1	
16	106669-01	Bracket, Spill Switch	1	
17	106036-01	Burner, Natural	1	
	106036-02	Burner, Propane/LP	1	
18	104506-16	Orifice, Natural	1	
	104506-17	Orifice, Propane/LP	1	
19	14528	Brass Elbow	1	
20	901063-01	Brass Elbow	2	
21	101628-04	Flex Tubing	1	
22	105325-01	Air Deflector	1	
23	105491-01	Log Set	1	
23-1	105774-01	Rear Log	1	
23-2	105774-02	Front Log	1	
23-3	105774-03	Crossover Log	1	
23-4	105774-04	Log Piece	1	
24	098304-03	Screw	2	
25	M12461-50	Screw	3	
PARTS AVAILABLE - NOT SHOWN				
	GA6060	Lava Rock	1	
	14250	Ember Material	1	
	M11084-26	Hex Screw for Blower Bracket	4	

^{**}Not a field replaceable part.



ILLUSTRATED PARTS BREAKDOWN

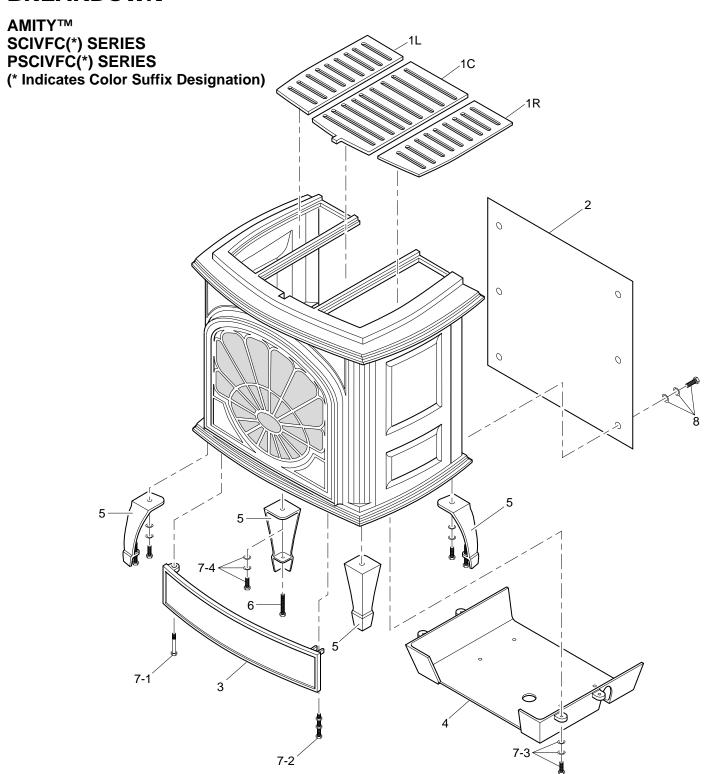

PARTS LIST

This list contains replaceable parts used in your stove. When ordering parts, follow the instructions listed under *Replacement Parts* on page 23 of this manual.

AMITY™ SCIVFC(*) SERIES PSCIVFC(*) SERIES

(* Indicates Color Suffix Designation)

KEY	PART		
NO.	NO.	DESCRIPTION	QTY.
1C	104171-08	Top Grate with Screen, Center (Black Only)	1
1L	104171-11	Top Grate with Screen, Left (Black Only)	1
1R	104171-12	Top Grate with Screen, Right (Black Only)	1
2	104172-01	Stove Back Panel (Black Only)	1
3	104173-01	Bottom Door (Charcoal)	1
	104173-02	Bottom Door (Azure Blue)	1
	104173-03	Bottom Door (Hunter Green)	1
	104173-04	Bottom Door (Burgundy Red)	1
	104173-05	Bottom Door (Forest Green)	1
	104173-06	Bottom Door (Metallic Charcoal)	1
	104173-07	Bottom Door (Porcelain Enamel Red)	1
	104173-08	Bottom Door (Porcelain Enamel Teal Green)	1
	104173-09	Bottom Door (Porcelain Enamel Sand)	1
4	104174-01	Stove Dropped Bottom	1
5	104175-01	One Leg (Charcoal) (4 Total Per Stove)	1
	104175-02	One Leg (Azure Blue) (4 Total Per Stove)	1
	104175-03	One Leg (Hunter Green) (4 Total Per Stove)	1
	104175-04	One Leg (Burgundy Red) (4 Total Per Stove)	1
	104175-05	One Leg (Forest Green) (4 Total Per Stove)	1
	104175-06	One Leg (Metallic Charcoal) (4 Total Per Stove)	1
	104175-07	One Leg (Porcelain Enamel Red) (4 Total Per Stove)	1
	104175-08	One Leg (Porcelain Enamel Teal Green) (4 Total Per Stove)	1
	104175-09	One Leg (Porcelain Enamel Sand) (4 Total Per Stove)	1
6	104176-01	Leg Leveler bolt M8 x 1.25 - 55mm Long (4 Total Per Stove)	1
7	104177-01	Hardware Kit	1
7-1	*	Door Hinge Step Bolt With Shoulder (1 Per Unit)	1
7-2	*	Door Catch Bolt M8 x 1.25 - 55mm Long With Two M8 Hex Nuts (1 Per Unit)	1
7-3	*	Bottom Floor Bolts M6 x 1 - 25mm Long With Flat Washer	
		And Lock Washer (4 Per Unit)	1
7-4	*	Leg Bolts M6 x 1.25 - 20mm Long With Flat Washer And Lock Washer (4 Per Unit)	1
8	104178-01	Back Panel Bolts M6 x 1 - 20mm Long With Flat Washer	
		And Lock Washer (6 Per Unit)	1
		PARTS AVAILABLE — NOT SHOWN	
	104108-01	Touch-up Spray Paint 12 oz Can (Charcoal)	1
	104108-02	Touch-up Spray Paint 12 oz Can (Azure Blue)	1
	104108-03	Touch-up Spray Paint 12 oz Can (Hunter Green)	1
	104108-04	Touch-up Spray Paint 12 oz Can (Burgundy Red)	1
	104108-05	Touch-up Spray Paint 12 oz Can (Forest Green)	1
	104108-06	Touch-up Spray Paint 12 oz Can (Metallic Charcoal)	1
	104807-01	Touch-up Paint Bottle with Brush (Porcelain Enamel Red)	1
	104807-02	Touch-up Paint Bottle with Brush (Porcelain Enamel Teal Green)	1
	104807-03	Touch-up Paint Bottle with Brush (Porcelain Enamel Sand)	1

^{*} Included In Hardware Kit




ACCESSORIES

Purchase these stove and burner system accessories from your local dealer. If they can not supply these accessories, call DESA International at 1-866-672-6040. for information. You can also write to the address listed on the back page of this manual.

THERMOSTATICALLY-CONTROLLED BLOWER KIT - DA3610TA

Provides better heat distribution. Blower turns off and on automatically, as needed. Complete installation and operation instructions included in this manual.

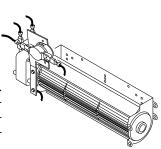

RECEIVER AND HAND-HELD REMOTE CONTROL KIT - GHRC

For all models. Allows the heater to be turned on and off conveniently.



RECEIVER AND HAND-HELD THERMOSTAT REMOTE CONTROL KIT GHRCTA

Allows the burner system to be operated in a manually or thermostatically controlled mode. You can adjust your heat settings and turn the heater on or off without leaving the comfort of your easy chair.



WALL MOUNTED THERMOSTAT CONTROL KIT - GWMT1 (Not Shown)

Allows easy wall access to the operation of your burner system. This will allow you thermostatic control with the convenience of a wall switch.

WALL MOUNTED ON/OFF SWITCH - GWMS2 (Not Shown)

Allows burner system to be turned on and off with a wall switch.