


Comfort Glow® **NATURAL GAS**
DECORATIVE PATIO FIRE

ILLUSTRATED PARTS BREAKDOWN

PATIO FIRE
PC4670NG
PC3460NG

(*Note:* Appearance of firepit may vary depending on model.)

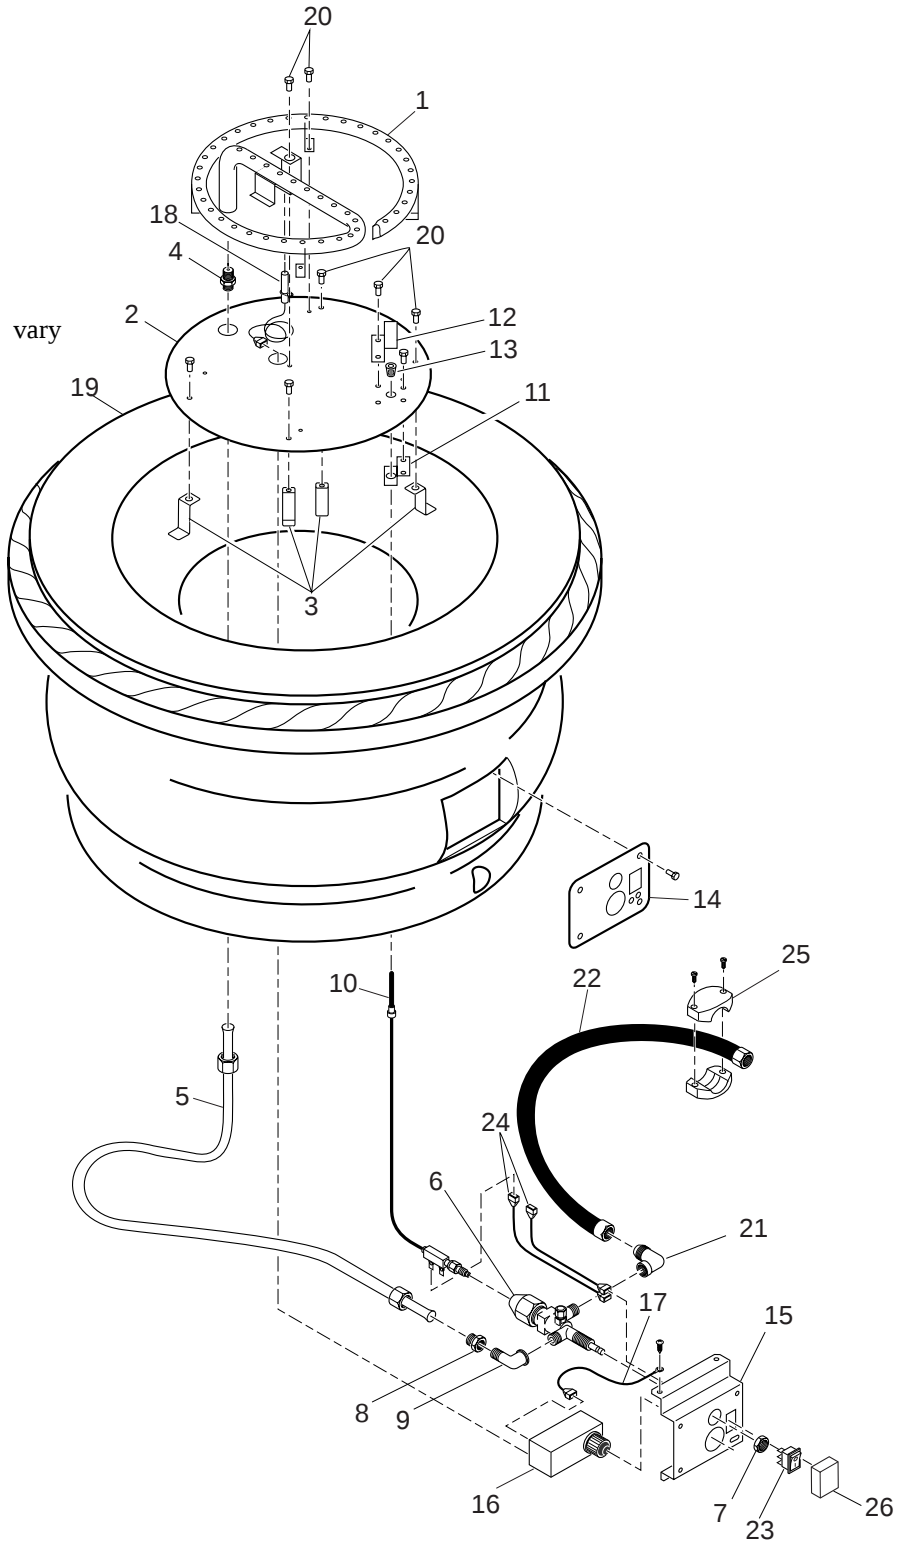

OWNER'S MANUAL

PARTS LIST

This list contains replaceable parts used in your appliance. When ordering parts, follow the instructions listed under *Replacement Parts* on page 10 of this manual.

PATIO FIRE
PC4670NG
PC3460NG

KEY NO.	PART NO. FOR PC4679NG	PART NO. FOR PC3460NG	DESCRIPTION	QTY.
1	106116-01	106116-01	Burner Assembly	1
2	106117-01	106117-01	Burner Plate	1
3	106118-01	106118-01	Burner Plate Bracket	4
4	106119-01	106119-01	Injector, NG	1
5	106725-02	106725-02	Outlet Tube Assembly	1
6	106208-01	106208-01	Gas Valve	1
7	098835-01	098835-01	Nut, Valve Retention	2
8	106714-01	106714-01	Outlet Adapter	1
9	57413	57413	Street Elbow	1
10	099538-01	099538-01	Thermocouple	1
11	106195-01	106195-01	T-C Bracket, NG	1
12	106711-01	106711-01	T-C Cover	1
13	099237-01	099237-01	Retainer, T-Couple	1
14	106120-02	106120-02	Front Mounting Plate	1
15	106121-02	106121-02	Control Bracket	1
16	106130-01	106130-01	Spark Module	1
17	106715-01	106715-01	Grounding Wire	1
18	106134-01	106134-01	Electrode	1
19	107215-01	106123-01	Firepit	1
20	M10908-14	M10908-14	Screws, Sheet Metal	18
21	106716-01	106716-01	Inlet Adapter Pipe Fitting	1
22	106712-01	106712-01	Flex Supply Hose	1
23	106742-01	106742-01	Switch	1
24	079010-14	079010-14	Wire Harness, Switch	2
25	106718-01	106718-01	Hose Clamp	1
26	079919-01	079919-01	Dust Cover, Switch	1
PARTS AVAILABLE — NOT SHOWN				
	106204-01	106204-01	Lava Rock	1
	106046-01	106046-01	Logs (Set of 6)	1
	106717-02	106717-01	Protective Cover	1
	107354-03	107354-03	Lighting Instructions Plate	1
	107354-02	107354-02	Warning & Rating Plate	1