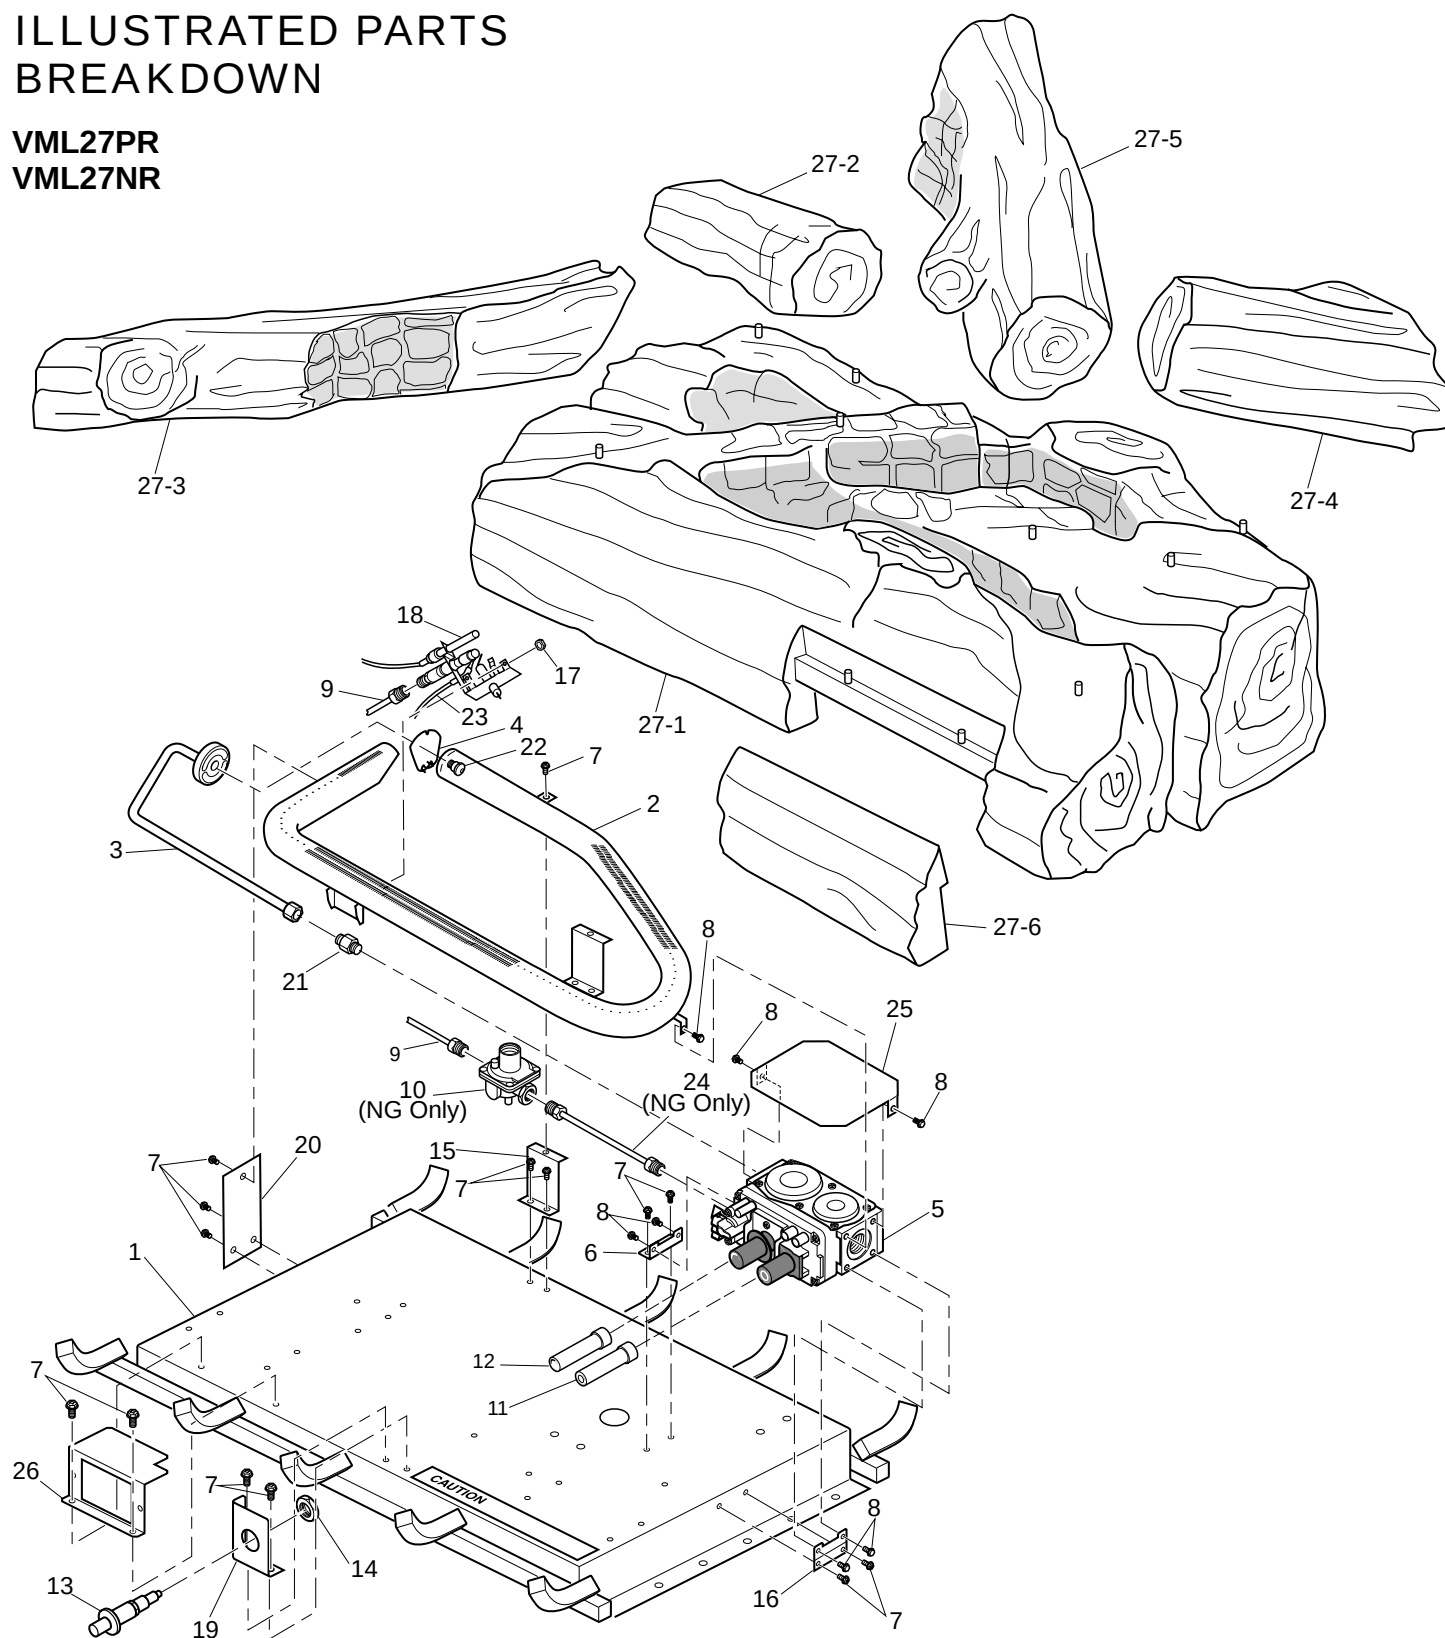


ILLUSTRATED PARTS
BREAKDOWNVML27PR
VML27NR

PARTS LIST

This list contains replaceable parts used in your heater. When ordering parts, follow the instructions listed under *Replacement Parts* on page 24 of this manual.

KEY NO.	PART NUMBER		DESCRIPTION	QTY.
	VML27PR	VML27NR		
1	111111-01	111111-01	Painted Base Assembly	1
2	104591-01	104591-01	Burner Tube	1
3	104592-03	111195-03	Outlet Tube Kit	1
4	111124-01	111124-01	Burner Clip	1
5	103781-02	103781-01	Gas Valve	1
6	110792-01	110792-01	Remote Valve Bracket	1
7	M11084-26	M11084-26	Screw, HWH AB 10-16 x .38	12
8	M12461-26	M12461-26	Screw, HX SLT WAR 10-32 x .38	5
9	099387-09	099387-12	Pilot Tube	1
10	—	099918-02	Pilot Regulator	1
11	103784-01	103784-01	Extension Knob (Pilot)	1
12	103784-02	103784-02	Extension Knob (HI-LOW)	1
13	102445-01	102445-01	Piezo Ignitor	1
14	102334-01	102334-01	Palnut Fastener	1
15	111022-01	111022-01	Rear Burner Bracket	1
16	110792-01FB	110792-01FB	Rear Flat Burner Bracket	1
17	098249-01	098249-01	ODS Nut	2
18	103778-01	103779-01	ODS Pilot	1
19	110793-01	110793-01	Piezo Bracket	1
20	111021-01	111021-01	Side Burner Bracket	1
21	098264-02	098264-02	Male Connector	1
22	099056-17	099056-33	Injector	1
23	098271-10	098271-10	Ignitor Cable	1
24	—	100609-01	Pilot Tubing	1
25	111123-01	111123-01	Heat Shield	1
26	111038-01	111038-01	Remote Sensor Bracket	1
27	—	—	Log Set	1
27-1	111248-01	111248-01	Base Log	1
27-2	111248-02	111248-02	Left Rear Log	1
27-3	111248-03	111248-03	Left Front Log	1
27-4	111248-04	111248-04	Right Rear Log	1
27-5	111248-05	111248-05	Right Front Log	1
27-6	111248-06	111248-06	Control Cover Log	1
PARTS AVAILABLE — NOT SHOWN				
	100563-01	100563-01	Warning Plate	1
	103877-01	103877-01	Lighting Instructions Plate	1
	105345-01	105345-01	Warning Plate Fastener	1
	100639-01	100693-01	Caution Decal	1
	101137-02	101137-02	Hardware Kit	1
	101142-01	101142-01	Lava Rock	2