


PARTS

MODELS

BLP170VTA, REM170VTA, RLP170VTA, SBLP170VTA, 170-FA, SPC-170FA

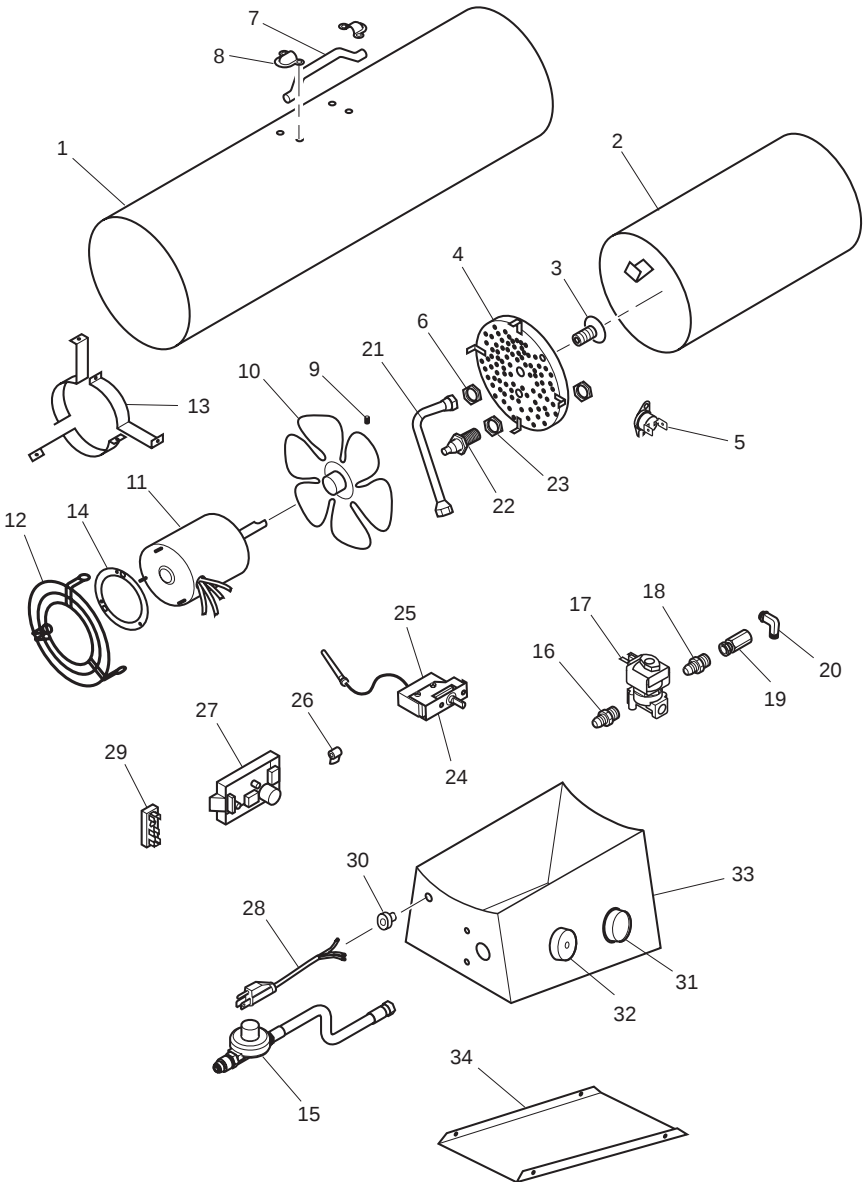

PARTS

MODELS

BLP170VTA, REM170VTA, RLP170VTA, SBLP170VTA, 170-FA, SPC-170FA

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	121409-03	Outer Shell Yellow (BLP170VTA)	1
	121409-01	Outer Shell, Red (RLP170VTA)	1
	121409-02	Outer Shell, Red (170-FA)	1
	121409-04	Outer Shell, Green (SBLP170VTA)	1
	121409-05	Outer Shell, Orange (SPC-170A)	1
2	**	Middle Cylinder	1
3	121245-04	Orifice Assembly	1
4	121225-02	Flame Holder Assembly	1
5	113848-01	High Limit Switch	1
6	113888-02	Orifice Nut	1
7	121216-01	Handle	1
8	121217-01	Handle Mounting Clips	2
9	113948-01	Set Screw, Nyloc	1
10	121211-01	Fan	1
11	121208-01	Motor Assembly	1
12	121246-02	Inlet Grille	1
13	121247-03	Motor Mounting Bracket	3
14	121247-02	Bracket	1
15	121205-01	Hose/Regulator Assembly	1
16	113952-01	Male Fitting Conn. 3/8 MPT x 3/8 SAE FLR	1
17	113951-01	Solenoid Valve, Goyen	1
18	113964-01	Fitting Close Nipple	1
19	113966-01	Burn Rate Adjustment Valve	1
20	113965-01	E bow Fitting, 3/8 MPT x 1/2 SAE FLR	1
21	121212-03	Fuel Tube Assembly	1
22	121213-03	Spark Plug, Flame Sensor	1
23	113886-01	Spark Plug Nut	1
24	121242-01	Thermostat Mounting Bracket	1
25	113944-01	Thermostat Assembly	1
26	113949-01	Loop Clamp, 5/16	1
27	121233-01	Flame Control	1
28	113864-01	Power Cord Assembly	1
29	113960-01	Terminal Board	1
30	113865-01	Bushing Strain Relief	1
31	121215-02	Thermostat Knob	1
32	121215-03	Burn Rate Adjustment Knob	1
33	121410-03	Control Box	1
34	121411-03	Access Panel	1
PARTS AVAILABLE - NOT SHOWN			
	121234-01	Flame Control Assembly Wire	1
	121238-01	Pressure Ignition Wire	1
	121237-01	Switch Wire, Red	1
	121237-02	Switch Wire, Black	1

**Not a field replaceable part.