

IDLE DOWN ASSEMBLY REMOVAL

REMOVE THE IDLE CONTROL CABLE (1) FROM THE ENGINE THROTTLE.

LOOSEN AND REMOVE THE QUICK CONNECT AND CHEMICAL INJECTOR FROM THE PORT (2) ON THE IDLE CONTROL ASSEMBLY.

REMOVE THE PRESSURE HOSE (3) THAT LEADS FROM THE PUMP TO THE IDLE CONTROL ASSEMBLY FROM THE HIGH PRESSURE PUMP OUTLET.

THREAD THE QUICK CONNECT/CHEMICAL INJECTOR ONTO THE HIGH PRESSURE PUMP OUTLET. USE THREAD SEALANT TO PREVENT LEAKS.

LOOSEN THE BOLTS (4) HOLDING THE IDLE CONTROL ASSEMBLY IN PLACE ON THE FRAME AND REMOVE THE ASSEMBLY.

