


MAXair Premium Air Compressor part breakdown sheet - Single Stage Stationary Units C103120H1-MS208-MAP

REVISED
5/8/17

Item	Description	
1	Compressor w/ Flywheel	PT10AHP
2	Discharge Tube	TU-1-23/45/100
3	Pressure Gauge	PGLF200-2.5BM1/4
4	Outlet Valve	BV1MF
5	Air Receiver (tank)	120HE24X68-Y
6	Drain Cock -Assembly	OSB WO DC ASSEMBLY
7	V-Belt	B89
8	Belt Guard	BG120GAL
9	Motor - 3 Phase, 208/230V	EM10.0-18-30
10	Check Valve	P1010S-T
11	Pressure Switch	21UCBDB-170
12	Pulley - Motor	2B9.0PD
13	Hub or Bushing	SK13/8
14	Unloader Tube	TU-1/4-CU
	**Fittings Required for TU-1/4CU	68-4A
15	Safety Valve	PSV1/4-200
	Eagle Compressor Oil	EAOIL10
16	MAG STARTER 7.5HP 208/230V	1066MS

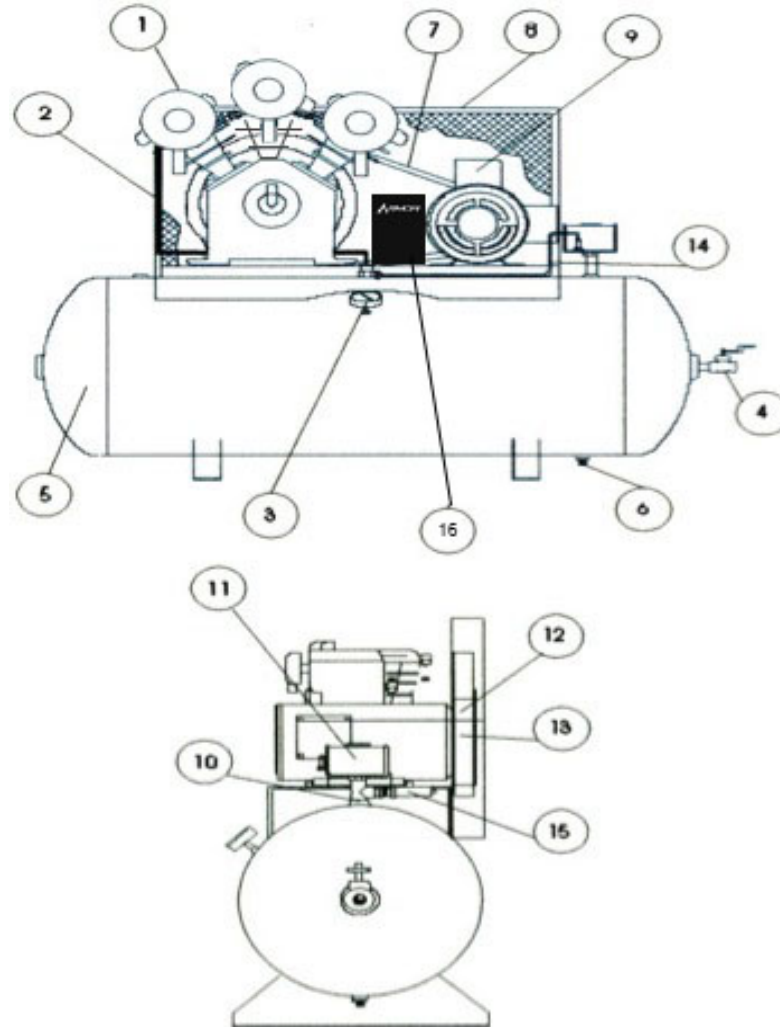

MAXair
PREMIUM

Wood
INDUSTRIES
INCORPORATED