

MAXair Premium Air Compressor part breakdown - P4125H1-MAP

REVISED 5/8/17

Item	Description	P4125H1-MAP
1	Compressor w/ Flywheel	PV02AHP
2	Discharge Tube	TU-20-AL
3	Pilot Unloader/Check Valve	NDC29-M
4	Electric Motor	EM05.0-36-1OSPL
5	Pulley - Motor	MA38X5/8
6	V-Belt	A54
7	Belt Guard	TT-GUARD
8	Air Receiver (TANK)	25HEPORT-Y
9a	Pressure Gauge (Tank)(liquid)	PGLF200-2.5BM1/4
9b	Pressure Gauge (Regulator)	PT0160
10	Regulator	R202-1/4
11	Drain Valve	240-B
12	Safety Valve	PSV1/4-200
13	Pressure Switch	21UCBDB-170
14	Wiring Harness	12/3-42-TT15
15a	Handle (Long)	PT-HANDLE-25L
15b	Handle (Short)	PT-HANDLE-24HS
16	Wheel	PT-WHEEL-FF
	Shoulder Bolts (2)	E5001 (2)

Item	Description	P4125H1-MAP
17	Vibration Damper	TT-FOOT (2)
18	Power Cord	12/3-72-TTP5
19	Unloader Tubing w/ Fittings	TU1/4BLK
20	Duo Coupler	CPL-DUO
21	Hose Assembly	TT-HOSE
	Eagle Compressor Oil	EAOIL10

MAXair PREMIUM

