



123K00

Illustrated Parts List

Model Series

123K00

TYPE NUMBERS
0005 through 0625.

TABLE OF CONTENTS


Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	4
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2






BRIGGS & STRATTON





PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

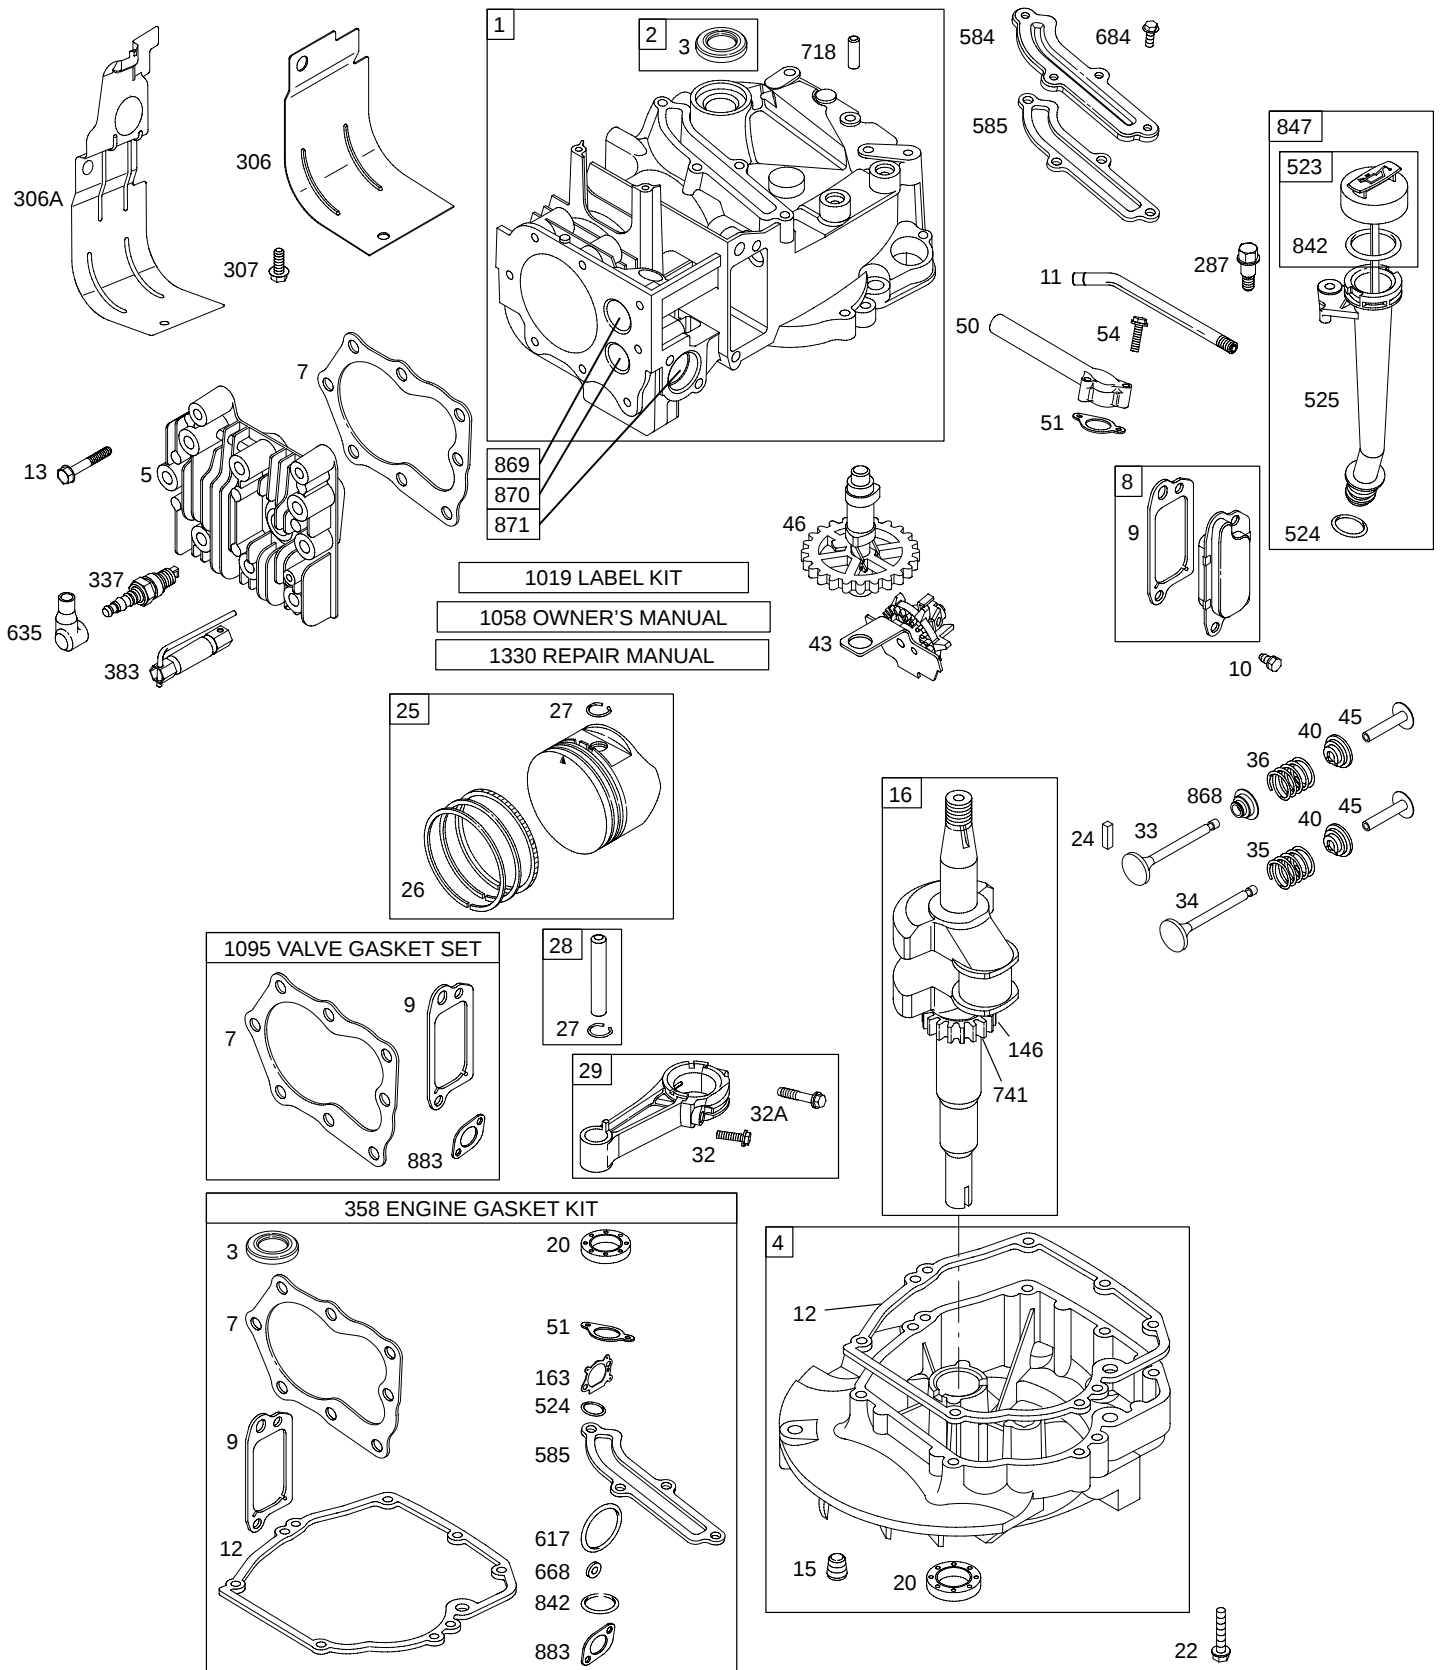


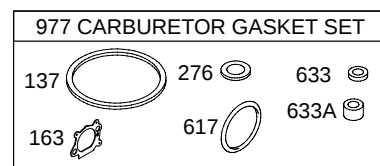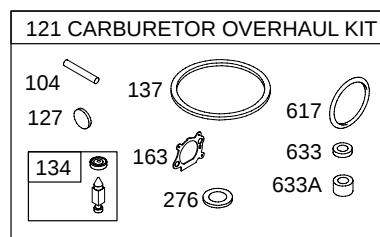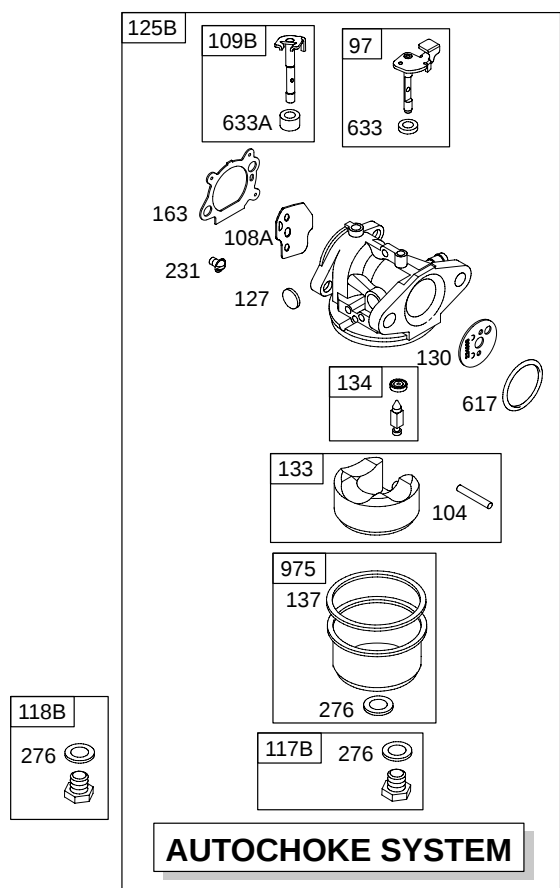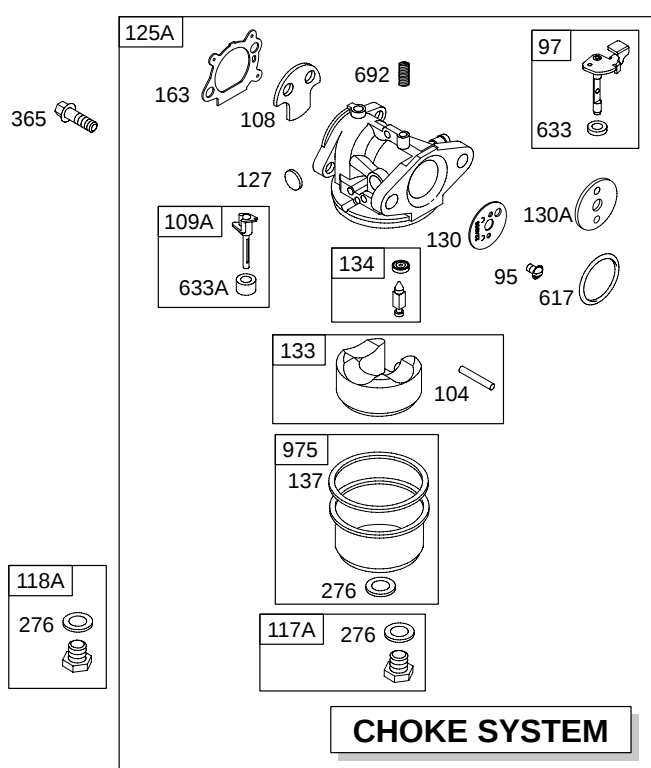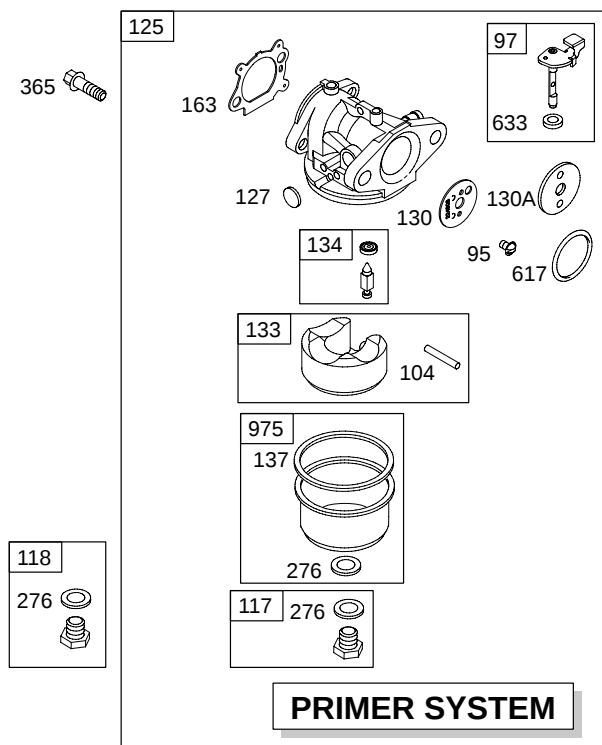

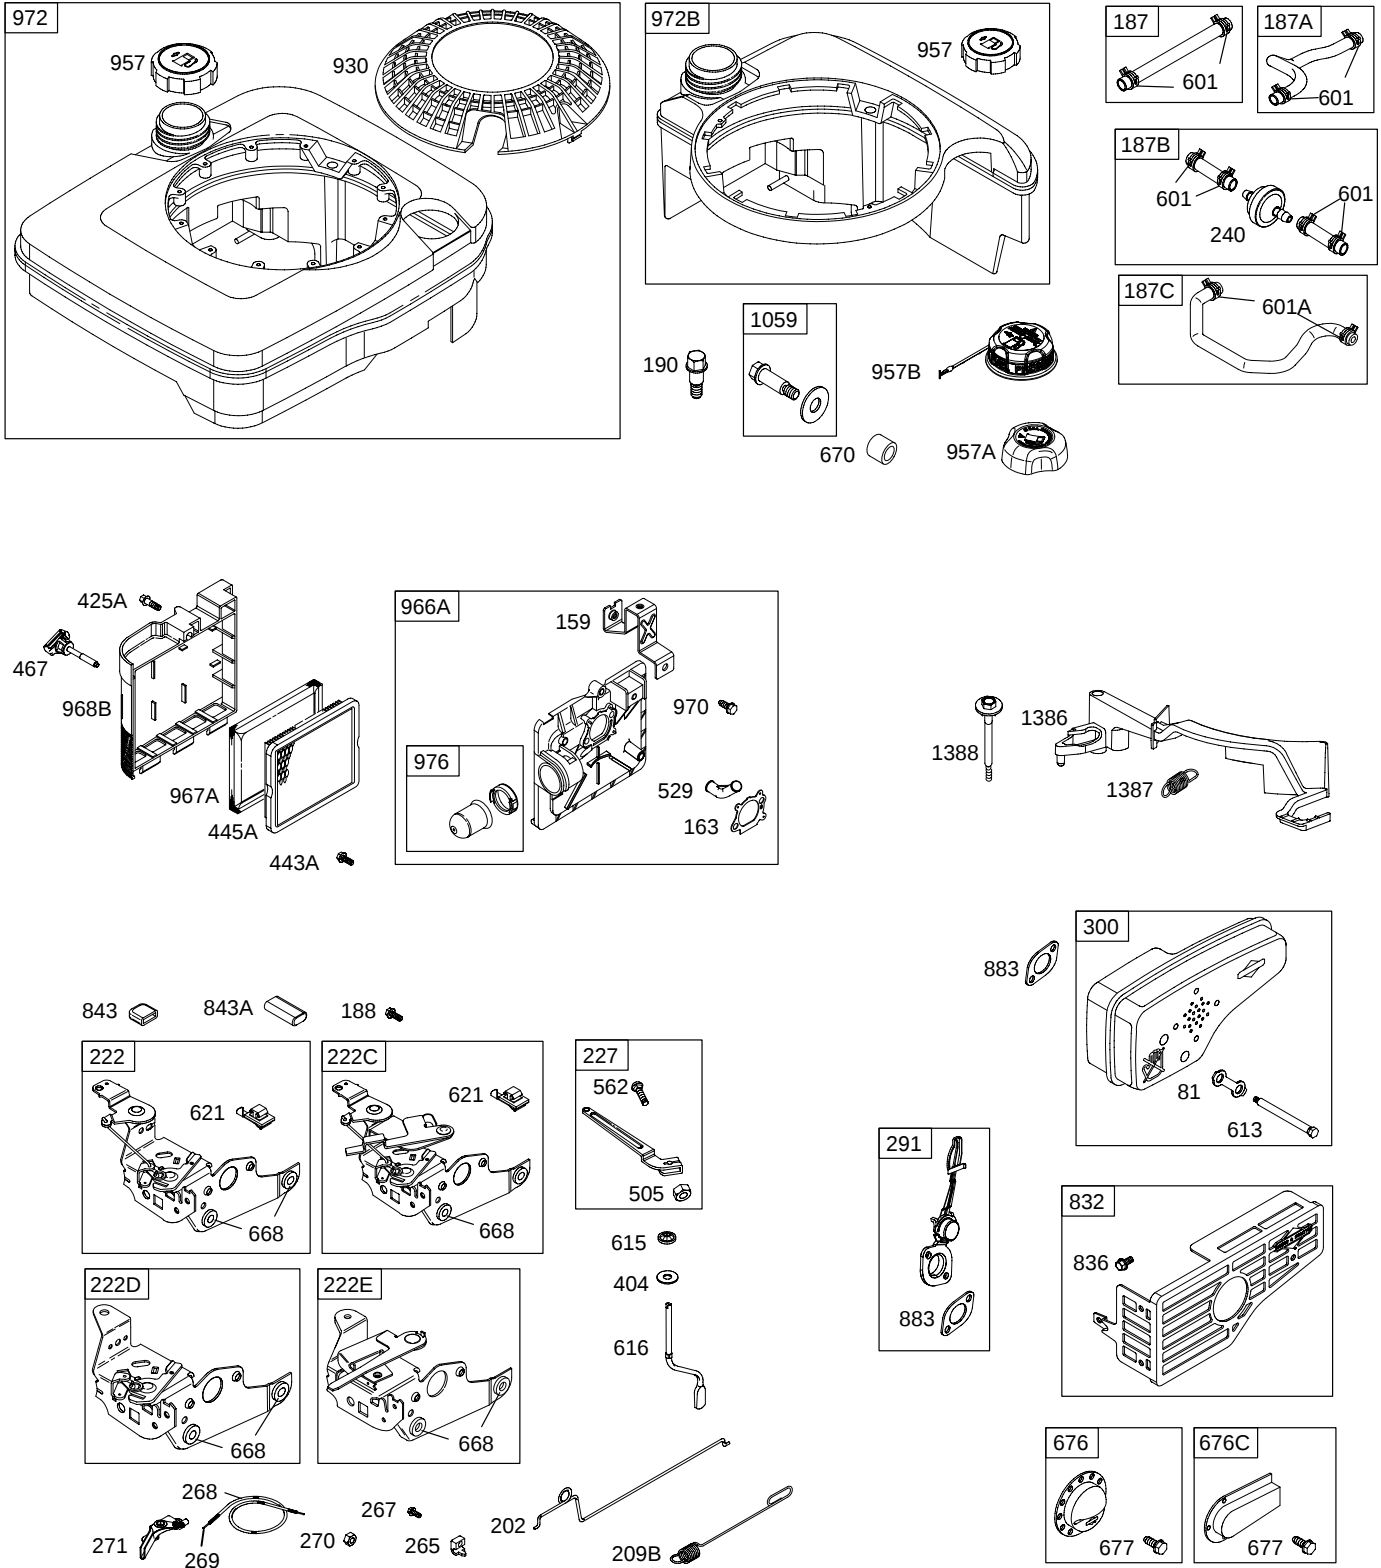

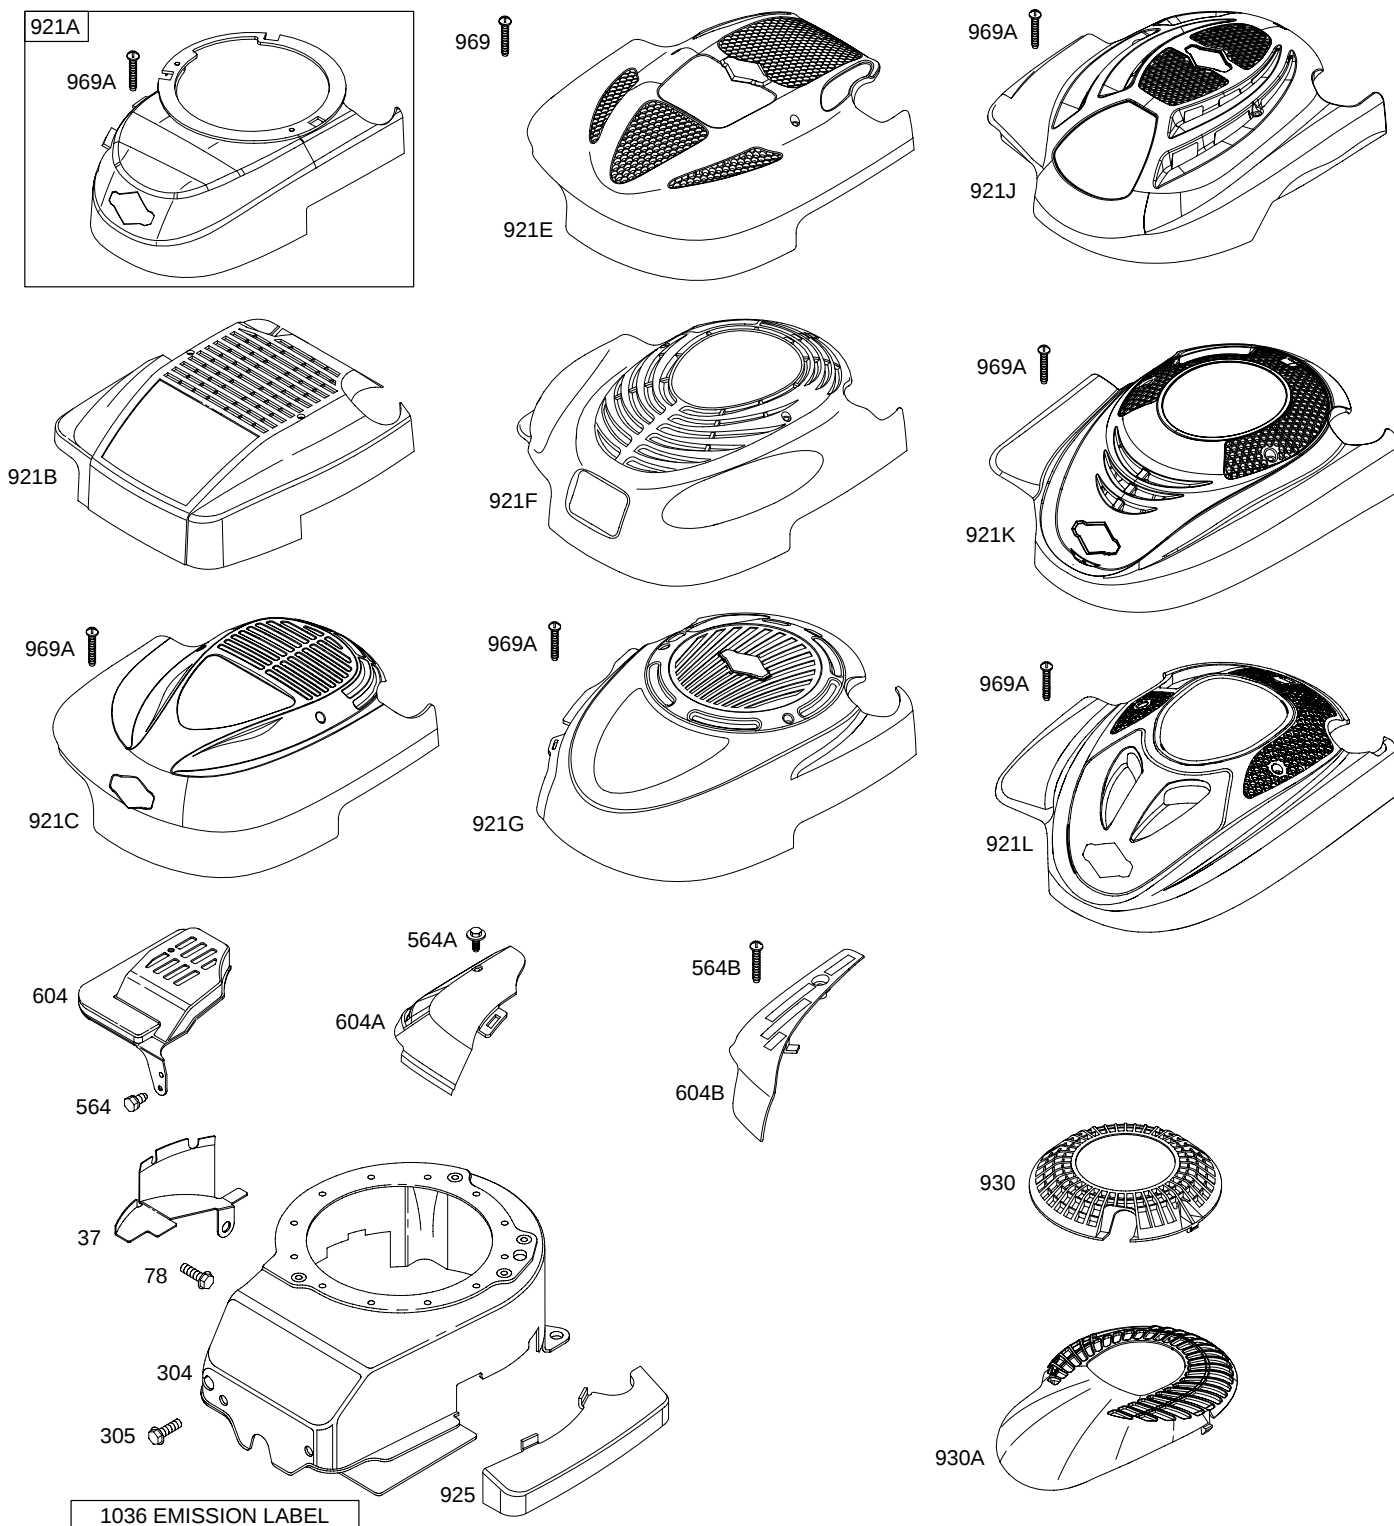

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

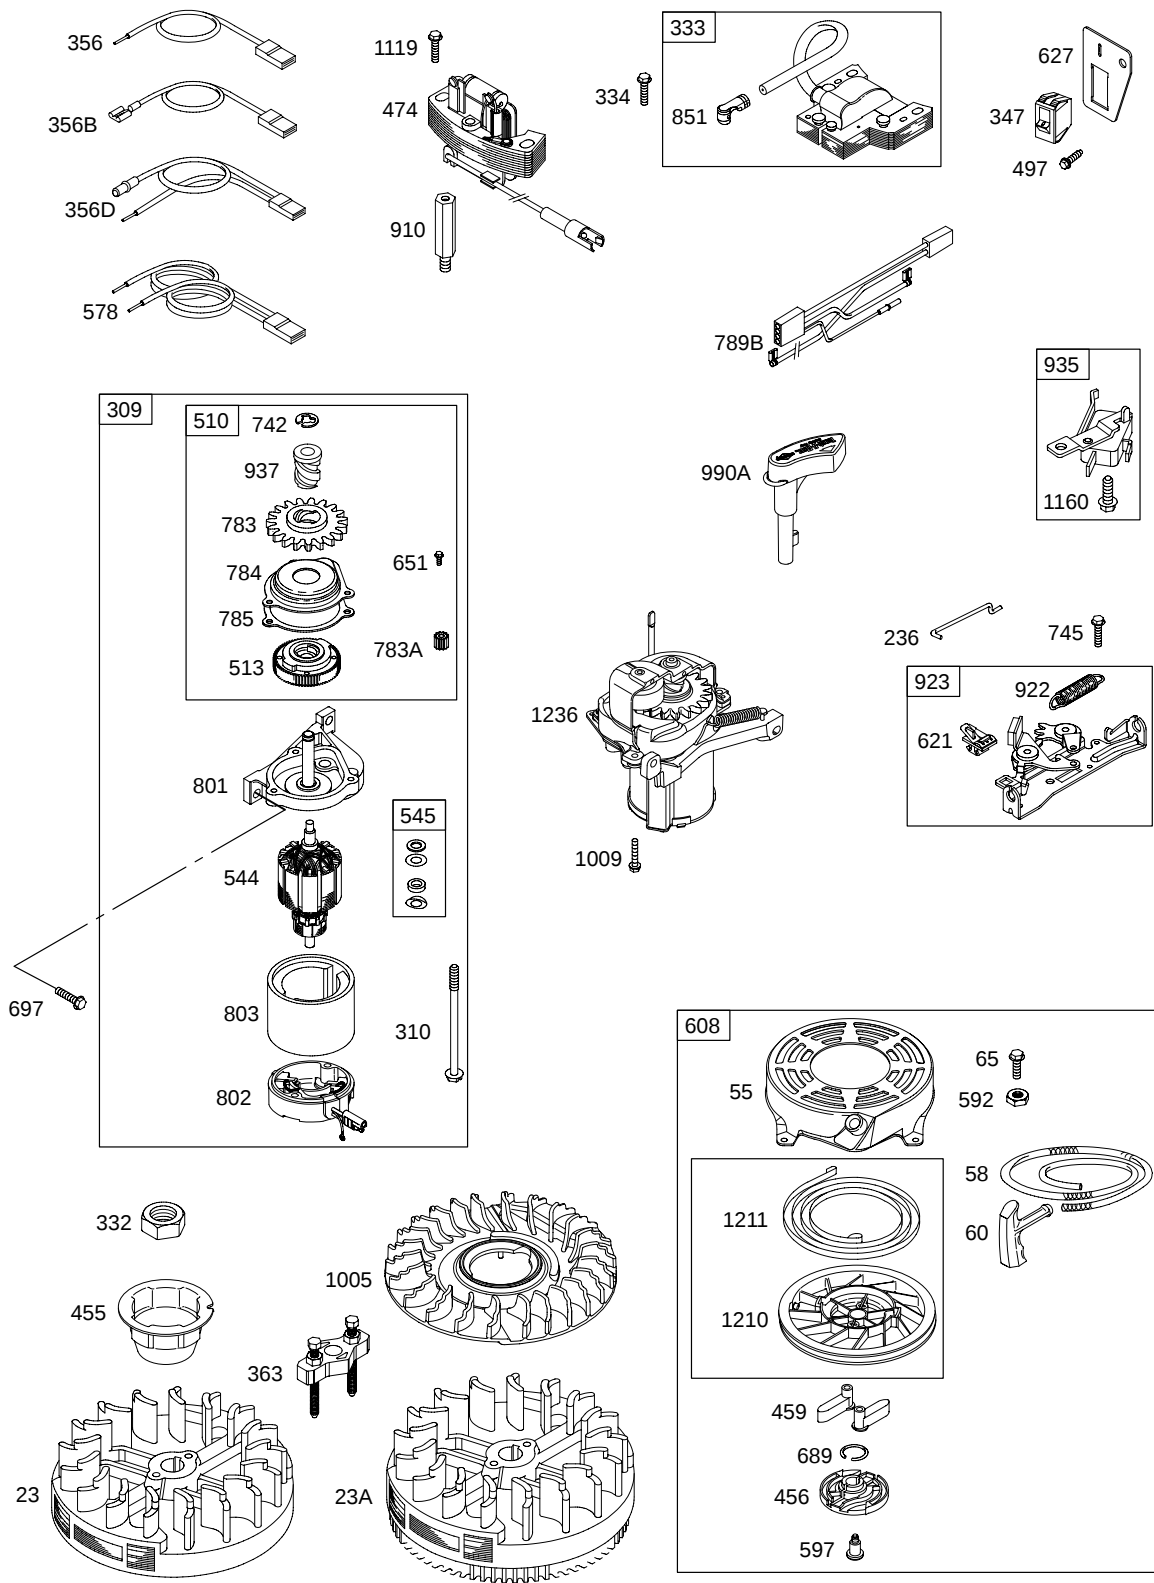

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft	22	691092	Screw
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			(Crankcase Cover/ Sump)
3	★299819	Seal-Oil (Magneto Side)		691450	Crankshaft	23	692315	Flywheel
4	493279	Sump-Engine			Used on Type No(s).			(Rewind Start)
		----- Note -----			0025, 0101, 0119,			----- Note -----
		696294 Sump-Engine			0122, 0123, 0124,			696291 Flywheel
		Used on Type No(s).			0125, 0126, 0135,			Used on Type No(s).
		0121, 0194, 0244.			0258, 0265, 0267,			0121, 0194, 0244.
		498983 Sump-Engine			0268, 0275, 0281,	23A	691992	Flywheel
		Used on Type No(s).			0301, 0302, 0306,			(Electric Start)
		0131, 0134, 0138.			0309, 0311, 0312,			----- Note -----
5	691160	Head-Cylinder			0313, 0314, 0315,			691987 Flywheel
7	★Ø692249	Gasket-Cylinder Head			0324, 0326, 0327,			(Electric Start)
8	695250	Breather Assembly			0328, 0329, 0330,			Used on Type No(s).
9	★Ø696125	Gasket-Breather			0337, 0338, 0344,			0060, 0062, 0107,
10	691125	Screw			0347, 0350, 0357,			0184, 0210, 0218,
		(Breather Assembly)			0424, 0425, 0438,			0223, 0225, 0265,
11	691781	Tube-Breather			0440, 0444, 0447,			0273, 0275, 0302,
12	★692232	Gasket-Crankcase			0450, 0454, 0456,			0330, 0344, 0478,
13	690912	Screw			0478, 0479, 0481,			0560, 0562.
		(Cylinder Head)			0484, 0490, 0498,	24	222698	Key-Flywheel
15	691680	Plug-Oil Drain (Square Socket)			0501, 0507, 0508,	25	790359	Piston Assembly
					0511, 0513, 0525,			(Standard)
					0562, 0625.			(Used After Code Date
					696009 Crankshaft			04031400).
					Used on Type No(s).			----- Note -----
					0114.			697339 Piston
					691455 Crankshaft			Assembly
					Used on Type No(s).			(Standard)
					0018, 0126, 0131,			(Used Before Code
					0134, 0138, 0219,			Date 04031500).
					0230, 0234, 0238,			697340 Piston
					0243, 0289, 0518.			Assembly
					694849 Crankshaft			(.010" Oversize)
					Used on Type No(s).			791326 Piston
					0005, 0137, 0236,			Assembly
					0269.			(.020" Oversize)
					694478 Crankshaft			(Used After Code Date
					Used on Type No(s).			04102100).
					0240, 0332.			697341 Piston
					696290 Crankshaft			Assembly
					Used on Type No(s).			(.020" Oversize)
					0130.			(Used Before Code
					694850 Crankshaft			Date 04102200).
					Used on Type No(s).			(.010" Oversize)
					0132.			697342 Piston
			20	★399781	Seal-Oil (PTO Side)			Assembly
								(.030" Oversize)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note ----- 499425 Ring Set (Standard) (Used Before Code Date 04031500). 499426 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200). 499428 Ring Set (.030" Oversize)	58	697316	Rope–Starter (Cut To Required Length)	125	498170	Carburetor (Primer System) ----- Note ----- 790821 Carburetor (Primer System) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562.
27	691866	Lock–Piston Pin	60	281434	Grip–Starter Rope	125A	499059	Carburetor (Choke System)
28	499423	Pin–Piston (Standard)	65	690837	Screw (Rewind Starter)	125B	790845	Carburetor (Autochoke System)
29	499424	Rod–Connecting (Standard)	78	691108	Screw (Flywheel Guard)	127	●694468	Plug–Welch
32	691664	Screw (Connecting Rod)	81	691740	Lock–Muffler Screw	130	696564	Valve–Throttle
32A	695759	Screw (Connecting Rod)	95	691636	Screw (Throttle Valve)	130A	691203	Valve–Throttle
33	262651	Valve–Exhaust	97	696565	Shaft–Throttle ----- Note ----- 493267 Shaft–Throttle Used on Type No(s). 0238.	133	398187	Float–Carburetor
34	262652	Valve–Intake	104	●691242	Pin–Float Hinge	134	●398188	Kit–Needle/Seat
35	691270	Spring–Valve (Intake)	108	691182	Valve–Choke	137	◆693981	Gasket–Float Bowl
36	691270	Spring–Valve (Exhaust)	108A	790844	Valve–Choke	146	690979	Key–Timing
37	694086	Guard–Flywheel	109A	498593	Shaft–Choke	159	691753	Bracket–Air Cleaner Primer
40	692194	Retainer–Valve	109B	790843	Shaft–Choke	163	★◆272653	Gasket–Air Cleaner
43	691997	Slinger–Governor/Oil	117	498978	Jet–Main (Standard) ----- Note ----- 494870 Jet–Main (Standard) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562.	187	691050	Line–Fuel (Cut to Required Length)
45	690548	Tappet–Valve	117A	498978	Jet–Main (Standard)	187A	691371	Line–Fuel (Molded)
46	691449	Camshaft	117B	697355	Jet–Main (Standard)	187B	692042	Line–Fuel (Includes Filter)
50	497465	Manifold–Intake	118	497466	Jet–Main (High Altitude) ----- Note ----- 497315 Jet–Main (High Altitude) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562.	187C	696292	Line–Fuel (Molded)
51	★272199	Gasket–Intake	118A	497466	Jet–Main (High Altitude)	188	693399	Screw (Control Bracket)
54	691650	Screw (Intake Manifold)	118B	692677	Jet–Main (High Altitude)	190	690940	Screw (Fuel Tank)
55	691421	Housing–Rewind Starter	121	498260	Kit–Carburetor Overhaul	202	691829	Link–Mechanical Governor

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054–8

Assemblies include all parts shown in frames.

04/22/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209B	699056	Spring–Governor ----- Note ----- 691292 Spring–Governor Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513. 691851 Spring–Governor Used on Type No(s). 0119, 0122, 0123, 0124, 0135. 691852 Spring–Governor Used on Type No(s). 0121. 691290 Spring–Governor Used on Type No(s). 0005, 0134, 0138, 0236, 0269. 691291 Spring–Governor Used on Type No(s). 0126, 0130, 0131, 0132, 0137, 0240, 0332. 790944 Spring–Governor Used on Type No(s). 0238.	222	790143	Bracket–Control (Remote/Manual Friction)(Primer)	304	493293	Housing–Blower ----- Note ----- 695892 Housing–Blower Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513. 493294 Housing–Blower Used on Type No(s). 0005, 0126, 0134, 0137, 0236, 0238, 0240, 0269, 0332. 696298 Housing–Blower Used on Type No(s). 0121, 0194, 0244. 790826 Housing–Blower Used on Type No(s). 0479, 0481, 0615, 0625. 790983 Housing–Blower Used on Type No(s). 0478.
			222C	692150	Bracket–Control (Variable Speed) (5 Postion Manual Choke)			
			222E	692982	Bracket–Control (Manual Friction, 5 Postion Manual Choke)			
			222D	692467	Bracket–Control (Fixed Speed) ----- Note ----- 791128 Bracket–Control (Fixed Speed) Used on Type No(s). 0478, 0479, 0481.			
			227	690783	Lever–Governor Control			
			231	691636	Screw (Choke Valve)			
			236	691826	Link–Lockout			
			240	298090	Filter–Fuel			
			265	690798	Clamp–Casing			
			267	691044	Screw (Casing Clamp)			
			268	691072	Casing–Control Wire (Cut to Required Length)			
			269	691589	Wire–Control (Cut to Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever–Control			
			276 ♦	271716	Washer–Sealing (Main Jet)			
			287	690940	Screw (Dipstick Tube)			
			291	790830	Thermostat			
			300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0478, 0479, 0481, 0615, 0625.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5054–9**

Assemblies include all parts shown in frames.

04/22/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	456	692299	Plate–Pawl Friction	608	497680	Starter–Rewind
306	690450	Shield–Cylinder	459	281505	Plate–Ratchet	613	691340	Screw (Muffler)
306A	790836	Shield–Cylinder	467	790842	Knob–Air Cleaner	----- Note -----		
307	690345	Screw (Cylinder Shield)	474	691991	Alternator	790833		Screw (Muffler)
309	695550	Motor–Starter	497	690664	Screw (Stopswitch Bracket)	Used on Type No(s). 0478, 0479, 0481, 0615, 0625.		
310	692327	Bolt (Starter Motor)	505	691251	Nut (Governor Control Lever)	615	690340	Retainer–Governor Shaft
332	690662	Nut (Flywheel)	510	494147	Drive–Starter	616	698801	Crank–Governor
333	802574	Armature–Magneto ----- Note ----- 790817 Armature– Magnetor Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0615, 0625.	513	692358	Clutch–Drive	617★◆	270344	Seal–O Ring (Intake Manifold)
334	691061	Screw (Magneto Armature)	523	495264	Dipstick	621	692310	Switch–Stop
337	802592	Plug–Spark (Resistor) ----- Note ----- 697451 Plug–Spark (EMS)	524	★692296	Seal–Dipstick Tube	627	692872	Bracket–Stopswitch
347	691396	Switch–Rocker	525	495265	Tube–Dipstick	633	◆◆691321	Seal–Choke/Throttle Shaft (Throttle)
356	692390	Wire–Stop	529	691923	Grommet	633A	◆◆693867	Seal–Choke/Throttle Shaft (Choke)
356B	693010	Wire–Stop	544	690786	Armature–Starter	635	66538	Boot–Spark Plug
356D	496381	Wire–Stop	545	492919	Washer Set	651	691660	Screw (Starter Gear Cover)
358	497316	Gasket Set–Engine	562	92613	Bolt (Governor Control Lever)	668	★493823	Spacer (Includes 2)
363	19069	Flywheel Puller	564	690664	Screw (Control Cover)	670	692294	Spacer–Fuel Tank
365	692524	Screw (Carburetor)	564A	691142	Screw (Control Cover)	676	396548	Deflector–Muffler (Louvered)
383	89838	Wrench–Spark Plug	578	398153	Wire Assembly	676C	493871	Deflector–Muffler (Side Out) (Extended)
404	690272	Washer (Governor Crank)	584	697734	Cover–Breather Passage	677	690661	Screw (Muffler Deflector)
425A	690670	Screw (Air Cleaner Cover)	585	★691879	Gasket–Breather Passage	684	690345	Screw (Breather Passage Cover)
443A	692523	Screw (Air Cleaner Primer Base)	592	690800	Nut (Rewind Starter)	689	691855	Spring–Friction
445A	491588	Filter–Air Cleaner Cartridge	597	691696	Screw (Pawl Friction Plate)	692	690572	Spring–Detent
455	695161	Cup–Flywheel	601	95162	Clamp–Hose	697	691127	Screw (Drive Cap)
			601A	691038	Clamp–Hose	718	690959	Pin–Locating
			604	691757	Cover–Control			
			604A	691344	Cover–Control			
			604B	698588	Cover–Control ----- Note ----- 790703 Cover–Control Used on Type No(s). 0332.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054–10

Assemblies include all parts shown in frames.

04/22/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
741	790345	Gear–Timing (Use Without Woodruff Key) ----- Note ----- 691830 Gear–Timing (Uses Woodruff Key)	921A	695886	Cover–Blower Housing	923	691994	Brake
742	93941	Retainer–E Ring	921B	692931	Cover–Blower Housing			----- Note -----
745	691648	Screw (Brake)	921C	695889	Cover–Blower Housing			695891 Brake
783	691918	Gear–Pinion	921E	696262	Cover–Blower Housing			Used on Type No(s).
783A	691269	Gear–Pinion	921F	697343	Cover–Blower Housing			0101, 0116, 0119,
784	692341	Cover–Starter Gear	921G	698587	Cover–Blower Housing			0122, 0123, 0124,
785	692352	Gasket–Starter Cover			----- Note -----			0125, 0135, 0181,
					790701 Cover–Blower Housing			0183, 0185, 0193,
					Used on Type No(s).			0195, 0196, 0197,
					0332.			0208, 0209, 0217,
			921J	790036	Cover–Blower Housing			0219, 0222, 0224,
			921K	699984	Cover–Blower Housing			0226, 0230, 0231,
			921L	791026	Cover–Blower Housing			0232, 0234, 0235,
			922	691831	Spring–Brake			0237, 0239, 0243,
					----- Note -----			0258, 0261, 0266,
789B	696547	Harness–Wiring			692135 Spring–Brake			0267, 0268, 0271,
801	690782	Cap–Drive			Used on Type No(s).			0277, 0281, 0283,
802	695267	Cap–End			0101, 0116, 0119,			0289, 0301, 0306,
803	695266	Housing–Starter			0122, 0123, 0124,			0307, 0309, 0311,
832	499034	Guard–Muffler			0125, 0135, 0181,			0312, 0313, 0314,
836	690664	Screw (Muffler Guard)			0183, 0185, 0193,			0315, 0324, 0326,
842	★691031	Seal–O Ring (Dipstick Tube)			0195, 0196, 0197,			0327, 0328, 0329,
843	691884	Sleeve–Lever (Control Bracket)			0208, 0209, 0217,			0336, 0337, 0338,
843A	691895	Sleeve–Lever (Choke)			0219, 0222, 0224,			0347, 0350, 0357,
847	692017	Dipstick/Tube Assembly			0226, 0230, 0231,			0424, 0425, 0438,
851	493880	Terminal–Spark Plug			0232, 0234, 0235,			0440, 0444, 0447,
868	697338	Seal–Valve			0237, 0239, 0243,			0450, 0454, 0456,
869	691155	Seat–Valve (Intake)			0258, 0261, 0266,			0479, 0481, 0484,
870	690380	Seat–Valve (Exhaust)			0267, 0268, 0271,			0490, 0498, 0501,
871	262001	Bushing–Valve Guide (Exhaust)			0277, 0281, 0283,			0507, 0508, 0511,
		----- Note -----			0289, 0301, 0306,			0513, 0615, 0625.
		63709 Bushing–Valve Guide (Intake)			0307, 0309, 0311,			
883 ★Ø691881		Gasket–Exhaust			0312, 0313, 0314,			
910	691094	Stud (Alternator)			0315, 0324, 0326,			
					0327, 0328, 0329,			
					0336, 0337, 0338,			
					0347, 0350, 0357,			
					0424, 0425, 0438,			
					0440, 0444, 0447,			
					0450, 0454, 0456,			
					0479, 0481, 0484,			
					0490, 0498, 0501,			
					0507, 0508, 0511,			
					0513, 0615, 0625.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
925	690595	Cover–Linkage	975	493640	Bowl–Float	1095	498528	Gasket Set–Valve
930	691919	Guard–Rewind (Round)	976	694395	Primer–Carburetor	1119	692979	Screw (Alternator)
930A	691345	Guard–Rewind (Tear Drop)	977	498261	Gasket Set–Carburetor	1160	691627	Screw (Interlock Switch)
935	499421	Switch–Interlock	990A	695951	Key Set	1210	498144	Pulley/Spring Assembly (Pulley)
937	691325	Spline–Starter	1005	691346	Fan–Flywheel	1211	498144	Pulley/Spring Assembly (Spring)
957	397974	Cap–Fuel Tank (Plastic)	1009	696255	Screw (Starter Motor)	1236	695959	Starter–Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
957A	692046	Cap–Fuel Tank (Plastic)	1019	494256	Kit–Label ----- Note ----- 790231 Kit–Label (Touch N Mow)	1330	270962	Manual–Repair
957B	699985	Cap–Fuel Tank (Plastic)	1036	790411	Label–Emission (Used After Code Date 04063000). ----- Note ----- 697457 Label– Emission (Used Before Code Date 04070100).	1386	790848	Vane–Air (Autochoke System)
966A	496116	Base–Air Cleaner Primer	1058	275177	Manual–Owner's ----- Note ----- 275054 Manual– Owner's (Touch N Mow)	1387	790849	Spring–Air Vane
967A	493537	Filter–Pre Cleaner	1059	692311	Kit–Screw/Washer ----- Note ----- 696293 Kit–Screw/ Washer (Touch N Mow)	1388	790850	Screw (Air Vane)
968B	692298	Cover–Air Cleaner						
969	690700	Screw (Blower Housing Cover)						
969A	691138	Screw (Blower Housing Cover)						
970	691669	Screw (Air Cleaner Primer Bracket)						
972	699392	Tank–Fuel (Plastic)						
972B	699374	Tank–Fuel (Plastic) ----- Note ----- 695960 Tank–Fuel (Plastic) Used on Type No(s). 0121, 0194, 0244.						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054–12

Assemblies include all parts shown in frames.

04/22/2005