



Adjustment Nut

Lock Nut

Stem

- 1) Loosen Lock Nut.
- 2) While holding Stem, turn Adjustment Nut. Tighter increases pressure, looser decreases pressure.
- 3) Test pressure.
- 4) Re-adjust as necessary.
- 5) Tighten lock nut.