


PUMP DIAGRAM

Air Compressor

PARTS SHOWN FOR REFERENCE ONLY

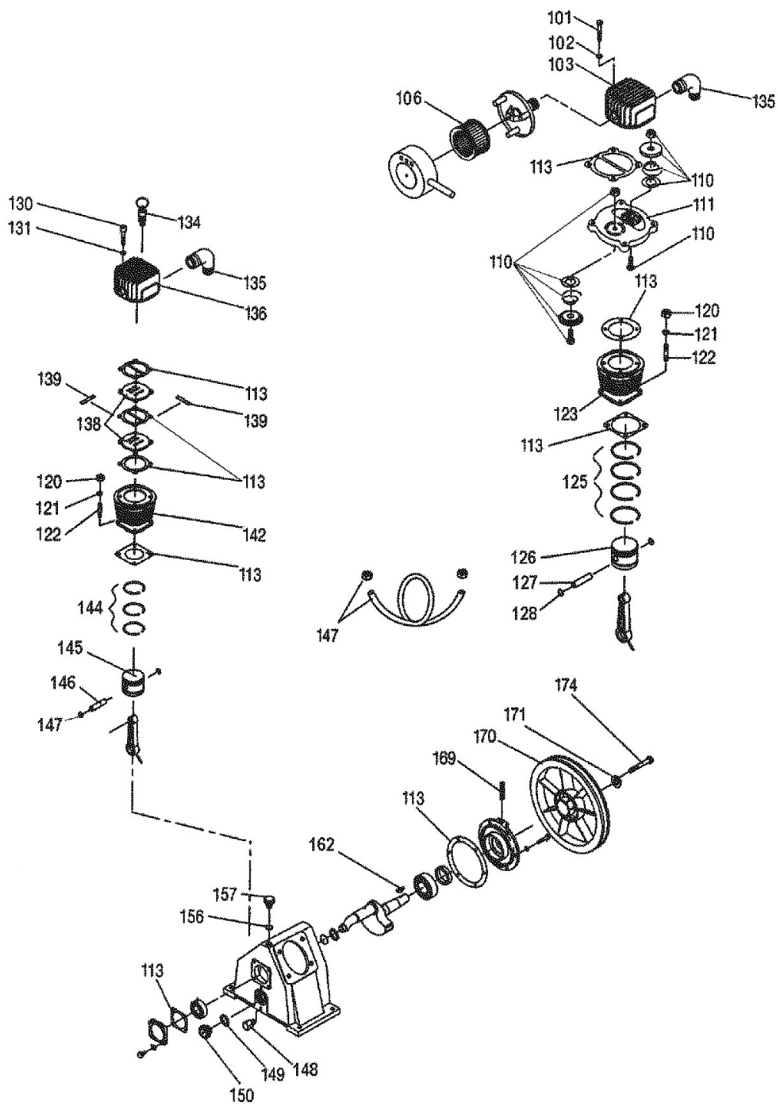

PARTS LIST

Air Compressor

ITEM	PART		
NO.	NO.	DESCRIPTION	QTY
φ101	A04421	Bolt	4
102	A04422	Lock Washer	4
103	A04423	Pump Head	1
106	A03957	Filter Element	1
110	A03959	Valve Kit	1
111	A04023	Valve Plate	1
113	A03945	Gasket Kit	1
φ120	A04424	Nut	8
121	A04378	Lock Washer	8
122	A04426	Stud	8
123	A04427	Cylinder	1
125	5140030-51	Piston Ring Set	1
126	5140030-52	Piston	1
127	5140030-53	Piston Pin	1
128	5140030-54	Clip	2
129	5140047-05	Connecting Rod	2
φ130	A14121	Bolt	4
131	D28188	Lock Washer	4
134	A04430	Safety Valve Head	1
135	A04431	Elbow	2
136	A04432	Pump Head	1
138	D28193	Valve Seat	1
139	D28195	Valve Plate	2
142	A04435	Cylinder	1
144	5140030-60	Piston Ring Set	1
145	5140030-55	Piston	1
146	5140030-56	Piston Pin	1
147	A03958	Tube	1
148	5140030-59	Oil Drain Plug	1
149	A04436	O-ring	1
150	A04437	Sightglass	1
156	A04440	O-ring	1
157	D28207	Oil Fill Plug	1
162	5140030-58	Woodruff Key	1
169	A03955	Crankcase Vent	1
170	A03156	Flywheel	1
171	A03158	Washer	1
φ174	A03159	Screw	1

φ NOTES:

- 101,130 Torque to 12-17 ft.-lbs.
- 120 Torque to 10-15 ft.-lbs.
- 174 Torque to 32-36 ft.-lbs.