


Unloader Adjustment Procedure:

This adjustment can be made by turning the pressure adjustment screw counterclockwise until the correct operating pressure is reached.

1. Loosen the 10mm nut (ref #1) from your illustrated parts diagram.
2. Turn the grub screw (Ref #2) from your illustrated parts diagram counter clockwise $\frac{1}{4}$ turn at a time with a 3mm Allen Wrench.
3. Tighten Ref #1 nut and test the unit for proper operating pressure.
4. Repeat this step as needed until the correct operating pressure is achieved.

Ref #1 Nut is a 10mm nut that needs to be loosened before the Ref #2 Grub Screw is adjusted counter clockwise to desired pressure setting.

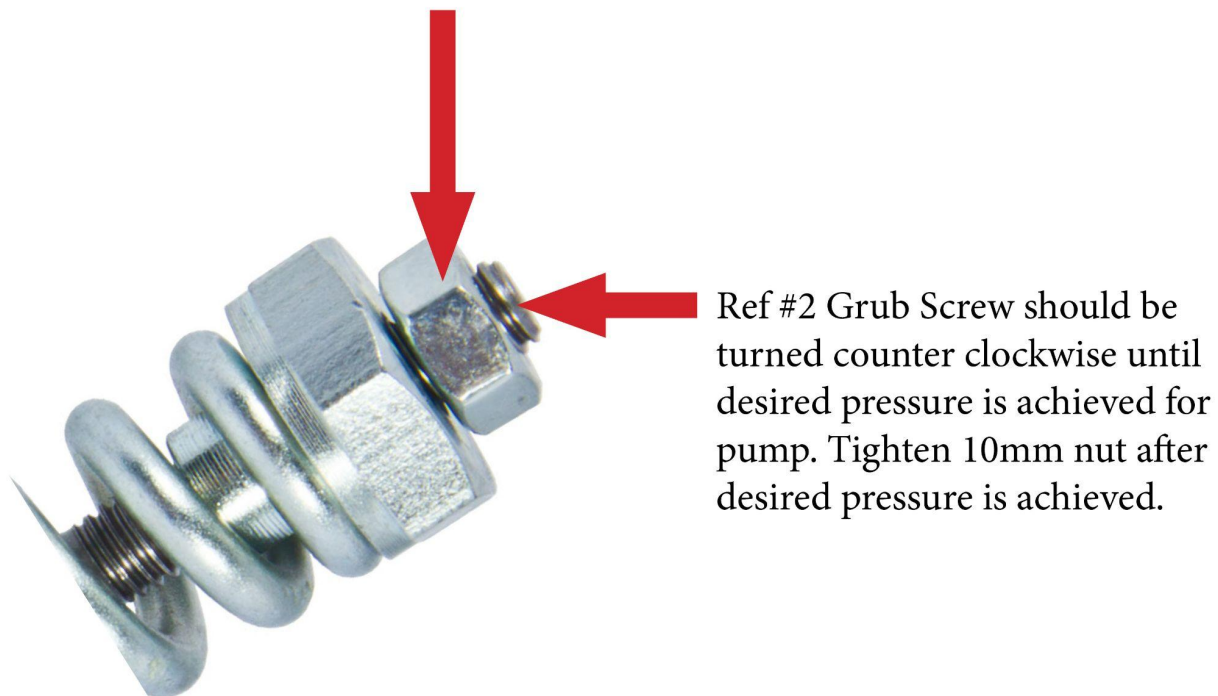

Ref #2 Grub Screw should be turned counter clockwise until desired pressure is achieved for pump. Tighten 10mm nut after desired pressure is achieved.

Please refer to your owner's manual for starting and operating procedures for your pressure washer.

Make sure the pump is winterized to prevent freezing and should always have pump conditioner installed when the pump will not be used for more than 30 days to help prevent any damage that could be caused by corrosion.

For questions, comments or concerns please contact our customer service department at: **1-269-685-4123** or email them at: **customerservice@allpartsinc.com**