


Air Compressor part breakdown sheet - IHTS104L

Item	Description	Part	Item	Description	Part
1	Head Bolt M6x55	IH30551	38	Capacitor	IH2250
2	Spring washer 6	IH1211	39	Washer 3	IH1039
3	Cylinder head	IH1343	40	Spring washer 3	IH1040
4	Exhaust elbow	IH1086	41	Bolt M3*6	IH1041
5	Head gasket	IH1051	42	Shroud	IH2024
6	Valve assembly		43	Bolt M5*15	IH1727
7	Valve seat/cyl gasket	IH1053	44	Bolt M8*55	IH2211
8	Cylinder	IH2034B	45	Washer 8	IH2212
9	Piston	IH2038B	46	Nut 8	IH2213
10	Piston air ring	IH2039M	47	Pressure switch	21UCBDB-CH
11	Piston oil ring	IH2039N	48	Connector	IH0003
12	Piston pin clip	IH1420B	49	Regulator	R46-200-RNLA
13	Piston pin	IH1534B	50	Connector	IH0004
14	Connecting rod	IH1066B	51	Pressure gauge	IH1177
15	Cyl/Crankcase gasket	IH1225	52	Plug	IH1360
16	Bolt M8*25	IH2035	53	Quick connect	10TT-8
17	Spring washer 8	IH1212	54	Strain relief	IH2206
18	Crankshaft	IH1068A	55	Power cord	IH1841
19	Bolt M8*22-LH	IH1802	56	Terminal (O)	
20	Crank case gasket	IH2019	57	Terminal (Y)	
21	Crank case cover	IH2021	58	Handle grip	IH1527
21a	Bolt M6*10	IH2207	59	Tank	IH2050
22	Seal	IH1591	60	Custion foot	IH2200
23	Oil sight glass	IH1519	61	Washer 6	IH2202
24	Bolt M6*18	IH0621	62	Bolt	IH2203
25	Breather	IH1071	63	Check valve	IH2026A
26	Crank case	IH2020	64	Safety valve	IH1090
27	Oil seal	IH0530	65	Drain valve	IH1850
28	Bearing	IH0140	66	Tube	IH1302
29	Rotator	IH1919	67	Unloader tube w/fitting	IH1302
30	Rear bearing	IH0150	68	Air filter assembly	IH1072
31	Stator	IH1918A	69	Discharge tube w/fitting	IH1170
32	Spring washer wave	IH2209	71	Air filter assembly	IH1072
33	Rear cap	IH1046	72	Overload Protector	IH2000
34	Spring washer 5	IH2210	6a	Valve Plate	ih1064
35	Bolt M5	IH1048	6b	Reed Valve	IH1052
36	Fan	IH1044	6c	Middle Valve Gst	IH1049
37	Circlips	IH1101			

REVISED 3/24/17

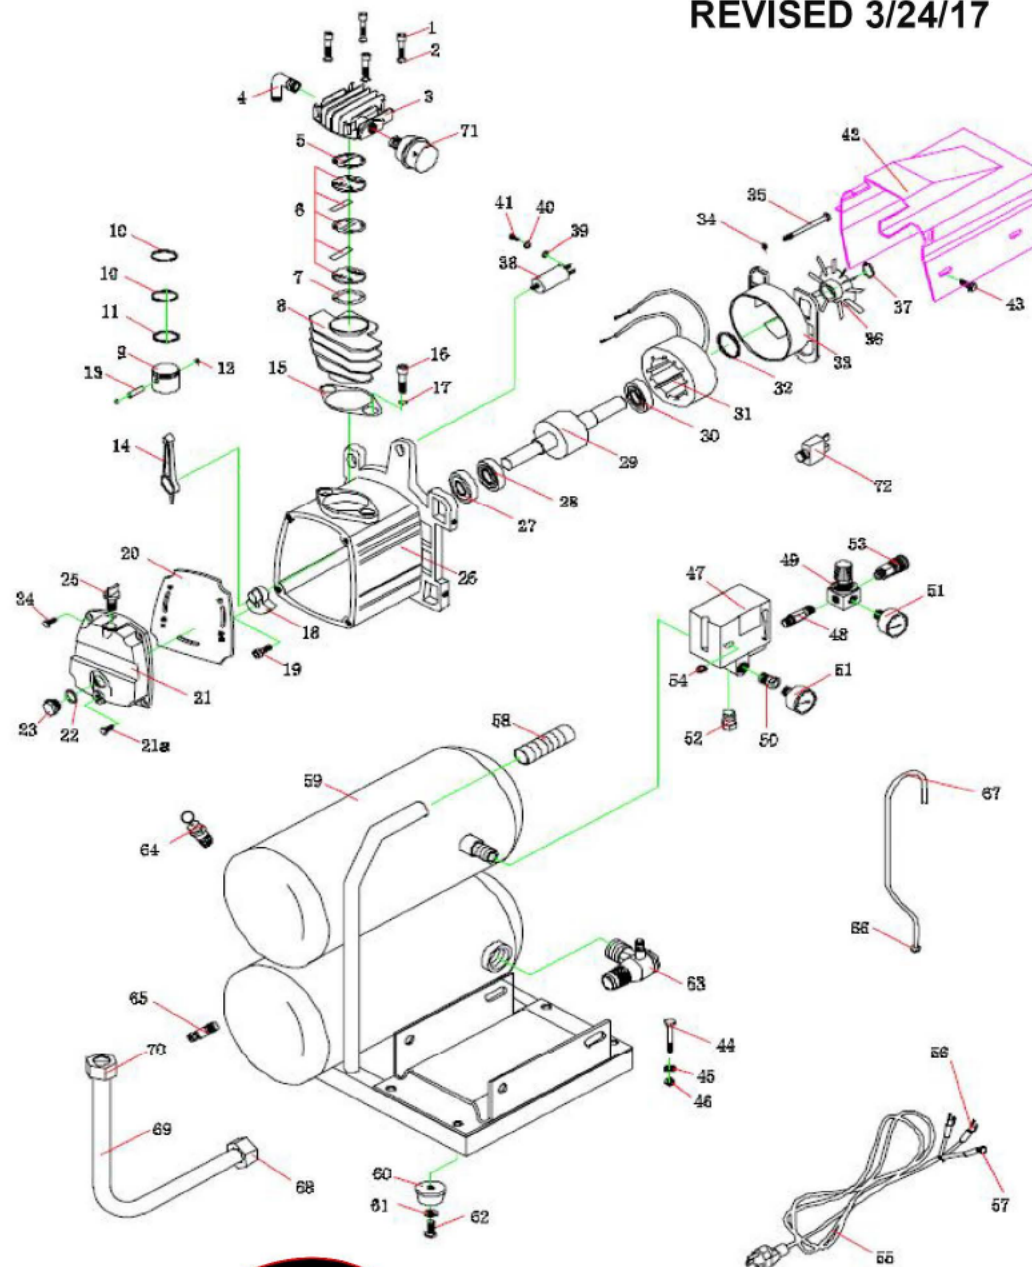

IRON HORSE

Wood INDUSTRIES INCORPORATED

Call 1-800-551-2406 for the Customer Service Department.