

Transmitter Error Codes

In some cases the Proflame 2 Transmitter will display an error code on the LCD screen. These errors are not recoverable and the transmitter needs to be replaced.



Example of an error code being displayed

Error Code Definitions

Er1 = Transmitter temperature measure error (sensor open)

Er2 = Transmitter temperature measure error (sensor shorted)

Er3 = Transmitter battery measure not available

Er8 = Transmitter temperature measure not available

Er9 = Transmitter battery measure error