

INSTALLATION INSTRUCTIONS FOR INSTALLING A BLOWER KIT FOR USE WITH WOOD-BURNING FIREPLACES LISTED IN TABLE 1

KIT CONTENTS

2 ea. Blower Assembly
1 ea. Instruction Sheet

TOOLS NEEDED

Robertson (square) or Phillips (star) screwdriver

Blower Kits		
Cat. No.	Model	Description
UZY5	UZY5	UZY5/PUZY5 Blower Kit - Brentwood™ SP, BIS® Ultima-1, Villa Vista™, BIS Panorama, Montecito™ and BIS Tradition CE
PR-UZY7	UZY7	UZY7 Blower Kit - Montecito Estate™ and BIS Tradition

Table 1

GENERAL INFORMATION

These blower kits can easily be installed when the fireplace has a pre-installed junction box. You just have to plug them in.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

WARNING

The blower must be plugged directly into a properly grounded three-prong receptacle, 120 VAC, 60 Hz, single phase. Do not cut or remove the grounding prong from this plug.

Installation must be in accordance with National Electrical Code, ANSI/NFPA 70 - latest edition. In Canada, the current CSA C22.1 Canadian Electrical Code - latest edition.

The blowers have magnetic blower mounts. The junction box (factory installed on approved fireplaces for the use of this blower kit) must be connected to 120 VAC service before permanently enclosing the fireplace.


The access hole for connecting the 120 VAC is located on the lower back right exterior side of the fireplace.

CAUTION: Should this blower kit require servicing, the power supply must be disconnected.

These fans do not need regular maintenance however, periodic cleaning is required. Check the area under the firebox and in front of the fans and wipe or vacuum at least once a month during the operating season.

INSTALLATION

- Step 1.** Open the bottom louver of the fireplace.
- Step 2.** The blower kit into the fireplace opening 1" from the back of the fireplace.
- Step 3.** Install the thermo-disk fan activator under the firebox toward the right side. **NOTE:** The fan activator has a magnetic mount.

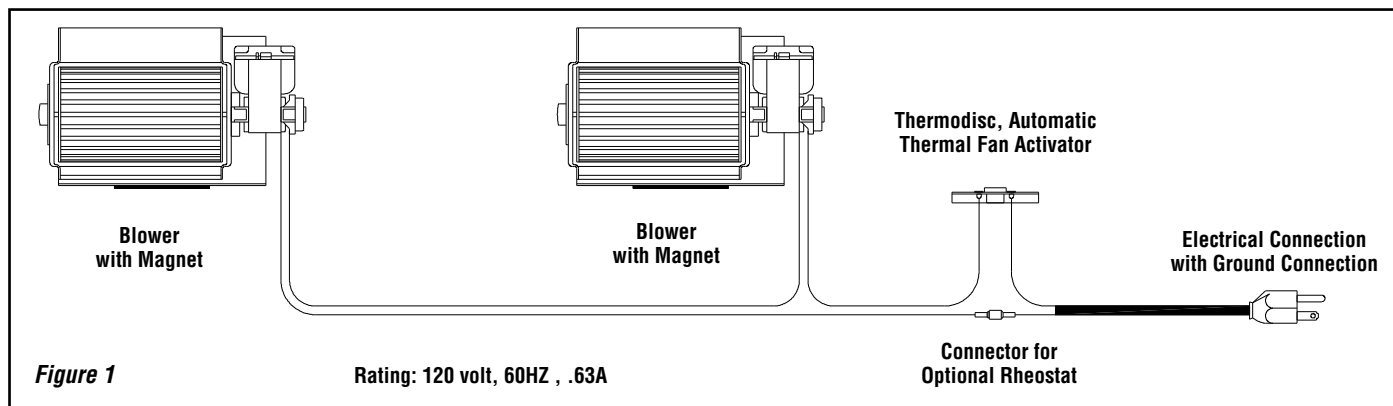

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.