


BSI525-2

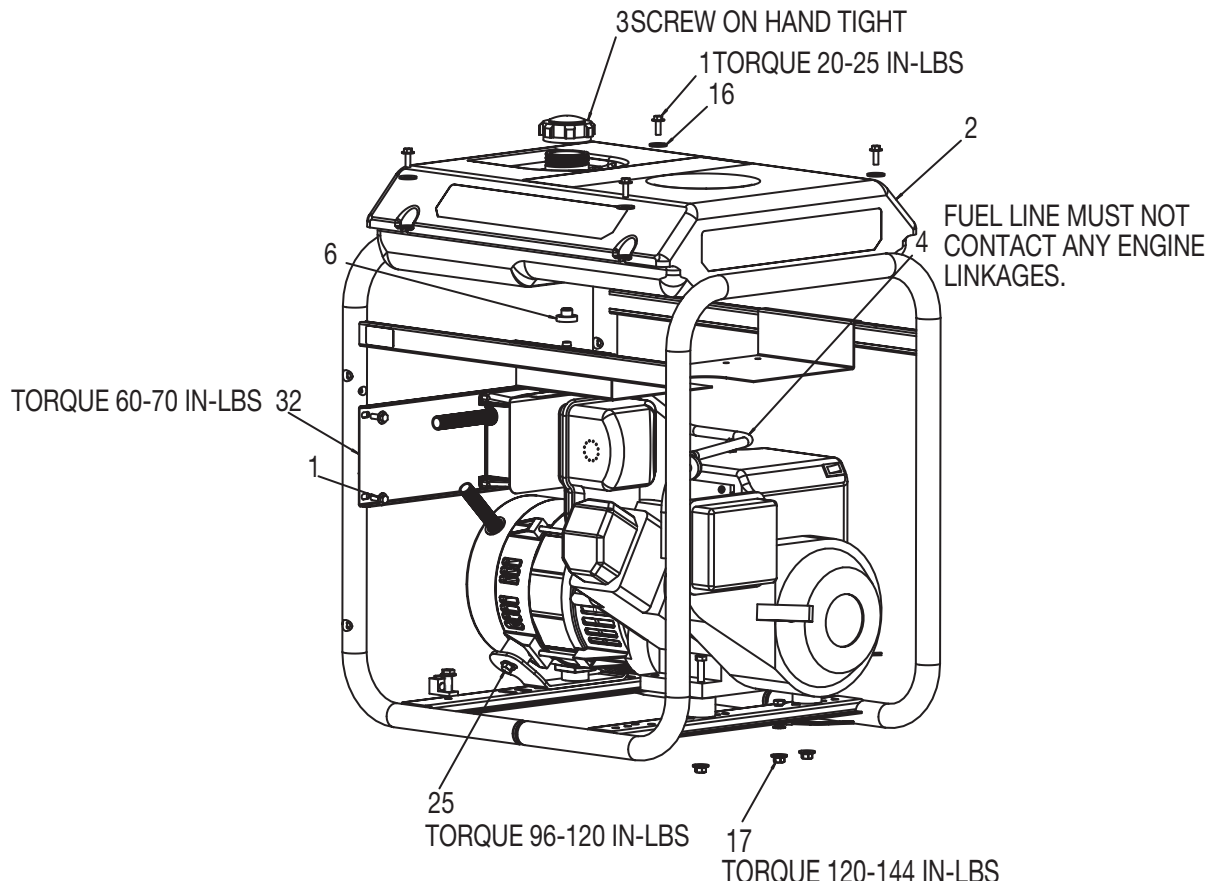


KEY **NO.**

PART NUMBER

DESCRIPTION

1	91895680	SCREW .250-20X.750
2	Z-GS-0795	TANK FUEL
3	GS-0443	CAP FUEL TANK
4	Z-GS-0225	HOSE FUEL
6	GS-0446	GROMMET DRAIN COCK
16	SSN-632	WASHER .875 OD .375 ID .0
17	SSF-8150	NUT .312-18 UNC HEX FLANGE
25	SSF-549	SCREW .313-18X.50 HEX CAP
32	-----	ASSY PANEL (see individual parts)

BSI525-2

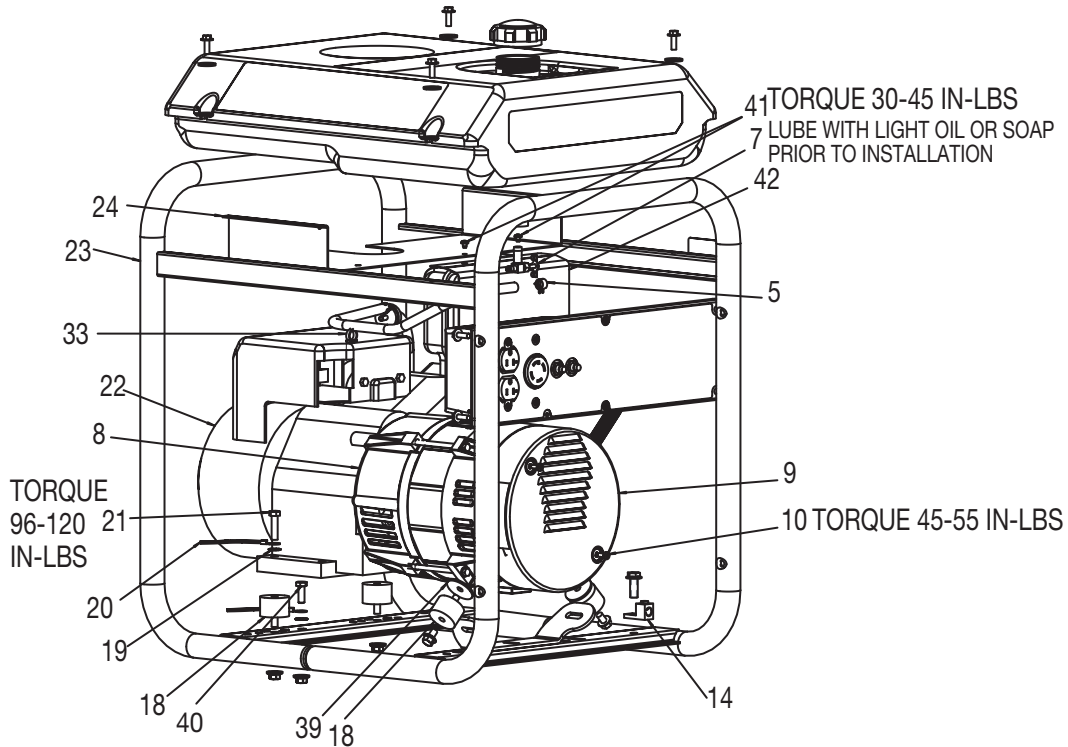

KEY


KEY NO.	PART NUMBER	DESCRIPTION
5	GS-0227	CLAMP FUEL
7	GS-0437	DRAIN COCK
8	*Z-D26598	ASSY GENERATOR
9	GS-0077	COVER END BLANK
10	SSF-553-1	SCREW #10-24X.563
14	GS-0117	LUG GROUND
18	GS-0033	ISOLATOR VIBRATION
19	SSN-1619-ZN	WASHER LOCK EXTERNAL TOOTH
20	GS-0118	STRAP GROUND
21	SSF-605	SCREW .313-18X1.25 HEX CAP
22	-----	ENGINE 10HP B&S (B&S # 205412-187-E1)
23	Z-D27099	ASSY FRAME
24	D26089	SHIELD HEAT SHORT GALVANI
33	GS-0763	CLIP SNAP-IN FUEL LINE
39	SSN-1014-ZN	WASHER .339/.344 ID 1 1/2
40	D22311	SCREW .313-18X.875 UNC HE
41	D25732	SCREW #10-32
42	D26440	ADAPTER HEAT SHIELD

* order complete generator assembly, individual parts not available.

Available from Allparts Equipment and Accessories - 1-877-475-5660 - www.allpartsinc.com

BSI525-2 (con't)

Panel Assembly

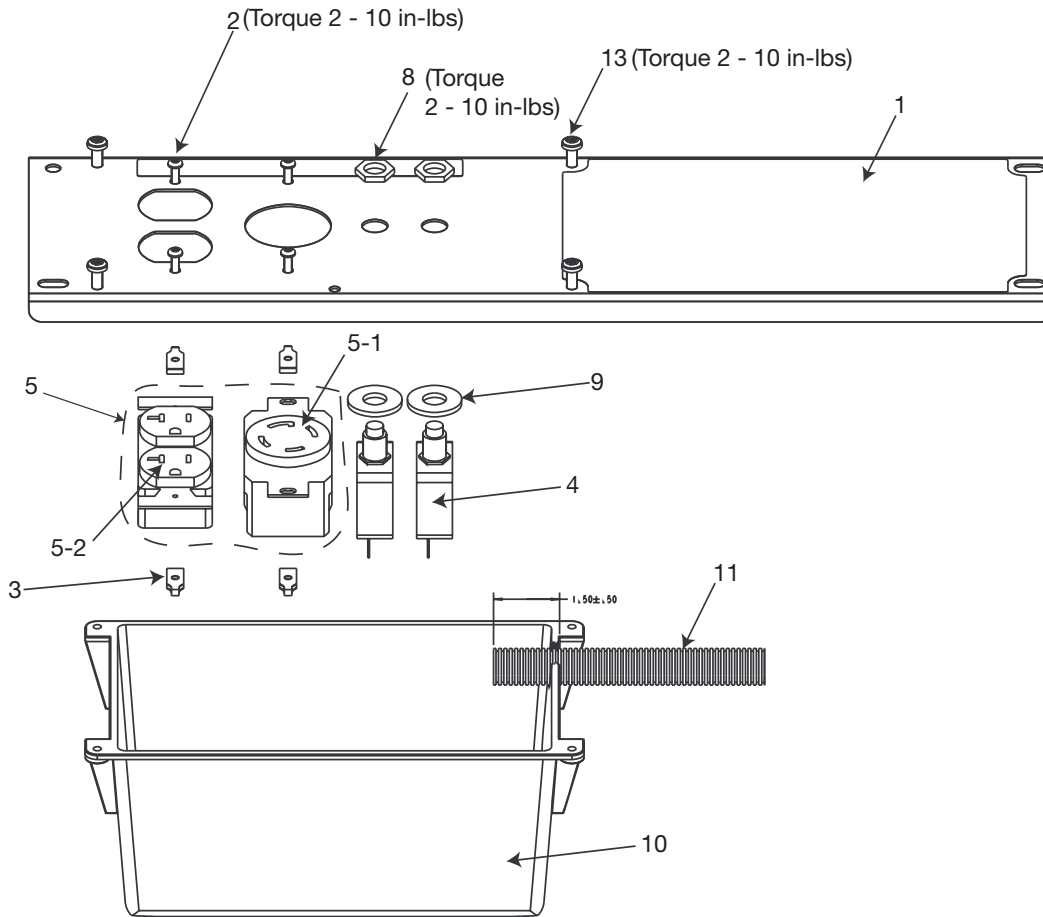

KEY

KEY NO.	PART NUMBER	DESCRIPTION
1	GS-0754	CONTROL PANEL
2	SSF-583	SCREW #6-32X.500 PAN HEAD
3	SSF-584	NUT #6-32 SPEED
4	Z-D21508	BREAKER CIRCUIT 20 AMP
5	GS-0755	PANEL WIRE ASSEMBLY
5-1	GS-0445	RECEPTACLE 4-PRONG
5-2	GS-0019	RECEPTACLE DUPLEX 120V
8	SSF-595	NUT .438-28 HEX JAM
9	SS-1525-CD	WASHER 3/8
10	D25706	PANEL COVER
11	GS-0605	PANEL WIRE HARNESS
13	SSF-3156	SCREW #10-9X.500 THD FORM

Not Shown

D28361	OPERATORS MANUAL
D28363	PARTS MANUAL
D23909	ENGINE MANUAL