


DBSI325

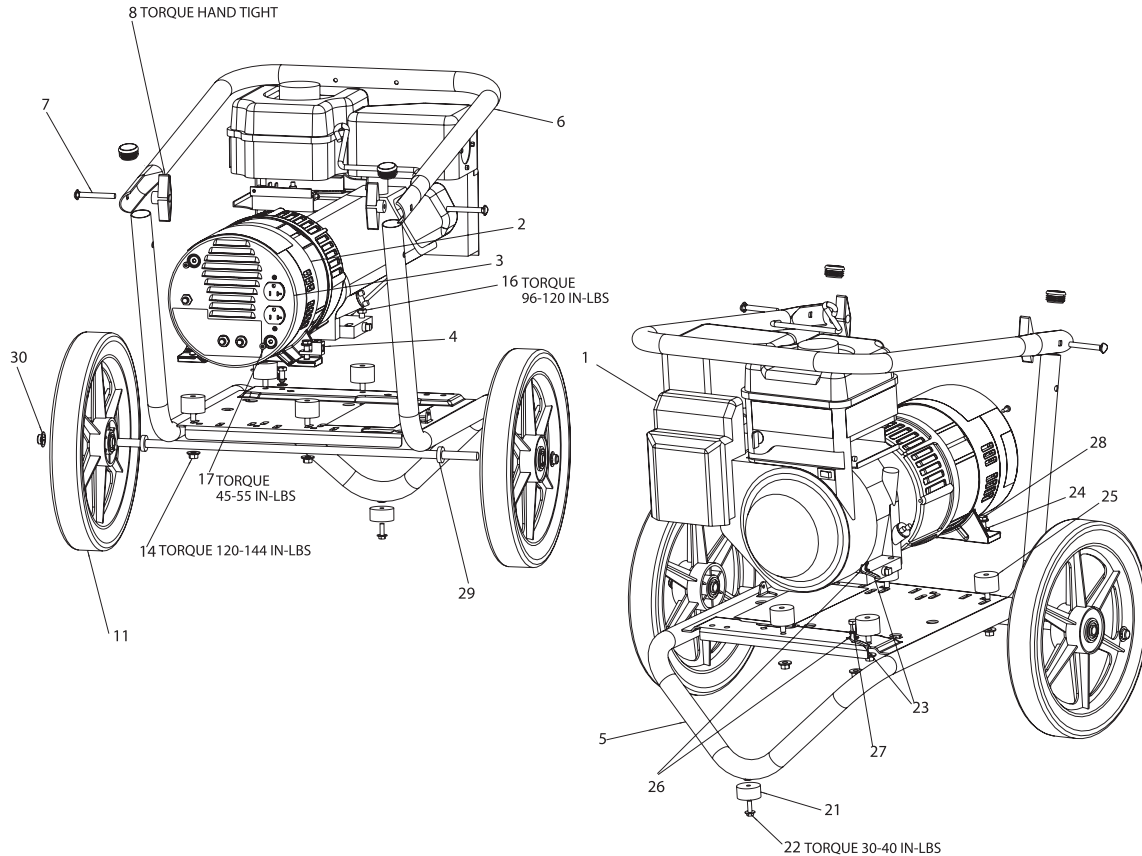


KEY NO.

DESCRIPTION

PART NUMBER

1	-----	ENGINE B&S 6HP MODEL # 1214120175
2	-----	ASSY GENERATOR (order individual parts)
3	GS-0653-1	ASSY ENDCOVER
4	GS-0117	LUG GROUND
5	D23229	ASSY FRAME DOLLY
6	D21155	ASSY HANDLE DOLLY
7	D21349	BOLT .313-18X2.5 UNC CARRAIGE
8	D21162	KNOB T .312-18
11	D23233	WHEEL 14'
14	SSF-8150	NUT HEX WIZ LOCK LG FLANGE
16	SSF-605	SCREW HEX CAP 5/16-18 X 1
17	SSF-553-1	SCREW 10-24 X 9/16
21	SST-108	BUMPER RUBBER
22	91895680	SCREW 1/4 - 20 X .75
23	GS-0118	STRAP GROUND
24	SSN-60-ZN	WASHER STEEL
25	GS-0033	ISOLATOR VIBRATION
26	SSN-1619-ZN	WASHER LOCK EXTERNAL TOOTH
27	SS-12-CD	SCREW CAP 5/16-18 X 3/4
28	SSF-928	SCREW HEX WASHER HD UNSLOTTED
29	D23253	SPACER WHEEL
30	W137	NUT PAL 1/2"
	694260	FUEL TANK

DBSI325 (cont'd)

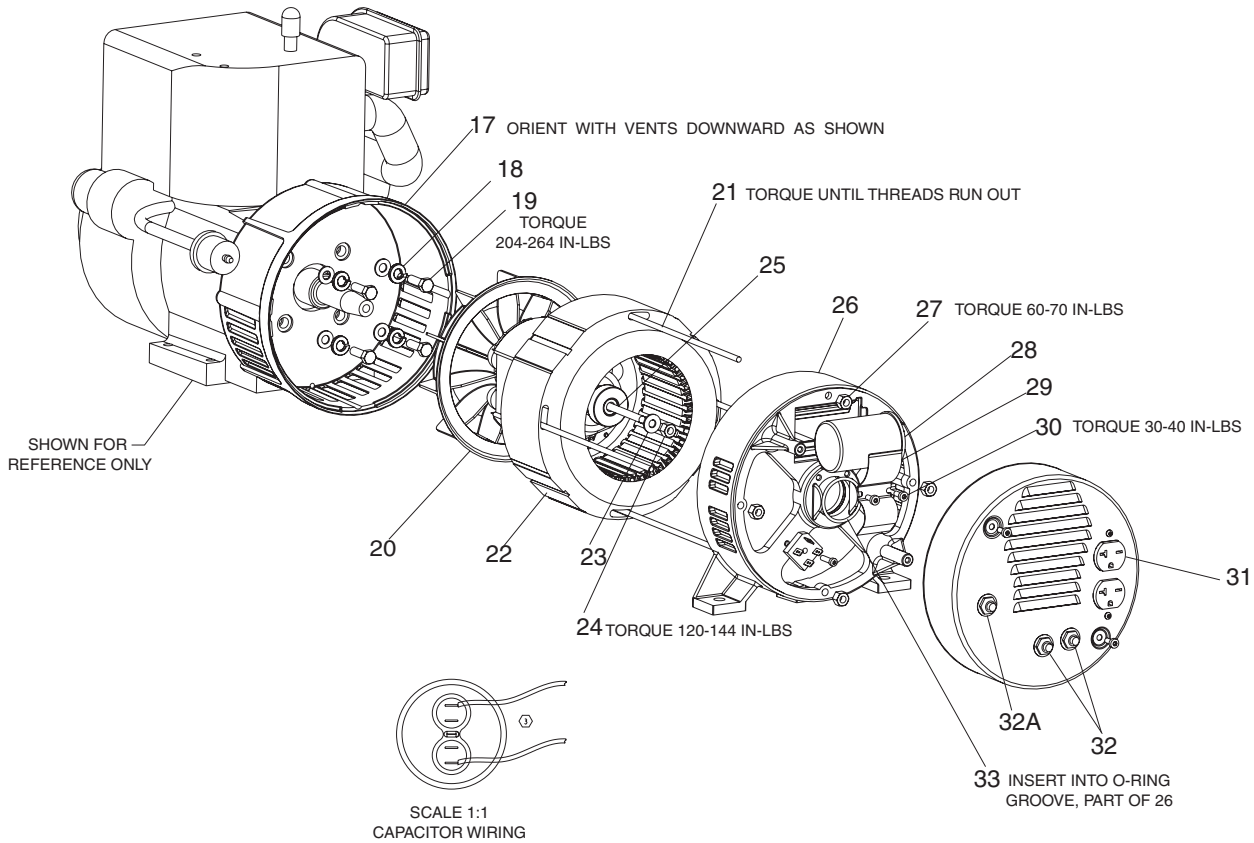

KEY

<u>NO.</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
17	DRIVE END ADAPTER	GS-0558
18	LOCK WASHER	SS-1503-CD
19	CAP SCREW 5/16-24x1	SSF-616-ZN
20	ROTOR ASSEMBLY	Z-D20261
21	STATOR THRU BOLT	GS-0415
22	STATOR ASSEMBLY	Z-D20264
23	WASHER 11/16 OD x 11/32	SS-6506-CD
24	NUT 5/16-24	SSF-576
25	ROTOR THRU BOLT	GS-0661
26	BEARING SUPPORT	Z-GS-0861
27	HEX NUT 1/4-20	SSF-575
28	CAPACITOR	GS-0873
29	CAPACITOR BRACKET	GS-0595
30	SCREW 10-24X9/16	SSF-553-1
31	120V DUPL. RECEPTACLE (20A)	GS-0019
32A	CIRCUIT BREAKER(25A)	GS-0645
32	CIRCUIT BREAKER(20A)	GS-0025
33	O-RING	GS-0862

Not Shown

D23224	Operators Manual
D23222	Parts Manual
D23223	Engine Manual