

Suburban Model DNV25N

DYNAVENT Model DNV25P

Form 2078-B 7-91

PARTS LIST

DNV25N



DNV25P

Item No.	Description	Part Number	Item No.	Description	Part Number
3	Insulation, Cabinet Back	070542	47	Nut 10 - 24 Hex (2 Required)	120717
4	Insulation, Cabinet Top	070508	47A	Screw #10 - 24 x 1/2 (2 Required)	121459
5	Cabinet Assembly Complete	100892	48	Burner Assembly	010701
6	Insulation, Sides (Right and Left Sides)	070509	49	Orifice, Main Burner (LP Gas Only)	180215
7	Front Grill Assembly	030639		Orifice, Main Burner (Natural Gas Only)	180220
8	Screw #8 x 3/8 Black Oxide (2 Required)	121520	50	Screw #10 x 1/2 (4 Required)	121388
9	Nameplate	190424	51	Gasket, Manifold	070408
10	Screw #8 x 3/8 Gold Head (2 Required)	121467	52	Manifold Assembly	170963
11	Thermostat	160902	53	Fitting, Reducer 3/8 NPT to 1/8 NPT	170545
14	Combustion Chamber/Radiation Shield Assembly	020983	54	Valve (LP Gas Only)	160918
15	Gasket, Radiation Shield Front	070606		Valve (Natural Gas Only)	160917
16	Gasket, Burner Access Door	070398	55	Street Ell 90°	170012
17	Cover Plate	290120	56	Pipe, Gas Inlet	170531
18	Glass Disc	310026	57	Ell, 90°	170082
19	Door, Burner Access	030527	58	Wheel, Room Air	350086
20	Screw #8 x 3/8 (2 Required)	120158	59	Screw #10 x 3/8 (5 Required)	121252
21	Flame Sensing Probe	231444	60	Screw #2 - 56 x 5/8 (2 Required)	121247
22	Screw #6 x 3/8 (2 Required) (Glo-Bar Retainer)	121502	61	Microswitch Assembly	230510
23	Screw #6 x 3/8 (Flame Probe)	121502	62	Gasket, Intake Tube	070537
24	Screw #10 x 1/2 (4 Required)	121388	63	Fastener, Tinnerman (2 Required)	121661
25	Retainer, Glo-Bar	062445	65	Blower Housing Assembly (Room Air)	390260
26	Glo-Bar	230811	66	Nut, 10 - 24 Hex Lock (3 Required)	121421
27	Gasket, Glo-Bar	070568	67	Crossover Tube	050751
27A	Gasket, Ignitor Spacer	070814	68	Screw #10 x 1/2 (4 Required)	121388
28	Cover, Junction Box	090211	69	Gasket, Crossover Tube (2 Required)	070385
29	Screw #10 x 3/8 (2 Required)	121252	70	Screw #10 - 24 x 1/2 (2 Required)	121227
30	Bushing with Terminals	230844	71	Bushing, Universal	070362
31	Limit Switch	230825	72	Bushing, Motor (2 Required)	070563
32	Screw #10 x 3/8 (2 Required)	121252	73	Housing, Combustion Air and Motor Cover Assembly	390296
33	Screw #10 x 3/8 (2 Required)	121252	74	Gasket, Combustion Air Housing	070386
34	Transformer Assembly	231143	75	Motor	231389
35	Screw #6 x 5/8 (2 Required)	121357	76	Bracket, Motor Support	062307
36	Module Board	230954	77	Nut, 10 - 24 Hex Keys (2 Required)	120717
37	Spacer Panel (4 Required)	121632	77A	Tinnerman	121712
38	Bracket, Module Board Mounting	062461	78	Wheel, Combustion Air	350117
39	Screw #6 x 1/2 (2 Required)	121372	79	Housing, Combustion Air (Outside)	390424
40	Relay, Time Delay	230625	80	Screw #8 x 1/2 (9 Required)	120615
41	Bushing	230218	81	Capacitor	231036
42	Screw #8 x 3/8 (2 Required)	120158	82	Clamp, Capacitor	062633
43	Screw #6 x 5/8 (2 Required)	121357	83	Boot, Capacitor	231231
44	Terminal Block	231144	84	Screw #8 x 1/2	120615
45	Screw #10 x 3/4 (2 Required)	121224	85	Valve, Manual Shut-Off (Not Shown)	160554
46	Gasket, Exhaust Tube	070537			

Suburban Model
 DYNAVENT Model
 Form 2078-B


DNV25N
 DNV25P
 7-91

Chamber Assembly
 DNV25N
 DNV25P

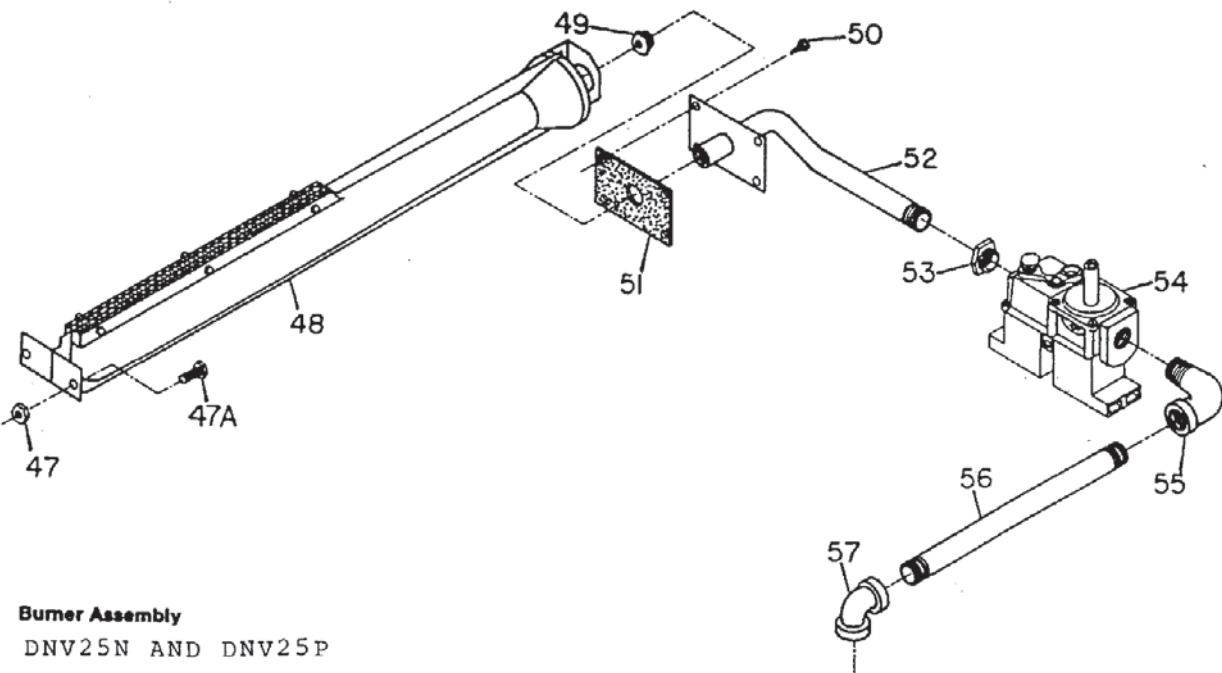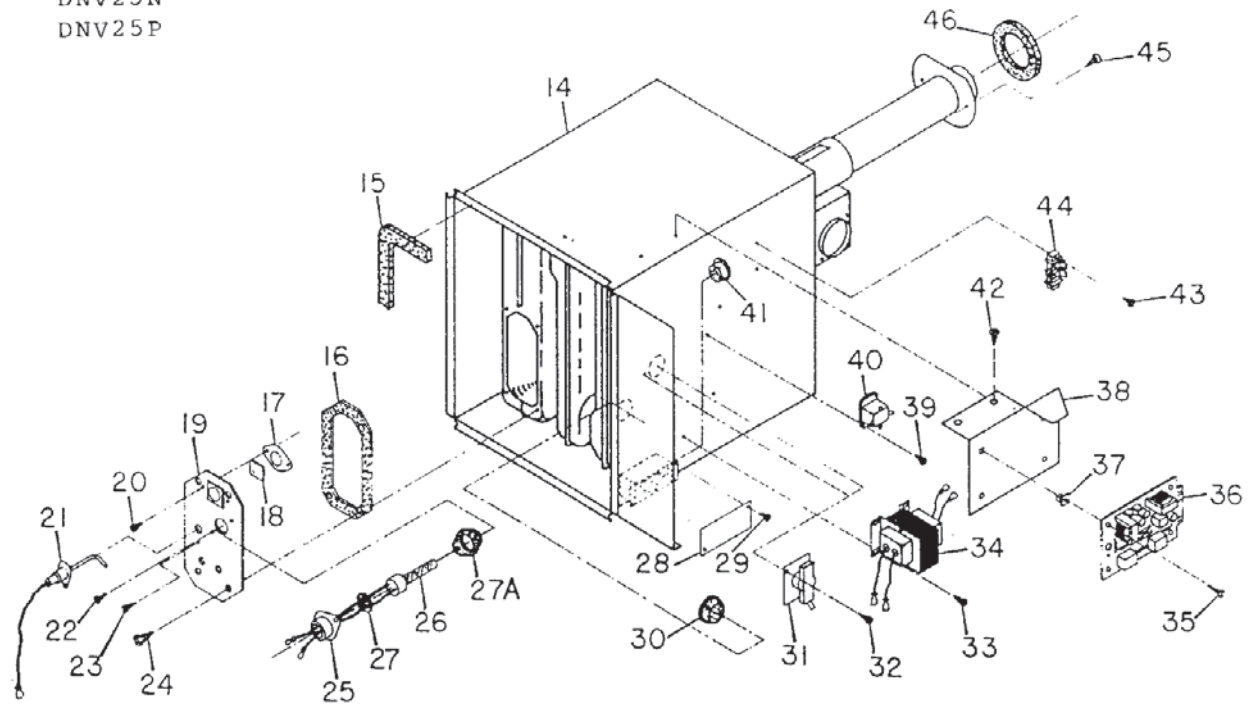


Burner Assembly
 DNV25N AND DNV25P

Suburban Model DNV25N
 DYNAVENT Model DNV25P
 Form 2078-B 7-91

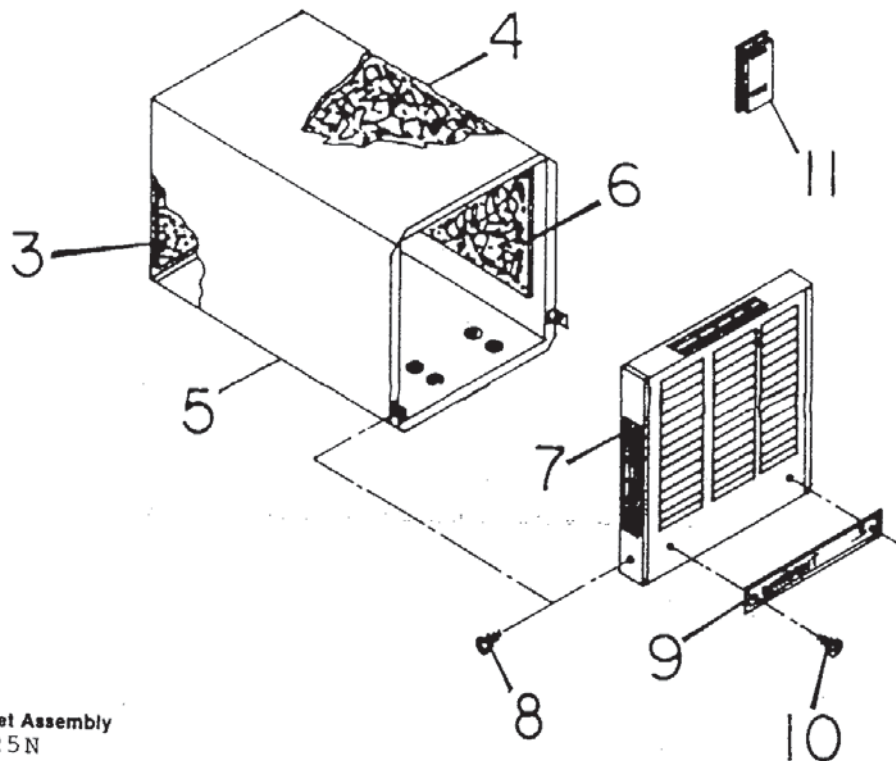

Cabinet Assembly
 DNV25N
 DNV25P

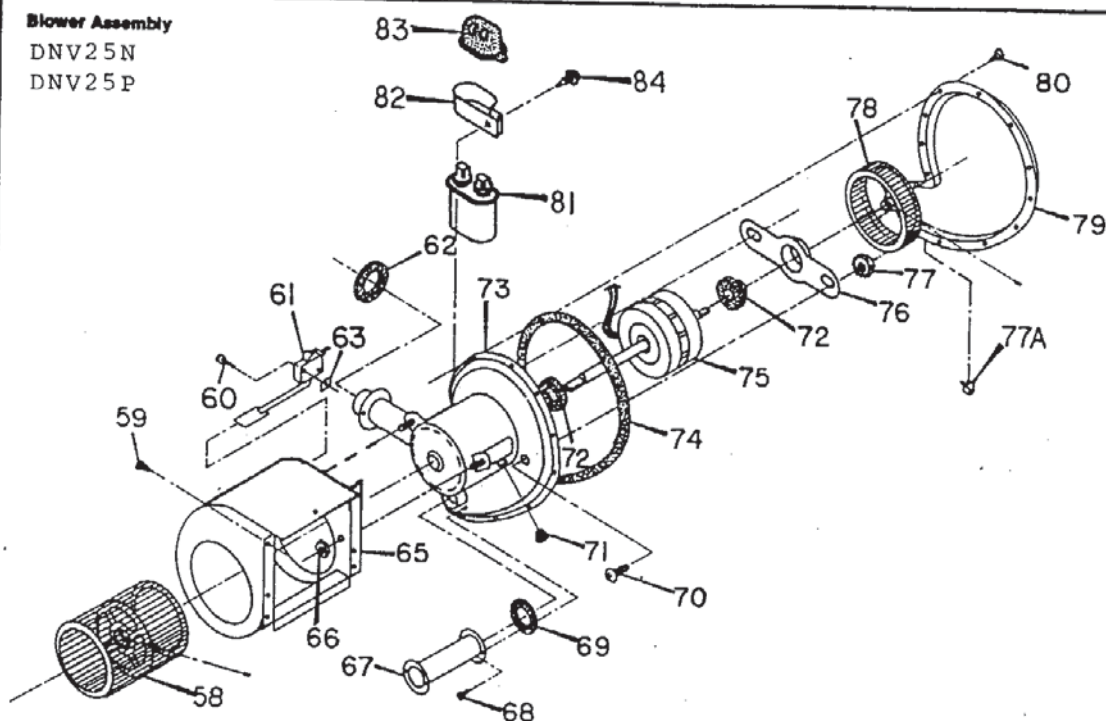

Blower Assembly
 DNV25N
 DNV25P

Suburban Model DNV-25N DYNAVENT Model DNV25P Form 2078-B 7-91

