

PROPANE/LP GAS HEATER

FBS-10BA

OWNER'S MANUAL

PARTS LIST

This list contains replaceable parts used in your heater. When ordering parts, follow the instructions listed under *Replacement Parts* on page 18 of this manual.

FBS-10BA

KEY NO.	PART NO. FBS-10BA	DESCRIPTION	QTY.
1	L98409-06	Cabinet Assembly	1
2	L98006-03	Front Panel Assembly	1
3	L98410-08	Reflector Unit	1
4	L98501-03	Glass	1
5	L98502-03	Upper Glass Retainer	1
6	L98807-03	Lower Glass Retainer	1
7	L98817-01	Self Tapping Screw	12
8	L98135-01	Thermostat Valve Assembly	1
9	L98066-02	Thermostat Valve Base	1
10	L98067-01	Thermostat Valve Mounting Bracket	1
11	L98422-01	Thermostat Mounting Tube	2
12	L98073-01	Nut	2
13	L98411-01	Ignitor Line	1
14	L98068-02	Thermostat Valve Inlet/Outlet Connector	2
15	L98029-04	Pressure Regulator	1
16	L98801-01	Washer	2
17	L98806-01	Self Tapping Screw	2
18	L98915-02	Pressure Tap Assembly	1
19	L98115-05	Main Inlet Tube Assembly	1
20	L98123-07	ODS Line Assembly	1
21	L98126-02	Burner Inlet Tube Assembly	1
22	L98506-03	Burner	1
23	L98507-02	Burner Connector	1
24	L98508-06	Injector	1
25	L98504-02	Left Burner Support Bracket	1
26	L98505-02	Right Burner Support Bracket	1
27	L98071-04	ODS/Pilot Assembly	1
27-1	098514-01	Thermocouple	1
27-2	L98071-07	Ignitor Electrode	1
28	L98515-01	ODS Lower Deflector	1
29	L98514-01	Nut	2
30	L98010-08	Grill	1
31	L98011-01	Grill Fastener	2
32	L98085-02	Mounting Bracket	1
PARTS AVAILABLE - NOT SHOWN			
	100642-01	Assembly, Hardware	1
	104892-15	AGA Label	1
	L98098-02	Gas Instruction Decal	1
	L98100-01	Inside Warning Label	1