



GB4000-1

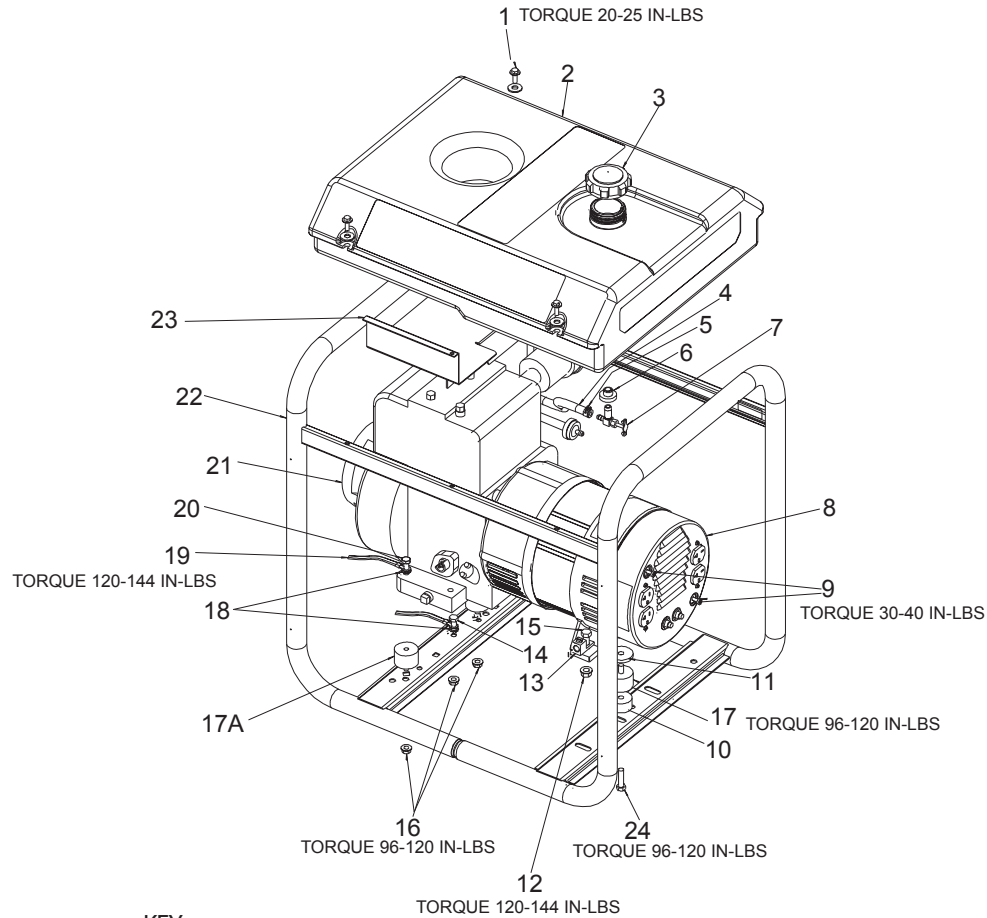

KEY NO.	DESCRIPTION	PART NUMBER
1	FUEL TANK SCREWS	91895680
2	FUEL TANK	GS-0795
3	FUEL CAP	GS-0443
4	FUEL HOSE	GS-0225
5	FUEL LINE CLAMP	GS-0227
6	DRAIN COCK GROMMET	GS-0446
7	TANK DRAIN COCK	GS-0437
8	END COVER	GS-0079
9	SCREW #10-24 x 1	SSF-553
10	REAR ISOLATOR SPACER	GS-0449
11	WASHER 3/8	SS-1525-CD
12	LOCK NUT 3/8-16	SSF-8111-ZN
13	GROUND LUG	GS-0117
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	SCREW 3/8-16 x 1	SSF-3140-ZN
16	LOCK NUT 5/16-18	SSF-8150
17	ISOLATOR	GS-0448
17A	ISOLATOR	GS-0433
18	LOCK WASHER	SSN-1619-ZN
19	GROUND STRAP	GS-0118
20	HEX SCREW 5/16-18 x 1.7	95829230
21	ENGINE (model #197412-1144-E1)	-
22	FRAME ASSEMBLY	GS-0440
23	HEAT SHIELD	GS-0432
24	SCREW 3/8-16 x 3/4	SSF-8111-ZN

GB4000-1

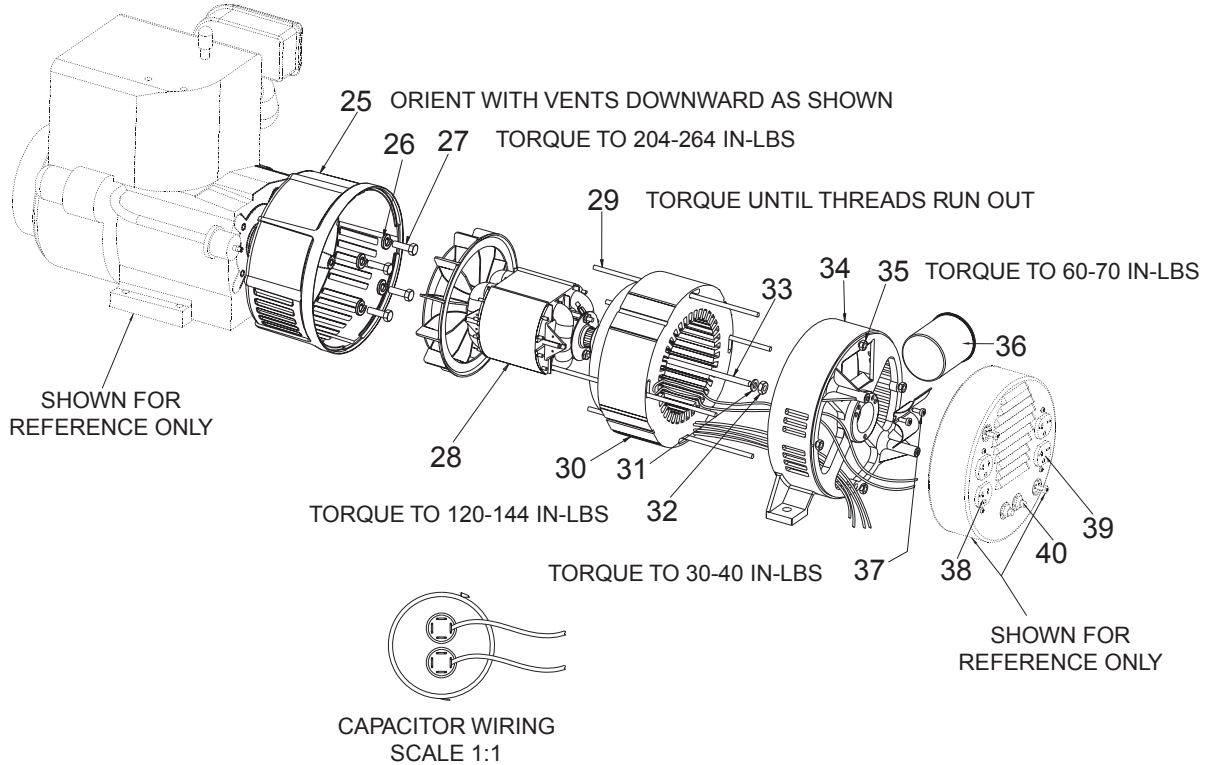

KEY NO.	DESCRIPTION	PAR T NUMBER
25	DRIVE END ADAPTER	GS-0076
26	LOCK WASHER 3/8	SSN-619
27	CAP SCREW 3/8-16 x 1	SSF-577
28	ROTOR ASSEMBLY	GS-0410-1
29	STATOR THRU BOLT	GS-0415
30	STATOR ASSEMBLY	GS-0416
31	WASHER 11/16 OD x 11/32	SS-6506-CD
32	NUT 5/16-24	SSF-576
33	ROTOR THRU BOLT	GS-0419
34	BEARING SUPPORT	GS-0682
35	HEX NUT 1/4-20	SSF-575
36	CAPACITOR	GS-0104
37	SCREW 10-32 x 1/2	SSF-553
38	120V DUPL. RECEPTACLE	GS-0019
39	240V DUPL. RECEPTACLE	GS-0020
40	CIRCUIT BREAKER(15A)	GS-0024
<u>ITEM NOT SHOWN</u>		
	*DIODE(S)	GS-0082
	CABLE TIE	GS-0105
	BEARING COVER	GS-0106
	O-RING (included in GS-0681)	GS-0682

*Refer to Page 4 in the Generator Repair Section for further diode information.

Not Shown (GB4000-1)

MG-GENMAN-F Operator Manual
 GEN-4000-1 P arts Manual
 GS-0113 Engine Manual

Not Shown (GB4010)

MGP-4010 Owners Manual
 GS-0113 Engine Manual