



GB4000-2

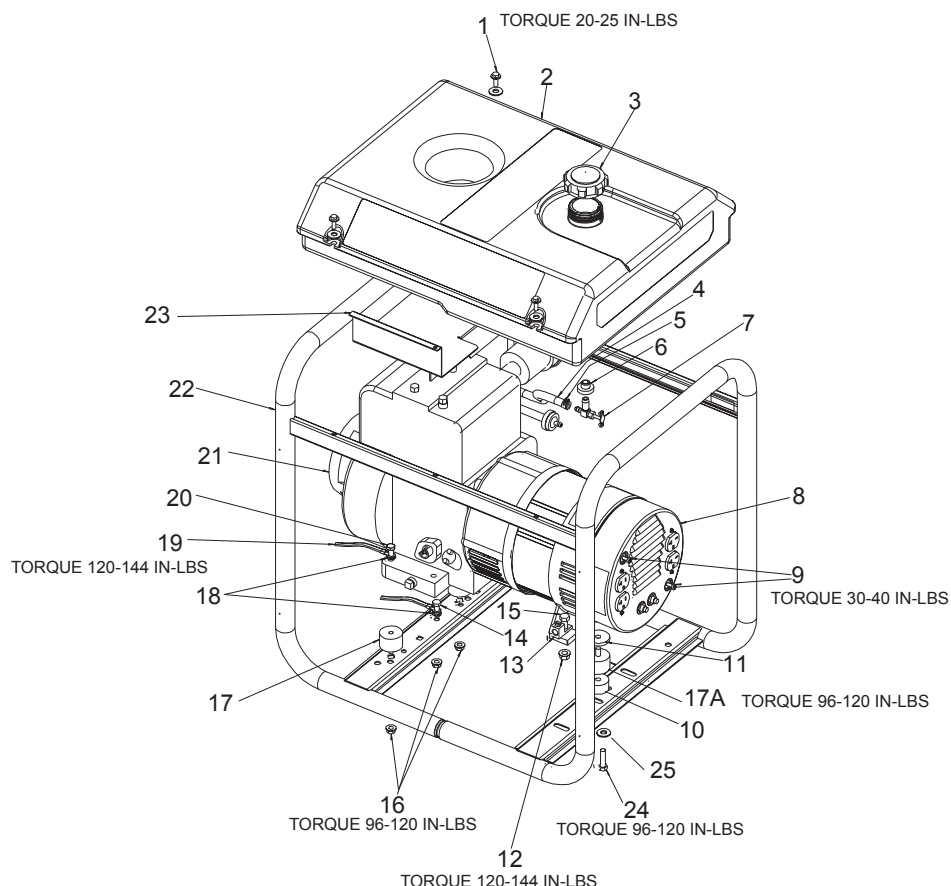

KEY NO.	DESCRIPTION	PART NUMBER
1	FUEL TANK SCREWS	91895680
2	FUEL TANK	GS-0795
3	FUEL CAP	GS-0443
4	FUEL HOSE	GS-0225
5	FUEL LINE CLAMP	GS-0227
6	DRAIN COCK GROMMET	GS-0446
7	TANK DRAIN COCK	GS-0437
8	END COVER	GS-0079
9	SCREW #10-24 x 1	SSF-553
10	REAR ISOLATOR SPACER	GS-0492
11	WASHER 3/8	SSN-1014-ZN
12	LOCK NUT 3/8-16	SSF-8111-ZN
13	GROUND LUG	GS-0117
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	SCREW 3/8-16 x 1	SSF-3140-ZN
16	LOCK NUT 5/16-18	SSF-8150
17	ISOLATOR (FRONT)	GS-0033
17A	ISOLATOR (REAR)	GS-0033
18	LOCK WASHER	SSN-1619-ZN
19	GROUND STRAP	GS-0118
20	HEX SCREW 5/26-18 x 1.7	95829230
21	ENGINE (model #197412-1144-E1)	-
22	FRAME ASSEMBLY	GS-0440
23	HEAT SHIELD	GS-0432
24	SCREW 3/8-16 x 3/4	SSF-605
25	WASHER	SSN-60-ZN

GB4000-2 / GB4010-1 (cont'd)

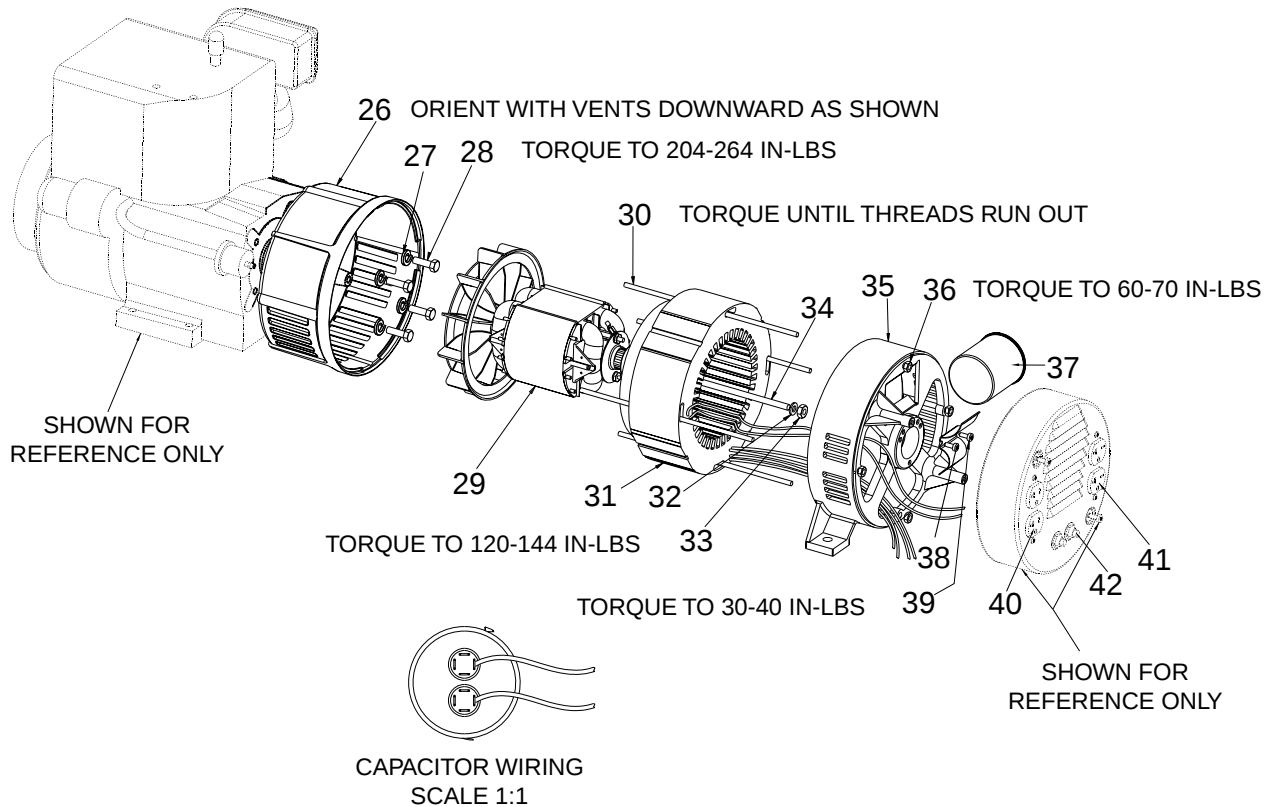

KEY

<u>NO.</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
26	DRIVE END ADAPTER	GS-0076
27	LOCK WASHER 3/8	SSN-619
28	CAP SCREW 3/8-16 x 1	SSF-577
29	ROTOR ASSEMBLY	GS-0410-1
30	STATOR THRU BOLT	GS-0415
31	STATOR ASSEMBLY	GS-0416
32	WASHER 11/16 OD x 11/32	SS-6506-CD
33	NUT 5/16-24	SSF-576
34	ROTOR THRU BOLT	GS-0419
35	BEARING SUPPORT	GS-0861
36	HEX NUT 1/4-20	SSF-575
37	CAPACITOR	GS-0104
38	CAPACITOR BRACKET	GS-0487
39	SCREW 10-32 x 1/2	SSF-553
40	120V DUPL. RECEPTACLE	GS-0019
41	240V DUPL. RECEPTACLE	GS-0020
42	CIRCUIT BREAKER(15A)	GS-0024

ITEM NOT SHOWN

DIODE(S)	GS-0082
O-RING (included in GS-0681)	GS-0682

*Refer to Page 4 in the Generator Repair Section for further **diode** information.

Not Shown (GB4000-2)

MG-GENMAN-F	Operator Manual
GEN-4000-2	Parts Manual
GS-0113	Engine Manual

Not Shown (GB4010-1)

MGP-4010-1	Operators Manual
GS-0113	Engine Manual