


GB4010-2

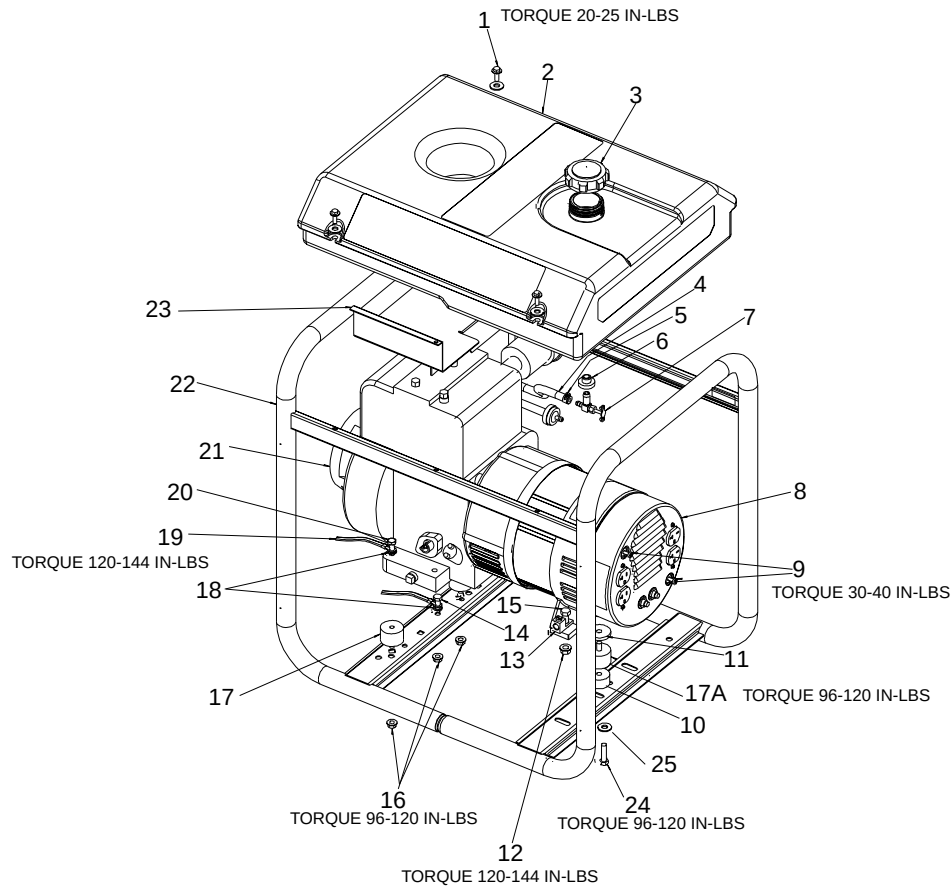


KEY NO.

DESCRIPTION

PART NUMBER

1	FUEL TANK SCREWS	91895680
2	FUEL TANK	GS-0444
3	FUEL CAP	GS-0443
4	FUEL HOSE	GS-0225
5	FUEL LINE CLAMP	GS-0227
6	DRAINCOCK GROMMET	GS-0446
7	TANK DRAINCOCK	GS-0437
8	ENDCOVER	GS-0079
9	SCREW #10-24 x 1	SSF-553
10	REAR ISOLATOR SPACER	GS-0492
11	WASHER 3/8	SSN-1014-ZN
12	LOCK NUT 3/8-16	SSF-8111-ZN
13	GROUND LUG	GS-0117
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	SCREW 3/8-16 x 1	SSF-3140-ZN
16	LOCK NUT 5/16-18	SSF-8150
17	ISOLATOR (FRONT)	GS-0033
17A	ISOLATOR (REAR)	GS-0033
18	LOCK WASHER	SSN-1619-ZN
19	GROUND STRAP	GS-0118
20	HEX SCREW 5/26-18 x 1.7	95829230
21	ENGINE (model #197412-1144-E1)	-
22	FRAME ASSEMBLY	GS-0440
23	HEAT SHIELD	GS-0432
24	SCREW 3/8-16 x 3/4	SSF-605
25	WASHER	SSN-60-ZN

GB4010-2 (cont'd)

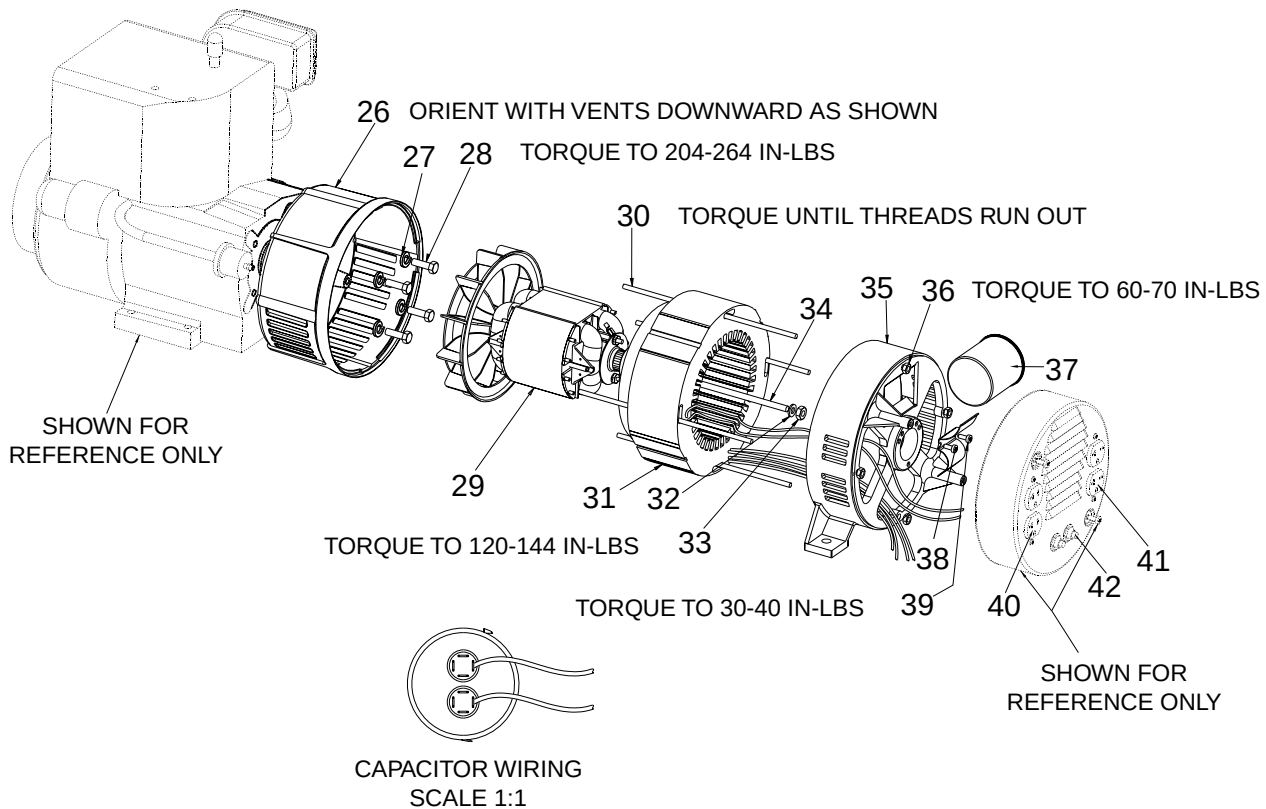

KEY NO.

DESCRIPTION

PART NUMBER

26	DRIVE END ADAPTER	GS-0076
27	LOCK WASHER 3/8	SSN-619
28	CAP SCREW 3/8-16 x 1	SSF-577
29	ROTOR ASSEMBLY	GS-0410-1
30	STATOR THRU BOLT	GS-0415
31	STATOR ASSEMBLY	GS-0416
32	WASHER 11/16 OD x 11/32	SS-6506-CD
33	NUT 5/16-24	SSF-576
34	ROTOR THRU BOLT	GS-0419
35	BEARING SUPPORT	GS-0861
36	HEX NUT 1/4-20	SSF-575
37	CAPACITOR	GS-0104
38	CAPACITOR BRACKET	GS-0487
39	SCREW 10-32 x 1/2	SSF-553
40	120V DUPL. RECEPTACLE	GS-0019
41	240V DUPL. RECEPTACLE	GS-0020
42	CIRCUIT BREAKER(15A)	GS-0024

ITEM NOT SHOWN

*DIODE(S)	GS-0082
O-RING (included in GS-0681)	GS-0682

*Refer to Page 4 in the Generator Repair Section for further **diode** information.

Not Shown

MGP-4010-1	Operators Manual
GS-0113	Engine Manual