



# GB5000

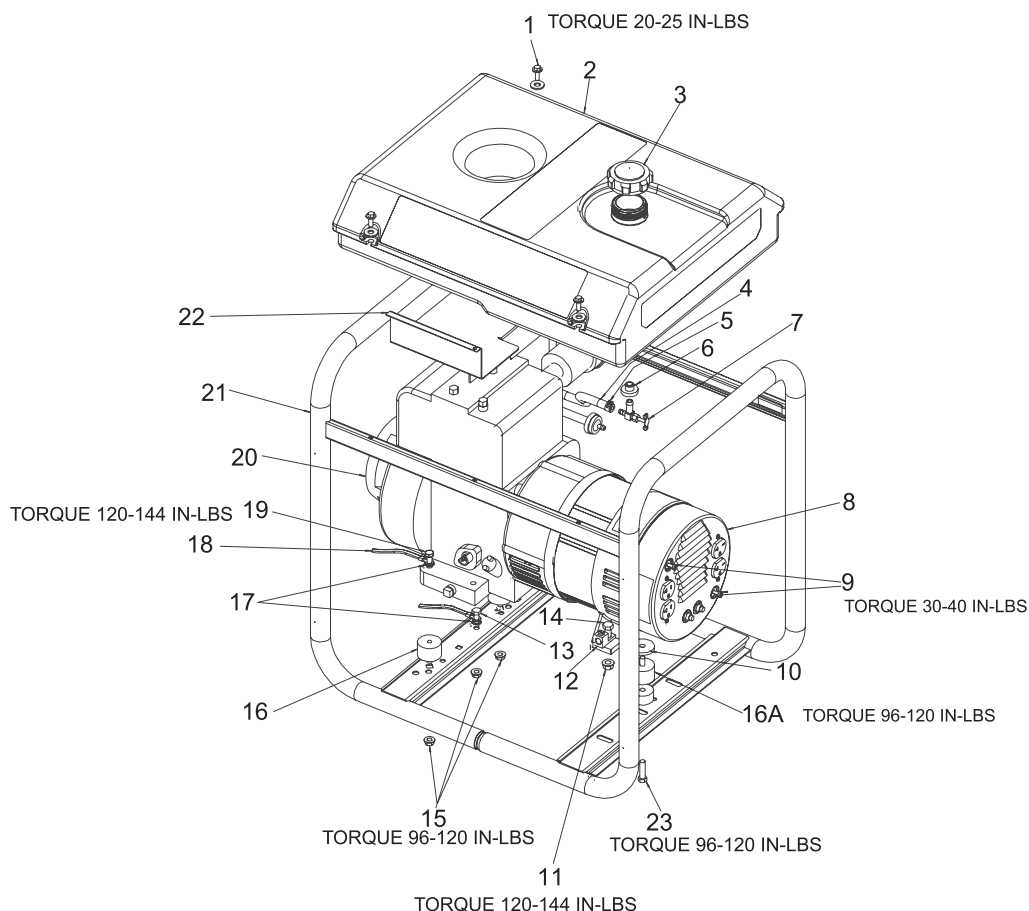

## KEY

| <u>NO.</u> | <u>DESCRIPTION</u>             | <u>PART NUMBER</u> |
|------------|--------------------------------|--------------------|
| 1          | FUEL TANK SCREWS               | SSF-990            |
| 2          | FUEL TANK                      | GS-0027            |
| 3          | FUEL CAP                       | GS-0443            |
| 4          | FUEL HOSE                      | GS-0225            |
| 5          | FUEL LINE CLAMP                | GS-0227            |
| 6          | DRAIN COCK GROMMET             | GS-0446            |
| 7          | TANK DRAIN COCK                | GS-0456            |
| 8          | END COVER                      | GS-0079            |
| 9          | SCREW #10-24 x 1               | SSF-573            |
| 10         | WASHER 3/8                     | SS-1525-CD         |
| 11         | LOCK NUT 3/8-16                | SSF-8111-ZN        |
| 12         | GROUND LUG                     | GS-0117            |
| 13         | SCREW 5/16-18 x 3/4            | SS-12-CD           |
| 14         | SCREW 3/8-16 x 1               | SSF-3140-ZN        |
| 15         | LOCK NUT 5/16-18               | SSF-8150           |
| 16         | ISOLATOR                       | GS-0209 (Back)     |
| 16A        | ISOLATOR                       | GS-0034 (Front)    |
| 17         | LOCK WASHER                    | SSN-1619-ZN        |
| 18         | GROUND STRAP                   | GS-0118            |
| 19         | HEX SCREW 5/26-18 x 1.7        | 95829230           |
| 20         | ENGINE (model #19E412-1131-E1) | -                  |
| 21         | FRAME ASSEMBLY KIT             | K-0544             |
| 22         | HEAT SHIELD                    | GS-0030            |
| 23         | SCREW 3/8-16 x 3/4             | SSF-8111-ZN        |

## GB5000 (cont'd)

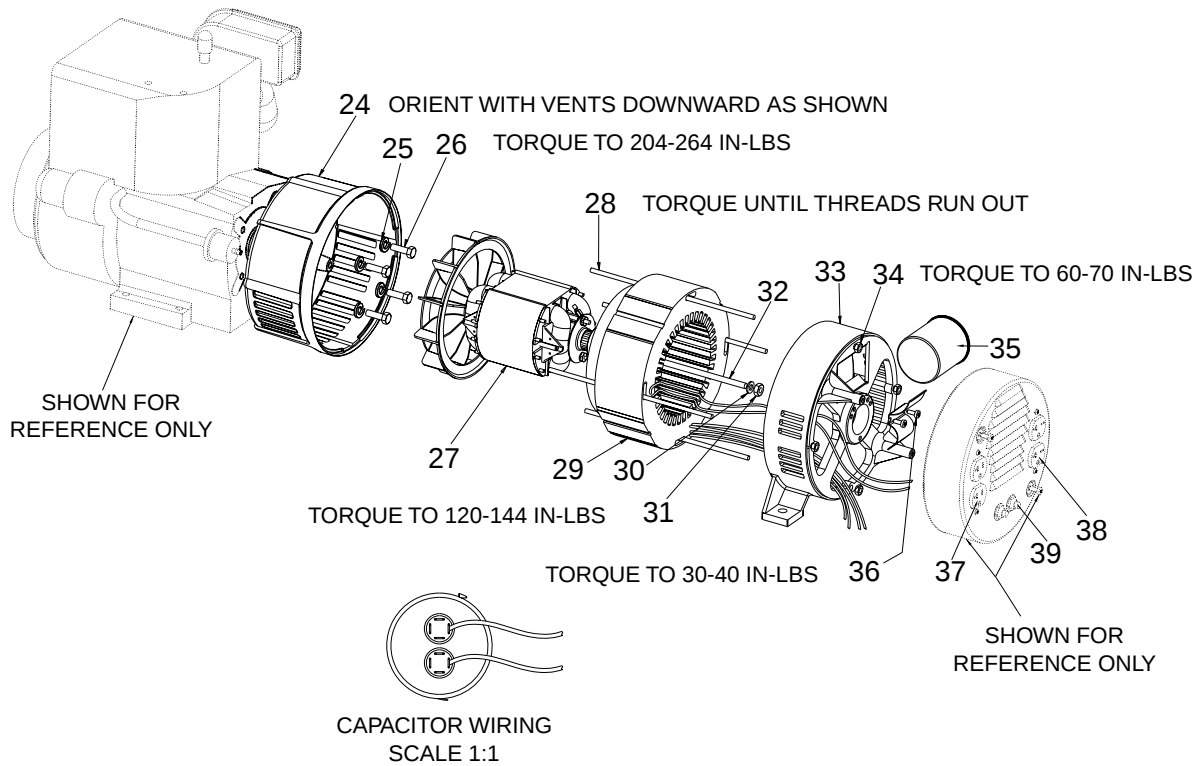

### KEY NO.

### DESCRIPTION

### PART NUMBER

|    |                         |            |
|----|-------------------------|------------|
| 24 | DRIVE END ADAPTER       | GS-0076    |
| 25 | LOCK WASHER 3/8         | SSN-619    |
| 26 | CAP SCREW 3/8-16 x 1    | SSF-577    |
| 27 | ROTOR ASSEMBLY          | GS-0478    |
| 28 | STATOR THRU BOLT        | GS-0110    |
| 29 | STATOR ASSEMBLY         | GS-0100-1  |
| 30 | WASHER 11/16 OD x 11/32 | SS-6506-CD |
| 31 | NUT 5/16-24             | SSF-576    |
| 32 | ROTOR THRU BOLT         | GS-0091    |
| 33 | BEARING SUPPORT         | GS-0861    |
| 34 | HEX NUT 1/4-20          | SSF-575    |
| 35 | CAPACITOR               | GS-0104    |
| 36 | SCREW 10-32 x 1/2       | GS-0107    |
| 37 | 120V DUPL. RECEPTACLE   | GS-0019    |
| 38 | 240V DUPL. RECEPTACLE   | GS-0020    |
| 39 | CIRCUIT BREAKER(20A)    | GS-0025    |

### ITEM NOT SHOWN

|                              |         |
|------------------------------|---------|
| *DIODE(S)                    | GS-0082 |
|                              | GS-0081 |
| CABLE TIE                    | GS-0105 |
| BEARING COVER                | GS-0106 |
| O-RING (included in GS-0681) | GS-0682 |

\*Refer to Page 4 in the Generator Repair Section for further **diode** information.

### Not Shown

|                              |               |
|------------------------------|---------------|
| MG-GENMAN-F Operators Manual |               |
| GEN-5000                     | Parts Manual  |
| GS-0113                      | Engine Manual |