



GBE4010-1

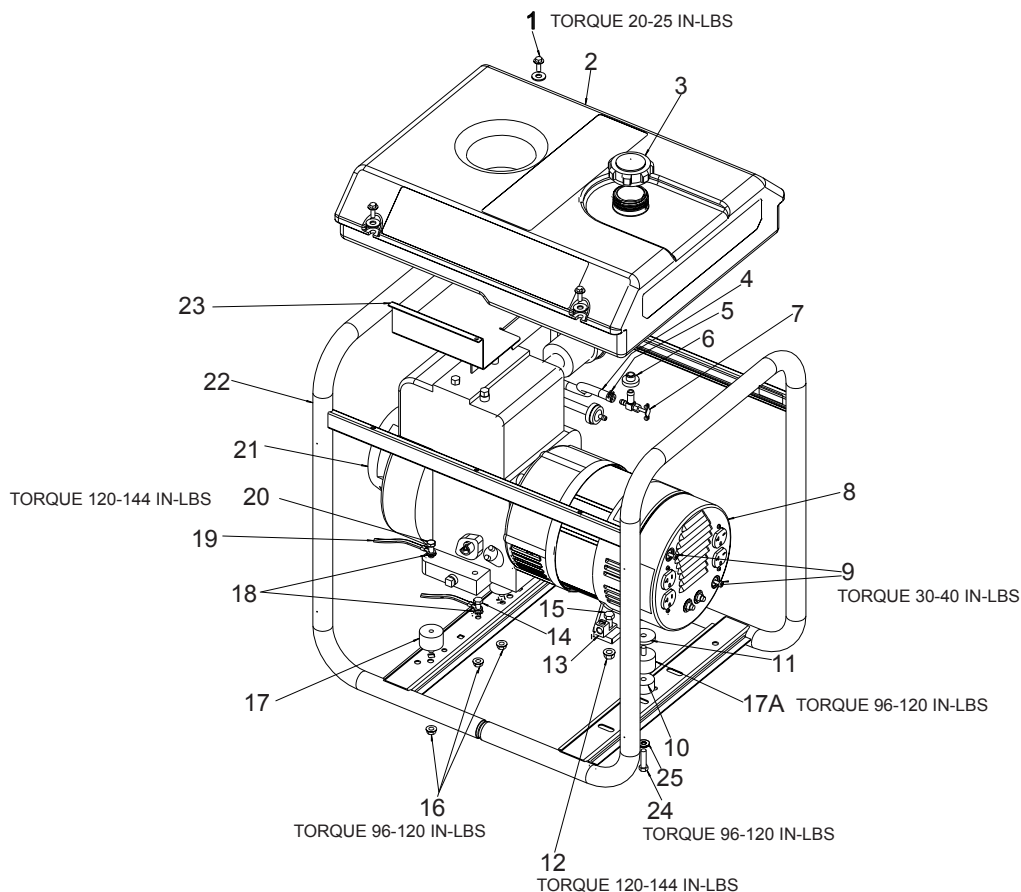

KEY NO.	DESCRIPTION	PART NUMBER
1	FUEL TANK SCREWS	91895680
2	FUEL TANK	Z-GS-0795
3	FUEL CAP	GS-0443
4	FUEL HOSE	Z-GS-0225
5	FUEL LINE CLAMP	GS-0227
6	DRAINCOCK GROMMET	GS-0446
7	TANK DRAINCOCK	GS-0437
8	ENDCOVER	GS-0077
9	SCREW #10-24 x 1	SSF-553-1
10	REAR ISOLATOR SPACER	GS-0492
11	WASHER 3/8	SSN-1014-ZN
12	LOCK NUT 3/8-16	SSF-8111-ZN
13	GROUND LUG	GS-0117
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	SCREW 3/8-16 x 1	SSF-3140-ZN
16	LOCK NUT 5/16-18	SSF-8150
17	ISOLATOR (FRONT)	GS-0033
17A	ISOLATOR (REAR)	GS-0033
18	LOCK WASHER	SSN-1619-ZN
19	GROUND STRAP	GS-0118
20	HEX SCREW 5/26-18 x 1.7	95829230
21	ENGINE (model# 197417-1152-E1)	-
22	FRAME ASSEMBLY	Z-GS-0539
23	HEAT SHIELD	D20827
24	SCREW 3/8-16 x 3/4	SSF-605
25	WASHER	SSN-60-ZN


GBE4010-1 (cont'd)

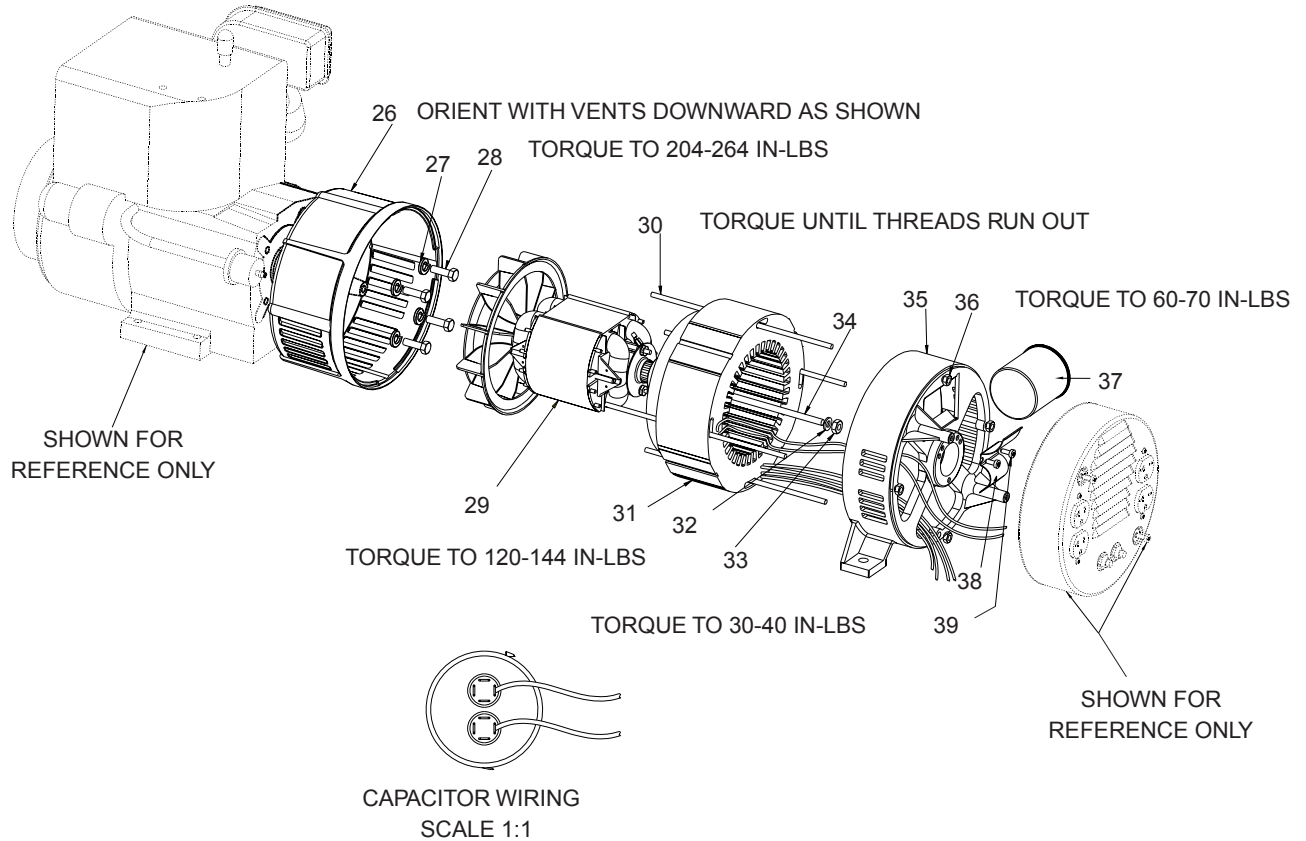

KEY NO.	DESCRIPTION	PART NUMBER
26	DRIVE END ADAPTER	GS-0076
27	LOCK WASHER 3/8	SSN-619
28	CAP SCREW 3/8-16 x 1	SSF-577
29	ROTOR ASSEMBLY	Z-GS-0410-1
30	STATOR THRU BOLT	GS-0415
31	STATOR ASSEMBLY	Z-GS-0591
32	WASHER 11/16OD x 11/32	SS-6506-CD
33	NUT 5/16-24	SSF-576
34	ROTOR THRU BOLT	GS-0419-1
35	BEARING SUPPORT	GS-0861
36	HEX NUT 1/4-20	SSF-575
37	CAPACITOR	GS-0592
38	CAPACITOR BRACKET	GS-0595
39	SCREW 10-32	SSF-5531
<u>ITEM NOT SHOWN</u>		
	*DIODES	GS-0082
	O-RING (included in GS-0861)	GS-0862

*Refer to Page 4 in the Generator Repair Section for further diode information.

GBE4010-1 (cont'd)

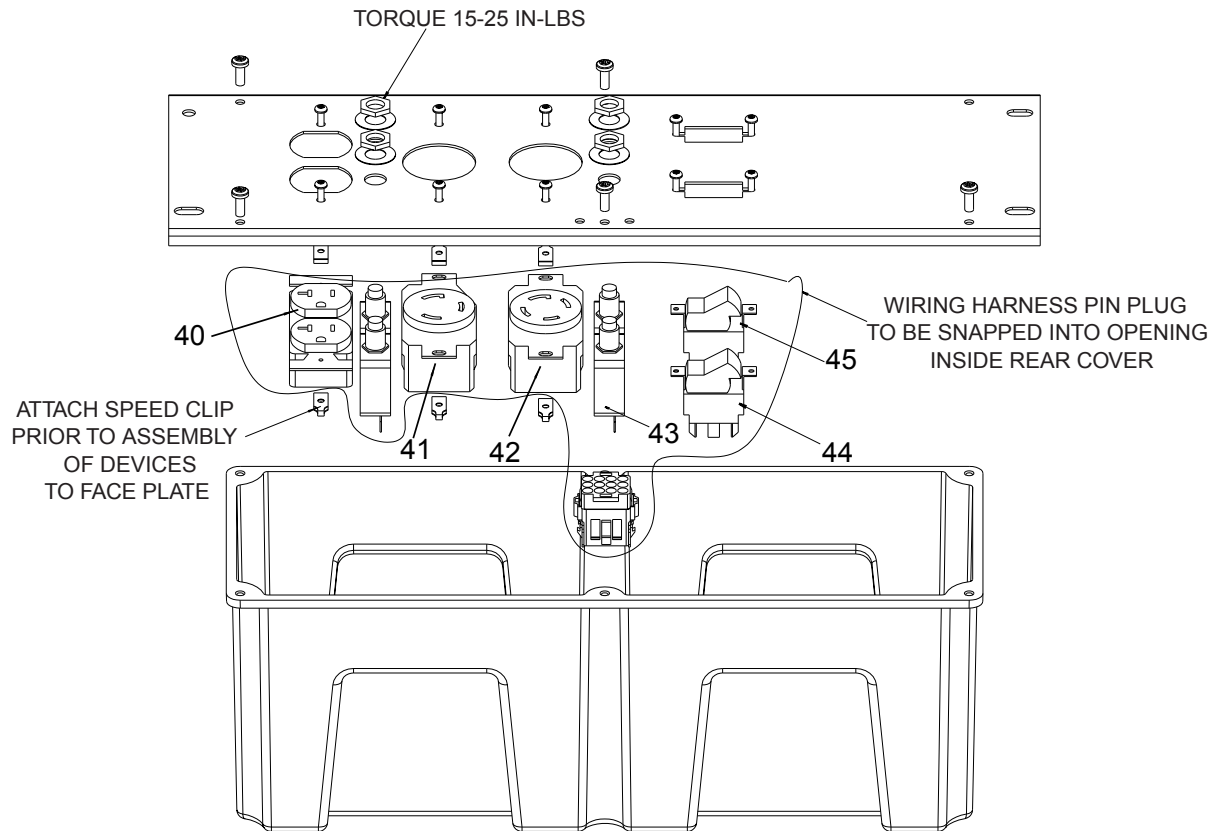

KEY NO.	DESCRIPTION	PART NUMBER
	COMPLETE PANEL ASSEMBLY	GS-0536
40	120V DUPL. RECEPTACLE	GS-0019
41	3 PRONG TWISTLOCK	GS-0480
42	4 PRONG TWISTLOCK	GS-0445
43	CIRCUIT BREAKER	Z-GS-0024
44	FULL POWER SWITCH	GS-0045
45	ON/OFF(ON/OFF/START)	GS-0046

Not Shown

MG-GENMAN-F	Operators Manual
GEN-E4010	Parts Manual
GS-0113	Engine Manual