



GBVE8000-1

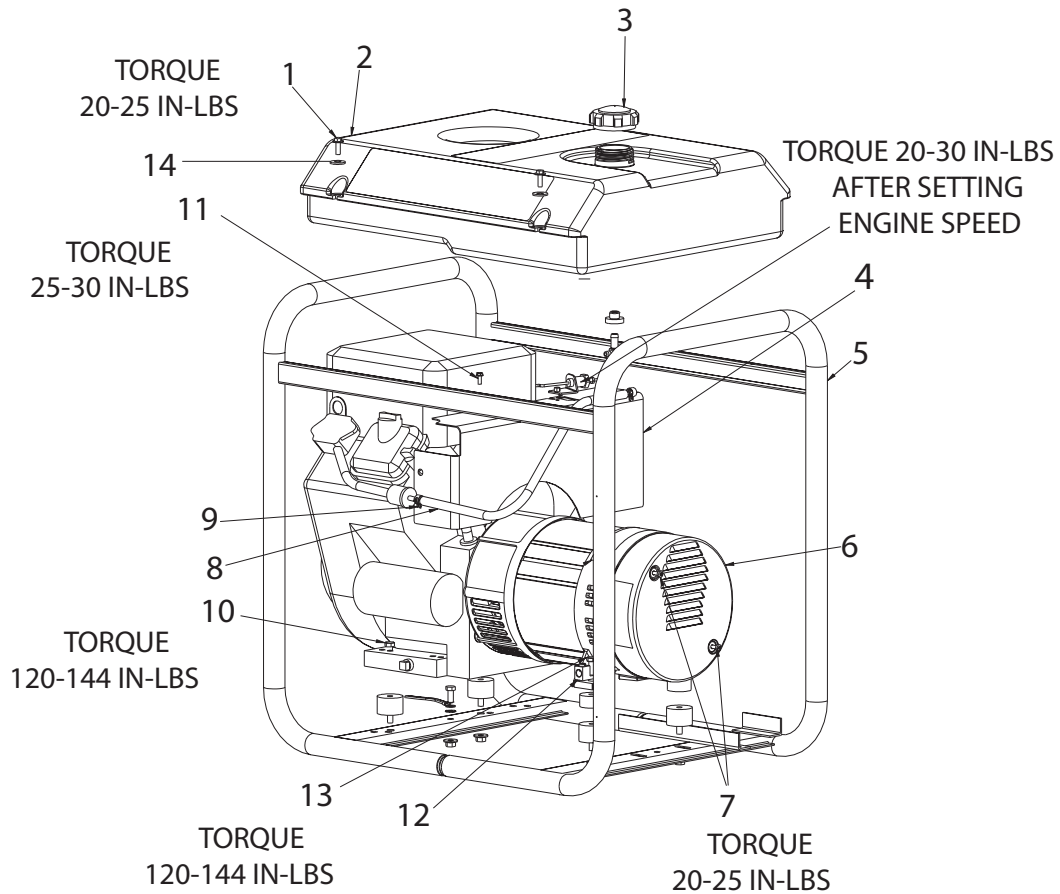


KEY NO.	DESCRIPTION	PART NUMBER
1	FUEL TANK SCREWS	91895680
2	FUEL TANK	Z-GS-0795
3	FUEL CAP	GS-0443
4	HEAT SHIELD	GS-0271
5	FRAME ASSEMBLY	Z-GS-0438
6	END COVER	GS-0077
7	SCREW #10-24 x 9/16	SSF-553-1
8	FUEL HOSE	Z-GS-0225
9	FUEL LINE CLAMP	GS-0227
10	SCREW, HEX CAP 5/16-18 x 1.25	SSF-605
11	SCREW #10-32 x 1/2	GS-0107
12	GROUND LUG	GS-0117
13	SCREW 5/16-18UNC 2A	95829230
14	WASHER .8750D .3751D .083THK	SSN-632

GBVE8000-1 (cont'd)

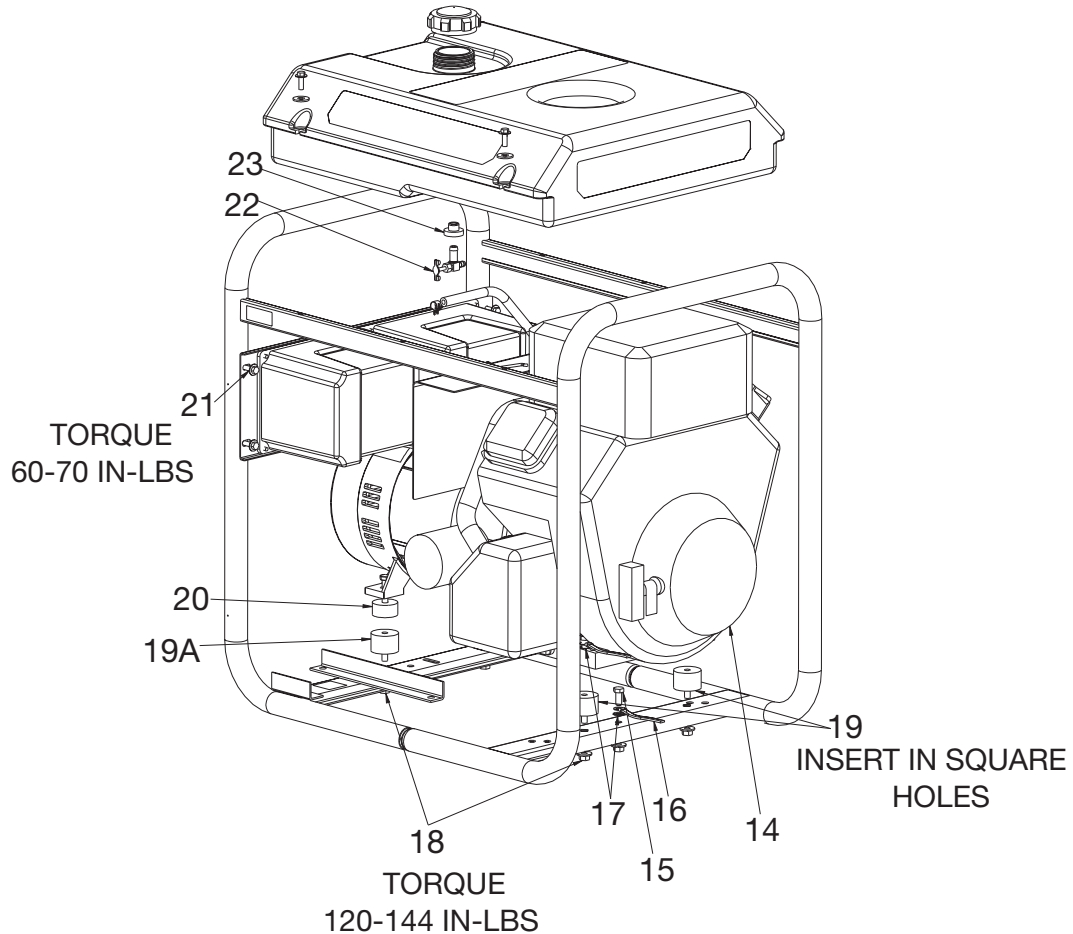

KEY NO.	DESCRIPTION	PART NUMBER
14	ENGINE (model # 294447-1257-E1)	-
15	SCREW 5/16-18 x 3/4	SS-12-CD
16	GROUND STRAP	GS-0118
17	LOCK WASHER	SSN-1619-ZN
18	LOCK NUT	SSF-8150
19	ISOLATOR	GS-0033
19A	ISOLATOR	GS-0033
20	REAR ISOLATOR SPACER	GS-0492
21	SCREW 1/4-20 x 3/4	91895680
22	DRAINCOCK	GS-0437
23	DRAINCOCK GROMMET	GS-0446


GBVE8000-1 (cont'd)

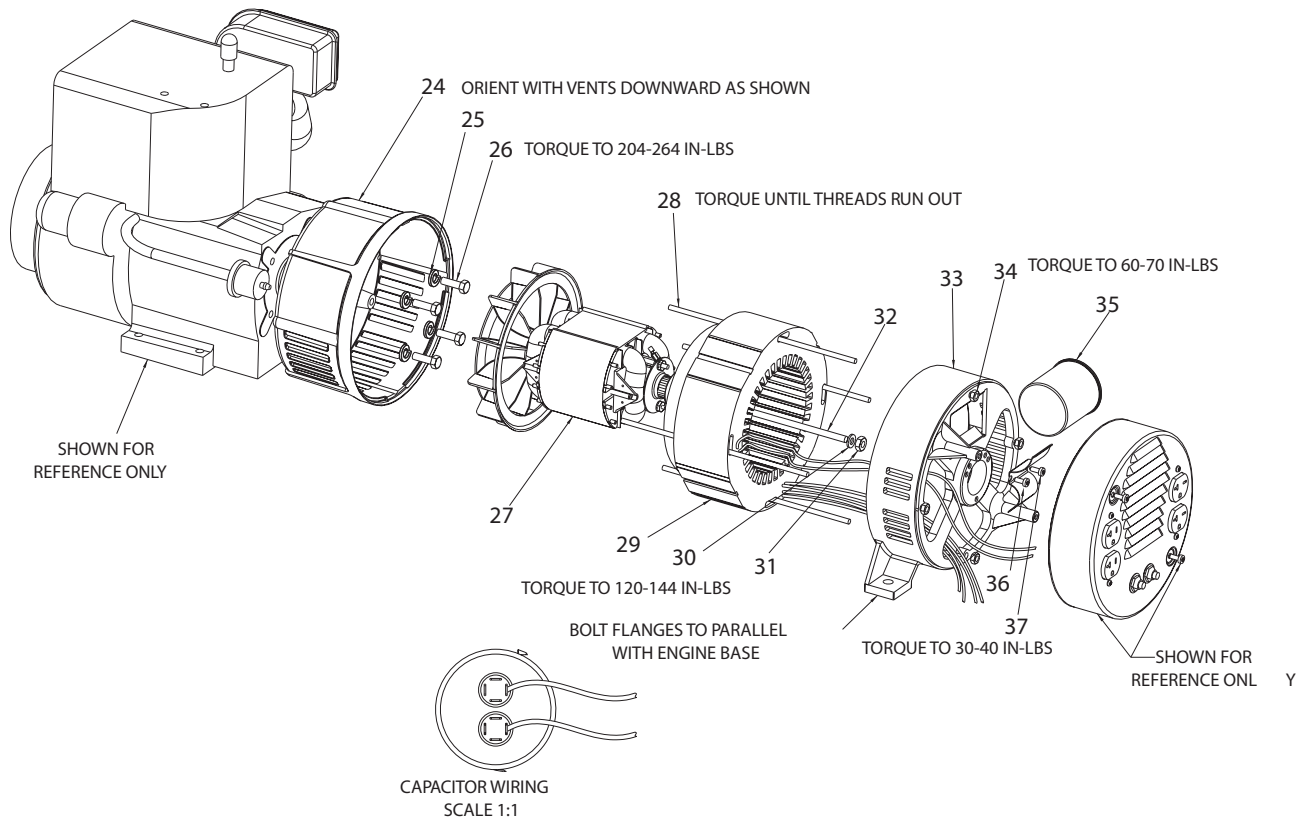

KEY NO.	DESCRIPTION	PART NUMBER
24	DRIVE END ADAPTER	GS-0076
25	LOCK WASHER 3/8	SSN-619
26	CAP SCREW 3/8-16 x 1	SSF-577
27	ROTOR ASSEMBLY	Z-GS-0571
28	STATOR THRU BOLT	GS-0273
29	STATOR ASSEMBLY	Z-GS-0572
30	WASHER 11/16OD x 11/32	SS-6506-CD
31	NUT 5/16-24	SSF-576
32	ROTOR THRU BOLT	GS-0274
33	BEARING SUPPORT	Z-GS-0861
34	HEX NUT 1/4-20	SSF-575
35	CAPACITOR	GS-0592
36	CAPACITOR BRACKET	GS-0595
37	SCREW 10-32	SSF-553-1
ITEM NOT SHOWN		
*DIODES		GS-0082
O-RING (included in GS-0861)		GS-0862

GBVE8000-1 (cont'd)

D26439 Assembly Panel

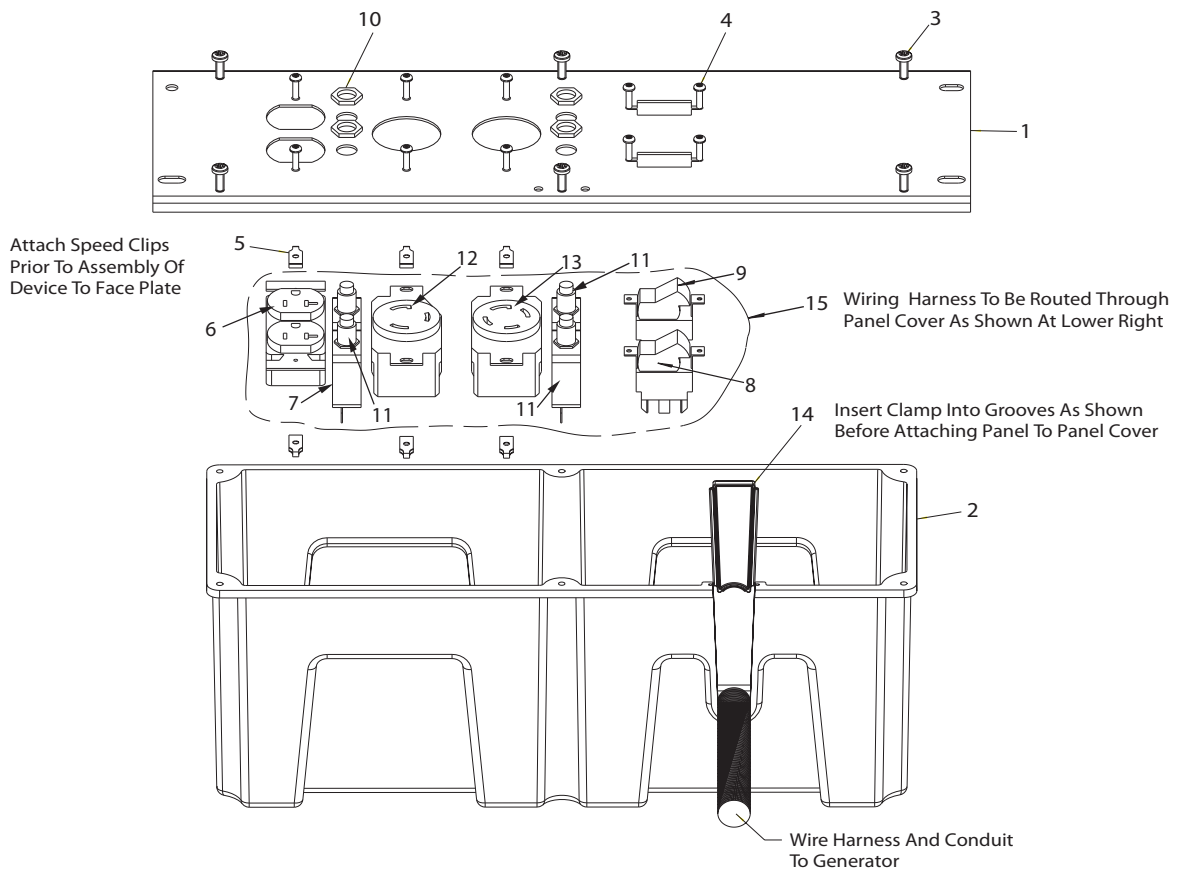

<u>KEY NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
1	GS-0473	COVER CONTROL
2	D26112	COVER PANEL FULL
3	SSF-3156	SCREW 10-9X.50 PLASTITE
4	SSF-583	SCREW #6-32 x .5 TORX
5	SSF-584	NUT SPEED #6-32
6	GS-0019	RECEPTACLE 120V 20A DUPLEX
7	Z-GS-0025	CIRCUIT BREAKER 125/250V
8	GS-0045	SWITCH FULL POWER
9	GS-0046	SWITCH OFF - ON / START
10	SSF-595	NUT HEX JAM 7/16
11	Z-GS-0026	CIRCUIT BREAKER 125/250V
12	GS-0021	RECEPTACLE 3 PRONG 30A
13	GS-0455	RECEPTACLE 4 PRONG 30A
14	D26113	CLAMP MOLDED STRESS RELIEF
15	D26060	ASSY PANEL WIRE BSV800-1