


GHV4500-4

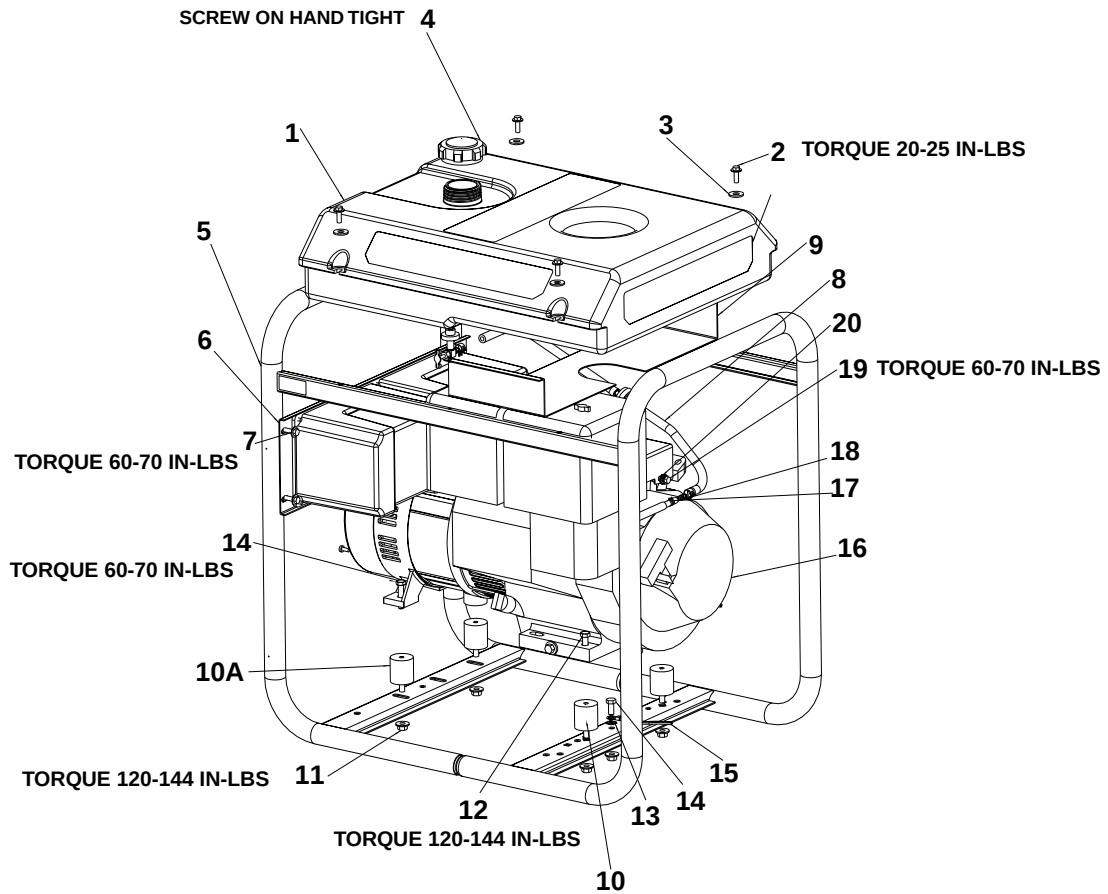


KEY NO.

DESCRIPTION

PART NUMBER

1	FUEL TANK	GS-0795
2	FUEL TANK SCREWS	91895680
3	WASHER	SSN-632
4	FUEL CAP	GS-0443
5	FRAME ASSEMBLY	GS-0823
6	PANEL ASSEMBLY	GS-0824
7	SCREW 1/4-20 x 3/4	91895680
8	FUEL HOSE	GS-0225
9	HEAT SHIELD	GS-0432-1
10	ISOLATOR	GS-0033
10A	ISOLATOR	GS-0433
11	LOCK NUT 5/16-18	SSF-8150
12	SCREW 5/16-18 x 1	SSF-605
13	LOCK WASHER	SSN-1619-ZN
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	GROUND STRAP	GS-0118
16	ENGINE (model # GX270VWN2)	GS-0523
17	HOSE CLAMP .301 ID	GS-0560
18	UNION 1/4 TO 3/8	GS-0535
19	SCREW 1/4 x 5/8	39124607
20	LOCK WASHER	SS-1503-CD

GHV4500-4 (cont'd)

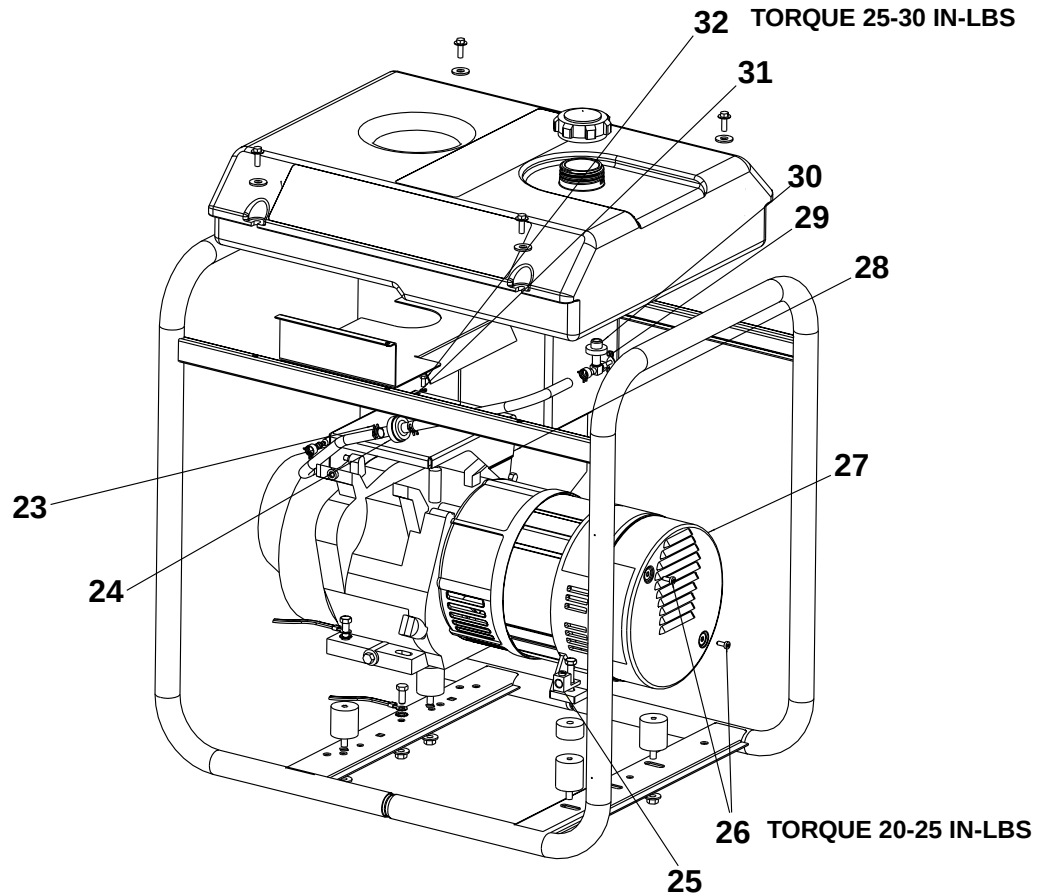

KEY NO.


DESCRIPTION

PART NUMBER

23	FUEL CLAMP .50 ID
24	FUEL FILTER
25	GROUND LUG
26	SCREW 10-24 x 9/16
27	END COVER
28	ENGINE COVER
29	FUEL SHUTOFF VALVE
30	DRAINCOCK GROMMET
31	LOCK WASHER #10
32	SCREW M5 x 12HHCS

GS-0227
GS-0459
GS-0117
SSF-553-1
GS-0077
GS-0540
GS-0437
GS-0446
SSN-626
SSF-627

GHV4500-4 (cont'd)

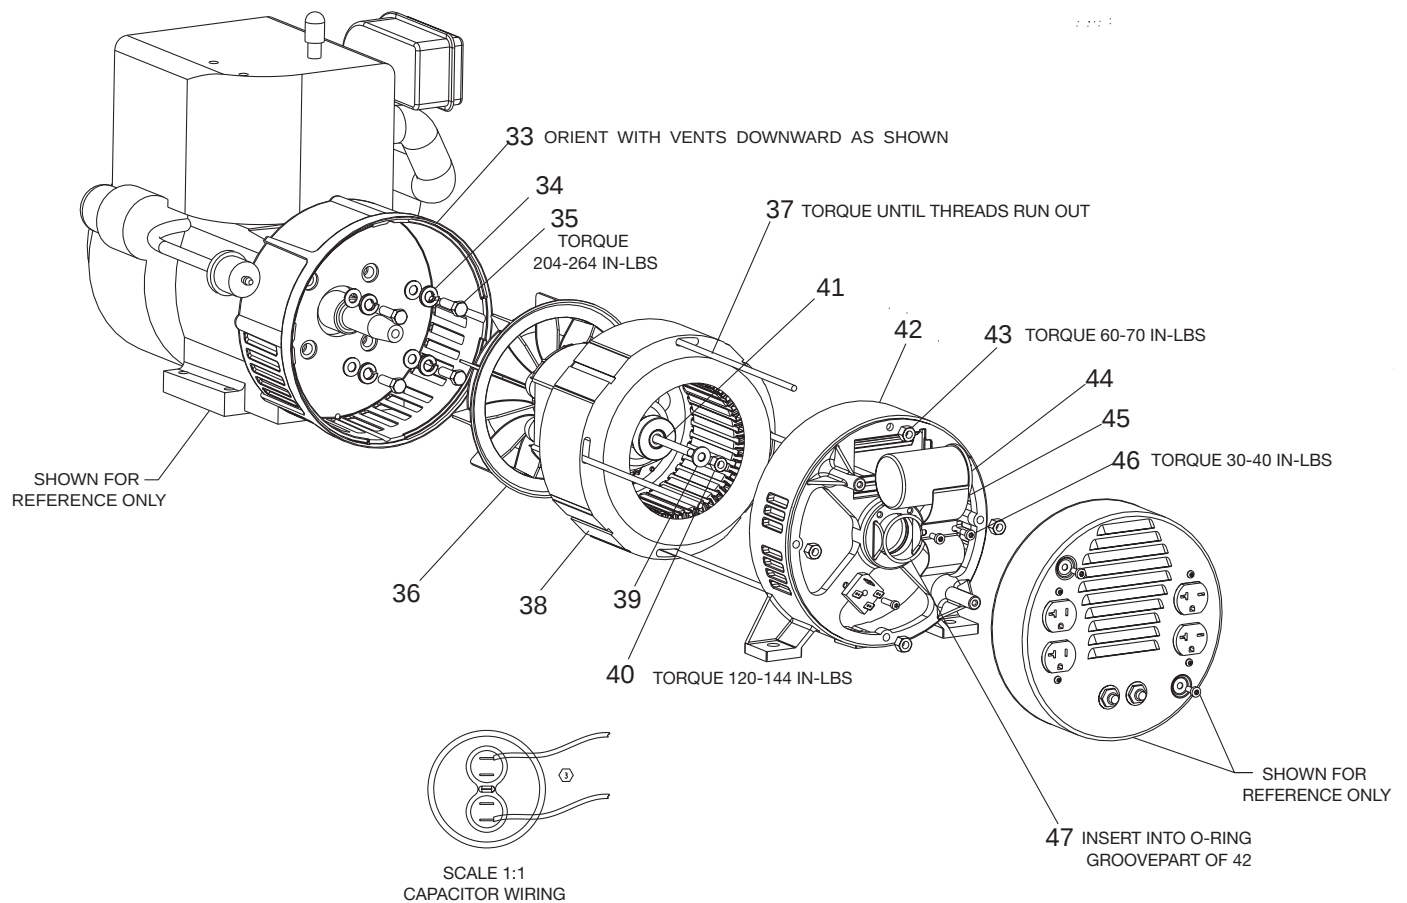

KEY NO.


DESCRIPTION

PART NUMBER

33	DRIVE END ADAPTER	GS-0076
34	LOCK WASHER 3/8	SSN-619
35	CAP SCREW 3/8-16 x 1	SSF-577
36	ROTOR ASSEMBLY	GS-0883
37	STATOR THRU BOLT	GS-0110
38	STATOR ASSEMBLY	GS-0884
39	WASHER 11/16OD x 11/32	SS-6506-CD
40	NUT 5/16-24	SSF-576
41	ROTOR THRU BOLT	GS-0091-1
42	BEARING SUPPORT	GS-0681
43	HEX NUT 1/4-20	SSF-575
44	CAPACITOR	GS-0873
45	CAPACITOR BRACKET	GS-0595
46	SCREW 10-32	SSF-553-1
47	O-RING (included in GS-0861)	GS-0862

*Refer to Page 4 in the Generator Repair Section for further **diode** information.

GHV4500-4 (cont'd)

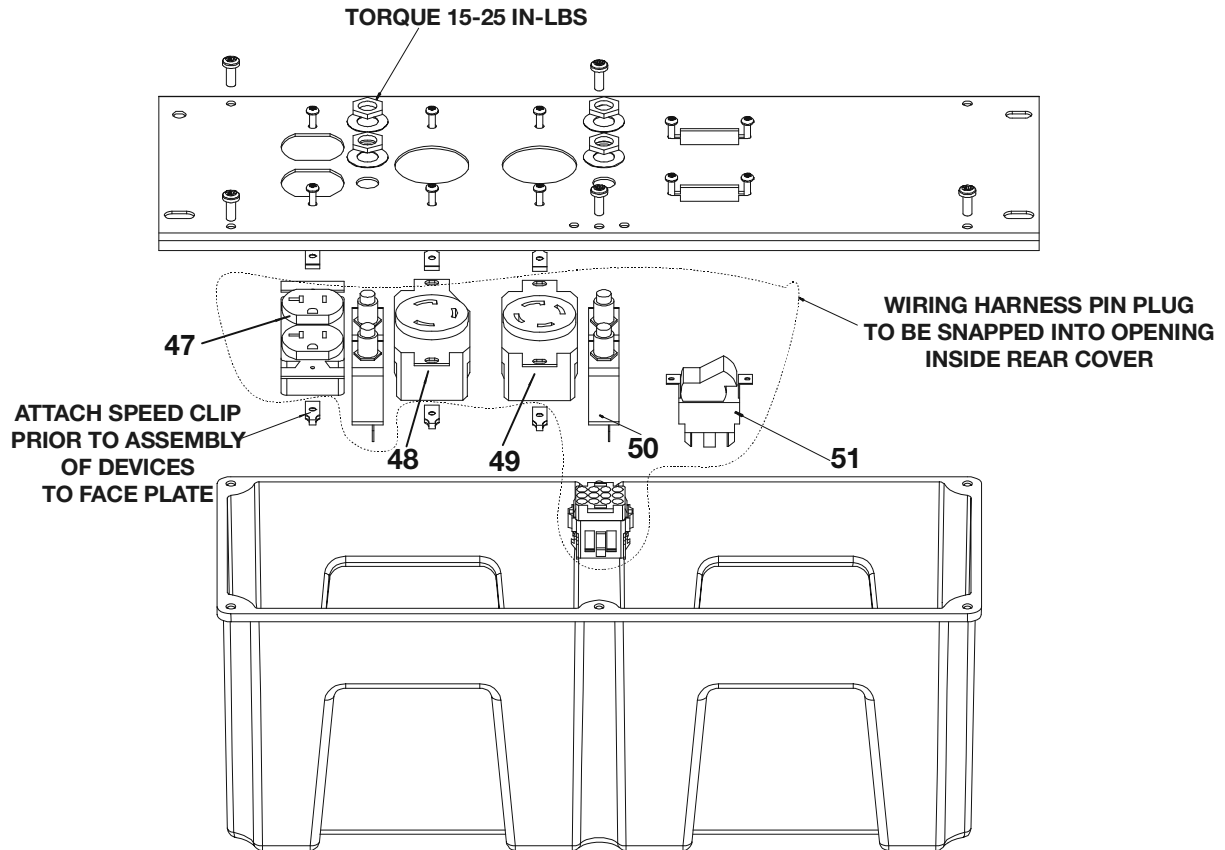

KEY

<u>NO.</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
47	120V DUPL. RECEPTACLE	GS-0019
48	3 PRONG TWISTLOCK	GS-0480
49	4 PRONG TWISTLOCK	GS-0445
50	CIRCUIT BREAKER	GS-0024
51	FULL POWER SWITCH	GS-0045

Not Shown

MG-GENMAN-F	Operators Manual
GEN-HV4500-4	Parts Manual
GS-0525	Engine Manual