



GHV4510-2

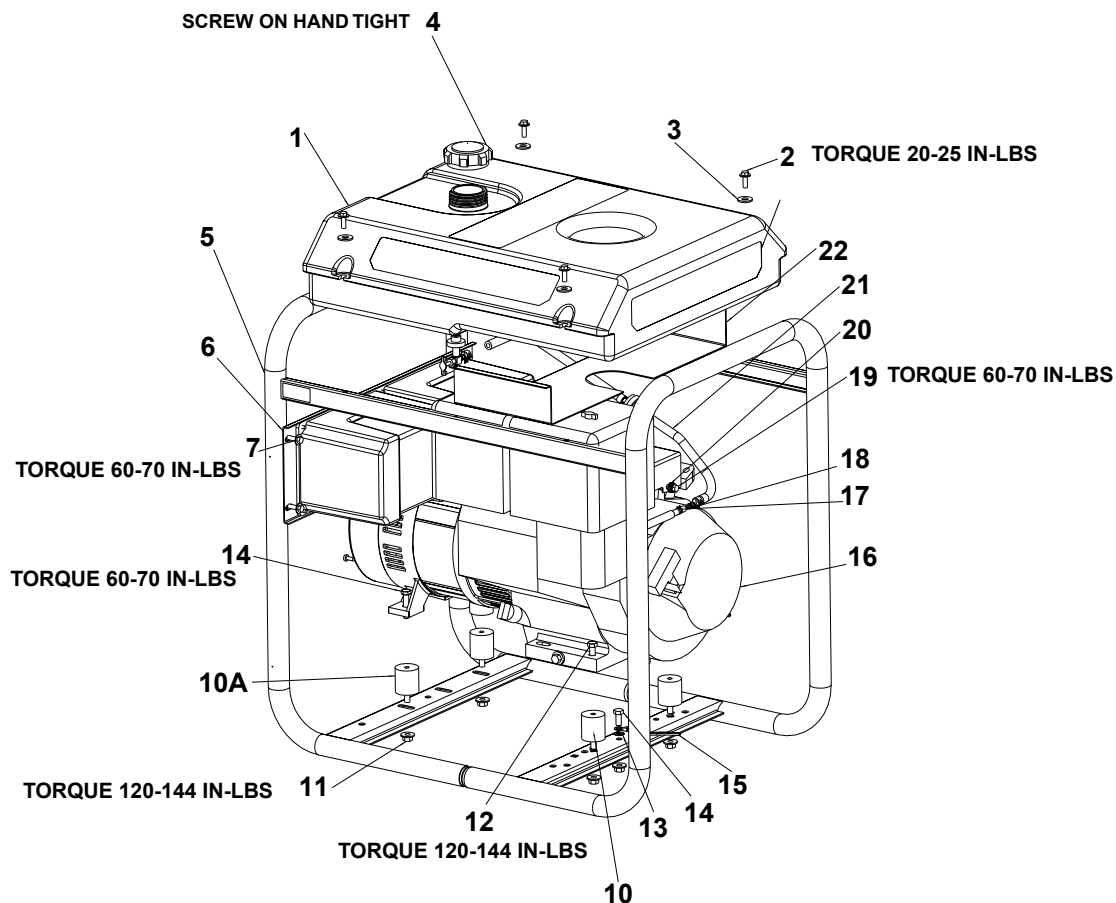

KEY NO.	DESCRIPTION	PART NUMBER
1	FUEL TANK	Z-GS-0795
2	FUEL TANK SCREWS	91895680
3	WASHER	SSN-632
4	FUEL CAP	GS-0443
5	FRAME ASSEMBLY	Z-GS-0522
6	PANEL ASSEMBLY	GS-0569
7	SCREW 1/4-20 x 3/4	91895680
10	ISOLATOR	GS-0033
10A	ISOLATOR	GS-0433
11	LOCK NUT 5/16-18	SSF-8150
12	SCREW 5/16-18 x 1	SSF-605
13	LOCK WASHER	SSN-1619-ZN
14	SCREW 5/16-18 x 3/4	SS-12-CD
15	GROUND STRAP	GS-0118
16	ENGINE (model # GX270VWN2)	-
17	HOSE CLAMP .301 ID	GS-0560
18	UNION 1/4 TO 3/8	GS-0535
19	SCREW 1/4 x 5/8	39124607
20	LOCK WASHER	SS-1503-CD
21	FUEL HOSE	Z-GS-0225
22	HEAT SHIELD	GS-0432-1


GHV4510-2 (cont'd)

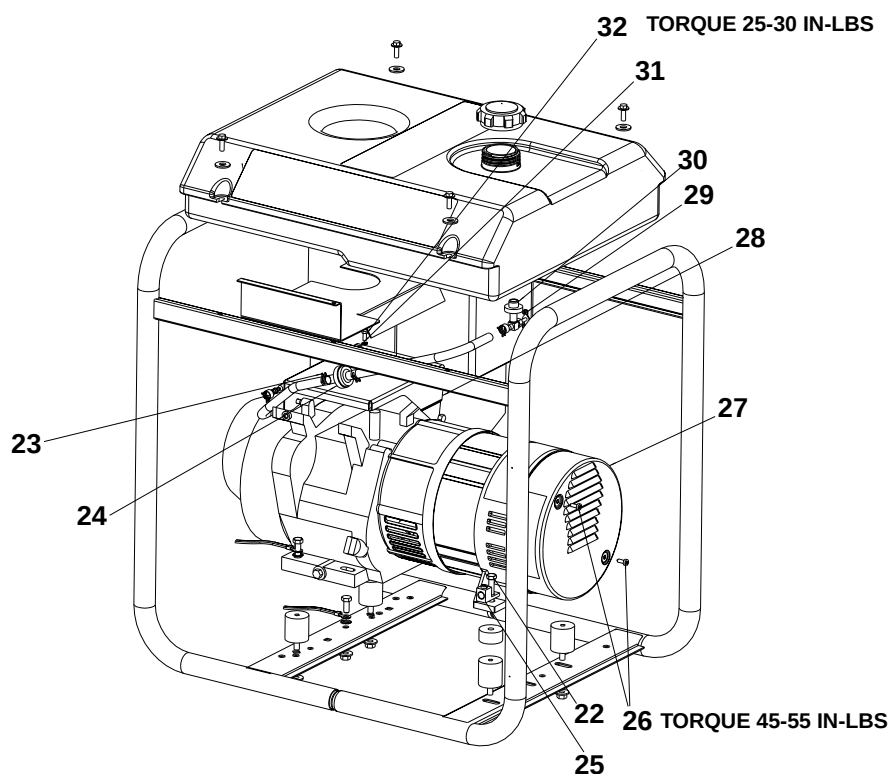

KEY

<u>KEY NO.</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
22	SCREW	SSF-928
23	FUEL CLAMP .50 ID	GS-0227
24	FUEL FILTER	GS-0459
25	GROUND LUG	GS-0117
26	SCREW 10-24 x 9/16	SSF-553-1
27	END COVER	GS-0077
28	ENGINE COVER	GS-0540
29	DRAINCOCK	GS-0437
30	DRAINCOCK GROMMET	GS-0446
31	LOCK WASHER #10	SSN-626
32	SCREW M5 x 12HHCS	SSF-627

GHV4510-2 (cont'd)

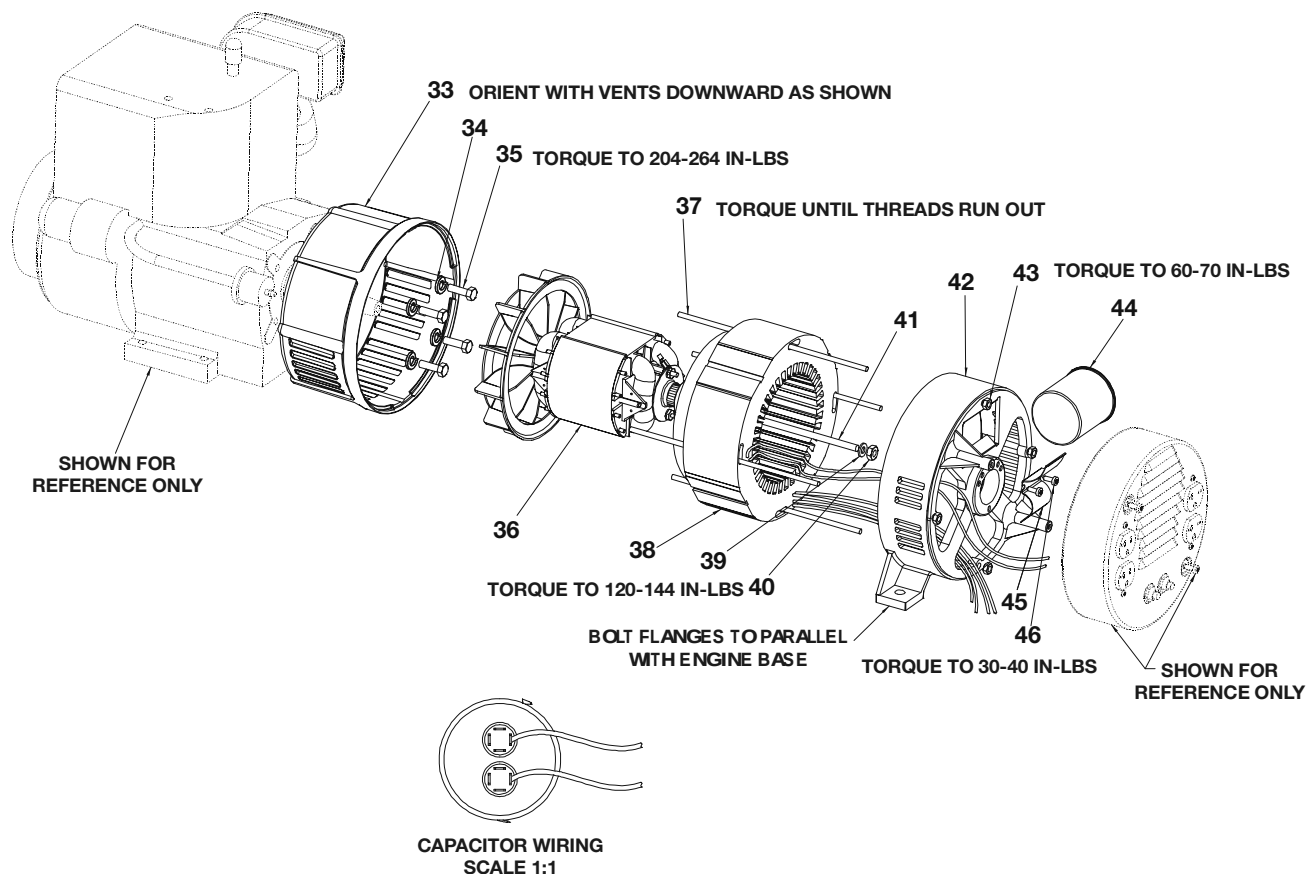

KEY NO.

KEY NO.	DESCRIPTION
33	DRIVE END ADAPTER
34	LOCK WASHER 3/8
35	CAP SCREW 3/8-16 x 1
36	ROTOR ASSEMBLY
37	STATOR THRU BOLT
38	STATOR ASSEMBLY
39	WASHER 11/16OD x 11/32
40	NUT 5/16-24
41	ROTOR THRU BOLT
42	BEARING SUPPORT
43	HEX NUT 1/4-20
44	CAPACITOR
45	CAPACITOR BRACKET
46	SCREW 10-32

PART NUMBER


GS-0076
SSN-619
SSF-577
Z-GS-0588
GS-0110
Z-GS-0589
SS-6506-CD
SSF-576
GS-0091-1
Z-GS-0681
SSF-575
GS-0592
GS-0595
SSF-553-1

ITEM NOT SHOWN

*DIODES	GS-0082
O-RING (included in GS-0861)	GS-0862

*Refer to Page 4 in the Generator Repair Section for further **diode** information.

GHV4510-2 (cont'd)

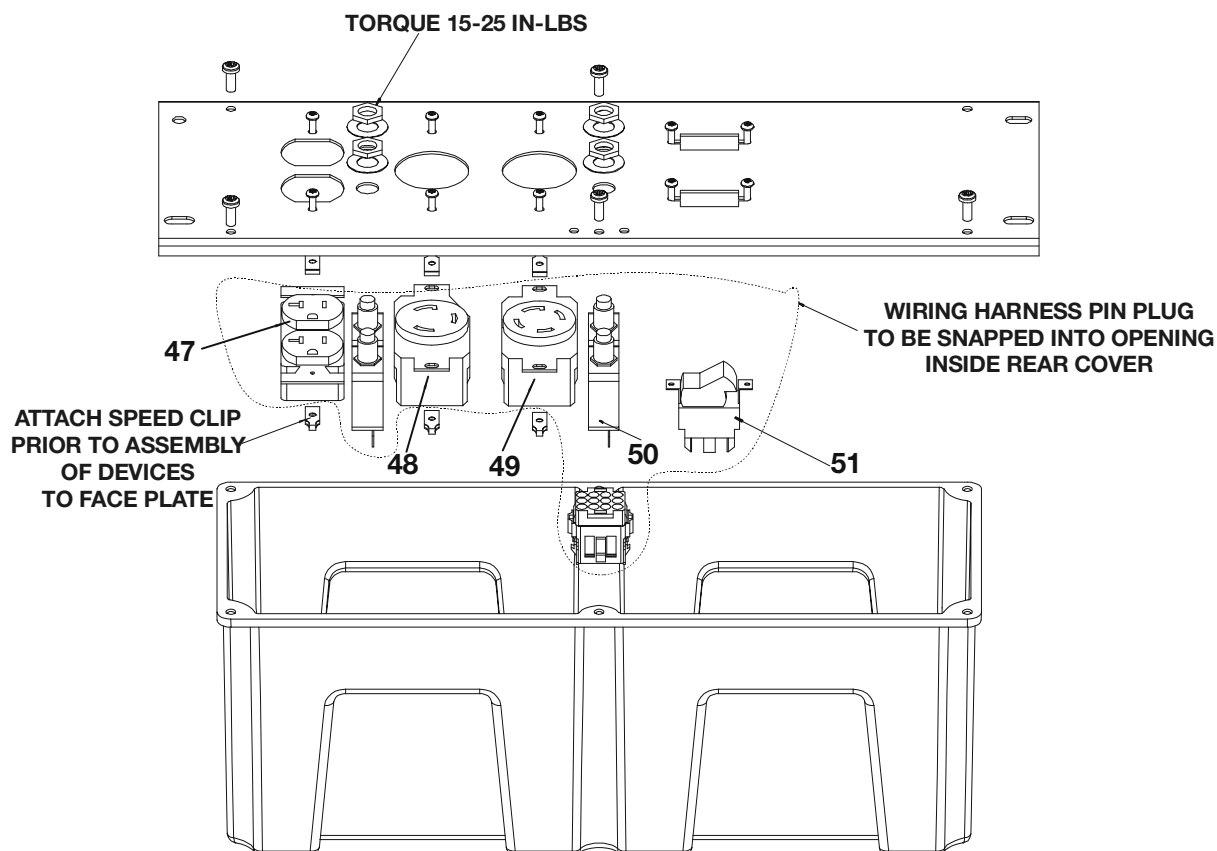

KEY NO.	DESCRIPTION	PART NUMBER
47	120V DUPL. RECEPTACLE	GS-0019
48	3 PRONG TWISTLOCK	GS-0480
49	4 PRONG TWISTLOCK	GS-0445
50	CIRCUIT BREAKER	Z-GS-0024
51	FULL POWER SWITCH	GS-0045

Not Shown

MG-GENMAN-F	Operators Manual
GEN-HV4500-1	Parts Manual
GS-0525	Engine Manual