


PARTS DRAWING / SCHEMA DES PIÈCES / DIAGRAMA DE PIEZAS - PM0105007

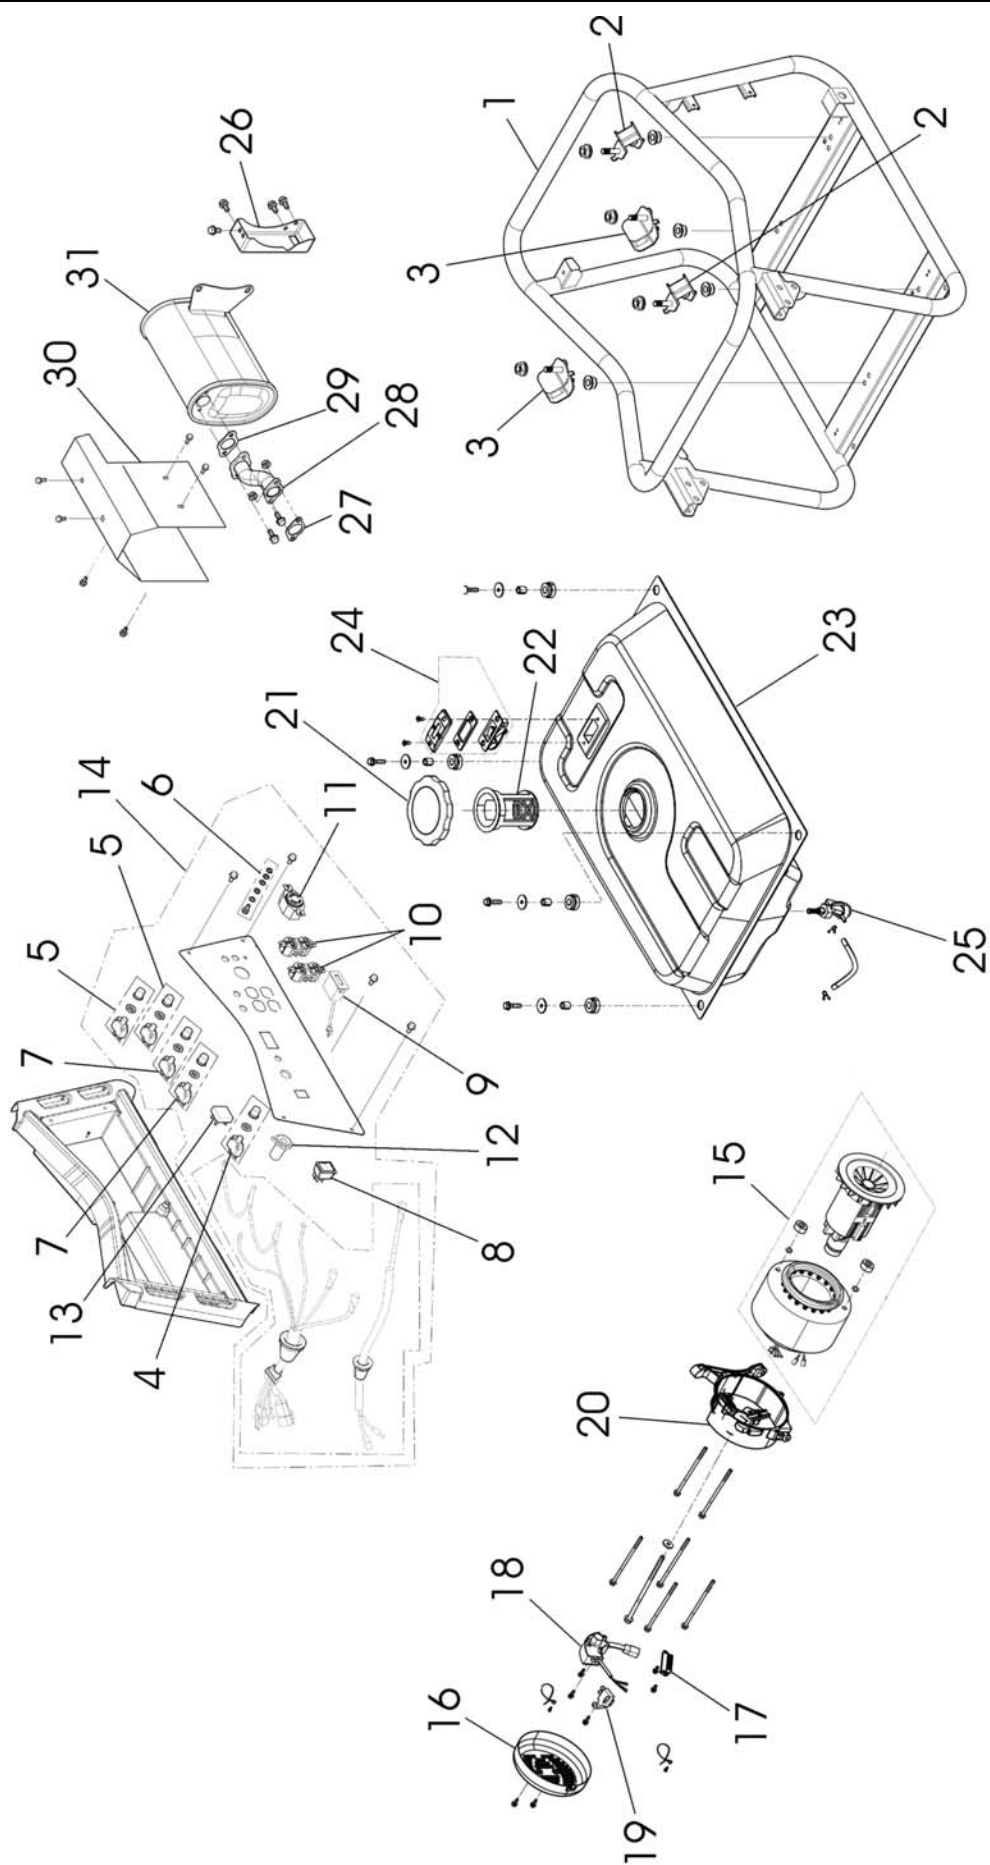


PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS - PM0105007


| REF. NO. | PART NO. | DESCRIPTION | DESCRIPTION | DESCRIPCION | QTY |
|----------|------------|---------------------------|-----------------------------|----------------------------------|-----|
| 1 | 0068301 | Frame | Cadre | Marco | 1 |
| 2 | 0067208 | Isolator left | Sectionneur gauche | Aislador izquierda | 2 |
| 3 | 0067209 | Isolator right | Sectionneur droite | Aislador derecho | 2 |
| 4 | 0068303 | Circuit Breaker 10 amp DC | Disjoncteurs 10 amp CC | Cortacircuitos 10 amp CC | 1 |
| 5 | 0068304 | Circuit Breaker 21 amp | Disjoncteurs 21 amp | Cortacircuitos 21 amp | 2 |
| 6 | 0067210 | Ground terminal | Borne de mise à terre | Terminal, tierra | 1 |
| 7 | 0067787 | Circuit Breaker 20 amp | Disjoncteurs 20 amp | Cortacircuitos 20 amp | 2 |
| 8 | 0067212 | Ignition switch | Interrupteur | Interruptor | 1 |
| 9 | 0067128 | Hour meter | Horomètre | Contador Horario | 1 |
| 10 | 0037762.01 | Receptacle 5-20R | Prise 5-20R | Receptáculo 5-20R | 2 |
| 11 | 0049365 | Receptacle L14-30R | Prise L14-30R | Receptáculo L14-30R | 1 |
| 12 | 0061990 | Receptacle DC | Prise CC | Receptáculo CC | 1 |
| 13 | 0067242 | Rectifier | Redresseur | Rectificador | 1 |
| 14 | 0068302 | Panel, wired | Tableau complet câblé | Panel, cableado completo | 1 |
| 15 | 0068305 | Assy, rotor/stator | Ensemble de rotor et stator | Conjunto, rotor y estator | 1 |
| 16 | 0068307 | Cover, end | Couvercle | Tapa | 1 |
| 17 | 0067221 | Connection board | Conseil de connexion | Tabla de conexión | 1 |
| 18 | 0068306 | Voltage regulator | La tension régulatrice | El regulador del voltaje | 1 |
| 19 | 0067223 | Brush module | Brosser le module | Cepille módulo | 1 |
| 20 | 0067224 | Support, bearing | Support, roulement | Soporte, Cojinete | 1 |
| 21 | 0067143 | Fuel cap | Capuchon | Tapa de combustible | 1 |
| 22 | 0067227 | Fuel filter | Filtre à carburant | Filtro de combustible | 1 |
| 23 | 0068299 | Fuel tank | Réservoir de carburant | Tanque de metal de combustible | 1 |
| 24 | 0068300 | Fuel gauge | Jauge de carburant | Indicador de combustible | 1 |
| 25 | 0067157 | Fuel shut-off | Alimenter d'arrêt | Abastecza de combustible válvula | 1 |
| 26 | 0067239 | Bracket, metal | Support | Soporte | 1 |
| 27 | 0067232 | Gasket, exhaust pipe | Joint | Empaquetadera | 1 |
| 28 | 0067233 | Exhaust pipe | Tuyau d'échappement | Tubo de descarga | 1 |
| 29 | 0067234 | Gasket, exhaust pipe | Joint | Empaquetadera | 1 |
| 30 | 0068297 | Cover, muffler | Couvercle | Tapa | 1 |
| 31 | 0068298 | Muffler | Silencieux | Silenciador | 1 |



WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.

ENGINE DRAWING / SCHEMA DE MOTEUR / DIAGRAMA DE MOTOR

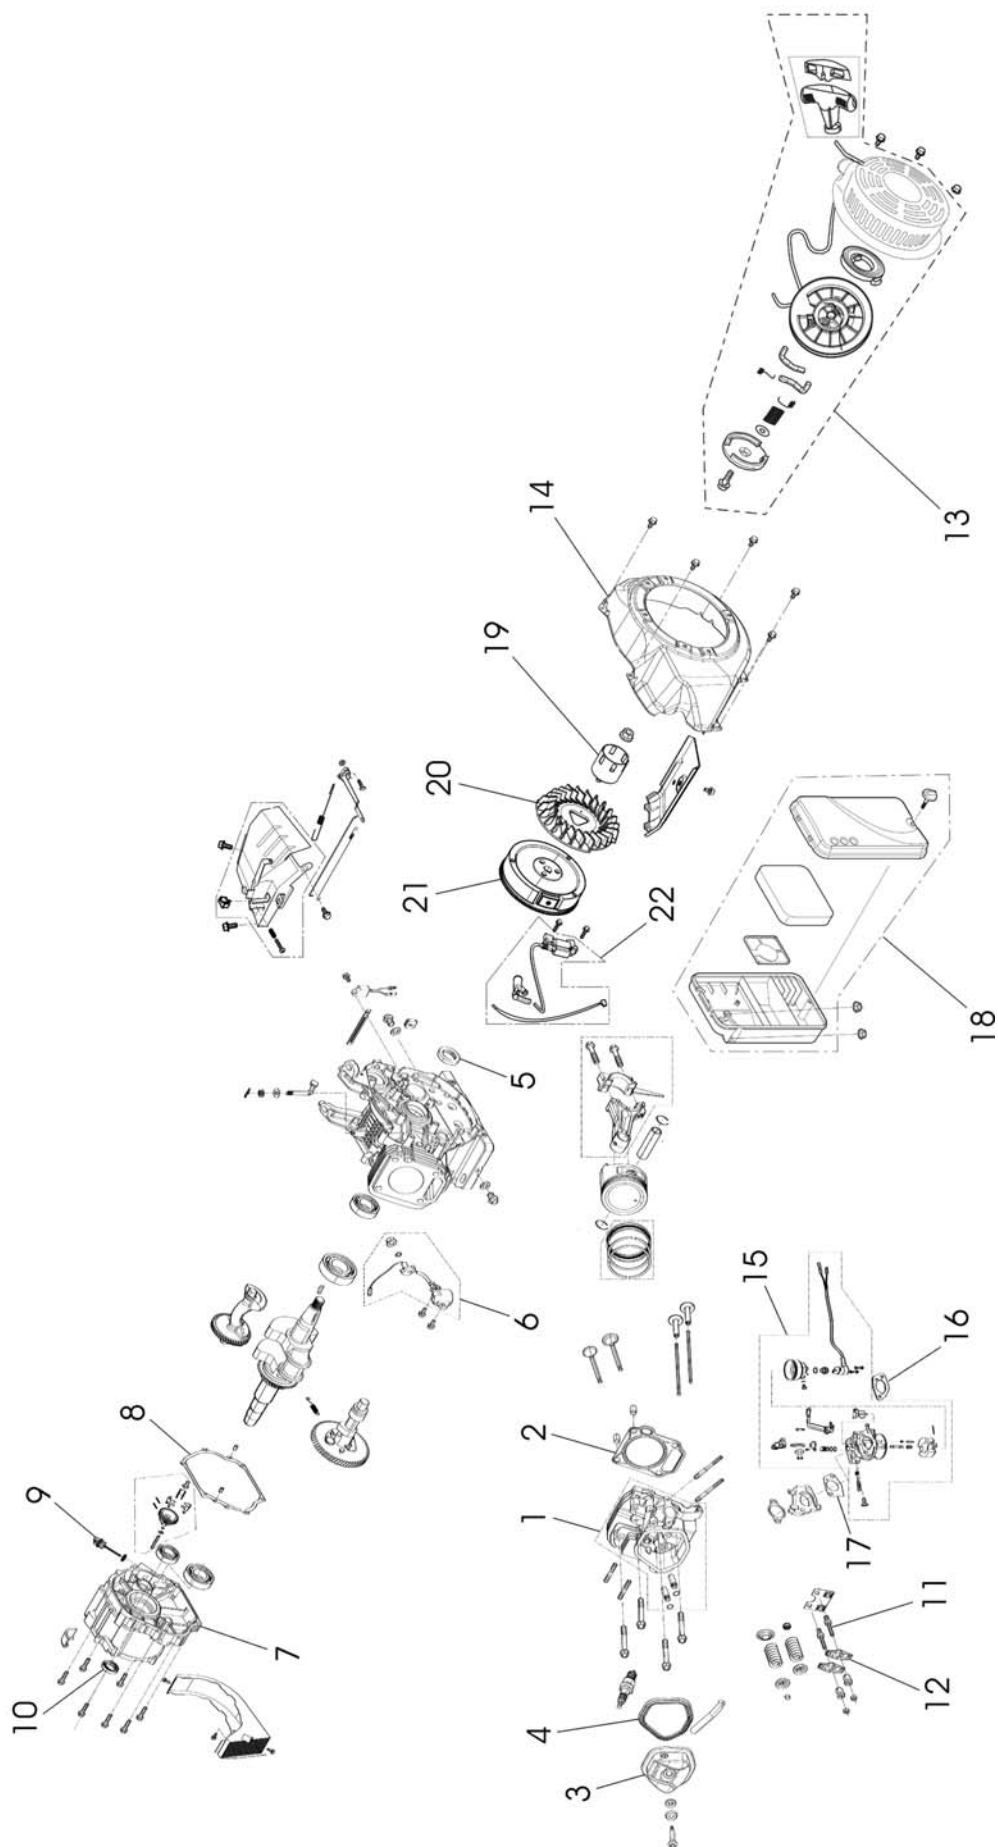

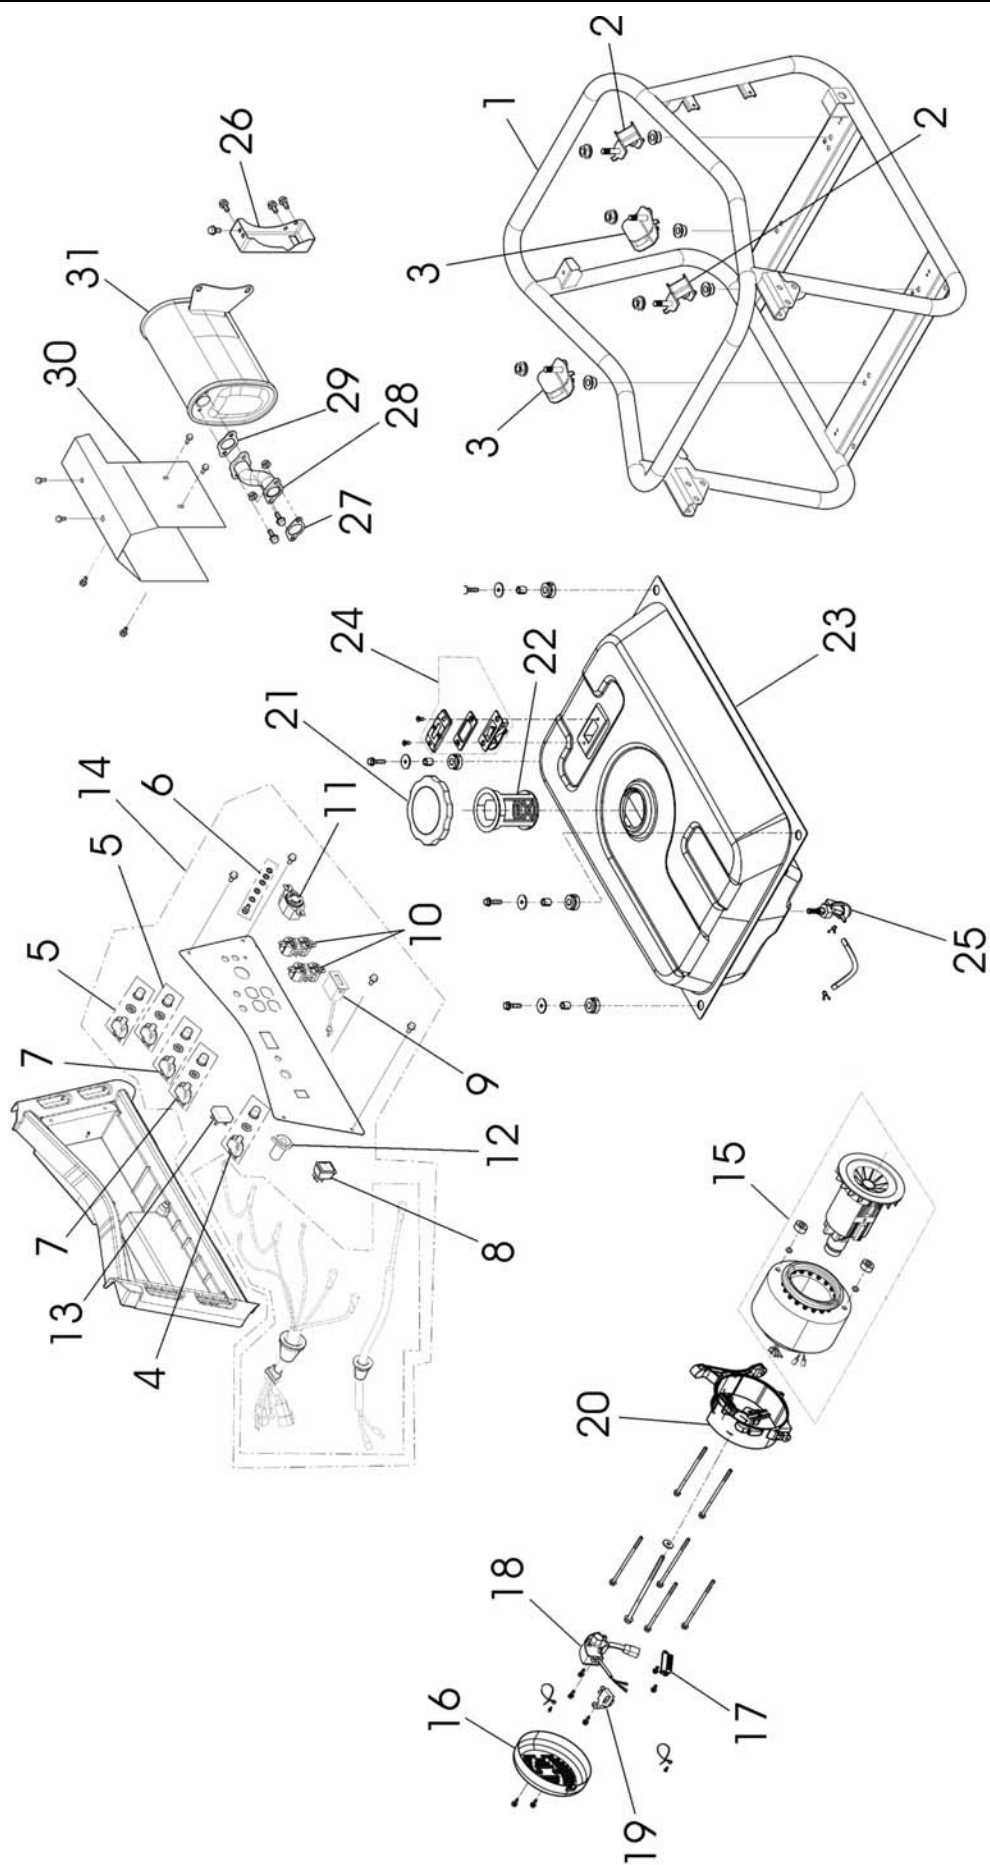

PORTABILITY KIT INSTALLATION

PORTABILITY KIT PART NUMBER: 0068294

TOOLS REQUIRED: 10mm and 13mm sockets and ratchets, block(s) of wood (minimum of 6" tall).

WHEEL INSTALLATION

1. Block up the alternator end of generator to install wheel kit.
2. Slide axle (**item 13**) through the wheel bracket on the carrier.
3. Slide the wheel (**item 12**) and size 16 washer (**item 14**) onto the axle, with the offset side of the wheel hub against the wheel bracket.
4. Secure the wheel to the axle with the cotter pin (**item 11**).
5. Repeat above instructions for the remaining wheel.

FOOT INSTALLATION


1. Blocking up the engine side of the generator, assemble the foot bracket (**items 6, 8, and 9**) to the carrier (align with holes in tubing) using two M6 x 45 bolts (**item 7**). Thread M6 nuts (**item 10**) to the bolts to secure the assembly.
2. Repeat above instructions for the remaining foot.

HANDLE INSTALLATION

1. Slide M8 x 45 bolt (**item 4**) through handle (**items 1 and 2**) and handle bracket as shown in diagram and secure with M8 nut (**item 5**). Tighten until handle is securely clamped to the carrier.
2. Repeat above instructions for the remaining handle.

LOCKING HANDLE

1. Attach the lanyards (**item 15**) to the release pins (**item 3**) and carrier as shown in the illustration.
2. To lock the handle in the extended position, align the holes in the handle brackets with the holes in the carrier brackets and insert the release pins.

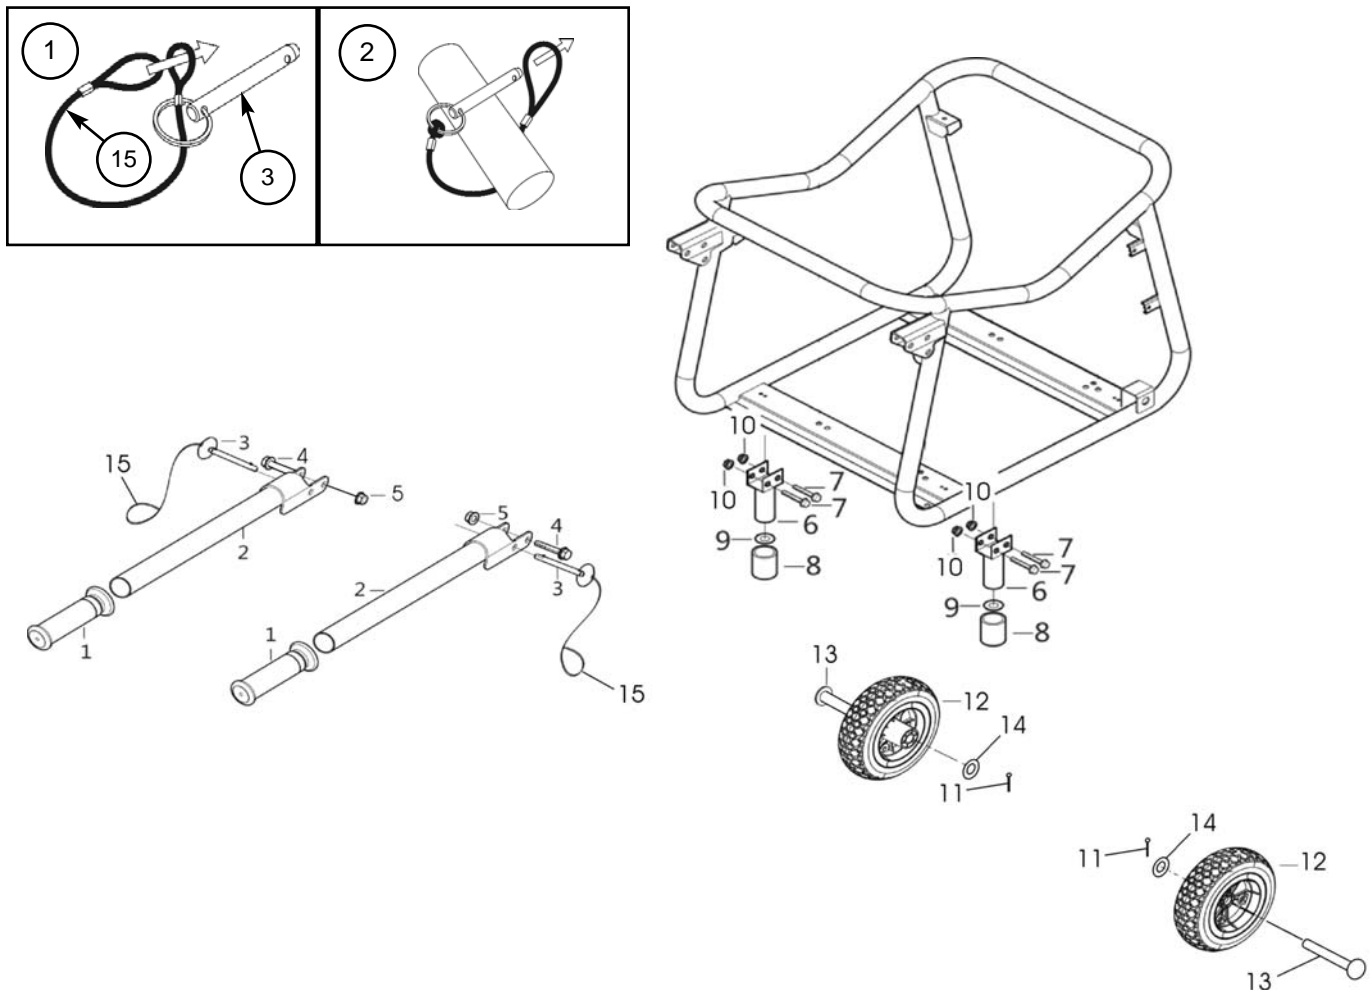

The emission warranty is a defects warranty and defects are judged on normal engine performance. The warranty is not related to an in-use emission test.

Emission Control System Warranted Parts

Coverage under this warranty extends only to the parts listed below (the emission control system parts) to the extent that these parts were present on the engine purchased.

Fuel Metering System

- Carburetor and/or internal parts
- Intake manifold

Evaporative System (if CARB compliant)

- Fuel tank, Fuel cap, Fuel hose, Fuel strainer, Fuel cock, Fuel hose joint
- Carbon canister, canister brackets, canister purge hose joint
- Vapor hoses

Air Induction System

- Air cleaner*
- Intake manifold

Exhaust System

- Exhaust manifold

Ignition System

- Flywheel magneto
- Ignition coil assembly
- Spark plug*

Crankcase Emission Control System

- Crankcase breather tube
- Oil filler cap

Miscellaneous parts

- Hoses, seals, gaskets, connectors and assemblies associated with listed parts

Note: * Covered up to the first required replacement only. See the maintenance schedule in the Owner's Manual.

Length of Coverage

Chongqing Rato Power Co. LTD. warrants to the initial owner and each subsequent purchaser that the spark ignited small off-road engine is free from defects in materials and workmanship which can cause the failure of an emission warranted part for a period of two (2) years after the engine is delivered to the original retail purchaser. Warranty coverage shall extend to the failure of any engine components caused by the failure of any warranted part still under warranty.

Limitations

The Emission Control System Warranty shall NOT cover any of the following:

- Repair or replacement required as the result of misuse or neglect, improper maintenance or unapproved modifications, repairs improperly performed or replacement improperly installed, use of unapproved replacement parts or accessories and modifications not recommended by RATO.
- Replacement parts, other services and adjustments necessary for normal maintenance.
- Transportation to and from the authorized service center or retailer.

Limited Liability

The liability of Chongqing Rato Power Co. LTD. under this Emission Control System Warranty is limited solely to the remedy of defects in materials or workmanship. This warranty does not cover inconvenience or loss of the spark ignited small off-road engine equipment or transportation of same to an authorized service center. RATO shall not be liable for any other expenses, loss, or damage, whether direct, incidental, consequential (except as listed) or exemplary arising in connection with the sale or use of or inability to use the spark ignited small off-road engine equipment for any other purpose.

No express Emission Control System Warranty is given by RATO with respect to the engine except as specifically set forth in this document. Any Emission Control System Warranty implied by law, including any warranty of merchantability or fitness for a particular purpose, is expressly limited to the Emission Control System Warranty terms set forth in this document.