


Suburban *Aire*

DIRECT VENT GAS FURNACE FOR THROUGH THE WALL OR WINDOW INSTALLATION OWNER'S OPERATION AND INSTALLATION MANUAL

SA25N
SA25P
SA40N
SA40P

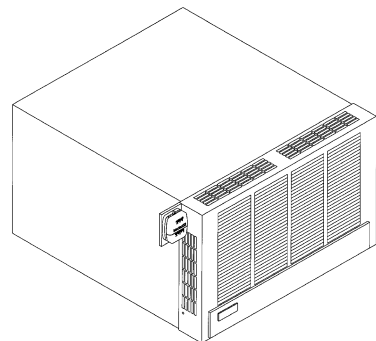

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

FOR YOUR SAFETY

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

This appliance may be installed in an aftermarket*, permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases.

*Aftermarket: Completion of sale, not for purpose of resale, from the manufacturer

Save this manual for future reference.

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual for correct installation and operational procedures. For assistance or additional information consult a qualified installer, service agency, or the gas supplier.

— Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

SAFETY INFORMATION

⚠ WARNINGS

IMPORTANT: Read this owner's manual carefully and completely before trying to assemble, operate, or service this furnace. Improper use of this furnace can cause serious injury or death from burns, fire, explosion, electrical shock, and carbon monoxide poisoning.

⚠ DANGER: Carbon monoxide poisoning may lead to death!

Carbon Monoxide Poisoning: Early signs of carbon monoxide poisoning resemble the flu, with headaches, dizziness, and/or nausea. If you have these signs, the furnace may not be working properly. **Get fresh air at once!** Have furnace serviced. Some people are more affected by carbon monoxide than others. These include pregnant women, people with heart or lung disease or anemia, those under the influence of alcohol, and those at high altitudes.

Natural Gas: Natural gas is odorless. An odor-making agent is added to natural gas. The odor helps you detect a natural gas leak. However, the odor added to natural gas can fade. Natural gas may be present even though no odor exists.

Propane/LP Gas: Propane/LP gas is odorless. An odor-making agent is added to propane/LP gas. The odor helps you detect a propane/LP gas leak. However, the odor added to propane/LP gas can fade. Propane/LP gas may be present even though no odor exists.

Make certain you read and understand all warnings. Keep this manual for reference. It is your guide to safe and proper operation of this furnace.

⚠ WARNING: Any change to this heater or its controls can be dangerous.

Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.

Carefully supervise young children when they are in the same room with furnace.

Do not place clothing or other flammable material on or near the appliance. Never place any objects on the furnace.

Surface of furnace becomes very hot when running furnace. Keep children and adults away from hot surface to avoid burns or clothing ignition. Furnace will remain hot for a time after shut-down. Allow surface to cool before touching.

Turn off furnace and unplug and let cool before servicing. Unless you need gas supply for testing, shut off equipment shut-off valve before servicing. Only a qualified service person should service and repair furnace and venting system.

Replace any safety screen or guard removed for servicing before operating furnace.

You must keep control compartments, burners, and circulating air passages clean. More frequent cleaning may be needed due to excessive lint and dust from carpeting, bedding material, etc. Turn off equipment shut-off valve and unplug before cleaning furnace.

1. A qualified service person must install furnace.
2. This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases.
3. Do not attempt to convert furnace to use different fuel type.
4. If you smell gas
 - Shut off gas supply.
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
5. Do not block the flow of combustion air (outside air) or heated air (room air) to the furnace.

6. This furnace must have fresh air for proper operation. Do not restrict or cover the furnace exhaust or intake with screen wire, tape, foil, etc. Poor fuel combustion and improper venting of flue gases will result. Carbon monoxide poisoning from backed-up flue gases could occur. The State of California lists carbon monoxide as a reproductive toxin under Proposition 65.

7. Never install the furnace
 - in a recreational vehicle
 - in an alcove
 - on an inside wall
 - as a fireplace insert
 - in high traffic areas
 - in windy or drafty areas
 - behind a door or where an open door would block normal air flow
 - In a corrosive environment

8. Provide the following minimum furnace clearance from furnace front to combustibles (as viewed from the front of furnace):

Below Front: 6 inches
Adjoining Wall: 12 inches
Above Front: 12 inches
Front: 8 feet

9. Do not obstruct the flow of combustion and ventilation air in any way. Provide adequate clearances around air openings into the combustion chamber along with adequate accessibility clearance for servicing and proper operation.

10. Provide the following minimum furnace clearances from furnace cabinet (portion of cabinet extending into outside air, as viewed from the rear of furnace):

Cabinet Back: 36 inches
Cabinet Sides: 6 inches
Cabinet Bottom: Must be high enough off the ground to prevent snow, water, leaves, or any other objects from blocking cabinet vents.

11. Always follow lighting instructions. Never attempt to light burner with a match or butane torch.

12. Do not run furnace
 - where flammable liquids or vapors are used or stored
 - under dusty conditions

13. Do not use furnace as a cooking device.

14. Do not alter furnace or its controls. Any change may create a safety hazard.

15. Do not use furnace if any part has been under water. Immediately call a qualified service person to inspect the furnace and to replace any part of the control system and any gas control which has been under water.

LOCAL CODES

Install and use furnace with care. Follow all local codes. In the absence of local codes, use the latest edition of the following:

- *National Fuel Gas Code ANS Z223.1*, also known as NFPA 54* (USA)
- *National Electric Code ANS/NFPA 70**
- *CAN/CGA-B149[.1 or .2] Installation Codes*** (Canada).

*Available from:
American National Standards Institute, Inc.
1430 Broadway
New York, NY 10018
National Fire Protection Association, Inc.
Batterymarch Park
Quincy, MA 02269

**Available from:
Standards Council of Canada
350 Sparks Street
Ottawa, Ontario K1R 7S8

This furnace must be grounded when installed. Follow all local codes. In the absence of local codes, refer to the *National Electrical Code ANS/NFPA No. 70* (USA) or *CSA C22.1 Canadian Electrical Code, Part 1* (Canada).

The installation must conform with local codes, in the absence of local codes, refer to the *National Fuel Gas Code, ANS Z223.1/ Canadian Installation Code, CAN/CGA B149*.

Appliance input ratings are based on sea level operation and need not be changed for operation up to 2,000 feet elevation. For operation at elevations above 2,000 feet, this appliance must be derated in accordance with the information on the AGA/CGA rating plate affixed to the unit.

SPECIFICATIONS

	SA25N	SA40N	SA25P	SA40P
*Rated Heating Input (BTU/Hr)	25,000	40,000	25,000	40,000
Thermal Output Capacity (average loss calculation)	19,250 Btu/Hr	30,800 Btu/Hr	19,250 Btu/Hr	30,800 Btu/Hr
Type Gas	Natural Only	Natural Only	Propane/LP Only	Propane/LP Only
Ignition	Hot Surface Ignitor	Hot Surface Ignitor	Hot Surface Ignitor	Hot Surface Ignitor
Operating Amps	1.5	2	1.5	2
Volts/Cycles	120/60	120/60	120/60	120/60
Main Burner	1	2	1	2
Pressure Regulator Setting	3.5" W.C.	3.5" W.C.	10" W.C.	10" W.C.
Inlet Connection	3/8 NPT	3/8 NPT	3/8 NPT	3/8 NPT
Inlet Gas Pressure (in. of water)*				
Maximum	7"	7"	13"	13"
Minimum	5"	5"	11"	11"
Dimensions, Inches (H x W x D)				
Furnace	15 3/32 x 16 1/8 x 23 5/8	15 3/32 x 21 3/4 x 23 5/8	15 3/32 x 16 1/8 x 23 5/8	15 3/32 x 21 3/4 x 23 5/8
Weight (pounds)				
Furnace	53	71	53	71
Shipping	65	98	65	98

*For purposes of input adjustment.

UNPACKING

1. Remove furnace from carton.
2. Remove all protective packaging applied to furnace for shipment.
3. Remove the following items from carton:
 - Hardware package containing four large screws, two small screws, and thermostat mounting plate.
 - Hardware package (thermostat and two screws)
 - Equipment shutoff valve
 - Manual
4. Check furnace for any shipping damage. If furnace is damaged, promptly inform dealer where you bought furnace.

If any of these items are missing, promptly inform dealer where you bought furnace.

PRODUCT FEATURES

HOT SURFACE IGNITOR

This furnace has an electronic ignitor. There is no standing pilot. No matches or batteries are required.

THERMOSTATIC HEAT CONTROL

The thermostat is temperature sensitive. It automatically turns the furnace on and off. This results in the greatest heating comfort. This can also result in lower gas bills.

LIMIT SWITCH

The limit switch shuts off the gas to the main burner if the furnace becomes too hot to operate safely.

FLUE LIMIT

The flue limit shuts off the gas to the main burner if the furnace exhaust or intake should be restricted.

INSTALLATION

Mounting hardware needed to mount furnace into wall is included with the furnace. No venting material is needed. You must furnish tools and all gas piping from the gas source to the furnace inlet.

⚠ WARNING: A qualified service person must install furnace. Have service person inspect furnace before use and at least annually. Follow all local codes.

NOTICE: This furnace must be electrically grounded. Follow all local codes. In the absence of local codes, follow the *National Electric Code, ANS/NFPA 70 (U.S.)* or *Canadian Electrical Code Part I-CSA C22.1 (Canada)*.

CHECK GAS TYPE

If the furnace is not for the type gas at your location, call the dealer where you bought the furnace. Do not attempt to convert furnace to use a different type gas other than type referenced on rating plate.

INSTALLATION ITEMS

Before installing furnace, make sure you have all items below:

- electric drill
- drill bits
- Phillips screwdriver
- hammer
- pipe wrench
- stud locator or small finishing nails
- equipment shutoff valve (supplied)
- test gauge connection (see Figure 15)
- piping (check local codes)
- sealant (resistant to propane/LP gas)
- ground joint union
- sediment trap
- tee joint

LOCATING FURNACE

This furnace is designed to be mounted in a wall that is 4 to 18 inches thick. You can also mount furnace in a window.

⚠ WARNING: Do not install furnace in interior wall of building. You must install furnace in exterior wall of building. Rear of furnace must extend into open, outside air. This lets poisonous exhaust gases ventilate to the outdoors.

⚠ WARNING: Turn off electrical circuits that pass through the wall where you are going to install the furnace.

⚠ WARNING: Maintain the minimum clearances shown in Figure 1. If you can, provide greater clearances from floor, ceiling, and joining wall.

⚠ WARNING: Due to high tem-

- peratures, never install the furnace:**
- in an inside wall
 - in a recreation vehicle
 - in a window recessed in a thick wall (creating an alcove)
 - in an alcove
 - behind a door or where an open door would block normal air flow
 - as a fireplace insert
 - in high traffic areas
 - near furniture or draperies
 - in windy or drafty areas
 - in a corrosive environment

⚠ CAUTION: If you install the furnace in a home garage, locate furnace where moving vehicle will not hit it.

For convenience and efficiency, install furnace:

- where there is easy access for operation, inspection, and service
- in a central location, near an electrical outlet
- where there is adequate clearance around vents outside.

Before installing furnace, inspect the wall, floor, and outside areas. Make sure there are no pipes, wiring or anything else that would interfere with furnace installation. If you are installing thermostat in a wall, make sure there are no pipes or wiring in the hollow wall above the furnace. The thermostat wires will pass through this wall from the attic.

Minimum Clearances

Provide the following minimum clearances from furnace front cover to combustibles (as viewed from the front of furnace, see Figure 1):

Below Front Grille: 6 inches
Above Front Grille: 12 inches
Adjoining Wall: 12 inches
Front: 8 feet

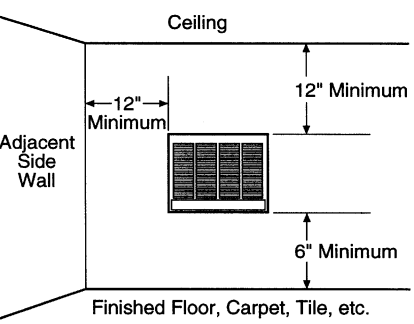


Figure 1 - Mounting Clearances as Viewed from Front of Furnace

The clearance between the cabinet and the wall it passes through is 0 inches, top, bottom, and sides.

Provide the following minimum

clearances from furnace cabinet (portion of cabinet extending into outside air, as viewed from the rear of furnace) to obstructions:

Cabinet Back: 36 inches

Cabinet Sides: 6 inches

Cabinet Bottom: Must be high enough off the ground to prevent snow, water, leaves, or any other objects from blocking vents.

CREATING WALL OPENING AND MOUNTING FURNACE

Remove furnace front grille. Remove the two screws at the lower edges of front grille. Lift front grille away.

Installing in Normal Frame Wall

The 25,000 BTU/Hr model is designed to fit between two wall studs set at 16 inch on center. The 40,000 BTU/Hr model will not fit between wall studs. Follow the steps below to install.

1. Turn off electrical circuits that pass through mounting wall. Make sure there are no pipes or electrical wires in area you intend to cut.
2. Use stud locator or small finishing nail to find wall studs. When you locate studs, drive a small finishing nail into each stud. This provides a visual reference for stud locations.
3. **25,000 BTU/Hr Model:** Cut an opening in wall between the two studs. Make opening 14 1/4" wide by 13 5/8" high (see Figure 2). **IMPORTANT:** You must install furnace horizontally. Do not install furnace vertically.
4. **25,000 BTU/Hr Model:** Mark screw locations on wall (see Figure 2). Make sure screws will anchor into studs. Make sure screw locations match screw holes on cabinet flange.

40,000 BTU/Hr Model: Mark screw locations on wall (see Figure 2). Make sure screws on one side will anchor into studs. Screws on other side will only anchor in wall material. Make sure screw locations match screw holes on cabinet flange.

INSTALLATION
(Continued)

- 25,000 BTU/Hr Model: Use a proper-sized drill bit. Drill holes through wall and into studs at marked locations.
- 40,000 BTU/Hr Model: Use a proper-sized drill bit. On wall stud side of opening, drill holes through wall and into studs at marked locations. On other side, drill holes through wall material.
- Insert furnace into opening. Do this from inside the room. Secure furnace to wall with four large screws provided.
- On outside of wall, caulk opening between the cabinet and the rough edges of opening.

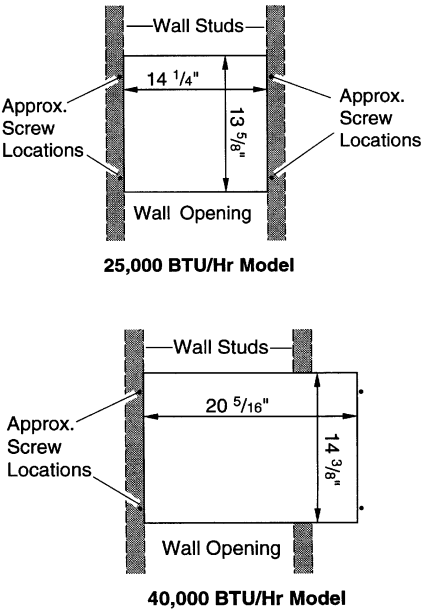


Figure 2 - Wall Openings and Screw Locations

Installing in Masonry Wall

You can mount both models in a masonry wall. Follow the steps below to install.

- Cut opening in wall. Make opening 14 1/4" wide by 13 5/8" high for 25,000 BTU/Hr models. Make opening 20 5/16" wide by 14 3/8" high for 40,000 BTU/Hr models. IMPORTANT: You must install furnace horizontally. Do not install furnace vertically.
- Secure furnace to wall with toggle bolts or hook bolts set in mortar.
- Insert furnace into opening. Do this from inside the room. Secure furnace to wall with toggle bolts or hook bolts.
- On outside of wall, caulk opening between the cabinet and the rough edges of opening. You can also use mortar to seal opening.

INSTALLING THERMOSTAT

WARNING: Unplug furnace before installing thermostat.

Mount the thermostat directly on the furnace or on a wall in another part of the room. If you have solid or masonry walls, mount the thermostat on the furnace.

Mounting Thermostat to Furnace for Built-in Thermostat Operation

- Unplug furnace.
- Locate red and white thermostat wires coming out of side of furnace. These wires are labeled "Thermostat."
- Cut thermostat wires to desired length.
- Route thermostat wires through slot/hole in side of thermostat mounting plate. Then route wires through 5/8" diameter hole in center of plate (see Figure 4).
- Connect thermostat wires to the two terminal screws on back of thermostat (see Figure 3). Connect red wire to "R" terminal. Connect white wire to "W" terminal.

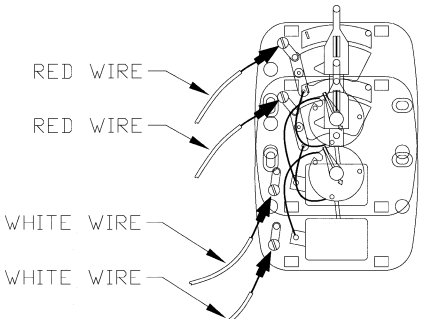


Figure 3 - Connecting Thermostat Wires to Thermostat

Figure 3 - Connecting Thermostat Wires to Thermostat

- Attach thermostat to thermostat mounting plate with screws provided (see Figure 4). IMPORTANT: Note mounting plate position in Figure 4. Correctly position mounting plate for your model furnace.
- Insert thermostat mounting plate between wall and cabinet flange. Line up top notch on mounting plate with top screw on flange (see Figure 5). IMPORTANT: Thermostat for 25,000 BTU/Hr model mounts on right side of furnace (see Figure 5). Thermostat for 40,000 BTU/Hr model mounts on left side of furnace (see Figure 5).
- Insert screw in cabinet flange and thermostat mounting plate and tighten firmly. IMPORTANT: Make sure thermostat wires do not touch combustion chamber.



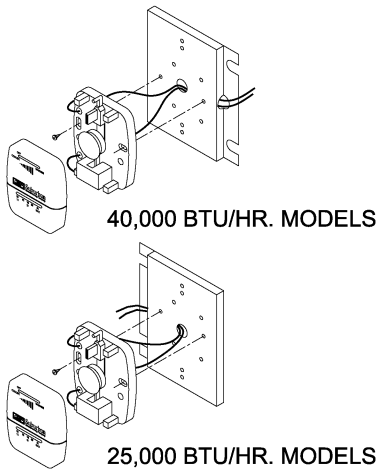


Figure 4 - Attaching Thermostat to Thermostat Mounting Plate

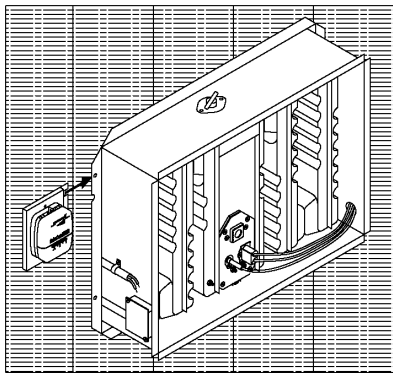

40,000 BTU/HR MODELS

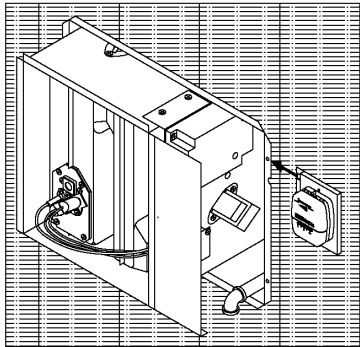

25,000 BTU/HR MODELS

Figure 5 - Inserting Thermostat Mounting Plate Between Wall and Cabinet Flange

INSTALLATION
(Continued)

Locating and Mounting Thermostat on Wall

- Locate thermostat 4 1/2 to 5 feet above the floor on an inside wall away from any heat sources. The thermostat needs to sense average room temperature. Avoid the following:

HOT SPOTS

Concealed pipes or ducts
Fireplaces
Registers
TV sets and radios
Lamps or direct sunlight
Kitchen

COLD SPOTS

Concealed pipes or ducts
Stairwells (drafts) or doors (drafts)
Unheated rooms on other side of wall

DEAD SPOTS

Behind doors
Corners and alcoves

- Before installing thermostat, inspect the wall, floor, and attic areas. Make sure there are no pipes, wiring or anything else that would interfere with installing thermostat. Do not mount thermostat to stud. If there are any obstructions, choose a new location.
- Provide two 18-gauge insulated stranded wires for the thermostat wire. Also provide two wire nuts, and two wall anchors. There is a red and a white thermostat wire coming from the furnace. The extra thermostat wires you furnish attach to these wires. Make sure you furnish a red and a white wire. This will insure correct hookup. Purchase enough thermostat wire to go from the furnace to the thermostat location. Do not cut and splice this wire. The thermostat wire must be unbroken.

Routing Thermostat Cable

All wiring must meet local codes. The following instructions cover routing the wire through the attic. You can run wiring from a basement or crawl space.

- Unplug furnace.
- Before drilling hole in wall, drive a small finishing nail through ceiling directly above thermostat location. Pull nail out and push a small stiff wire through hole. This helps you locate thermostat mounting location when in attic.
- In attic, locate stiff wire. Drill 1/2" hole in center of ceiling wall plate next to stiff wire. Remove wire.
- Probe through drilled hole in wall plate with a stiff wire to make sure there are no pipes, wiring, or anything else blocking the way for thermostat wires. If you find blockage, choose new location for thermostat.

- Drill a 1/2" hole through the wall at thermostat mounting location.
- From attic, feed thermostat wires through hole in ceiling plate until wires reach thermostat location.
- Make a small hook with a piece of stiff wire. Run wire hook through 1/2" hole in wall. Hook thermostat wires. Pull wires through hole in wall. Make sure 6" of wires stick out.
- Drive a small finishing nail in ceiling above furnace.
- 25,000 BTU/Hr Model - Drive nail above right side of furnace.
- 40,000 BTU/Hr Model - Drive nail above left side of furnace. Pull nail out and push a small stiff wire through hole. This helps you locate wire routing location when in attic.
- Repeat steps 3 and 4 above.
- Feed thermostat wires from attic to furnace through 1/2" hole in ceiling wall plate.
- Connect thermostat wires from attic to thermostat wires on furnace. Connect red wires together, then connect white wires together. Use wire nuts to make connections. IMPORTANT: Make sure thermostat wires do not touch combustion chamber.

Mounting the Thermostat to Wall

- Connect thermostat wires to the two terminal screws on back of thermostat (see Figure 6). Connect red wire to "R" terminal. Connect white wire to "W" terminal.
- Push any excess wire back through hole in wall and plug hole with insulation to prevent drafts. Drafts affect the thermostat operation.
- Use thermostat base to mark mounting screw locations.
- Drill proper-sized holes for wall anchors.
- Attach thermostat to wall using screws provided (see Figure 7)

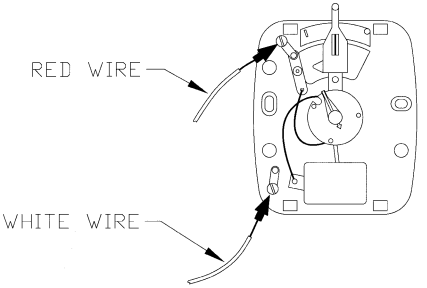


Figure 6 - Connecting Thermostat Wires to Thermostat

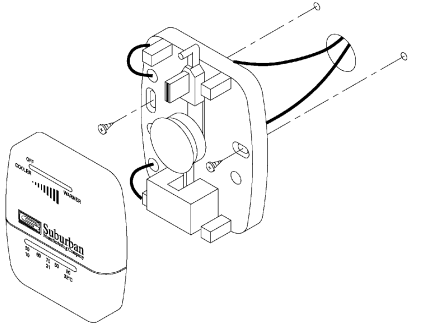


Figure 7 - Mounting Thermostat to Wall

CONNECTING TO GAS SUPPLY

WARNING: A qualified service person must connect furnace to gas supply. Follow all local codes.

WARNING: Never connect furnace to private (non-utility) gas wells. This gas is commonly known as wellhead gas.

WARNING: Unplug furnace before connecting to gas supply.

CAUTION: Use only new, black iron or steel pipe. Copper tubing may be acceptable in certain areas. Check local codes. Use pipe large enough in diameter to allow proper gas volume to furnace. If pipe is too small, undue loss of pressure will occur. Refer to chart on page 8 or 9.

CAUTION: Lightly apply pipe joint sealant to male threads before connecting. Use pipe joint sealant that is resistant to liquid petroleum (LP) gas.

All piping must comply with local codes and ordinances or with the National Fuel Gas Code (ANS Z223.1 NFPA No. 54), whichever applies.

You can connect furnace to gas supply at front of furnace (inside) or at rear of furnace (outside).

INSTALLATION
(Continued)

Connecting Furnace to Gas Supply at Front of Furnace

- 1. Locate gas inlet pipe on lower, right front of furnace (see Figure 8).
- 2. Connect 3/8" NPT pipe or nipple to gas inlet pipe (see Figure 8). See *Providing Gas Piping to Furnace* for correct gas pipe installation.

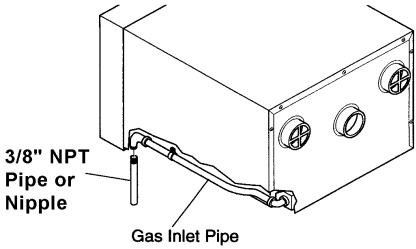


Figure 8 - Connecting Gas from Inside of Room

Connecting Furnace to Gas Supply at Rear of Furnace

- 1. Remove the two screws in back of furnace cabinet located by the exhaust vent(s) (see Figures 9 and 10).
- 2. Remove two screws on front lower flange that attach furnace flange to furnace cabinet flange (see Figure 11). *Note:* 40,000 BTU/Hr model has a bottom shield (see parts list, page 19, for location). Removing two screws will detach bottom shield.
- 3. Slide furnace out of furnace cabinet.
- 4. Locate gas inlet pipe on lower, right front of furnace.
- 5. **40,000 BTU/Hr Model Only:** Remove screw holding gas inlet pipe clamp to furnace. (See Figure 12).
- 6. Disconnect gas inlet pipe from 3/8" manifold elbow. Turn gas inlet pipe counterclockwise to disconnect (see Figure 12).
- 7. Rotate the 3/8" manifold elbow 90° so the opening is pointing downward (see Figure 12).
- 8. Locate knockout plug in furnace cabinet. Knockout plug is in lower left rear of furnace cabinet (as viewed from rear, see Figure 13). Remove knockout plug.
- 9. Slide furnace back into furnace cabinet. Make sure exhaust tube gaskets are in place. Make sure exhaust and intake vent tubes extend into vent caps on back of cabinet. Replace two screws by exhaust vent(s) removed in step 1.

- 10. **25,000 BTU/Hr Model:** Replace two screws removed in step 2. Attach furnace flange and furnace cabinet lower flange together.

40,000 BTU/Hr Model: Place bottom shield back in place. Replace two screws removed in step 2. Attach bottom shield, furnace flange, and furnace cabinet lower flange together.

- 11. Run 3/8" pipe or nipple through knockout hole. Connect 3/8" pipe or nipple to manifold elbow (see Figure 14). See *Providing Gas Piping to Furnace* for correct gas pipe installation.

CAUTION: Lightly apply pipe joint sealant to male threads before connecting. Use pipe joint sealant that is resistant to liquid petroleum (LP) gas.

- 12. Check connections for gas leak.

WARNING: Never use an open flame to check for a leak. Apply a mixture of liquid soap and water to all joints. Bubbles forming show a leak. Correct all leaks at once.

- 13. Caulk around pipe or nipple. This prevents cold air entering knockout hole.

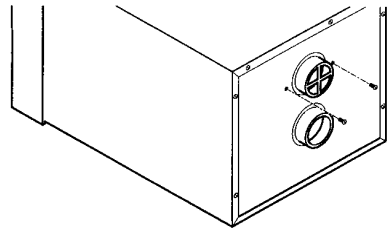


Figure 9 - Locations of Screws in Back of Furnace Cabinet (25,000 BTU/Hr Model)

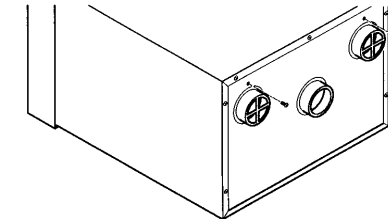


Figure 10 - Locations of Screws in Back of Furnace Cabinet (40,000 BTU/Hr Model)

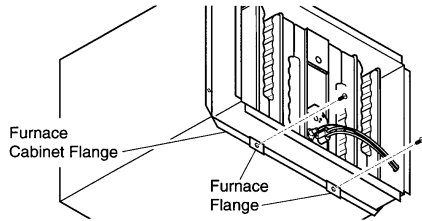


Figure 11 - Removing Screws on Lower Flange (40,000 BTU/Hr Model Shown)

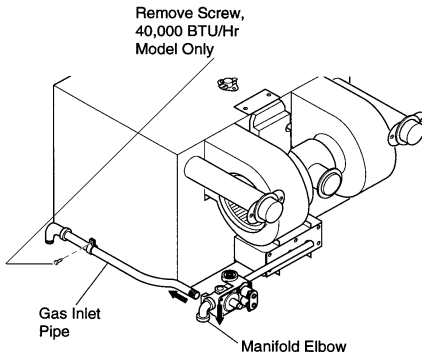


Figure 12 - Disconnecting Gas Inlet Pipe (40,000 BTU/Hr Model Shown)

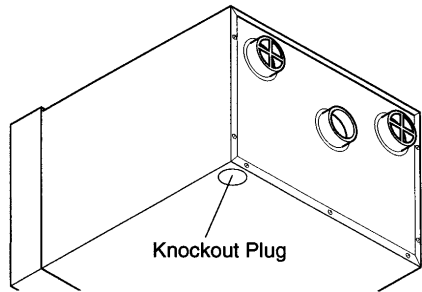


Figure 13 - Location of Knockout Plug

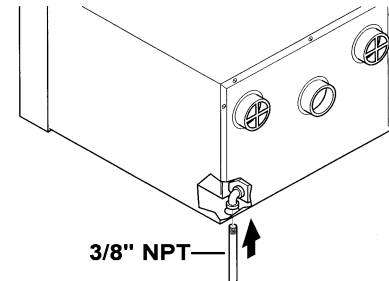


Figure 14 - Inserting Pipe through Knockout Hole

INSTALLATION
(Continued)

Providing Gas Piping to Furnace - Propane (LP) Gas Only
See Next Page for Natural Gas Piping

You must provide gas piping from gas source to furnace. The gas piping must be in a vertical position where it connects to the furnace. This prevents interference with front cover installation.

Consult your local gas company for proper routing of the gas lines.

Pipe size is determined by the length of pipe from the gas source to the furnace and the total BTU load on the gas source.

Add the total BTUs required for all appliances connected to the gas source including this furnace. Divide this number by 2500. This will give you the approximate cubic feet per hour needed.

Example:

40,000 BTU/Hr
+ 15,000 BTU/Hr for other gas appliances
55,000 BTU/Hr total
55,000 ÷ 2500 = 22

Locate 22 or higher on chart below.

According to the chart below, you should use 40 feet or less of 3/8" pipe, 125 feet or less of 1/2" pipe, etc....

MINIMUM IRON PIPE SIZE	LENGTH OF PIPE (FEET)													
	10	20	30	40	50	60	70	80	90	100	125	150	175	200
3/8"	47	32	26	22	19	18	16	15	14	13	12	11	10	—
1/2"	87	61	48	42	37	33	30	28	26	25	22	20	18	17
3/4"	184	126	100	86	76	69	63	59	55	52	48	42	39	36
1"	344	232	189	162	142	129	119	112	106	99	86	79	73	66
1 1/4"	696	484	391	331	291	265	245	232	212	202	182	166	149	139
1 1/2"	1060	729	590	504	444	404	371	351	324	305	272	252	232	212
2"	2022	1392	1094	961	842	762	696	656	616	576	517	470	430	404
2 1/2"	3182	2188	1790	1524	1326	1226	1127	1060	994	928	829	749	669	649
3"	5635	3911	3116	2718	2387	2154	1989	1856	1724	1657	1458	1326	1226	1127
4"	11602	7956	6431	5503	4906	4508	4110	3845	3580	3381	2983	2718	2519	2320

IMPORTANT: Check gas line pressure at gas meter before connecting furnace to gas line. Gas line pressure must be no less than 11 inches of water and no greater than 13 inches of water. Gas pressures and input to the burners must not exceed the rated input and pressure shown on the rating plate. For propane/LP gas, manifold pressure should be 10 inches of water. For elevations above 2000 feet, reduce rating 4% for each 1000 feet above sea level (U.S.A. only).

CAUTION: Never connect heater directly to the propane/LP supply. This heater requires an external regulator (not supplied). Install the external regulator between the heater and propane/LP supply.

The installer must supply an external regulator. The external regulator will reduce incoming gas pressure. You must reduce incoming gas pressure to between 11 and 14 inches of water. If you do not reduce incoming gas pressure, heater regulator damage could occur. Install external regulator with the vent pointing down. Pointing the vent down protects it from freezing rain or sleet.

INSTALLATION
(Continued)

Providing Gas Piping to Furnace - Natural Gas Only
See Previous Page for LP Gas Piping

You must provide gas piping from gas source to furnace. The gas piping must be in a vertical position where it connects to the furnace. This prevents interference with front cover installation.

Consult your local gas company for proper routing of the gas lines.

Pipe size is determined by the length of pipe from the gas source to the furnace and the total BTU load on the gas source.

Add the total BTUs required for all appliances connected to the gas source including this furnace. Divide this number by 1030. This will give you the approximate cubic feet per hour needed.

Example:

40,000 BTU/Hr
+ 15,000 BTU/Hr for other gas appliances
55,000 BTU/Hr total

55,000 ÷ 1030 = 53.4

Locate 53.4 or higher on chart below.

According to the chart below, you should use 50 feet or less of 1/2" pipe, 200 feet or less of 3/4" pipe, etc....

Table with 15 columns: MINIMUM IRON PIPE SIZE, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 125, 150, 175, 200. Rows represent pipe sizes from 3/8" to 4".

IMPORTANT: Check gas line pressure at gas meter before connecting furnace to gas line. Gas line pressure must be no less than 5 inches of water and no greater than 7 inches of water. Gas pressures and input to the burners must not exceed the rated input and pressure shown on the rating plate. For natural gas, manifold pressure should be 3.5 inches of water. For elevations above 2000 feet, reduce rating 4% for each 1000 feet above sea level (U.S.A. only).

INSTALLATION
(Continued)

Installation must include an equipment shutoff valve (supplied), ground joint union, plugged 1/8" NPT tap, and a sediment trap. Locate NPT tap within reach for test gauge hook up. NPT tap must be upstream from furnace (see Figure 15).

Install an equipment shutoff valve in an accessible location. The equipment shutoff valve is for turning on or shutting off the gas to the appliance.

Apply pipe joint sealant lightly to male threads. Prevent excess sealant from going into pipe. Excess sealant in pipe could result in clogged furnace valves.

CAUTION: Lightly apply pipe joint sealant to male threads before connecting. Use pipe joint sealant that is resistant to liquid petroleum (LP) gas.

Install sediment trap in supply line as shown in Figure 15. Locate sediment trap where it is within reach for cleaning. A sediment trap traps moisture and contaminants. This keeps them from going into furnace controls. If sediment trap is not installed or is installed wrong, furnace may not run properly.

IMPORTANT: Locate sediment trap where trapped matter will not freeze. Install sediment trap in a vertical run of pipe. If gas piping enters furnace from rear (outside), you must locate sediment trap in crawl space (see Figure 15). If you install furnace in structure with slab foundation, you must install gas piping to front of furnace (inside) (see Figure 15).

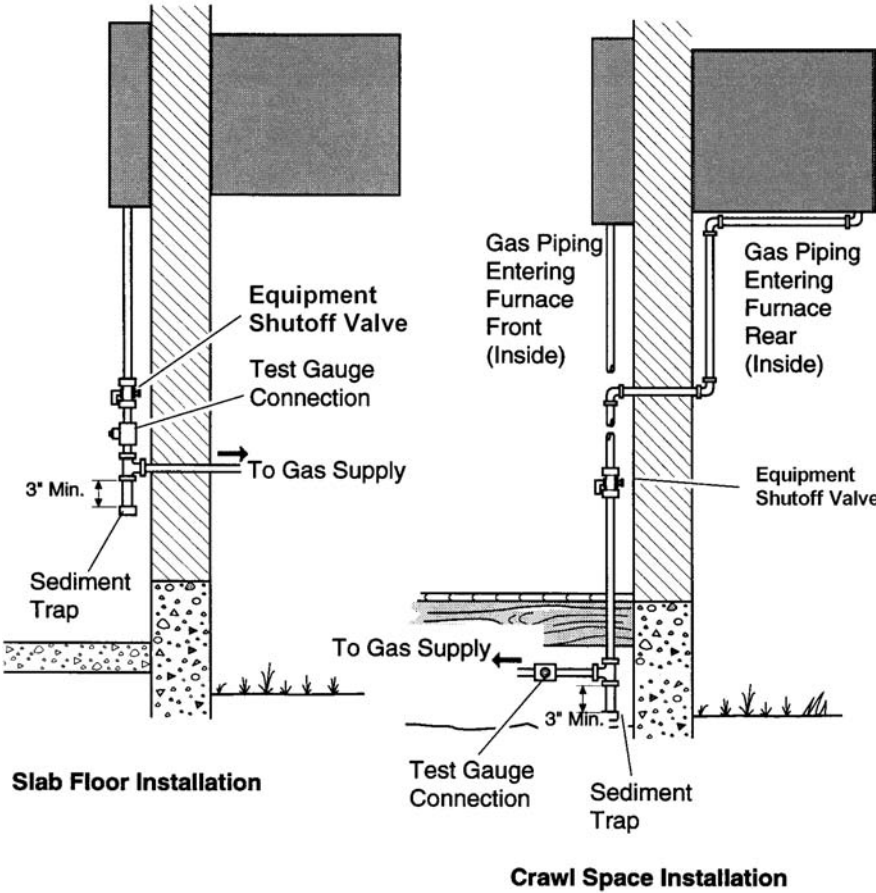


Figure 15 - Gas Connection

CHECKING GAS CONNECTIONS

WARNING: Test all gas piping and connections for leaks after installation or servicing. Correct all leaks at once.

WARNING: Never use an open flame to check for a leak. Apply a mixture of liquid soap and water to all joints. Bubbles forming show a leak. Correct all leaks at once.

Pressure Testing Gas Supply Piping System

Test Pressures in Excess of 1/2 PSIG (3.5 kPa)

- 1. Disconnect appliance with its appliance main gas valve (control valve) and equipment shutoff valve from gas supply piping system. Pressures in excess of 1/2 psig (3.5 kPa) will damage heater regulator.
- 2. Cap off open end of gas pipe where equipment shutoff valve was connected.
- 3. Pressurize supply piping system by either using compressed air or opening main gas valve located on or near gas meter.
- 4. Check all joints of gas supply piping system. Apply mixture of liquid soap and water to gas joints. Bubbles forming show a leak.
- 5. Correct all leaks at once.
- 6. Reconnect furnace and equipment shutoff valve to gas supply. Check reconnected fittings for leaks.

Test Pressures Equal To or Less Than 1/2 PSIG (3.5 kPa)

- 1. Close equipment shutoff valve (see Figure 16).
- 2. Pressurize supply piping system by either using compressed air or opening main gas valve located on or near gas meter.
- 3. Check all joints from gas meter to equipment shutoff valve. Apply mixture of liquid soap and water to gas joints. Bubbles forming show a leak.
- 4. Correct all leaks at once.

INSTALLATION
(Continued)

Pressure Testing Furnace Gas Connections

- 1. Open equipment shutoff valve (see Figure 16).
- 2. Open main gas valve located on or near gas meter.
- 3. Check all joints from equipment shutoff valve to gas inlet pipe. Apply mixture of liquid soap and water to gas joints. Bubbles forming show a leak.
- 4. Correct all leaks at once.
- 5. Turn on furnace (see Operating Furnace). Check the rest of the internal joints for leaks.
- 6. Turn off furnace (see To Turn Off Gas to Furnace).

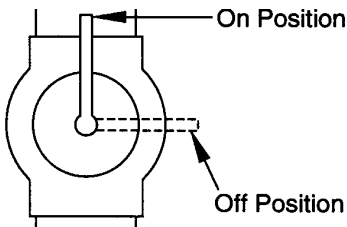


Figure 16 - Equipment Shutoff Valve

CONNECTING TO ELECTRICAL SUPPLY

IMPORTANT: Follow all local codes when connecting electricity to furnace. In the absence of local codes, refer to the latest edition of the National Electrical Code ANS/NFPA No. 70. If you are not familiar with wiring codes, have a qualified electrician do the wiring.

It is best to plug furnace into a separate and permanent electrical line circuit.

- 1. Supply a 120-volt, 60-cycle, grounded outlet at furnace location.
- 2. The furnace has a three-pronged (grounded) plug. Use only a grounded, three-prong outlet.

IMPORTANT: Some local codes require rigid or semi-rigid conduit or metallic sheathe cable. When using a semi-rigid or metallic sheathe cable, the installer must terminate the supply wire in the terminal box opening.

Performance Check

Plug furnace into three-pronged outlet and set thermostat to call for heat. If ignitor remains on after main burner ignition or if the valve chatters, you may have reversed polarity.

- 1. Unplug furnace.
- 2. Turn off electricity to outlet.
- 3. Reverse 120-volt connections inside outlet.
- 4. Turn on electricity to outlet.
- 5. Plug in furnace and set the thermostat to call for heat. Ignitor should turn off after main burner ignites. If ignitor does not turn off, or if valve continues to chatter, turn off furnace and unplug. Call a qualified service person.

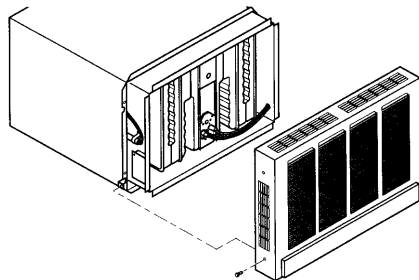


Figure 17 - Attaching Front Grille to Cabinet

ATTACHING CABINET FRONT GRILLE

CAUTION: Do not operate furnace with front cover removed or mounted wrong. If front cover is mounted wrong, you cannot secure it to cabinet with screws.

- 1. Hook top of front grille over top cabinet flange.
- 2. Secure the sides of front grille to lower sides of furnace cabinet with two screws provided (see Figure 17).

IMPORTANT: You may have removed furnace from furnace cabinet during installation. You must correctly install furnace within cabinet. If not, front grille will not properly attach to cabinet. Make sure gaskets for intake and exhaust tubes are in place. Make sure intake and exhaust tubes extend into vent caps on cabinet back and are secured with screws (see Figure 17A). Make sure you secured flange on bottom of furnace to flange on bottom front of cabinet.

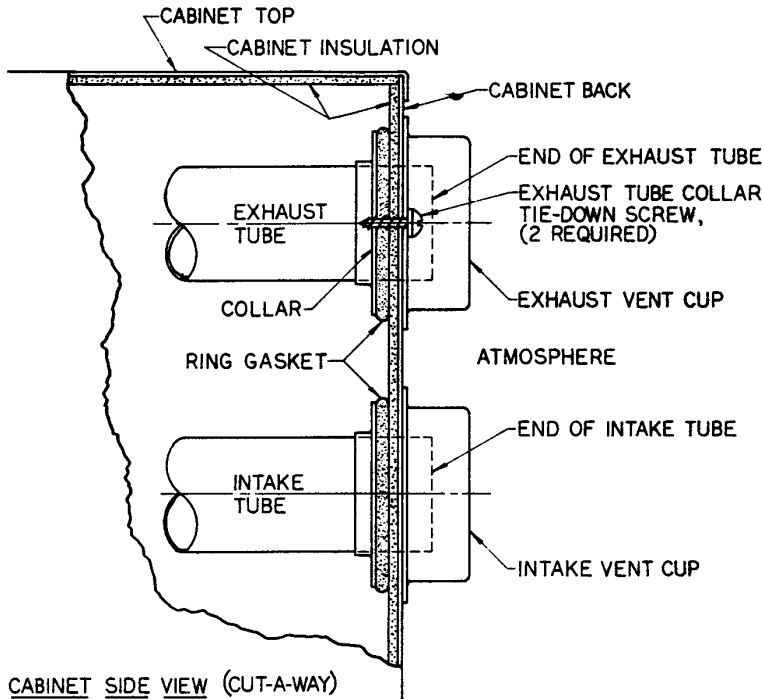


Figure 17A

OPERATING FURNACE

WARNING: Furnace burner, combustion chamber, and exhaust port are very hot during operation. Keep children and adults away from hot surfaces to avoid burns and clothing ignition. Carefully supervise young children when they are in the same room as furnace. Furnace will remain hot for a time after shutdown. Let surface cool before touching.

WARNING: Do not operate furnace with front cover removed. Unsafe operation could result.

CAUTION: Do not block circulating air openings in the louver of the front cover. This is necessary for furnace to operate properly.

NOTICE: If operating furnace for the first time, a slight odor will occur. This odor will go away after a few hours of operation.

FOR YOUR SAFETY READ BEFORE LIGHTING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C. Use only your hand to turn the handle on the equipment shutoff valve. Never use tools. If the handle will not turn by hand, don't try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.

D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

WARNING: Always follow lighting instructions. Never attempt to light burner with a match or butane torch.

- 1. STOP! Read the safety information, column 1.
- 2. Set the thermostat to lowest setting.
- 3. Turn off all electric power to the furnace.
- 4. Turn equipment shutoff valve clockwise to OFF position (see Figure 18).
- 5. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information, column 1. If you don't smell gas, go to next step.
- 6. Turn equipment shutoff valve counterclockwise to ON position (See Figure 18).
- 7. This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- 8. Plug in furnace.
- 9. Set thermostat to desired setting. If thermostat is set above room temperature, the blower will come on.
- 10. Allow approximately 45 seconds for ignition to occur. When ignition occurs, the glo-bar will stay on for a short period of time. The flame sensing probe will sense the burner flame and shut off glo-bar.

If ignition does not occur within 22 seconds, the ignition control will attempt to light burner three times. This will take about two minutes. If ignition does not occur, the ignition control will lock out the glo-bar and valve circuit. Air in the gas line or a short gas interruption will prevent furnace from igniting. If this happens, turn thermostat off and wait 5 minutes. Turn the thermostat back on. The furnace will try to ignite again.

11. If the furnace still does not ignite, follow instructions To turn Off Gas to Furnace. Call a qualified service person. Do not attempt to restart furnace.

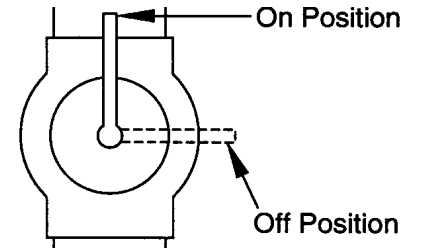


Figure 18 - Equipment Shutoff Valve

TO TURN OFF GAS TO FURNACE

- 1. Set thermostat to lowest setting.
- 2. Turn equipment gas valve clockwise to OFF position. Do not force equipment gas valve.
- 3. Unplug furnace if service is to be performed.

To Shut Down Furnace for an Extended Period of Time

- 1. Turn equipment gas valve clockwise to OFF position. Do not force equipment gas valve.
- 2. Set Thermostat on OFF.

CAUTION: Do not try to adjust heating levels by using the equipment shutoff valve.

THERMOSTAT CONTROL OPERATION

The thermostat responds to the room temperature. When the room temperature drops below the thermostat setting, the thermostat turns the furnace burner and blower on. When the room temperature goes above the thermostat setting, the thermostat turns the furnace burner off. The blower will continue to blow about two to three minutes after the burner goes out. The thermostat keeps the room at a constant temperature.

INSPECTING
BURNER FLAME

1. To observe burner flame, remove furnace front grille. Remove the two screws at the lower edges of front grille. Lift front grille away. Locate viewing window on front of combustion chamber. You can see burner flame through this window.

Correct Burner Flame: Blue flame with well-defined burner ports.

Incorrect Burner Flame: Yellow or lazy flame without well-defined burner ports.

If burner flame is incorrect, shut off furnace and contact a qualified service person.

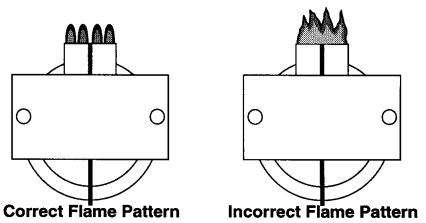


Figure 19 - Burner Flame Patterns

NORMAL
OPERATING
SEQUENCE

1. When the room temperature drops below the thermostat setting, the thermostat calls for heat. A 24-volt circuit is completed through the time delay relay coil. After three to five seconds, the contacts in the relay close. The blowers come on.
2. One motor drives both the combustion air blower and the circulating room air blower. The combustion air blower draws air from outside through the intake air vent. This air discharges into the combustion chamber. The combustion air blower then forces the combustion products out of the exhaust tube(s). The combustion air blower is sealed so that air does not pass between it and the circulating room air blower.
3. When the blower motor reaches 75% of normal r.p.m. (three to five seconds), air from the blower turns on the microswitch. When the microswitch activates, the electrical circuit is completed through the limit switch to the control module. The glo-bar begins to glow. In about 15 seconds, the glo-bar becomes hot enough to ignite the burner.

4. Another 24-volt circuit is completed through the module to the main gas valve. The valve opens. Gas passes through the valve to the main burner. The gas is ignited by the glo-bar.
5. After the main burner ignites, the flame detector senses the presence of flame. This opens the circuit to the glo-bar. The glo-bar shuts down.
6. The circulating room air blower pulls return air in from the living area. This air is heated as it flows past the combustion chamber. The heated air is then blown out into the room.
7. When the room temperature rises above the thermostat setting, the circuit to the valve opens and the burner shuts off.
8. The blower continues to run about two to three minutes until the time delay relay coil cools. When the coil cools, the circuit to the motor opens. The blower shuts off.

LIMIT SWITCH

⚠ WARNING: Do not operate furnace without a properly-working limit switch.

The limit switch will turn off the gas to the main burner if the furnace becomes too hot. When this happens, the main burner will go out and the blower will continue to run for two to three minutes. This usually happens when circulating air is partially or completely blocked.

Occasional cycling of the limit switch is not bad. This indicates safe operation. Limit switch cycling will most likely occur on warm days. If this happens too often or for a long period of time, the circulating air system should be thoroughly cleaned by a qualified service person.

If the circulating air system is cleaned and the limit switch continues to shut down the furnace, the limit switch is defective. A defective limit switch cannot be repaired. It must be replaced. For safety reasons, never operate the furnace without a limit switch.

CLEANING AND
MAINTENANCE

⚠ WARNING: Turn off and unplug furnace and let cool before cleaning. Turn equipment shutoff valve to OFF position. Only a qualified service person should service and repair furnace.

⚠ WARNING: Keep furnace clear and free from combustible materials, gasoline, and other flammable vapors and liquids.

⚠ CAUTION: You must keep control areas, burner, and circulating air passageways of furnace clean. Inspect these areas of furnace before each use. Have furnace inspected yearly by a qualified service person. Furnace may need more frequent cleaning due to excessive lint from carpeting, bedding material, pet hair, etc.

⚠ CAUTION: Label all wiring prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

CABINET

Air Passageways

- Use a vacuum cleaner or pressurized air to clean.

Exterior

- Use a soft cloth dampened with a mild soap and water mixture. Wipe cabinet and front cover to remove dust.
- Use a vacuum cleaner to remove dust from front cover louvers.

EXHAUST AND INTAKE
VENTS

Make sure the exhaust and intake vents are not blocked. The intake combustion air and the exhaust gases must be expelled to the outside. Have a qualified service person clean dirt and loose debris from vents annually. Do not cover the exhaust or intake vents with screen wire, tape, foil, etc. (See paragraph 6, page 2.)

GASKETS

Inspect all gaskets. If any gaskets show signs of leakage or damage, replace them. Safe operation of furnace depends on all gaskets being tight.

FRONT GRILLE

Remove anything that may be blocking the air to the louvers of the front.

COMBUSTION CHAMBER
AND MAIN BURNER

Check flame pattern of main burner often (see *Inspecting Burner Flame*.) Have combustion chamber and main burner cleaned if you have run the furnace with a high yellow flame. Incomplete combustion from lack of air causes the yellow flame. This deposits soot inside the combustion chamber and on the burner. Contact a qualified service person to clean combustion chamber and main burner.

OUTSIDE VENT CAPS

Inspect outside vent caps for obstructions or soot. If soot is found, do not use furnace. Contact a qualified service person to clean furnace.

TROUBLESHOOTING

NOTE: For additional help, contact:
Suburban Manufacturing Company
Customer Service Department
Post Office Box 399
Dayton, Tennessee 37321
(423) 775-2131, Ext. 1
Fax: (423) 775-7015

Note: All troubleshooting items are listed in order of operation.

⚠ WARNING: Turn off and unplug furnace and let cool before servicing. Unless you need gas supply for testing, shut off equipment shutoff valve before servicing. Only a qualified service person should service and repair furnace.

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
No heat	1. Thermostat off	1. Check to be sure thermostat is calling for heat. Wire to thermostat could be off terminal.
	2. Gas supply	2. Be sure equipment gas valve is in the open position (level or parallel to gas line)
	3. Electrical connections and power	3. Be sure all electrical connections are secure.
	4. Motor	4. Motor must be operating at top speed before burner will come on. If blower is not operating at top speed, check voltage supply (minimum 100 volts A.C.). If voltage supply is okay, check for defective motor.
	5. Malfunctioning microswitch	5. Be sure the microswitch is sailing in far enough to open the solenoid valve and to energize the ignition control. If the switch is not sailing in, clean any dust or dirt from the actuator pin. Other reasons for the switch not sailing in are: A. Insufficient blower speed - Slow motor due to faulty motor or lint and dust accumulation on the blower wheels or restriction of return air to the furnace. B. Faulty microswitch - Replace switch if circuit to ignition control is not completed when switch is manually engaged. Switch should also be replaced if blower motor running at top speed fails to engage switch within six or seven seconds. NOTE: To service switch, combustion chamber must be pulled out. Follow steps 1, 2, 3, 9 and 10 on page 7 to remove combustion chamber.
	6. Gas valve	6. Within 20 seconds after motor reaches 75% of its r.p.m. and microswitch engages, check the following: A. Voltage at valve - If current is present but valve is not opening, check wire connections. B. If wire connections okay - Replace valve C. No voltage at valve - Check circuit completion through microswitch and limit switch as well as wiring and wire connections. If no defects are found, see <i>Ignition Failures</i> .

TROUBLESHOOTING
Continued

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
No heat <i>(continued)</i>	7. Blower not operating	7. A. Check power supply to furnace. B. Check electrical connections at furnace. C. With thermostat points closed, check for circuit completion at motor. If voltage is present, replace motor. If no voltage is present at motor, check for: 24 volts on secondary coil or transformer. If no voltage, replace transformer. - If 24 volt transformer okay, check for circuit completion across contacts on time delay relay. Allow three to five seconds for contact to close. - If circuit across contacts okay, check continuity of wiring in motor circuit.
	8. Short cycling (motor goes on and off)	8. A. Check thermostat. Contacts should remain closed. If contacts are breaking: - Check thermostat anticipator setting. It should be between .75 and 1.0. - If anticipator setting okay, check amp draw across thermostat. If amp draw exceeds .65, check amp draw across coil of valve and time delay relay. <i>Note:</i> On initial operation of glo-bar, there is a momentary surge of approximately 4.0 amps. - If amp draw is within limits, check for shorts in thermostat wiring. - If wiring is okay, replace thermostat.

IGNITION FAILURES


WARNINGS:

- Never connect unit or ignition circuit to 230 volts.
- Never operate unit with glo-bar touching burner or any other ground. Damage to ignition control will occur.
- Be sure sensor probe never touches glo-bar. This will damage ignition control.
- If the ignition control is defective, it must be replaced. It is not field-repairable.


CAUTION: Do not attempt to repair the ignition control. This may alter it and cause it to operate incorrectly.

The electronic system is made up of two parts: the ignition control and the glo-bar. The ignition control is the brain of the electronic system. It has several functions:

- When the blower reaches full r.p.m., a 24-volt circuit is completed to the ignition control. (Check across yellow and green wires.)
- The white and blue wires at the ignition control are the 120-volt input for the glo-bar circuit. When the 24-volt circuit is completed, the ignition control will complete the 120-volt circuit to the glo-bar and it begins to glow. (Check this circuit across the two white wires at the ignition control.)
- After approximately 20 seconds, a 24-volt circuit is completed through the ignition control to the gas valve. (This circuit is checked from brown wire at ignition control to a neutral ground.)

This circuit opens the valve, gas flows to the burner and is ignited by the heat from the glo-bar. *Note:* Glo-bar remains on.

- When the burner flame is established, the sensing probe will sense the presence of burner flame and open the glo-bar circuit. The glo-bar will then stop glowing.

It is important to determine the type of problem being experienced. Then the proper checkout procedure can be made. The following is a list of problems, how to identify in which area the problem is located, and how to correct it.

TROUBLESHOOTING
Continued

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Ignition failures	1. Glo-bar will not glow - with blower running and microswitch engaged	1. Check the following: A. Check for 24 volts A.C. across yellow and green wires at ignition control. If no voltage, check microswitch and limit switch for circuit completion as well as wiring and wiring connections. B. Voltage present across yellow and green wires, check for 120-volt input to ignition control across white and blue wires. If no voltage, check wiring all the way back to power supply. C. 120 volts present across white and blue wires, check for 120 volts across the two white wires at ignition control. If no voltage, replace ignition control. D. Voltage present across the two white wires, check wiring and wire connections to glo-bar. E. If wiring and wire connections okay, replace glo-bar. (Glo-bar broken)
	2. Glo-bar glows but burner will not come on	2. A. Check for voltage (24 volts A.C.) at valve 40 seconds after glo-bar begins to glow. If voltage present but valve not opening, replace valve. B. If no voltage at valve, check brown wire at ignition control for continuity and good connection. C. If wire and wire connections okay, replace ignition control.
	3. Glo-bar operating and gas valve opening but burner will not light	3. A. Check gas flow through burner. If no gas is coming through burner, check for obstruction in gas line, main burner orifice, or main burner. B. If thermostat okay, check for 24 volt A.C. circuit completion across yellow and green wires at ignition control. If no voltage, check for circuit completion through limit switch and microswitch. C. If voltage is present at ignition control across yellow and green wires yet burner continues to go off, replace ignition control.
	4. If the ignitor remains on after main burner ignition or the valve chatters, reverse the 120 volt A.C. connections at the wall receptacle	4. A. If polarity is okay yet burner continues to go off, check thermostat to be sure it is still completing the valve circuit. If not, check for excessive amp draw in valve circuit. B. If thermostat okay, check for 24 volt A.C. circuit completion across yellow and green wires at ignition control. If no voltage, check for circuit completion through limit switch and microswitch. C. Voltage present at ignition control across yellow and green wires yet burner continues to go off, replace ignition control

TROUBLESHOOTING
Continued

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Ignition failures <i>(continued)</i>	5. Burner cycles off and glo-bar comes on immediately, check the following:	5. A. Check flame sensing probe. Be sure probe is positioned in the burner flame and glowing cherry red. Check wire and wire connections at probe and ignition control. B. If wire and wire connections okay, check for voltage across brown and orange wires at ignition control. If no voltage, replace ignition control. C. If voltage present, check wiring and wire connections at valve. D. If wire and wire connections okay, replace valve.
Excessive noise	1. Blower out of balance 2. Motor hums	1. Replace blower 2. Replace motor
Main burner will not cycle off	1. Thermostat setting 2. Gas Valve stuck open	1. Check thermostat 2. Check gas valve. If stuck open, replace. Do not attempt to repair valve!
Furnace will not operate	1. Wiring connections or shorts	1. Check all wiring to assure proper connection or detect possible shorts.

WIRING DIAGRAMS

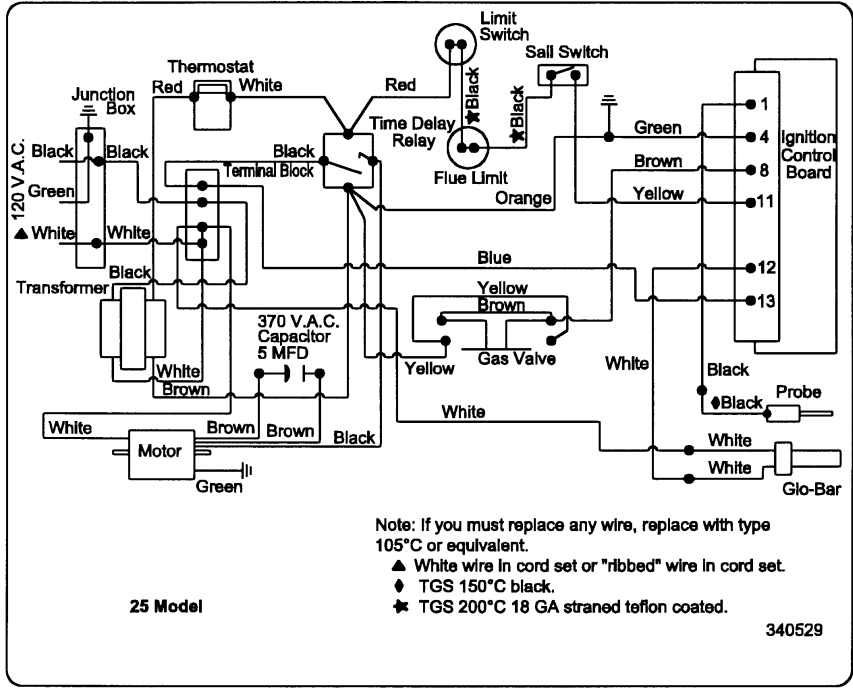


Figure 20 - Wiring Diagram (25,000 BTU/Hr Model)

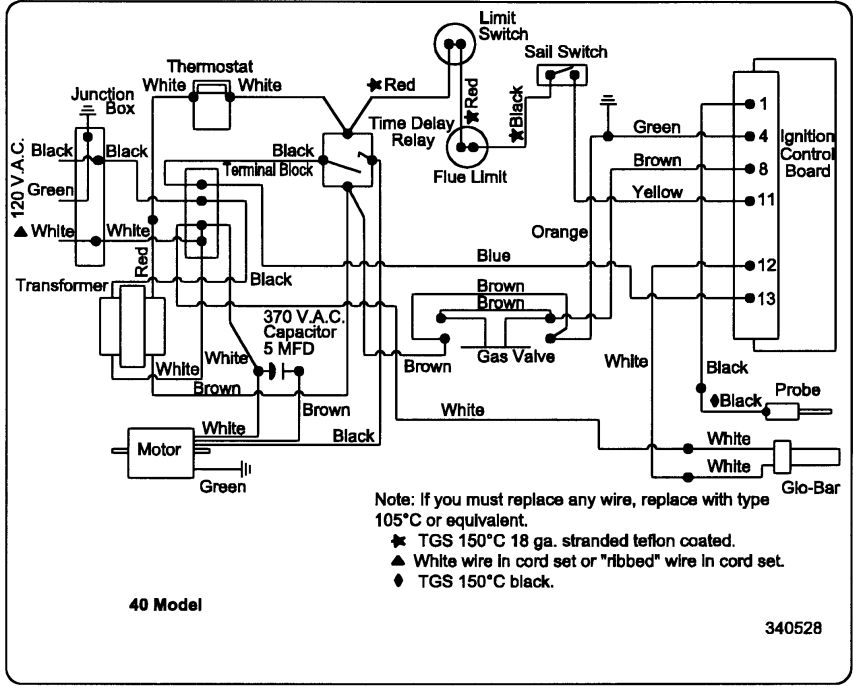


Figure 21 - Wiring Diagram (40,000 BTU/Hr Model)

REPLACEMENT PARTS

Note: Use only original replacement parts. This will protect your warranty coverage for parts replaced under warranty.

PARTS UNDER WARRANTY

Contact authorized dealers of this product. If they can't supply original replacement part(s), call:

Suburban Manufacturing Company
Customer Service Department
(423) 775-2131, Ext. 1

Have ready:

- your name
- your address
- model and serial number of your furnace
- how furnace was malfunctioning
- type of gas used (propane/LP or natural gas)
- purchase date

Usually, we will ask you to return the defective part to the factory.

PARTS NOT UNDER WARRANTY

Contact authorized dealers of this product. If they can't supply original replacement part(s), either contact your nearest gas company or call :

Suburban Manufacturing Company
Customer Service Department
(423) 775-2131, Ext. 1

When calling Suburban, have ready:

- model number of your furnace
- the replacement part number
- part description
- number of parts required

SERVICE HINTS

When Gas Pressure Is Too Low

- glo-bar glows, but burner will not ignite

When Gas Quality Is Bad

- burner will not stay lit
- burner will produce flames and soot

You may feel your gas pressure is too low or gas quality is bad. If so, contact your local gas supplier.

TECHNICAL SERVICE

You may have further questions about installation, operation, or troubleshooting. If so, contact:

Suburban Manufacturing Company
Customer Service Department
Post Office Box 399
Dayton, Tennessee 37321
(423) 775-2131, Ext. 1
Fax: (423) 775-7015

ILLUSTRATED
PARTS LIST

CABINET ASSEMBLY
25,000 BTU/HR MODEL

The following pages contain replaceable parts used in your furnace. When ordering parts, follow the instructions in this manual listed under *Replacement Parts*.

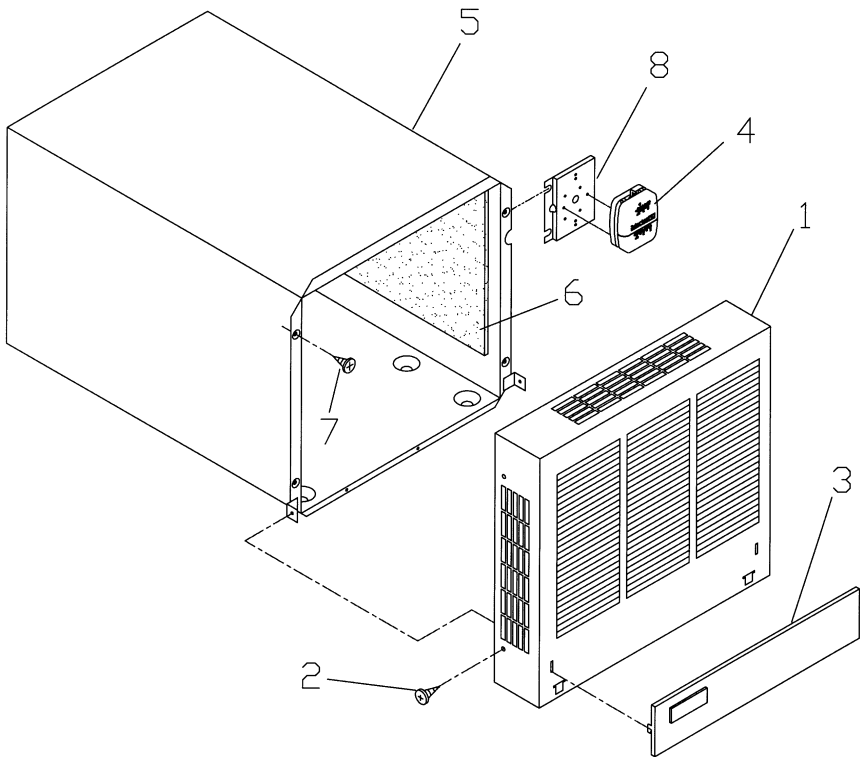


Figure 22

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	031164	Front Grille Assembly Final (includes key no. 3)	1
2	121520	Screw, #8 x 3/8" **	2
3	102037	Front Trim Panel Assy. Comp. w/Stickers	1
4	161154	Thermostat	1
5	102033	Cabinet Assembly	1
6	070509	Cabinet Insulation (right and left sides)	1
7	121224	Screw, #10 x 3/4" **	4
8	062242HW	Thermostat Mounting Plate	1
Δ	070542	Cabinet Insulation (back)	1
Δ	070508	Cabinet Insulation (top)	1
Δ	192026	Nameplate	1

Δ Parts available, not shown.

** Standard hardware, can be picked up at local hardware store.

ILLUSTRATED
PARTS LIST

COMBUSTION CHAMBER
ASSEMBLY
25,000 BTU/HR MODEL

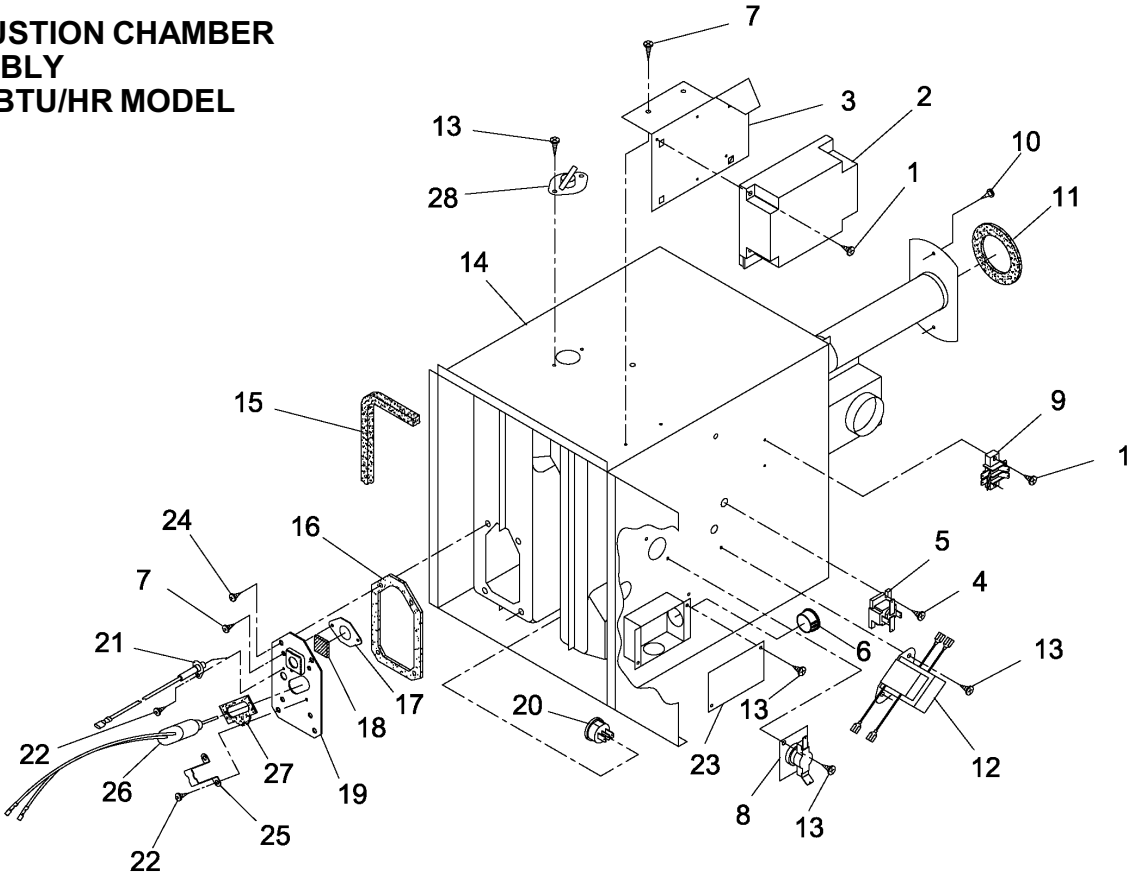


Figure 23

KEY NO.	PART NUMBER	DESCRIPTION	QTY .	KEY NO.	PART NUMBER	DESCRIPTION	QTY .
1	121357	Screw, #6 x 5/8" **	4	14	021175	Combustion Chamber/Radiation Shield Assembly with Gasket	1
2	232773	Module Board	1	15	070606	Gasket, Radiation Shield	1
2A	232775	Wiring Harness (Module Board) Not Shown	1	16	071188	Burner Access Door Gasket	1
3	062461	Ignition Control Mounting Bracket	1	17	290141	Cover Plate	1
4	121372	Screw, #6 x 1/2" **	2	18	310026	Glass Disc	1
5	230625	Time Delay Relay	1	19	030893	Burner Access Door	1
6	230218	Bushing	1	20	230844	Bushing with Terminals	1
7	120158	Screw, #8 x 3/8" **	4	21	231950	Flame Sensing Probe	1
8	230825	Limit Switch	1	22	121502	Screw, #6 x 3/8" **	2
9	231144	Terminal Block	1	23	090211	Junction Box Cover	1
10	121224	Screw, #10 x 3/4" **	2	24	121388	Screw, #10 x 1/2" **	4
11	071158	Gasket	1	25	062986	Glo-Bar Retainer	1
12	231143	Transformer Assembly	1	26	231959	Glo-Bar	1
13	121252	Screw, #10 x 3/8" **	6	27	070909	Glo-Bar Gasket	1
				28	232761	Switch, Flue Limit	1

** Standard hardware, available at your local hardware store.

ILLUSTRATED
PARTS LIST

BURNER ASSEMBLY
25,000 BTU/HR MODEL

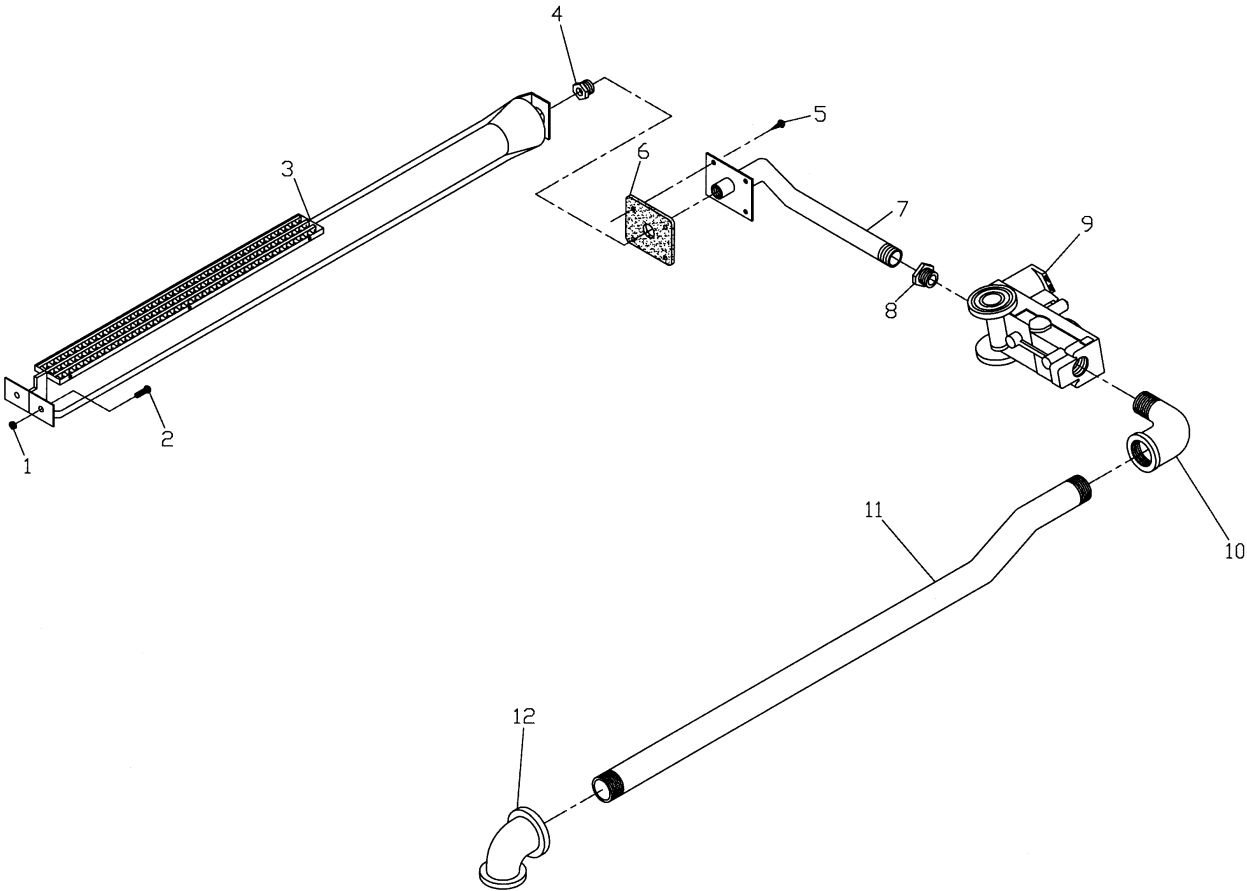


Figure 24			
KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	120717	Hex Nut, #10-24 **	2
2	121459	Screw, #10-24 x 1/2" **	2
3	010701	Burner Assembly	1
4	180220	Orifice, Main Burner (Natural Gas Only)	1
	180215	Orifice, Main Burner (LP Gas Only)	1
5	121388	Screw, #10 x 1/2" **	4
6	070408	Manifold Gasket	1
7	171174	Manifold Assembly	1
8	170545	Reducer Fitting, 3/8" NPT to 1/8" NPT **	1
9	160995	Valve, Natural Gas Only	1
	160969	Valve, LP Gas Only	1
10	170012	90° Street Elbow **	1
11	171170	Gas Inlet Pipe	1
12	170082	90° Elbow **	1

** Standard hardware, available at your local hardware store.

ILLUSTRATED
PARTS LIST

BLOWER ASSEMBLY
25,000 BTU/HR MODEL

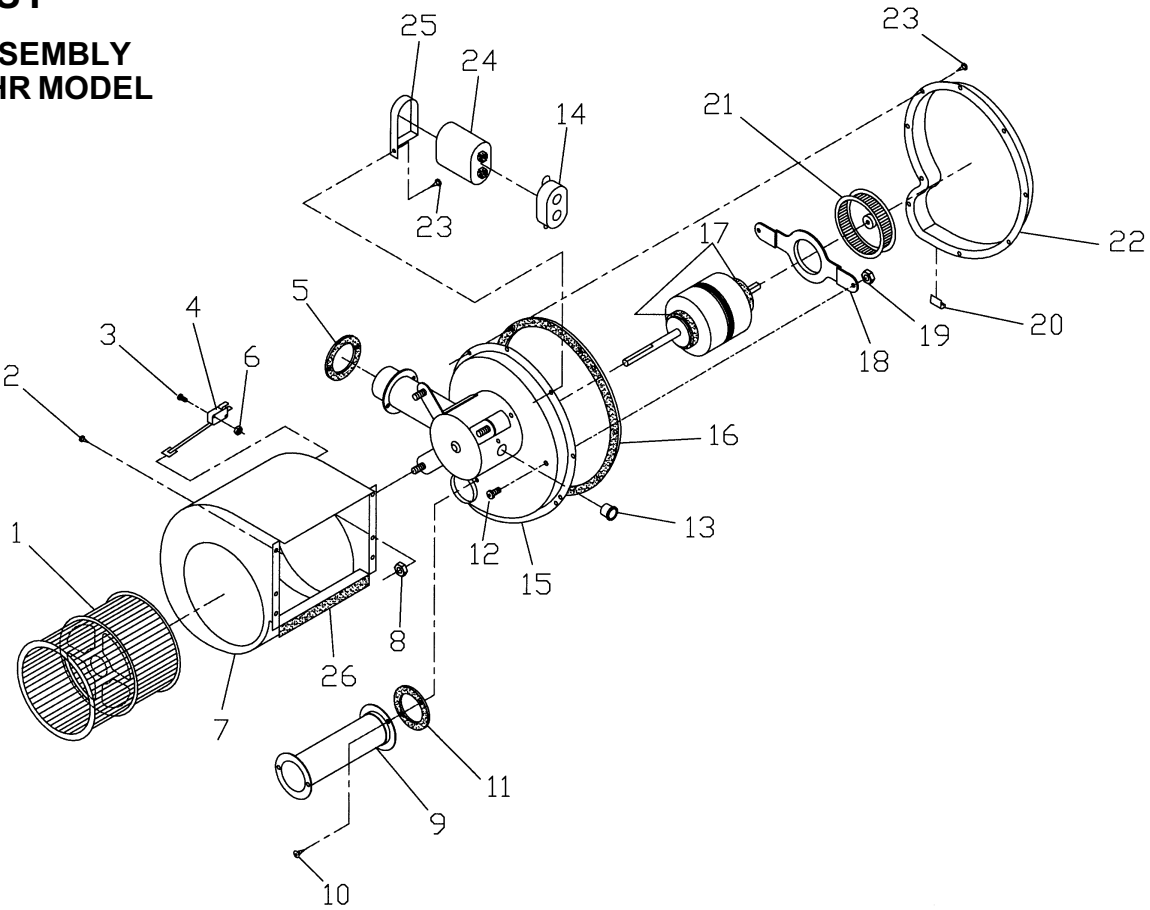


Figure 25

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	350086	Room Air Wheel	1	15	390296BK	Combustion Air and Motor Cover Assy. Housing	1
2	121252	Screw, #10 x 3/8" **	5	16	070386	Combustion Air Housing Gasket	1
3	121247	Screw, #2-56 x 5/8" **	2	17	231389	Motor with Bushings	1
4	230510	Microswitch Assembly	1	18	062307	Motor Support Bracket	1
5	071158	Intake Tube Gasket	1	19	120717	Hex Nut, #10-24 (keys) **	2
6	121951	Nut, #2 - 56	2	20	121712	Tinnerman	1
7	390260BK	Blower Housing (room air)	1	21	350117	Combustion Air Wheel	1
8	121421	Hex Lock Nut, #10-24 **	3	22	390240BK	Combustion Air Housing (outside)	1
9	050751	Crossover Tube	1				
10	121388	Screw, #10 x 1/2" **	4	23	120615	Screw, #8 x 1/2" **	10
11	070385	Crossover Tube Gasket	2	24	231036	Capacitor	1
12	121227	Screw, #10-24 x 1/2" **	2	25	062633	Capacitor Clamp	1
13	070362	Universal Bushing	1		161093	Equipment Shutoff Valve	1
14	231231	Capacitor Boot	1	Δ			
				26	070637	Gasket Blower Housing	1

Δ Parts available, not shown.

** Standard hardware, can be picked up at local hardware store.

ILLUSTRATED
PARTS LIST
CABINET ASSEMBLY
40,000 BTU/HR MODEL

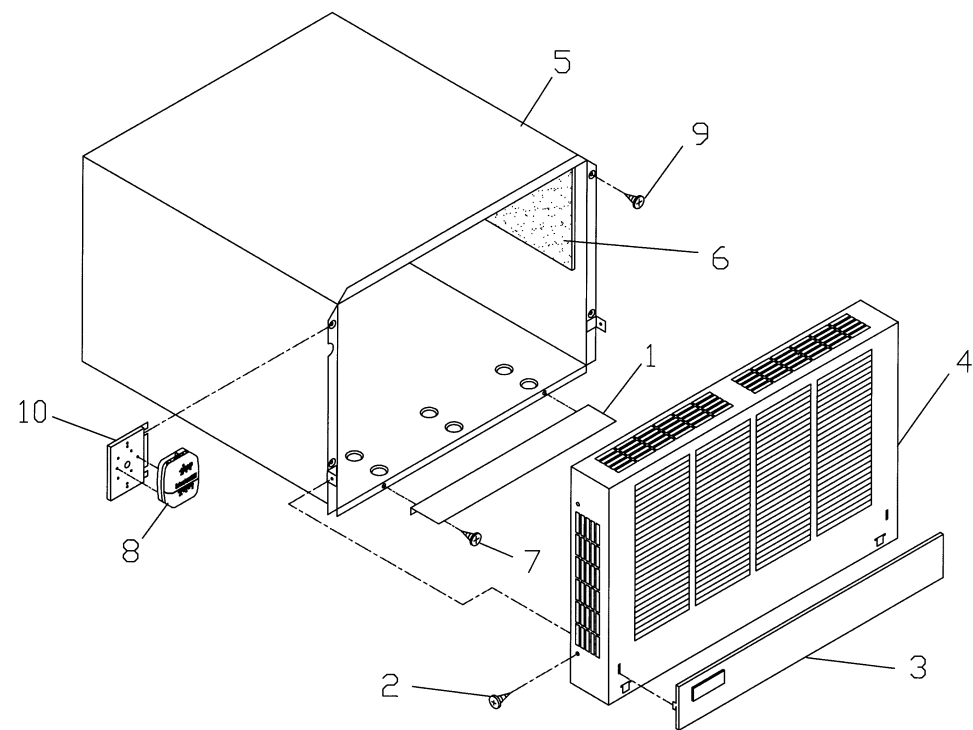


Figure 26

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	280498BK	Bottom Shield	1
2	121520	Screw, #8 x 3/8" **	2
3	102035	Front Trim Panel Assy. w/Stickers	1
4	031169	Front Grille Assembly Final (includes key no. 3)	1
5	102032	Cabinet Assembly	1
6	070511	Cabinet Insulation (right and left sides)	1
7	120158	Screw, #8 x 3/8" **	2
8	161154	Thermostat	1
9	121224	Screw, #10 x 3/4" **	4
10	062242HW	Thermostat Mounting Plate	1
Δ	070541	Cabinet Insulation (back)	1
Δ	070510	Cabinet Insulation (top)	1
Δ	192026	Nameplate	1

Δ Parts available, not shown.
** Standard hardware, can be picked up at local hardware store.

ILLUSTRATED
PARTS LIST
COMBUSTION CHAMBER
ASSEMBLY
40,000 BTU/HR MODEL

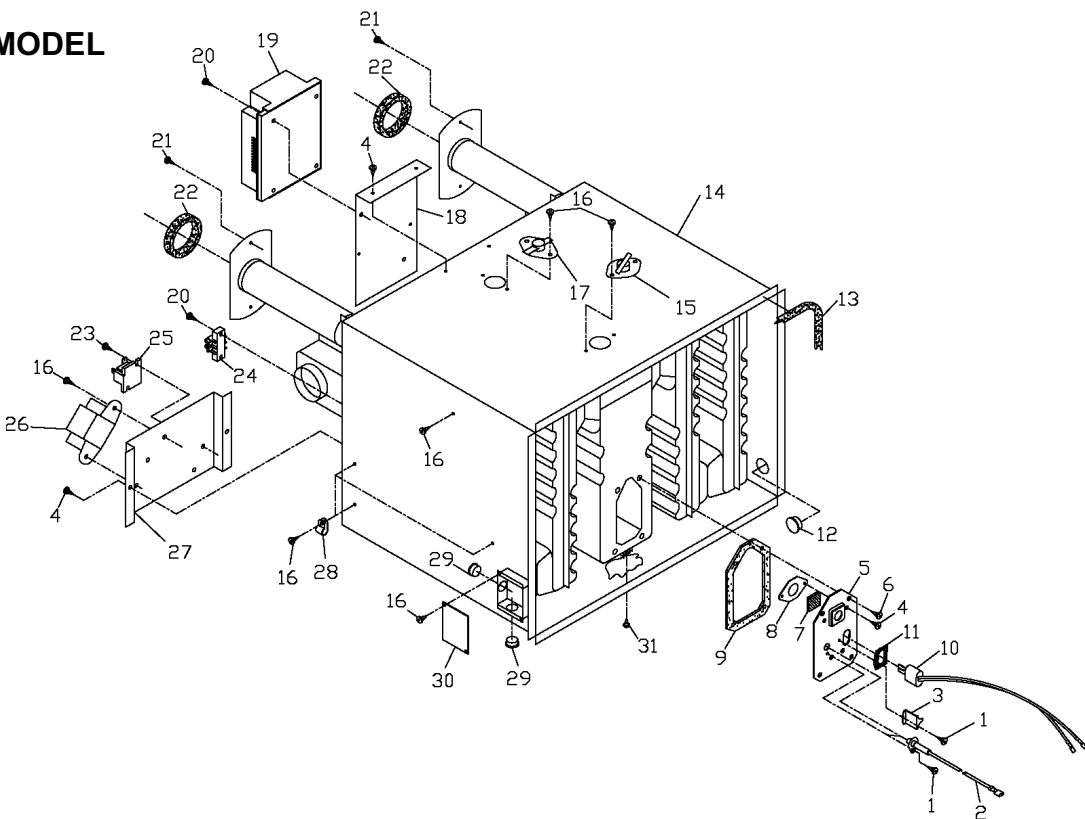


Figure 27

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	121502	Screw, #6 x 3/8" **	2	17	230560	Limit Switch	1
2	231950	Flame Sensing Probe	1	18	062563	Ignition Control Mounting	1
3	063018	Glo-Bar Retainer	1	19	232773	Module Board	1
4	120158	Screw, #8 x 3/8" **	6	19A	232774	Wiring Harness (Module Board) not shown	1
5	030891	Burner Access Door	1	22	071158	Gasket	2
6	121388	Screw, #10 x 1/2" **	4	23	121372	Screw, #6 x 1/2" **	2
7	310026	Glass Disc	1	24	231144	Terminal Block	1
8	290141	Cover Plate	1	25	230625	Time Delay Relay	1
9	071188	Burner Access Door Gasket	1	26	231164	Transformer Assembly	1
10	231959	Glo-Bar	1	27	062837	Transformer and Relay Mounting Bracket	1
11	070909	Glo-Bar Gasket	1	28	062694	Wire Clamp, 5/8" Diameter	5
12	230844	Bushing with Terminals	1	29	230555	Strain Relief Bushing	2
13	070607	Gasket, Radiation Shield	1	30	090211	Junction Box Cover	1
14	020982	Combustion Chamber/Radiation Shield Assembly with Gasket	1	31	121577	Screw, #10 x 1/4" **	2
15	232758	Switch, Flue Limit	1				
16	121252	Screw, #10 x 3/8" **	12				

** Standard hardware, available at your local hardware store.

ILLUSTRATED
PARTS LIST

BURNER ASSEMBLY
40,000 BTU/HR MODEL

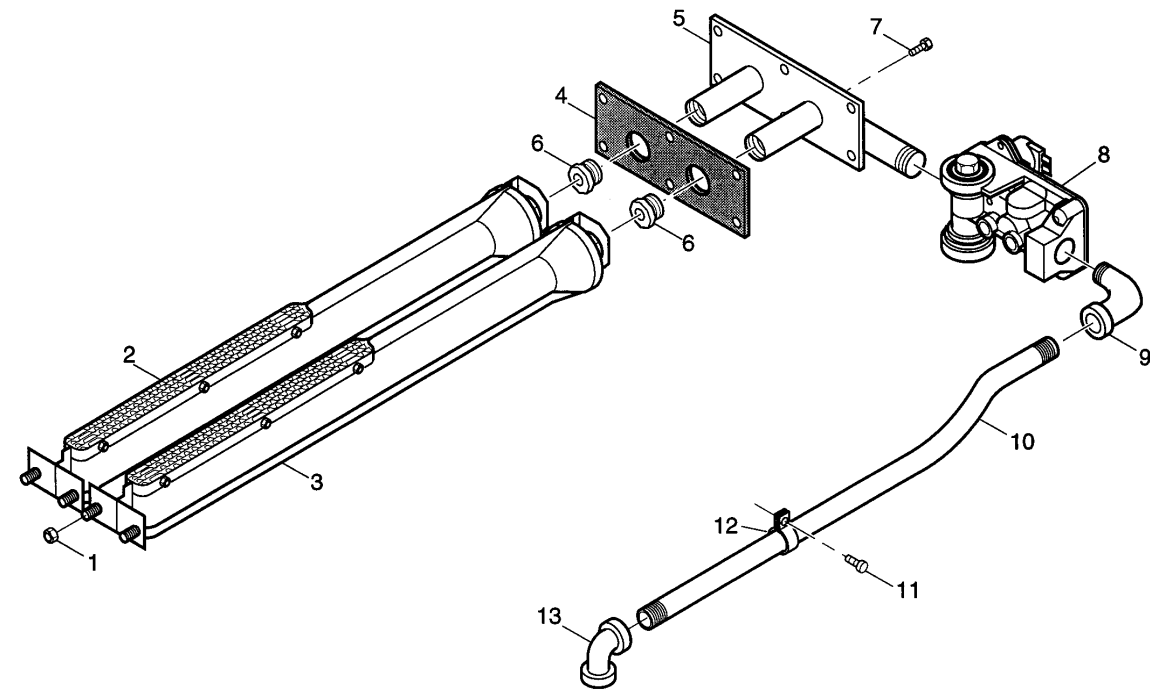


Figure 28

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	120717	Hex Nut, #10-24 **	4
2	010621	Left Burner Assembly	1
3	010623	Right Burner Assembly	1
4	070591	Manifold Gasket	1
5	171167	Manifold Assembly	1
6	180189	Orifice, Main Burner (Natural Gas Only)	2
	180188	Orifice, Main Burner (LP Gas Only)	2
7	121388	Screw, #10 x 1/2" **	6
8	160994	Valve, Natural Gas Only	1
	160969	Valve, LP Gas Only	1
9	170012	90° Street Elbow **	1
10	171170	Gas Inlet Pipe	1
11	121388	Screw, #10 x 1/2" **	1
12	062694	Gas Inlet Pipe Clamp	1
13	170082	90° Elbow **	1

** Standard hardware, available at your local hardware store.

ILLUSTRATED
PARTS LIST

BLOWER ASSEMBLY
40,000 BTU/HR MODEL

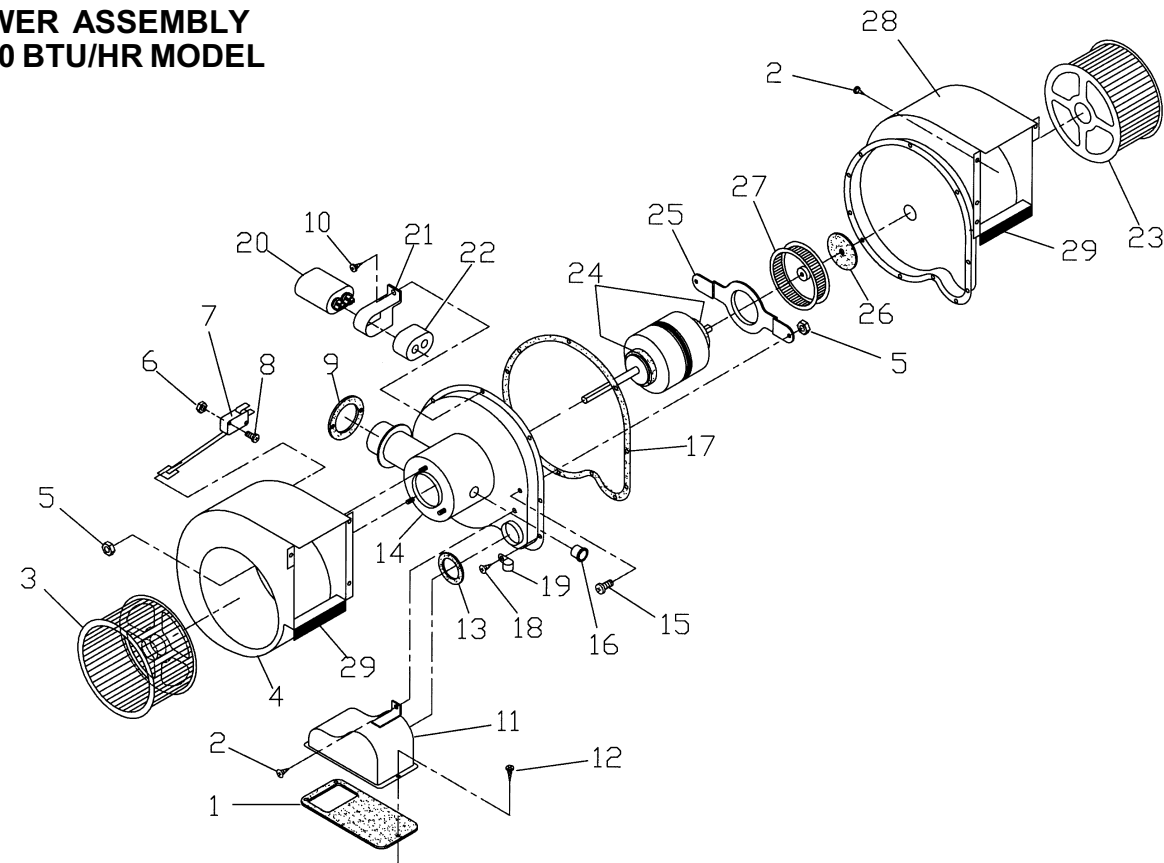


Figure 29

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	070570	Combustion Air Cover Gasket	1	15	121227	Screw, #10-24 x 1/2" **	2
2	121252	Screw, #10 x 3/8" **	8	16	070362	Universal Bushing	1
3	350088	Room Air Wheel (CW Rotation)	1	17	070406	Combustion Air Housing Gasket	1
4	390328BK	Room Air Blower Housing (left side)	1	18	120158	Screw, #8 x 3/8" **	10
5	120717	Hex Nut, #10-24 (keys) **	5	19	061663	Wire Clamp	1
6	121951	Nut, #2 - 56	2	20	231036	Capacitor	1
7	230681	Microswitch Assembly	1	21	062691	Capacitor Clamp	1
8	121247	Screw, #2-56 x 5/8" **	2	22	231231	Capacitor Boot	1
9	071158	Intake Tube Gasket	1	23	350087	Room Air Wheel (CCW Rotation)	1
10	120615	Screw, #8 x 1/2" **	1	24	231136	Motor with Bushings	1
11	390205BK	Combustion Air Cover Assy.	1	25	062307	Motor Support Bracket	1
12	121388	Screw, #10 x 1/2" **	3	26	070165	Motor Gasket	1
13	070420	Combustion Air Crossover Gasket	1	27	350085	Combustion Air Wheel	1
14	390318BK	Combustion Air and Motor Cover Assembly	1	28	390201BK	Room Air Blower Housing (right side)	1
				29	070638	Gasket Blower Housing	1
				Δ	161093	Equipment Shutoff Valve	1

Δ Part available, not shown.

** Standard hardware, available at your local hardware store.

ONE YEAR LIMITED WARRANTY

This SUBURBAN product is warranted to the original purchaser to be free from defects in material and workmanship under normal use and maintenance for a period of one year from the date of installation whether or not actual use begins on that date. It is the responsibility of the consumer/owner to establish the warranty period. Suburban does not use warranty registration cards for its standard warranty. You are required to furnish proof of installation date which may be a Bill of Sale or other payment records which verifies the original installation. A new or remanufactured part to replace any defective part will be provided to your dealer, service agency or local gas company, at Suburban's sole option, without charge for the part itself, FOB the shipping point. THE EXCHANGED PART WILL BE WARRANTED FOR ONLY THE UNEXPIRED PORTION OF THE ORIGINAL WARRANTY. Defective parts must be returned to Suburban, transportation charges prepaid (Suburban is not responsible for any freight charges), where Suburban will establish to its sole satisfaction that the part was or became defective under normal use and maintenance. This warranty covers replacement of defective parts only, and excludes all labor charges. THIS WARRANTY APPLIES ONLY TO THE PRODUCT IN ITS ORIGINAL INSTALLATION LOCATION AND IS VOIDED IF THE PRODUCT IS REINSTALLED ELSEWHERE.

TWO YEAR LIMITED WARRANTY ON MODULE BOARD

During the second year after the date of original installation, Suburban further warrants the Module Board against defects in material and workmanship under normal use and maintenance. A replacement module board will be provided under the same conditions as stated in the one year warranty.

FIVE YEAR LIMITED WARRANTY ON HEAT EXCHANGER

During the second through fifth years after the date of original installation, Suburban further warrants the heat exchanger against defects in material and workmanship under normal use and maintenance. A replacement heat exchanger will be provided under the same conditions as stated in the one year warranty.

LIMITATION OF WARRANTIES

ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH EACH LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER OR OTHER PERSON WHOMSOEVER.

ALL REPLACEMENT PARTS ASSUME AS THEIR WARRANTY PERIOD, ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.

SUBURBAN WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the owner's operation and installation manual including cleaning of component parts; such as, orifices and burners.
2. Failure to start and/or operate due to voltage or gas conditions, blown fuses, open circuit breakers, loose or disconnected wires, low gas pressure or other damages due to inadequacy or interruption or electrical service or gas supply.
3. Damage or repairs required as a consequence of faulty or incorrect installation not in conformance with Suburban instructions.
4. Damage as a result of floods, winds, lightning, accidents, corrosive atmosphere such as may be found in greenhouse applications, or other conditions beyond the control of Suburban.
5. Labor charges, diagnostic charges and/or costs incurred in gaining access to the furnace.
6. Parts or accessories not supplied by Suburban.
7. Damage or repairs needed as a consequence of any misapplication, abuse, unreasonable use, unauthorized alteration, improper service, improper operation or failure to provide reasonable and necessary maintenance.
8. Freight, handling and/or transportation charges incurred from parts replacements.
9. Fuel or electricity costs or increases in such costs for any reason whatsoever.
10. Suburban products whose serial number has been altered, defaced or removed.
11. Suburban products installed or warranty claims originating outside the Continental U.S.A., Alaska, Hawaii and Canada.
12. ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY, ECONOMIC OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER (INCLUDING CROP LOSSES IN GREENHOUSE INSTALLATIONS). Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.
 - NO REPRESENTATIVE, DEALER OR OTHER PERSON IS AUTHORIZED TO ASSUME FOR SUBURBAN MANUFACTURING COMPANY ANY ADDITIONAL, DIFFERENT OR OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS SUBURBAN PRODUCT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IF YOU HAVE A PRODUCT PROBLEM

FIRST:

Contact the installer of the equipment or the selling dealer for warranty service. If his name is not known, call your builder or general contractor if yours is a new structure.

SECOND:

Contact the Suburban distributor who supplied the product to the installer/dealer.

THIRD:

Contact: Suburban Manufacturing Company
Customer Service Department
676 Broadway Street
Dayton, Tennessee 37321
(423) 775-2131
Fax: (423) 775-7015