

Square Valve

Installation Instructions

1. First, make sure you have the old valves removed completely. All components pictured here should be removed.
2. Grease the o-ring on each of the new valves before installation.
3. Using a small socket that fits over the "nipple" on the top of the valve cage, push each valve gently into the valve cavity until you feel it seat. ***typically a 1/" drive, deep-well socket will work for this installation.
4. When the valves are fully seated, reassemble the pump.



FOR QUESTIONS AND CONCERNS, CONTACT US AT

www.allpartsinc.com

Call Us: 1-269-685-4123

Text Us: 1-269-447-0412