


DVT36 DVT39 DVT43

Owner's Manual

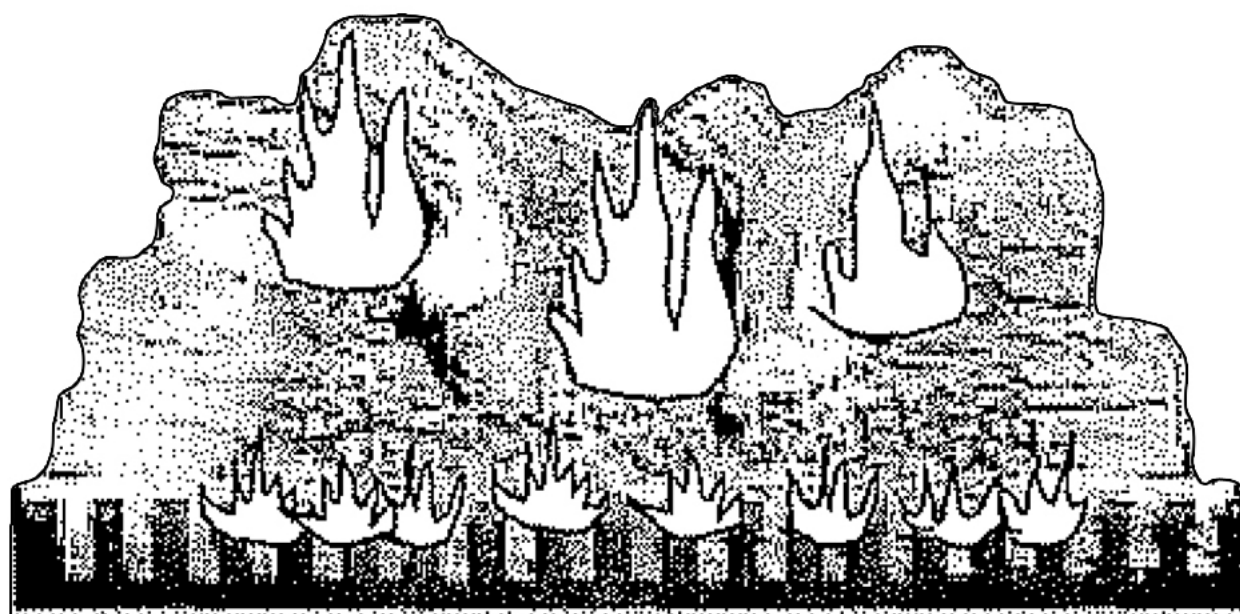

Pictured: DVT36

FOR QUESTIONS AND CONCERNS, CONTACT US AT


Allparts Equipment &
Accessories Inc.

www.allpartsinc.com

Call Us: 1-269-685-4123

Text Us: 1-269-447-0412

MAJESTIC **VERMONT** *Castings*

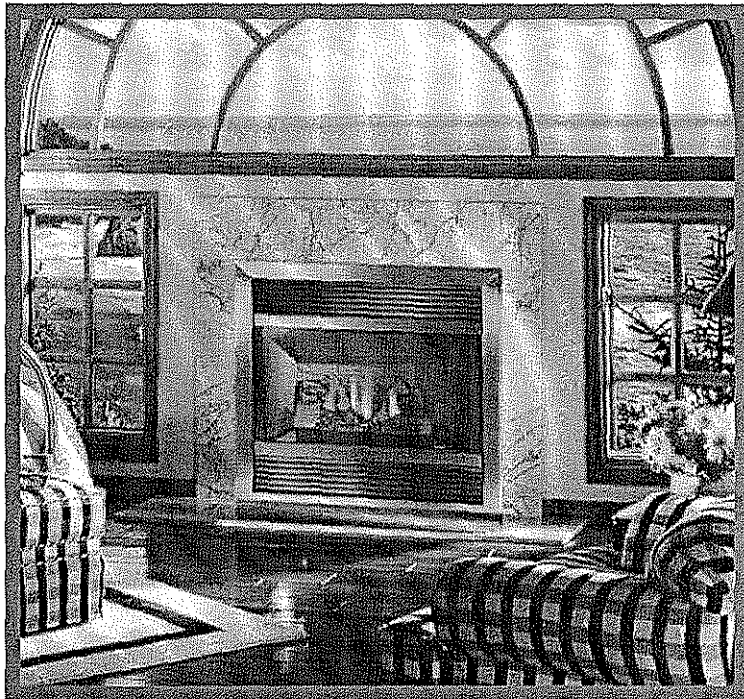

**Top Vented
Direct Vent
Models**

**DVT36
DVT39
DVT43**

Installation Instructions & Homeowner's Manual

WARNING! IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

FOR YOUR SAFETY

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electric switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from your neighbours phone. Follow the gas suppliers instructions.
- If you cannot reach your gas supplier call the fire department.

FOR YOUR SAFETY

**DO NOT STORE
OR USE GASOLINE OR OTHER
FLAMMABLE VAPOURS AND LIQUIDS
IN THE VICINITY OF THIS OR ANY
OTHER APPLIANCE.**

- * Installation and service must be performed by a qualified installer, service agency or your gas supplier.



**The Vermont Castings
Majestic Products Company**

410 Admiral Blvd., Mississauga
Ontario, Canada L5T 2N1

www.majesticproducts.com / www.vermontcastings.com



INSTALLER: DO NOT DISCARD THIS MANUAL - LEAVE IT FOR HOMEOWNER

10000446
11/01 Rev. 2

TABLE OF CONTENTS

PLEASE READ THE INSTALLATION & OPERATING INSTRUCTIONS BEFORE USING APPLIANCE.

Thank you and congratulations on your purchase of a Majestic fireplace

IMPORTANT: Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible fire hazard and will void the warranty.

Installation Instructions	3
General Information	3
Important Curing/Burn Information	3
Locating Your Fireplace	3
Fireplace Dimensions	4
Mantels	5
Mantel Chart	5
Clearance to Combustibles	5
Framing & Finishing	5
Final Finishing	6
Hearth	6
Gas Specifications	6
Gas Line Installation	6
Remote Switch Installation	7
General Venting Information	8
Termination Clearances	9
Vertical Sidewall Installations	9
Vertical Sidewall Applications	10
General Information on Assembling Vent Pipes	11
How To Use the Vertical Sidewall Vent Graph	12
Vent Pipe Assembly	12
Below Grade Installations	14
Vertical Through the Roof Applications	14
To Install Vertical Venting	15
Operating Instructions	16
General Glass Information	16
Louvre Removal	16
Glass Cleaning	16
Glass Frame Removal	16
Installation of Logs	16
Ember Material Placement	17
Lava Rock	17
Maintenance	17
Cleaning the Standing Pilot Control System	17
Flame Adjustment	18
Flame Characteristics	18
Inspecting the Venting System	18
Lighting and Operating Instructions (820 Millivolt Gas Valve)	19
Troubleshooting Gas Control (820 Millivolt Gas Valve)	20
Replacement Parts List	21
Replacement Parts Pictorial	22
Optional Accessories Kit	23
Fan Kit - FK24	23
Wiring Instructions - A	23
Wiring Instructions - B - Electrical Box EB1	24
Ceramic Refractory Installation	24
Bay Window Installation	25
Remote Control	25
DVT SERIES - Venting Components	26

INSTALLATION AND OPERATING INSTRUCTIONS

This gas appliance should be installed by a qualified installer in accordance with local building codes and with current CAN / CGA-B149 (1 or 2) Installation codes for Gas Burning Appliances and Equipment.

FOR U.S.A Installations follow local codes and/or the current National Fuel Gas Code. ANSI Z223.1.

FOR SAFE INSTALLATION AND OPERATION OF YOUR MAJESTIC DIRECT VENT FIREPLACE PLEASE NOTE THE FOLLOWING:

1. This appliance gives off high temperatures and should be located out of high traffic areas and away from furniture and draperies.
2. Children and adults should be alerted to the hazards of the high surface temperatures of this appliance and should stay away to avoid burns or ignition of clothing.
3. Children should be carefully supervised when they are in the same room as your appliance.
4. Under no circumstances should this appliance be modified. Parts having to be removed for servicing should be replaced prior to operating this appliance again.
5. Installation and any repairs to this appliance should be carried out by a qualified service person. A professional service person should be contacted to inspect this appliance annually. Make it a practice to have all of your gas appliances checked annually. More frequent cleaning may be required due to excess lint and dust from carpeting, bedding material, etc.
6. Control compartments, burners and air passages in this appliance should be kept clean and free of dust and lint. Make sure that the gas valve and pilot light are turned off before you attempt to clean this unit.
7. The venting system (chimney) of this appliance should be checked at least once a year and if needed your venting system should be cleaned.
8. Keep the area around your appliance clear of combustible materials, gasoline and other flammable vapour and liquids. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung in the area of it.
9. Under no circumstances should any solid fuels (wood, coal, paper or cardboard etc.) be used in this appliance.
10. The flow of combustion and ventilation air must not be obstructed in any way.
11. When the appliance is installed directly on carpeting, vinyl tile or any combustible material other than wood, this appliance must be installed on a metal or wood panel extending the full width and depth of the appliance.
12. This appliance requires adequate ventilation and combustion air to operate properly.

IMPORTANT: PLEASE REVIEW THE FOLLOWING CAREFULLY


It is normal for fireplaces fabricated of steel to give off some expansion and/or contraction noises during the start up or cool down cycle. Similar noises are found with your furnace heat exchanger or car engine.

It is not unusual for your **MAJESTIC** gas fireplace to give off some odour the first time it is burned. This is due to the curing of the paint and any undetected oil from the manufacturing process.

Please ensure that your room is well ventilated - open all windows.

It is recommended that you burn your **MAJESTIC** fireplace for a least six (6) hours the first time you use it. If optional fan kit has been installed, place fan in the "OFF" position during this time.

LOCATING YOUR MAJESTIC GAS FIREPLACE

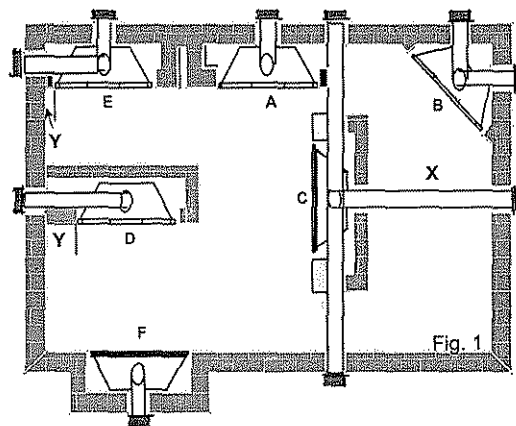



- | | |
|-------------------------|-----------------------|
| A) Flat on wall | B) Cross corner |
| C) **Island | D) *Room divider |
| E) *Flat on wall corner | F) Chase installation |
| | Y) 6" Minimum |

Note (Fig. 1):




** Island (C) and Room Divider (D) installation is possible as long as the horizontal portion of the vent system (X) does not exceed 20 feet (6096mm). See details in Venting Section.

* When you install your Majestic fireplace in (D) Room divider or (E) Flat on wall corner positions (Y), a minimum of 6 inches (153mm) clearance must be maintained from the perpendicular wall and the front of the appliance.

FIREPLACE DIMENSIONS

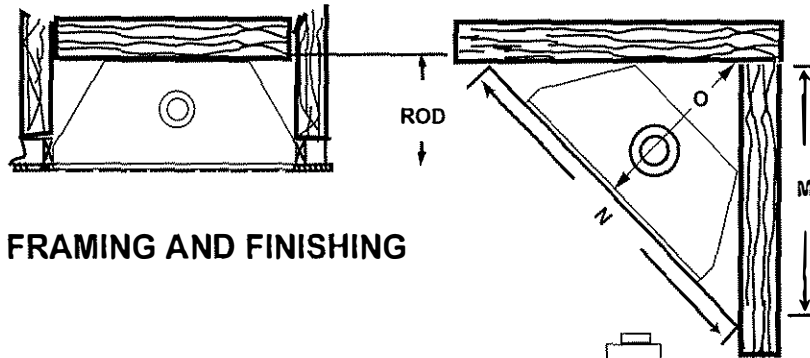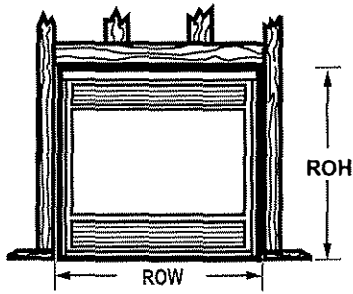

FRAMING AND FINISHING

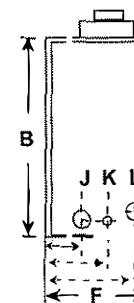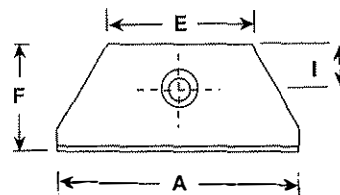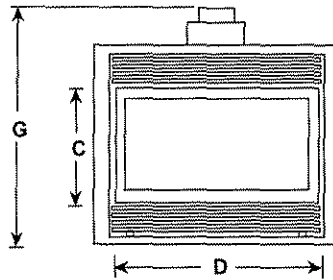

MODEL DVT36

A	36"	914mm
B	34 1/4"	870mm
C	21"	533mm
D	33"	838mm
E	20"	508mm
F	14"	356mm
G	37 1/4"	946mm
I	6"	152mm
J	5 1/4"	132mm
K	7 3/4"	197mm
L	10 3/4"	274mm
M	36"	914mm
N	51"	1295mm
O	25 1/2"	648mm

FRAMING DIMENSIONS

ROD	14 1/2"	362mm
ROW	36 1/2"	927mm
ROH	34 3/4"	883mm

Table 1

MODEL DVT39

A	39"	991mm
B	34 1/4"	870mm
C	21"	533mm
D	36"	914mm
E	24"	610mm
F	16"	406mm
G	37 1/4"	946mm
I	7 1/2"	190mm
J	5 1/2"	140mm
K	8"	203mm
L	12 1/2"	318mm
M	40"	1016mm
N	56"	1422mm
O	28 9/16"	726mm

FRAMING DIMENSIONS

ROD	16 1/2"	419mm
ROW	39 1/2"	1003mm
ROH	35"	889mm

Table 2

MODEL DVT43

A	43"	1092mm
B	37"	940mm
C	23 1/2"	597mm
D	40"	1016mm
E	31"	797mm
F	16"	406mm
G	40"	1016mm
I	7"	178mm
J	5 1/2"	140mm
K	8"	203mm
L	12 1/2"	318mm
M	44"	1118mm
N	62 1/4"	1581mm
O	31"	790mm

FRAMING DIMENSIONS

ROD	16 1/2"	419mm
ROW	43 1/2"	1105mm
ROH	37 1/2"	953mm

Table 3

MANTELS

Depending on the width of the mantel it may be installed higher or lower from the top of the unit opening. See drawing and chart below for proper installation height of your combustible mantel piece. Non-combustible mantels may be installed at any height above the appliance opening.



When using paint or lacquer to finish the mantel, such paint or lacquer must be heat resistant to prevent discolouration.

MANTEL CHART

Ref.	Mantel Depth	Ref.	Mantel From Top Louvre	Mantel Leg from Fireplace Side
V	10" (254 mm)	A	12" (305 mm)	10" (254mm)
W	8" (203 mm)	B	10" (254 mm)	8" (203mm)
X	6" (152 mm)	C	8" (203 mm)	6" (152mm)
Y	4" (101 mm)	D	6" (152 mm)	4" (101mm)
Z	2" (51 mm)	E	4" (101 mm)	2" (51mm)

Table 4

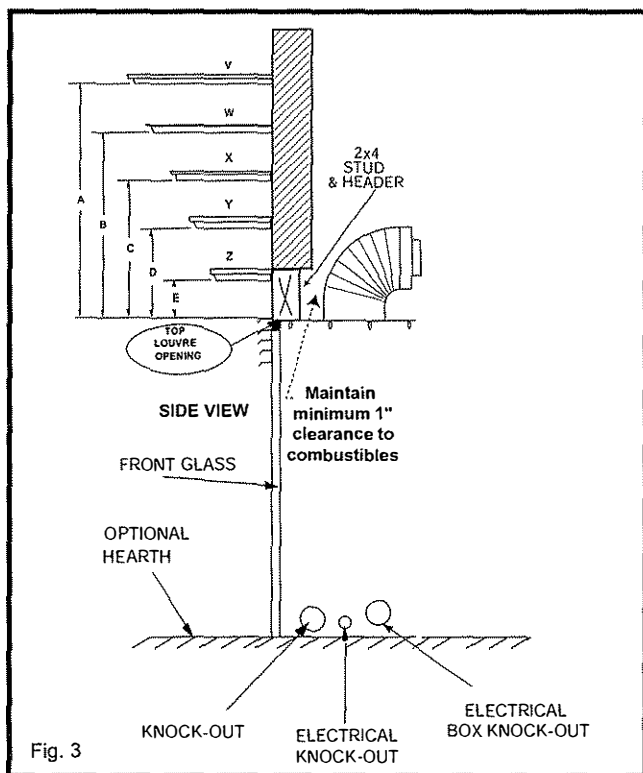


Fig. 3

CLEARANCE TO COMBUSTIBLES

Back 0 mm/0 inches
Side 0 mm/0 inches
Floor 0 mm/0 inches
Top 0 mm/0 inches

Table 5

FRAMING AND FINISHING

1. Choose unit location.
2. Place unit into position and secure to floor with 1-1/2" screws, or nails. The holes to secure the unit to the floor are located just behind the access door grill on the left and right hand side of the unit.
3. Frame in fireplace with a header across the top. It is important to allow for finished face when setting the depth of the frame.
4. Attach fireplace to frame using adjustable frame drywall strips (located behind access door for shipping). Preset depth to suit facing material (adjustable to 1/2", 5/8" or 3/4" depths). Fig. 4.
5. Screw through slotted holes in drywall strip and then screw into pre-drilled holes on fireplace side. Measure from face of fireplace to face of drywall strip to confirm the final depth. (Fig. 5 & 6)

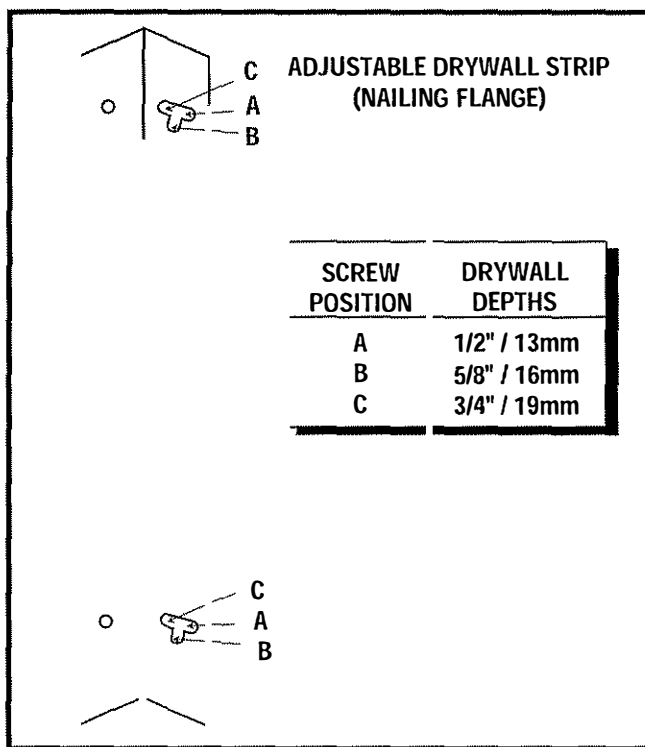


Fig. 4

Fig. 5


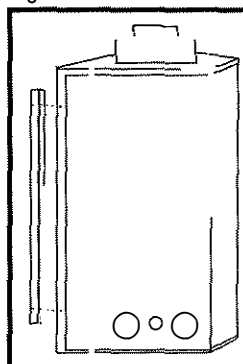


Fig. 6

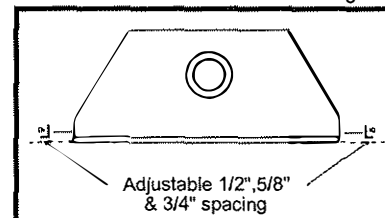

FINAL FINISHING

Non-combustible materials such as brick and tile can be extended over the face of the unit. If a Trim Kit is going to be installed, brick and tile will have to be installed flush with the side of this appliance.

HEARTH

A hearth is not mandatory but it is recommended for aesthetic purposes. We recommend a non-combustible hearth which projects out 12" (305 mm) or more in front of this unit.



Cold climate installation recommendation: When installing this unit against a non-insulated exterior wall or chase, it is mandatory that the outer walls be insulated to conform to applicable insulation codes.

GAS SPECIFICATIONS

MODEL	FUEL	GAS CONTROL	MAX. INPUT B.T.U.H.	MIN. INPUT B.T.U.H.
DVT36RN	Natural Gas	Millivolt Hi/Lo	25,000	17,500
DVT36RP	Propane Gas	Millivolt Hi/Lo	25,000	18,750
DVT39RN	Natural Gas	Millivolt Hi/Lo	30,000	21,000
DVT39RP	Propane Gas	Millivolt Hi/Lo	30,000	22,500
DVT43RN	Natural Gas	Millivolt Hi/Lo	33,000	23,100
DVT43RP	Propane Gas	Millivolt Hi/Lo	31,500	23,625

GAS INLET & MANIFOLD PRESSURES

	NATURAL	LP (Propane)
Input Minimum	4.5" wc	11" wc
Input Maximum	7" wc	13" wc
Manifold Pressure	3.5" wc	10" wc


Table 7

This appliance may be installed in an aftermarket permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless an available certified kit is used.

DVT36/DVT39/DVT43 CERTIFIED TO

ANSI Z21.88-1998 / CSA 2.33 - M98
Vented Gas Fireplace Heaters



Do not use this appliance if any part of it has been under water. Immediately call a qualified service technician to inspect the unit and replace any part of the control which has been under water.

The installation of your Majestic Fireplace must conform with local codes, or in the absence of local codes, with National Fuel Gas Code, ANSI Z223.1 — latest edition, or CAN 1 B1-149.1 and .2 Installation Code. (EXCEPTION: Do not derate this appliance for altitude. Maintain the manifold pressure at 3.5 inches W.C. for Natural Gas and 10 inches W.C. for LP gas.)

This appliance may be installed in an aftermarket.

GAS LINE INSTALLATION



When purging gas line, the front glass must be removed.

The gas pipeline can be brought in through the right side, left side of the appliance as well as the bottom. Knockouts are provided at convenient locations to allow for the gas pipe installation and testing of any gas connection. It is most convenient to bring the gas line in from the right side, as this allows fan installation or removal without disconnecting the gas line.



The gas line connection can be made with properly tinned 3/8" copper tubing, 3/8" rigid pipe or an approved flex connector.



Always check for gas leaks with a mild soap and water solution. **Do not use an open flame for leak testing.**

The gas control is equipped with a captured screw type pressure test point, therefore it is not necessary to provide a 1/8" test point up stream of the control.

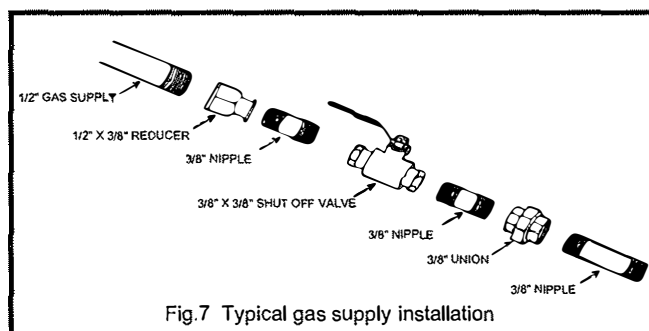



Fig.7 Typical gas supply installation

When using copper or flex connector use only approved fittings. When using black iron pipe **always** provide a union so that gas line can be easily disconnected for burner or fan servicing. See Fig. 7. See gas specification for pressure details and ratings.

The fireplace valve must not be subjected to any test pressures exceeding 1/2 psi. Isolate or disconnect this or any other gas appliance control from the gas line when pressure testing.

REMOTE SWITCH INSTALLATION

1. Thread wire through the electrical knockout located on either side of unit. Do not cut wire or insulation on metal edges. Ensure that wire is protected. Run the other end to a conveniently located wall receptacle box.
2. Attach wire to switch and install switch into receptacle box. Attach cover plate to switch.
3. Connect wiring to gas valve. (Fig. 8)

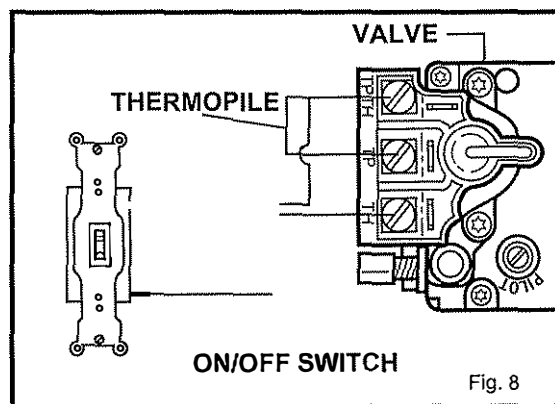

ALTERNATE SWITCH LOCATION:

Remote switch can be installed on either side of the access door. Simply mount the switch to the switch bracket provided. Screw the bracket on either side of the frame, lining up the screws with the pre-punched holes. (Fig. 9)

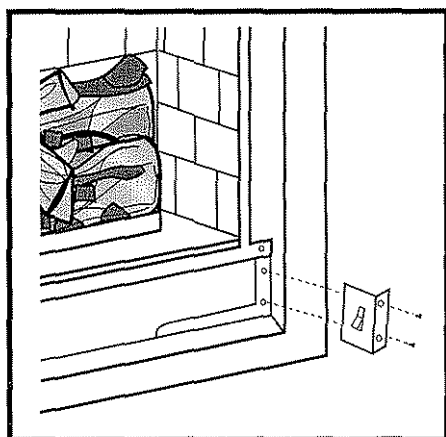


Fig. 9



CAUTION: DO NOT WIRE MILLIVOLT REMOTE WALL SWITCH FOR GAS APPLIANCE TO A 120V POWER SUPPLY. FOR LIGHTING INSTRUCTIONS PLEASE TURN TO PAGE 19.

GENERAL VENTING INFORMATION

Your fireplace is approved to be vented either through the side wall, or vertical through the roof.

- Only Majestic venting components specifically approved and labelled for this fireplace may be used.
- Minimum clearances between vent pipes and combustible materials is one (1") inch (25 mm), except where stated otherwise.
- Venting terminals shall not be recessed into a wall or siding.
- Horizontal venting must be installed on a level plane without an inclining or declining slope.


There must not be any obstruction such as bushes, garden sheds, fences, decks or utility buildings within 24" from the front of the termination hood.

Do not locate termination hood where excessive snow or ice build up may occur. Be sure to check vent termination area after snow falls, and clear to prevent accidental blockage of venting system. When using snow blowers, make sure snow is not directed towards vent termination area.

Location of Vent Termination

It is imperative that the vent termination be located observing the minimum clearances as shown on this page.

*Check with local codes or in absence of same with CAN/CGA B149 (.1 or .2) Installation Codes (1991) for Canada or for U.S.A. Installations follow the current National Fuel Gas Code, ANSI Z223.1.

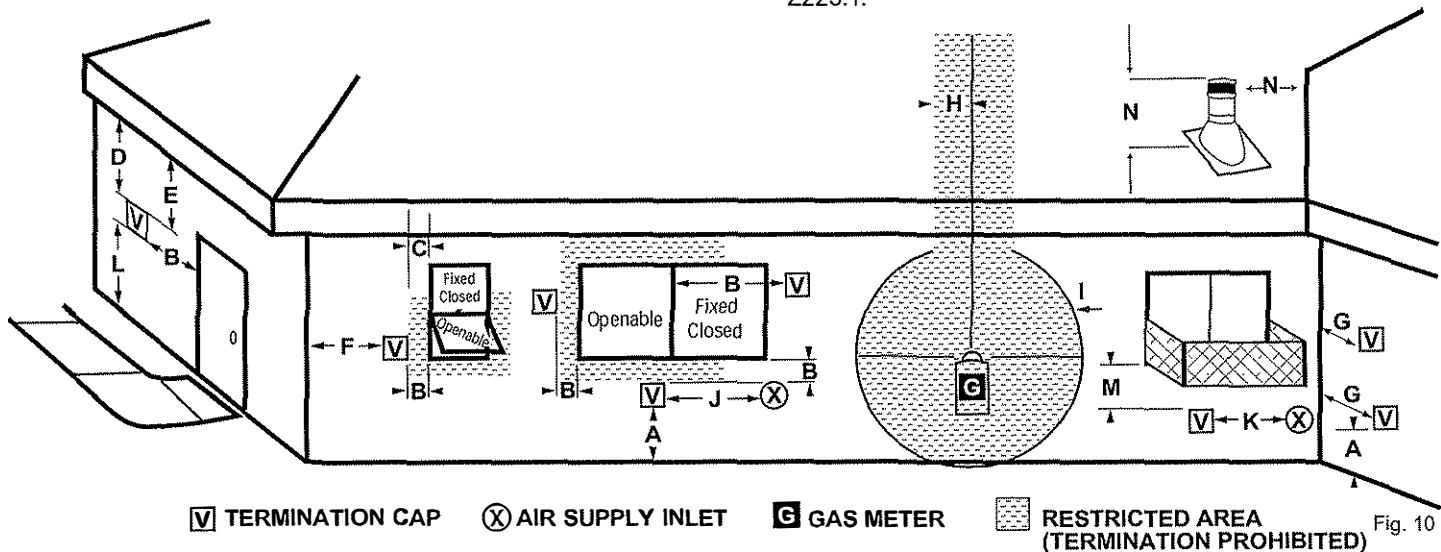

- A = clearance above grade, veranda, porch, deck, or balcony [* 12 inches (305mm) minimum]
- B = clearance to window or door that may be opened 12" (306mm).
- C = clearance to permanently closed window [minimum 12 inches (305mm) recommended to prevent condensation on window]
- D = vertical clearance to ventilated soffit located above the termina/ within a horizontal distance of 24 inches (610mm) from the centre-line of the terminal [18 inches (458mm) minimum]
- E = clearance to unventilated soffit [12 inches (305mm) minimum]
- F = clearance to outside corner see next page
- G = clearance to inside corner see next page
- H = * not to be installed above a meter/regulator assembly within 36 inches (914mm) horizontally from the centre-line of the regulator

- I = clearance to service regulator vent outlet [*72 inches (1828mm) minimum]
- J = clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other fireplace [*12 inches (305mm) minimum]
- K = clearance to a mechanical air supply inlet [* 72 inches (1828mm) minimum]
- L = † clearance above paved side-walk or a paved driveway located on public property [*84 inches (2133mm) minimum]
- M = clearance under veranda, porch, deck [*12 inches (305mm) minimum ‡]
- N = Clearance above a roof shall extend a minimum of 24" (610mm) above the highest point when it passes through the roof surface, and any other obstruction within a horizontal distance of 18" (450mm).

† a vent shall not terminate directly above a side-walk or paved driveway which is located between two single family dwellings and serves both dwellings *

‡ only permitted if veranda, porch, deck, is fully open on a minimum 2 sides beneath the floor *


* as specified in CAN/CGA B149 (.1 or .2) Installation Codes (1991) for Canada or for U.S.A. Installations follow the current National Fuel Gas Code, ANSI Z223.1.

Note: Local codes or regulations may require different clearances.


Termination Clearances

Termination clearances for buildings with combustible and noncombustible exteriors.


Inside Corner

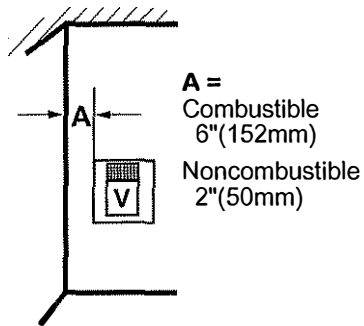


Outside Corner

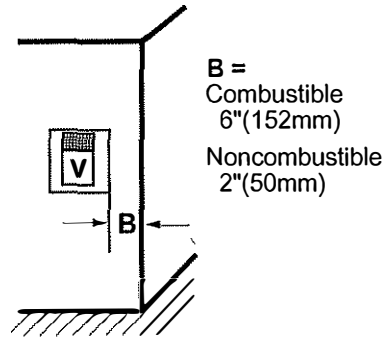


Recessed Location

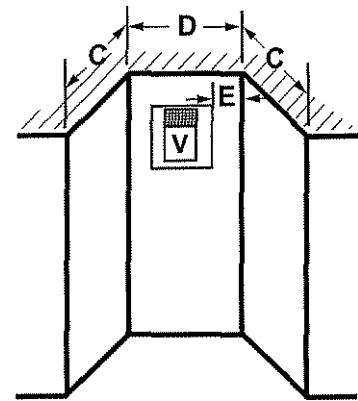

Balcony - with no side wall

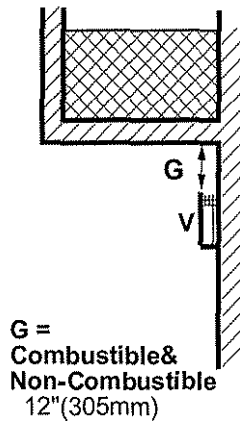

Balcony - with perpendicular side wall

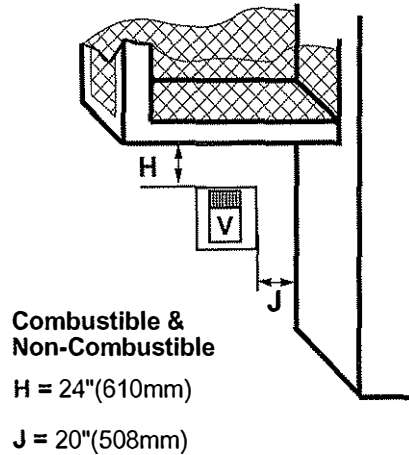

C = Maximum depth of 48" (1219mm) for recessed location.

D = Minimum width for back wall of a recessed location.
 Combustible 38"(965mm)
 Noncombustible 24"(610mm)

E = Clearance from corner in recessed location.
 Combustible 6"(152mm)
 Noncombustible 2"(50mm)


Fig. 11

GENERAL INFORMATION ON ASSEMBLING THE VENT PIPES

A - VENT PIPES WITH CRIMPED ENDS

Before joining elbows and pipes apply a bead of high temperature sealant to crimped end of 4" and 7" elbow or pipe. (Fig. 12)

Join pipes and secure joints with three (3) sheetmetal screws. (See Fig. 12) Wipe off excess sealant.

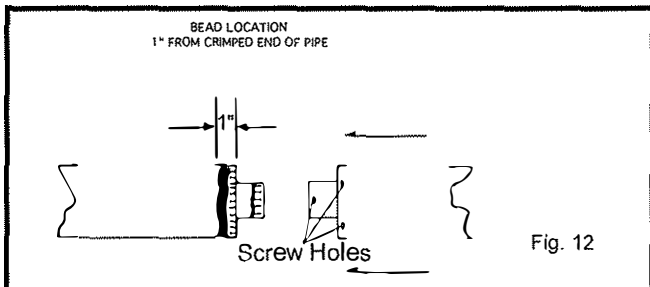

IMPORTANT Minimum clearance between vent pipes and combustible materials is one (1") inch (25 mm) on bottom, sides and top.




Only Majestic venting components specifically approved and labelled for this fireplace may be used.

B - VENT PIPES WITH TWIST LOCK JOINT

When using CFM Majestic twist lock pipe it is not necessary to use silicone to seal the twist lock joints. The only areas that need silicone are the collars on the fireplace, the telescoping pipe (if used) and the horizontal termination connection (when necessary).

To join the pipes together, simply align the beads of the male end with the grooves of the female end and while joining the two together, twist the pipe until the flange on the female end touches the external bead on the male end. Secure the joints with three sheet metal screws.

To make easier to assembly, we suggest putting lubricant (vaseline or similar) on the male end of the twist lock pipe.

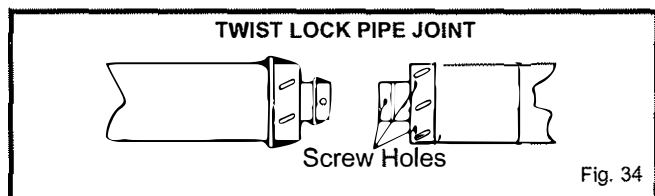

Crimped pipe and new twist lock pipe.

It is possible to use CFM Majestic 4" & 7" direct vent crimped pipe and elbows in your system, with the new CFM Majestic 4" & 7" Direct Vent Twist Lock Pipe.

You must use the crimped pipe first in the system off the appliance.

1. Install expanded end of crimped pipe or elbow onto the 4" & 7" collars off the fireplace with high temperature sealant and 3 screws.
2. If you wish to continue your system with your 4" & 7" crimped pipe or elbow apply high temperature sealant on crimped end of pipe at 2" in from end and fasten the next pipe with 3 sheet metal screws.
3. When you wish to continue your system with the New Twist Lock pipe or elbow, apply high temperature sealant on crimped end of pipe at 1-1/2" from end, and slip the female end of the twist lock pipe over the crimped end of the pipe and secure with 3 sheet metal screws. Continue the installation with twist lock pipe placing the female end over the male end and fastening with 3 sheet metal screws.

You do not have to use high temperature sealant when using twist lock pipe between the female and male ends of the twist lock.

VERTICAL SIDEWALL APPLICATIONS



Vent Starter Kit 7DVSK must be used in Vertical Sidewall installations.

Since it is very important that the venting system maintain its balance between the combustion air intake and the flue gas exhaust, certain limitations as to vent configurations apply and must be strictly adhered to.

The graph showing the relationship between vertical and horizontal side wall venting will help to determine the various vent lengths allowable. Fig. 17.



Minimum clearance between ventpipes and combustible materials is one (1") inch (25 mm) on top, bottom and sides unless otherwise noted.



When vent termination exits through foundation less than 20" below siding outcrop, the vent pipe must flush up with the siding. A 7DVSS must also be used.

It is always best to locate the fireplace in such a way that minimizes the number of offsets and horizontal vent length.



The horizontal vent run refers to the total length of vent pipe from the flue collar of the fireplace to the face of the outer wall.



Horizontal plane means no vertical rise exists on this portion of the vent assembly.



For some installations, it may be desirable to have some amount of the horizontal vent run immediately after the fireplace. A vertical rise must be used but can be located anywhere in the vent system, to meet the perimeters identified in the venting graph.

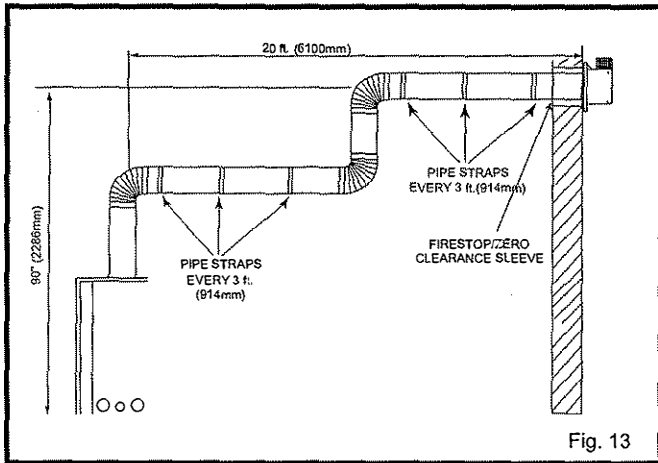


Fig. 13

The maximum number of 90 degree elbows per side wall installation is three (3).

The maximum number of 45 degree elbows permitted per side wall installation is two (2). These elbows can be installed in either the vertical or horizontal run.

The maximum horizontal vent length is 36" (914mm) when 90° elbow is installed directly onto fireplace.

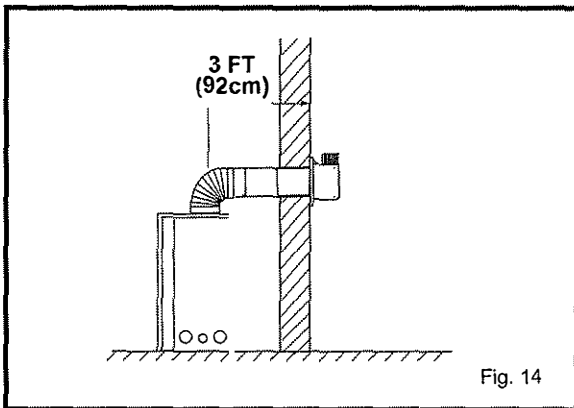


Fig. 14



For each 45 degree elbow installed in the horizontal run (while maintaining a constant horizontal plane), the length of the horizontal run MUST be reduced by 18" (457mm). This does not apply if the 45 degree elbows are installed on the vertical part of the vent system.



If a 90 degree elbow is used in the horizontal vent run (level height maintained) the maximum horizontal vent length is reduced by 36 inches. Fig. 16. This does not apply if the 90 degree elbows are used to increase or redirect a vertical rise.

The maximum number of elbow degrees in a system is 270° (Fig. 15)

Sample:	1	-	90°
	2	-	45°
	3	-	45°
	4	-	90°
Total			270°

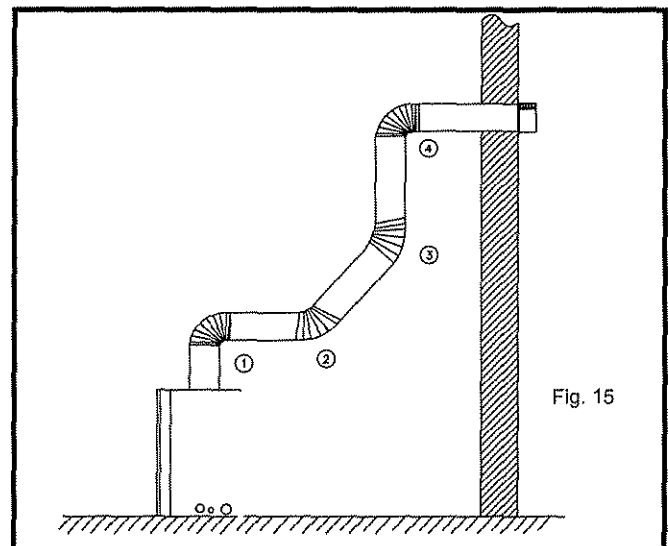


Fig. 15

Example: According to the vent chart the maximum horizontal vent length is 20' when the vertical height is 7.5' from fireplace base height. If one 90 degree elbow is required in the horizontal vent it must be reduced to 17'.

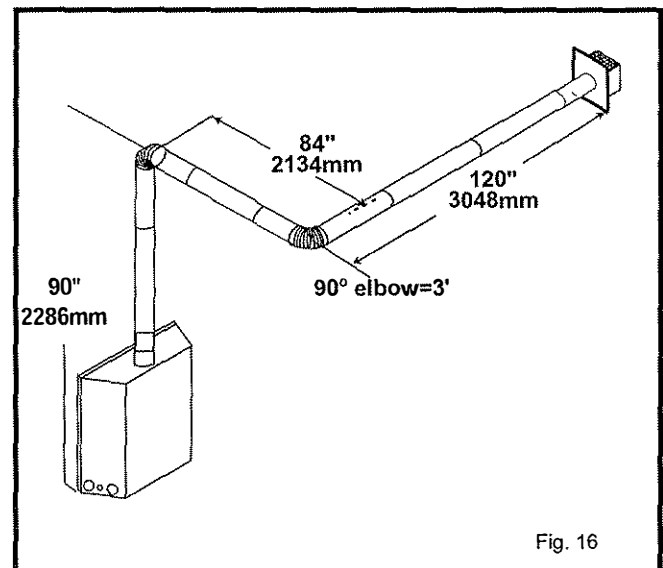


Fig. 16

HOW TO USE THE VENT GRAPH

1. Determine the height of the centre of the horizontal vent pipe exiting through the outer wall. Using this dimension on the Sidewall Vent Graph (Fig. 17), locate the point it intersects with the slanted graph line.
2. From the point of this intersection, draw a vertical line to the bottom of the graph.
3. Select the indicated dimension, and position the fireplace in accordance with same.

EXAMPLE A:

If the vertical dimension from the floor of the unit is 11 feet (3352mm) the horizontal run to the face of the outer wall must not exceed 14 feet (4267mm).

EXAMPLE B:

If the vertical dimension from the floor of the unit is 7 feet (2133mm), the horizontal run to the face of the outer wall must not exceed 8-1/2 feet (2590mm).

VERTICAL SIDEWALL VENTING GRAPH (Dimensions in Feet)

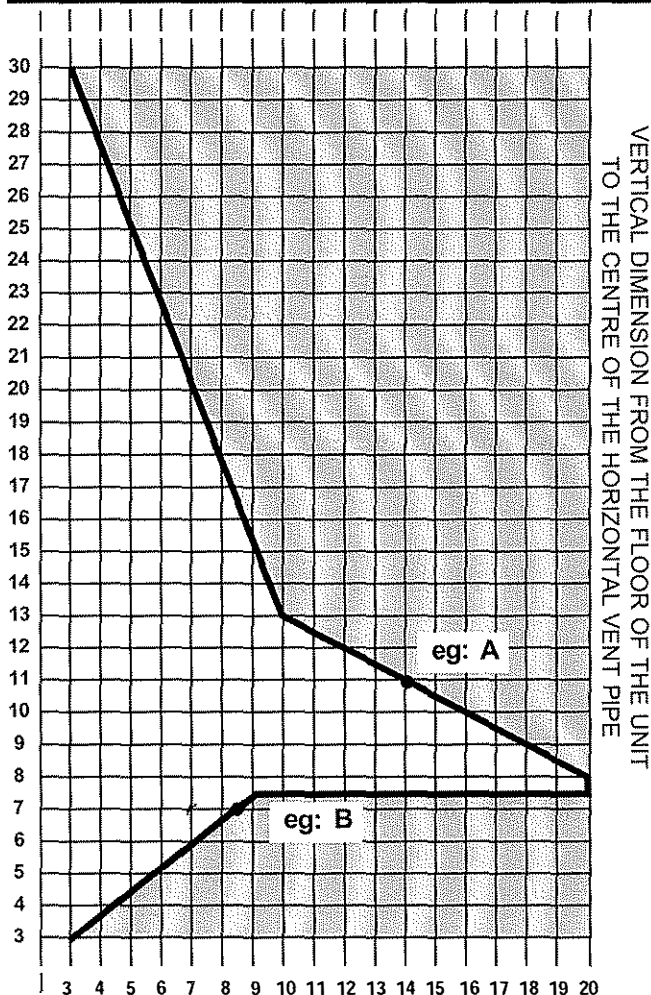


Fig. 17

SEE PAGE 14 FOR VENTING
REQUIREMENTS FOR SNORKELS.


VERTICAL SIDEWALL INSTALLATION

STEP 1


Locate vent opening on the wall. It may be necessary to first position the fireplace and measure to obtain hole location. Depending on whether the wall is combustible or non-combustible, cut opening to size.
(For combustible walls first frame in opening).

VERTICAL SIDEWALL APPLICATION

Vent Opening — Combustible Wall Fig. 18

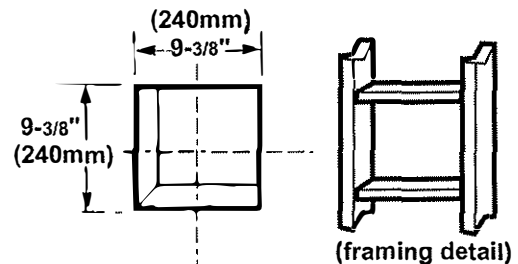

Vent Opening — Noncombustible Wall Fig. 19

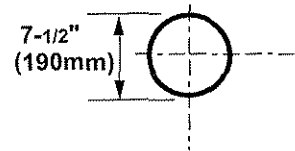

COMBUSTIBLE WALLS (Fig. 18): Cut a 9-3/8"H x 9-3/8"W (240 mm x 240 mm) hole through the exterior wall and frame as shown.
NON-COMBUSTIBLE WALLS (Fig. 19): Hole opening must be 7.5" (190 mm) in diameter.

STEP 2

Fig. 20. Measure wall thickness and cut adjustable zero clearance sleeve parts to proper length (MAXIMUM 12"/305mm). Adjust sleeve to minimum (9-3/8" x 9-3/8") and attach to firestop with #8 sheet metal screws (supplied). Install firestop assembly.



Zero clearance sleeve is only required for combustible walls.

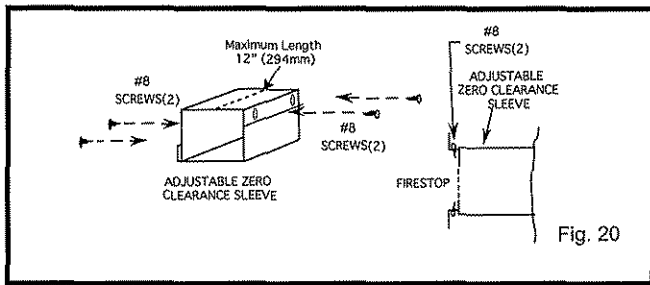


Fig. 20

STEP 3

(Fig. 21) Apply a bead of high temperature sealant to the inner and outer flue collars of the fireplace and using appropriate venting component(s) attach to fireplace with three (3) screws. Follow with the installation of the inner and outer elbow. Again secure joints with three (3) sheet metal screws. Wipe off any excess high temperature sealant.

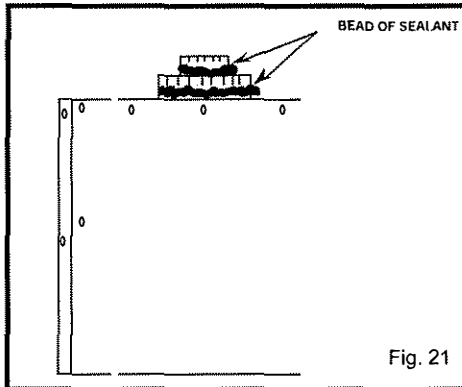


Fig. 21

STEP 4

(Fig. 22) Measure the horizontal length requirement including a 2" (50mm) overlap, i.e. from the elbow to the outside wall finish plus 2" (or the distance required if installing a second 90° elbow).

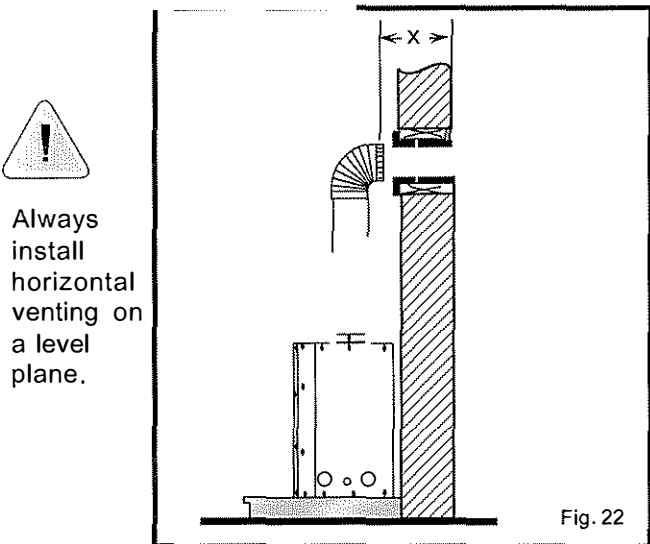


Fig. 22

STEP 5

(Fig. 23) Use the appropriate length of pipe section – telescopic or fixed – and install. The 20" (508mm) section of pipe which goes through the wall is packaged with the 7DVSX/7TDVSK kit, and can be cut to suit if necessary.



Sealing vent pipe and firestop gaps with hi-temperature sealant will restrict cold air being drawn in around fireplace.

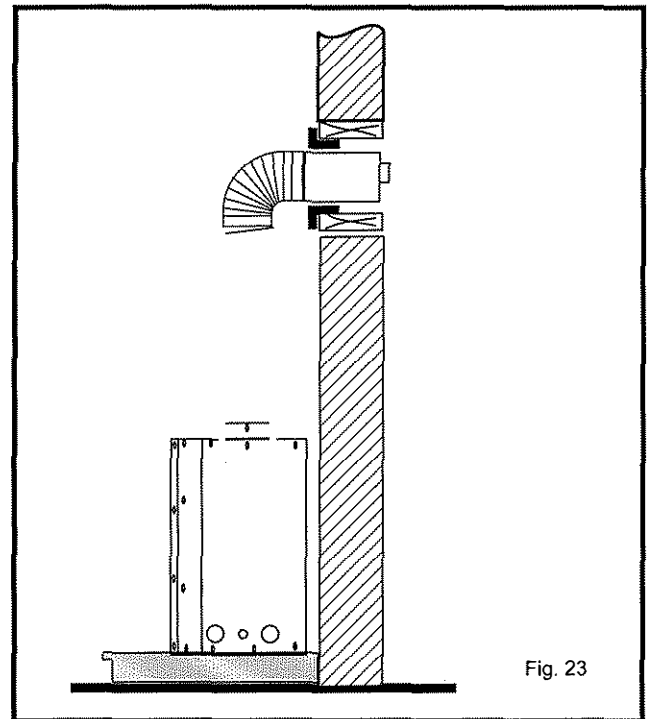


Fig. 23

STEP 8

(Fig. 24) Apply high temperature sealant to 4" and 7" collars one inch away from crimped end. Guide the vent termination 4" and 7" collars into their respective vent pipes. Double check that the vent pipes overlap the collars by 2" (50mm). Secure the termination to the wall with screws provided and caulk around the wall plate to weatherproof.

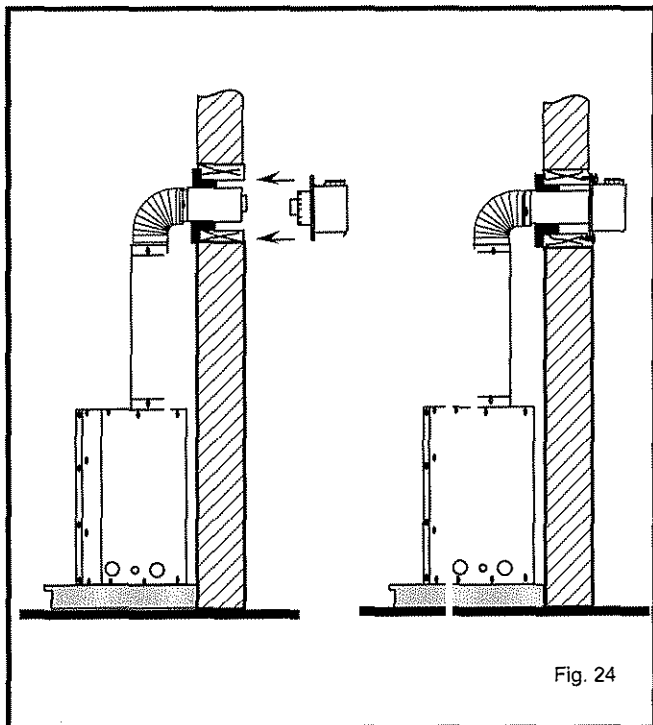


Fig. 24

STEP 7

Support the horizontal pipes every 36 inches (914mm) with metal pipe straps. Make sure that the horizontal vent pipe is installed on a level horizontal plane.

STEP 8

Recheck the fireplace to make sure that it is levelled, properly positioned, and nailed or screwed to the floor.

If applied, the fireplace adjustable frame drywall strips (nailing flanges) should be fastened. See "Framing & Finishing."

BELOW GRADE INSTALLATIONS

When it is not possible to meet the required vent terminal clearances of 12 inches (305mm) above grade level a model #7DVSKS/7TDVSKS vent kit is required. It allows installation depth of down to 7 inches (178mm) below grade level. The 7 inches is measured from the centre of the horizontal vent pipe as it penetrates through the wall.



If venting system is installed below ground, we recommend a window well with adequate and proper drainage.

Ensure sidewall venting clearances are observed.



The maximum horizontal run with 24" (610mm) vertical rise is 36" (914mm) from the back of the fireplace to the face of the exterior wall. See vent graph (Fig. 17) for extended horizontal run if the vertical exceeds 24" (610mm).

1. Establish vent hole through the wall. See page 12
2. Remove soil to a depth of approximately 16" (406mm) below base of snorkel. Install window well (not supplied). Refill hole with 12" (305mm) of coarse gravel leaving a clearance of approximately 4" (100mm) below snorkel. (Fig. 25)
3. Install vent system. See page 12/13, Steps 2 through 5.
4. Ensure a watertight seal is made around the vent pipe coming through the wall.
5. Apply high temperature sealant caulking (supplied) around the 4 and 7 inch 7DVSKS/7TDVSKS snorkel collars.
6. Slide into vent pipe and secure to the wall.
7. Level the soil so as to maintain a 4" (100mm) clearance below snorkel (Fig. 25).


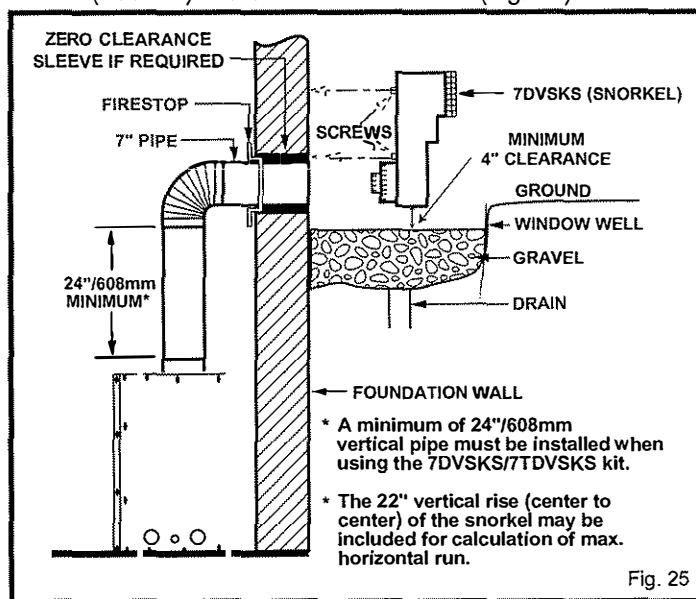


Fig. 25




DO NOT BACK FILL AROUND SNORKEL. SOIL SHOULD NOT BE LESS THAN 4" (100mm) BELOW SNORKEL.

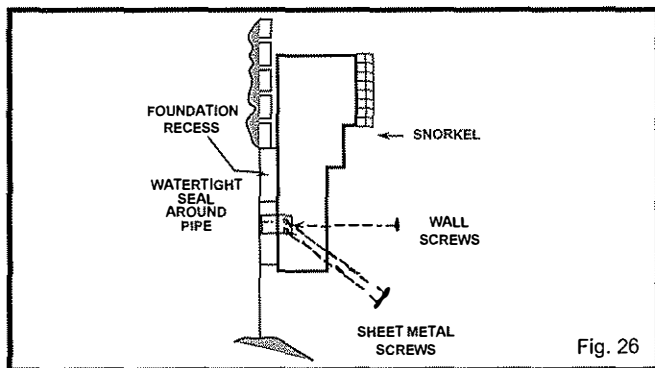

If the foundation is recessed, use recess brackets (not supplied) for securing lower portion of the snorkel. Fasten brackets to wall first and then secure to snorkel with self drilling #8 x 1/2 sheet metal screws. It will be necessary to extend vent pipes out as far protruding wall face (Fig. 26).

VERTICAL THROUGH THE ROOF APPLICATIONS

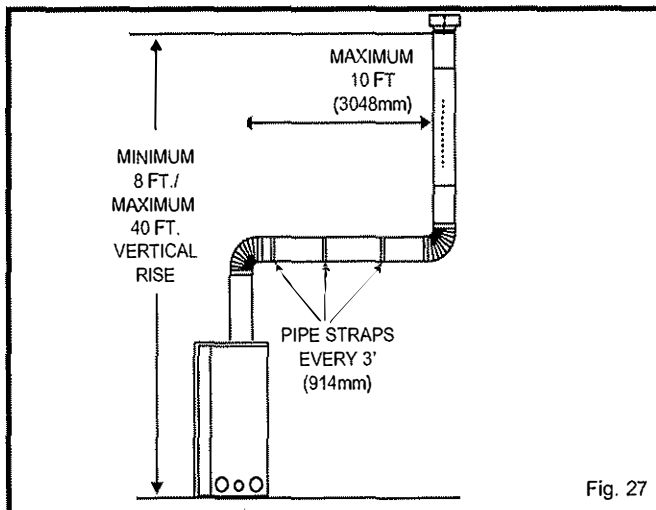





This Gas Fireplace has been approved for,

- Vertical installations up to 40 feet (12 metres) in height. Up to a 10 ft. (3048mm) horizontal vent run can be installed within the vent system using a maximum of three 90° elbows.
- Up to two 45° elbows may be used within the horizontal run. For each 45° elbow used on the horizontal level the maximum horizontal length must be reduced by 18 inches (457mm).

Example: Maximum horizontal length

- | | | | |
|---|---|------------|------------------|
| 0 | - | 45° elbows | 10 ft. (3048mm) |
| 1 | - | 45° elbows | 8.5 ft. (2590mm) |
| 2 | - | 45° elbows | 7 ft. (2133mm) |

- A minimum of an 8 ft. vertical rise.
 - Two sets of 45 degree elbow offsets within these vertical installations. From 0 to a maximum of 8 ft. (2438mm) a vent pipe can be used between elbows. (Fig. 28)
 - 7DVCS must be used to support offsets. (Fig. 29)
- This application will require that you first determine the roof pitch and use the appropriate 7DVSKV/7TDVSKV (A,B or F). (see Venting Components, page 16)

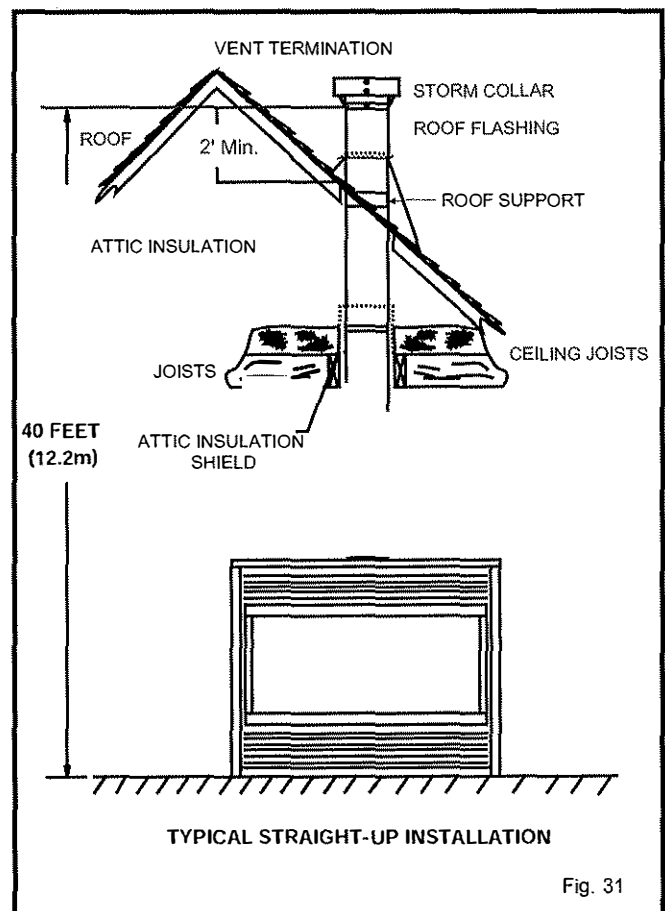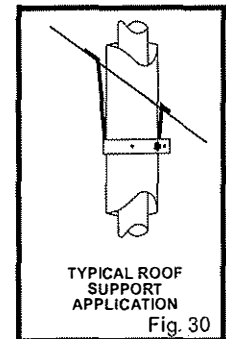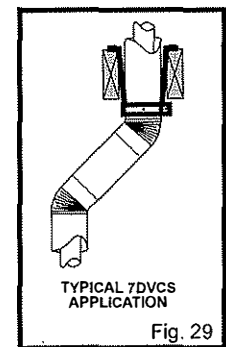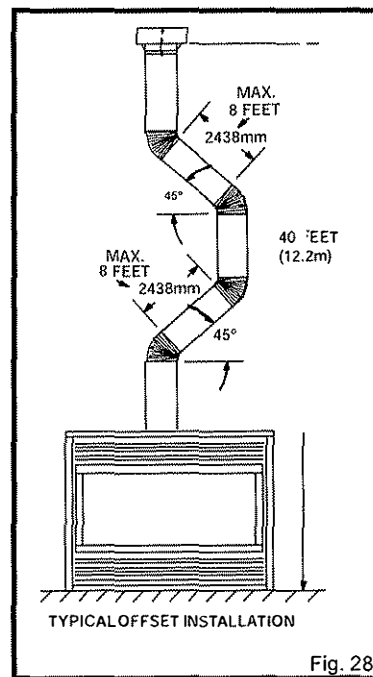

Clearance above a roof shall extend a minimum of 24" (610mm) above the highest point when it passes through the roof surface, and any other obstruction within a horizontal distance of 18" (450mm).

VERTICAL THRU THE ROOF INSTALLATION

1. Locate your fireplace.
2. Plumb to centre of the (4") collar from ceiling above and mark position.
3. Cut opening equal to 9-3/8" x 9-3/8" (240 mm x 240 mm).
4. Proceed to plumb for additional openings through the roof. In all cases, the opening must provide a minimum of 1 inch clearance to the vent pipe, i.e., the hole must be a minimum of 9-3/8" x 9-3/8" (240 mm x 240 mm).
5. Place firestop(s) 7DVFS into position and secure. (Fig. 32)
6. Install roof support (Fig. 30) and roof flashing making sure upper flange of flashing is below the shingles. (Fig. 33)
7. Install appropriate pipe sections until above the flashing. (See Fig. 31 for #'s 7, 8 and 9).
8. Install storm collar and seal around the pipe.
9. Add additional vent lengths for proper height.
10. Apply high temperature sealant to 4" and 7" collars of vent termination and install.

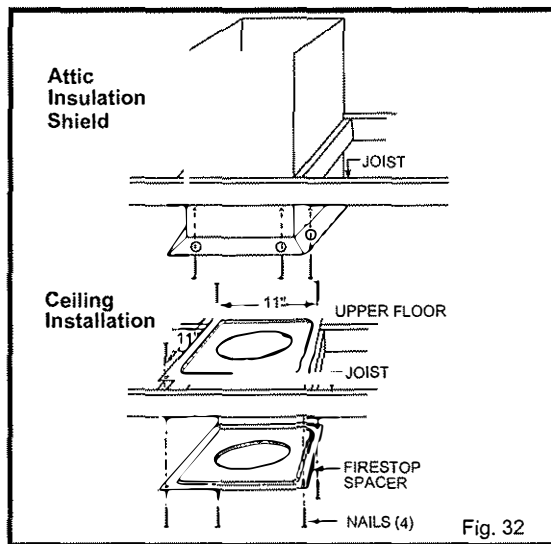


Fig. 32

Fig. 32 If there is a room above ceiling level, firestop spacer must be installed on both the bottom and the top side of the ceiling joists. If an attic is above ceiling level a 7DVAIS (Attic Insulation Shield) must be installed.

Fig. 33. The enlarged ends of the vent section always face downward.

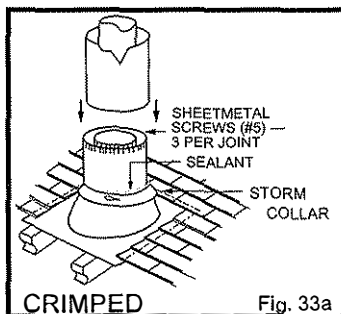


Fig. 33a


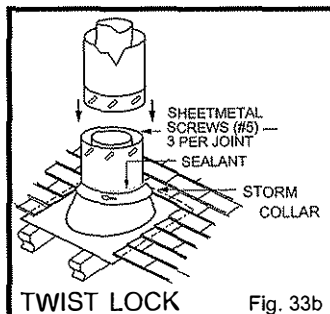


Fig. 33b


CRIMPED ENDS VENTING COMPONENTS

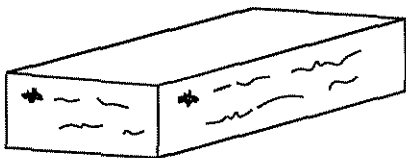


Starter Kit -Model 7DVSK - Sidewall Venting

Starter Kit - Model 7DVSKV - Vertical Venting
for 7DVSKV-A order 1/12 to 6/12 roof pitch
for 7DVSKV-B order 7/12 to 12/12 roof pitch
for 7DVSKV-F order flat roof


Starter Kit - Model 7DVSKS -Snorkel Kit
for Below Grade Installation

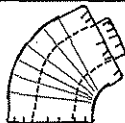


45° elbow kit
7DVT45 for Vertical Installation Offsets

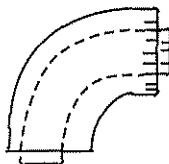


90° transition elbow kit
7DVRT90 for Vertical Sidewall Applications
or thru-the-roof.




Telescopic vent sections
7DVP610 - 6" to 10" adjustable length
7DVP1018 - 10" to 18" adjustable length
7DVP1834 - 18" to 34" adjustable length
7DVP3466 - 34" to 66" adjustable length

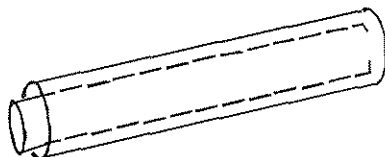


Pipe sections for vertical or horizontal venting
Model 7DVP8" - 4 per box
Model 7DVP12" - 4 per box
Model 7DVP24" - 4 per box
Model 7DVP36"
Model 7DVP48"

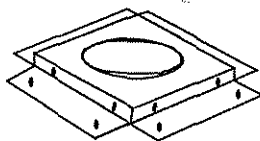

Firestop Spacer
Model 7DVFS



Attic Insulation Shield
Model 7DVAIS

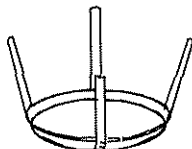


Vertical/Horizontal Combination Offset Support
Model 7DVCS



7DVSS Siding Shield (to protect siding)


TWIST LOCK VENTING COMPONENTS

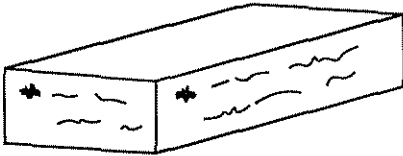


Starter Kit -Model 7TDVSK - Sidewall Venting

Starter Kit - Model 7TDVSKV - Vertical Venting
for 7TDVSKV-A order 1/12 to 6/12 roof pitch
for 7TDVSKV-B order 7/12 to 12/12 roof pitch
for 7TDVSKV-F order flat roof


Starter Kit - Model 7TDVSKS -Snorkel Kit
for Below Grade Installation

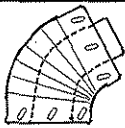

45° elbow kit
7DVT45 for Vertical Installation Offsets

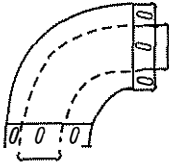


90° transition elbow kit
7TDVRT90 for Vertical Sidewall Applications
or thru-the-roof.




Telescopic vent sections
7TDVP1218 - 12" to 18" adjustable length
7TDVP3566 - 35" to 64" adjustable length




Pipe sections for vertical or horizontal venting
Model 7TDVP8"
Model 7TDVP12"
Model 7TDVP24"
Model 7TDVP36"
Model 7TDVP48"

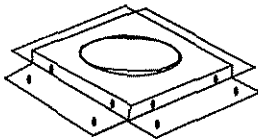

Firestop Spacer
Model 7DVFS



Attic Insulation Shield
Model 7DVAIS

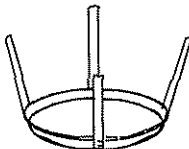

Vertical/Horizontal Combination Offset Support
Model 7DVCS



7DVSS Siding Shield (to protect siding)

VERTICAL THRU THE ROOF INSTALLATION

1. Locate your fireplace.
2. Plumb to centre of the (4") collar from ceiling above and mark position.
3. Cut opening equal to 9-3/8" x 9-3/8" (240 mm x 240 mm).
4. Proceed to plumb for additional openings through the roof. In all cases, the opening must provide a minimum of 1 inch clearance to the vent pipe, i.e., the hole must be a minimum of 9-3/8" x 9-3/8" (240 mm x 240 mm).
5. Place firestop(s) 7DVFS into position and secure. (Fig. 54)
6. Install roof support (Fig. 52) and roof flashing making sure upper flange of flashing is below the shingles. (Fig. 55)
7. Install appropriate pipe sections until above the flashing. (See Fig. 53 for #'s 7, 8 and 9).
8. Install storm collar and seal around the pipe.
9. Add additional vent lengths for proper height.
10. Apply high temperature sealant to 4" and 7" collars of vent termination and install.



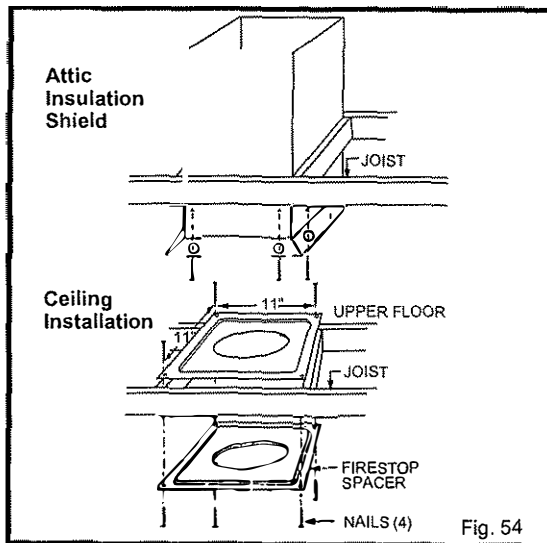


Fig. 54 If there is a room above ceiling level, firestop spacer must be installed on both the bottom and the top side of the ceiling joists. If an attic is above ceiling level a 7DVAIS (Attic Insulation Shield) must be installed.



Fig. 55. The enlarged ends of the vent section always face downward.


DVT43 GRAVITY DUCTING SYSTEM

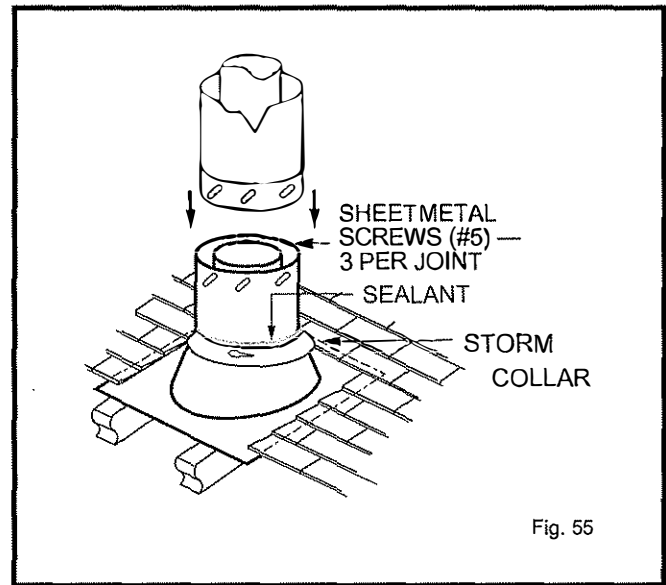

Gravity Ducting System is for use only on DVT43 Direct Vent Decorative Appliances only.

The DVT43 provides you with an opportunity to heat either rooms on an upper level or in adjacent rooms without the use of a blower. However, with the internal blower installed, there will be some increase in warm air movement to rooms serviced by the gravity duct.

1. Plan the gravity duct run first. Use the graph below to ensure that the installation meets The CFM Majestic Products Company recommendations. There is a maximum number of three elbows in a run, but the run must never go in a downward direction as this can trap heat in the gravity vent system. Be aware when designing the ducting system that elbows will restrict airflow. Minimize the use of elbows in any installation.

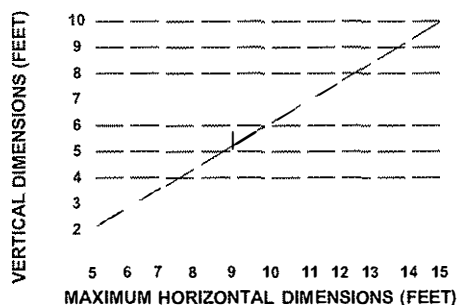

2. It is recommended that the gravity ducting system must be installed so that the grills exit at the same vertical level. If the gravity venting system is installed such that the ducting exits at different levels, a chimney effect may occur resulting in uneven heat distribution. Do not discharge directly into wall or inside an enclosure.
3. Materials need for gravity ducting:
 - (2) 5" dia. duct to grill connector boots
 - (2) Outlet grills
 - 5" dia. rigid ("C" vent) or 5" dia. flexible ducting
 - 5" dia. elbows (maximum of 3 per run).
4. Remove the gravity duct plugs from the top of the DVT43 by taking out the two (2) screws around the perimeter of each plug, and then removing the plugs from the fireplace.



Do not remove the centre screw from the plugs.

5. Install 5" rigid (C-Vent) or flexible ducting on the DVT43 and run the ducts following the recommendations shown in the previous graph. Be aware that flexible ducting is more restrictive to air flow than rigid ducting.
6. Secure all joints with three (3) sheet metal screws. Seal all joints with foil face aluminum tape to prevent heat loss and maintain maximum air flow.
7. Ensure that the following clearances are maintained when installing the DVT43.

CLEARANCE TO COMBUSTIBLES

Clearance to ducting - 1"
Clearance to grille adapter - 0"

OPERATING INSTRUCTIONS

GENERAL GLASS INFORMATION




Only glass approved for use in The CFM Majestic Products Company products may be used for replacement.

1. The use of substitute glass will void all product warranties.
2. Care must be taken to avoid breakage of the glass.
3. Under no circumstances should this appliance be operated without the front glass or with a broken glass. Replacement of the glass (with gasket) as supplied by the manufacturer should be done by a licensed qualified service person.

LOUVRE REMOVAL

(Fig. 35) To remove top louvre pull louvre up and then lift out.

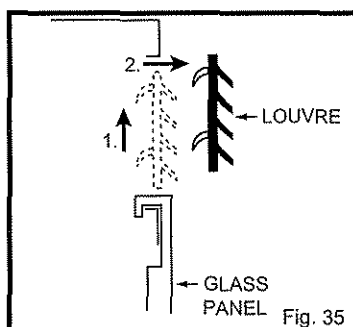

GLASS CLEANING

It will be necessary to clean the glass periodically. During start-up condensation, which is normal, forms on the inside of the glass and causes lint, dust and other airborne particles cling to the glass surface. Also initial paint curing may deposit a slight film on the glass. It is therefore recommended that the glass be cleaned two or three times with a non-ammonia household cleaner and warm water (we recommend gas fireplace glass cleaner). After that the glass should be cleaned two or three times during each heating season depending on the circumstances present.



Clean glass after first two weeks of operation.

GLASS FRAME REMOVAL

1. Shut off gas.
2. Let the unit cool if it has been operating.
3. Remove top louvre. (See Louvre Removal)
4. Open the lower louvre assembly.
5. Release the two clamps at the bottom of the window frame by pulling down on the clamp handles.
6. Lift off the glass frame as shown.
7. To reinstall glass follow the above procedure in reverse. (Fig. 36)

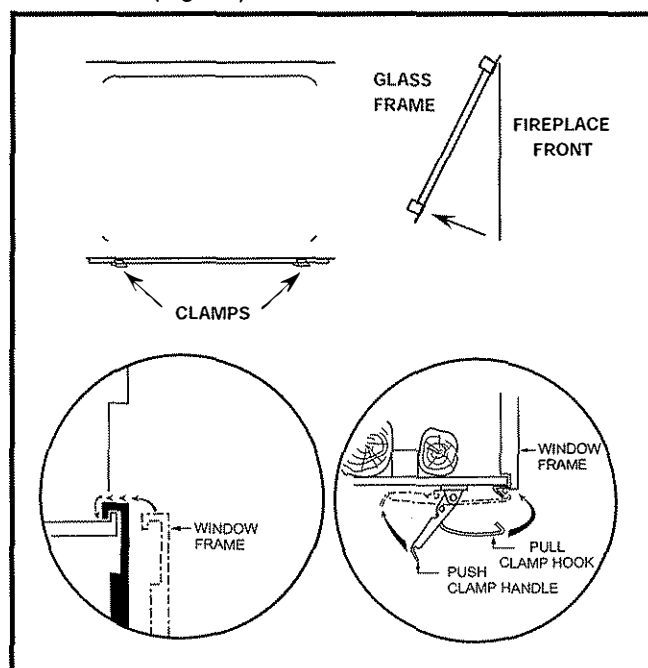


Fig. 36

INSTALLATION OF LOGS




REFER TO FIGS. 37, 38 & 39

1. Remove front glass. (See "Glass Removal" section)
2. Remove logs from packaging.
3. Place rear log (B9, C10 or D11) on rear bracket (ensure log is seated properly, leveled and centered to the unit), so it will not move from side to side and it is firmly positioned on the bracket.
4. Slip front ember log (B6, C7 or D8) down in the front deflector.
5. Place front left log (B7, C8 or D9) on top of burner, left side. Use log's bottom holes to locate it into the left bracket log locator studs.
6. Place front right log (B8, C9, or D10) on top of burner, right side. Use log's bottom holes to locate it into the right bracket log locator studs.
7. Place ember material (See "Ember Material Placement" Section).

8. **Only for DVT43** - Place top centre left log (D14) onto notches. Ensure log is secure.
9. Place top right log (B11, C12 or D13) onto locator notches. Ensure log is secure.
10. Place top left log (B10, C11 or D12) onto notches. Ensure log is secure.
11. **Only For DVT39 and DVT43** - Place top centre right log (C13 or D15) onto locator notches. Ensure log is secure.



Top logs must be placed properly onto notches

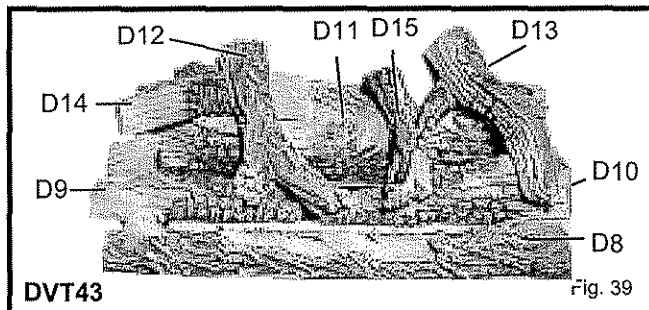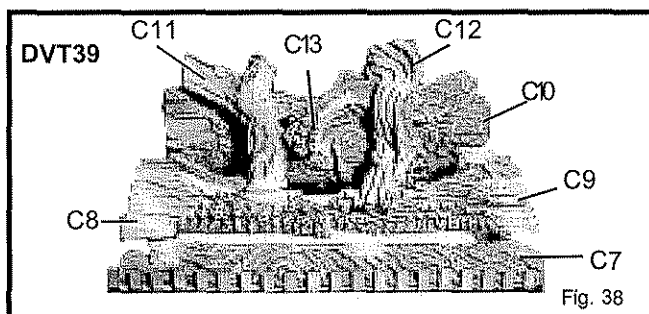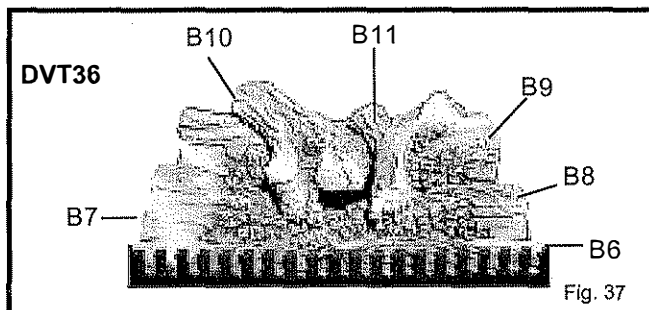

EMBER MATERIAL PLACEMENT

Separate the ember material into small pieces, roughly 1/2" in diameter and place onto the burner in front of the front logs. Do **NOT** pack down, leave in fluffy, loose condition for most realistic ember effect.

LAVA ROCK

The lava rock provided with this fireplace must be placed on the firebox base on either side of the burner assembly.



Under no circumstances should this lava rock be placed on any part of the burner assembly.

MAINTENANCE

1. It is important to keep the burner and the burner compartment clean. This must be done periodically, at least once per season.
2. Clean the brass trim using a soft clean cloth, slightly dampened with lemon oil and buff with a soft clean cloth. Do **NOT** use brass polish or household cleaners as these products will damage the brass trim. Lemon oil can be obtained at supermarkets or hardware stores.
3. The optional FK24 fan requires periodic cleaning. Check the area under the control door and in front of the fan and wipe or vacuum at least once a month during the operating season.
4. Contact your local representative to arrange an annual service program.

CLEANING THE STANDING PILOT CONTROL SYSTEM

The burner and control system consists of:

- burner
- gas orifices
- pilot assembly
- thermopile
- millivolt gas valve

Most of these components may require only an occasional checkup and cleaning and some may require adjustment. If repair is necessary, it should be performed by a qualified technician.

1. Turn off pilot light at gas valve side
2. Let fireplace cool if it has been running.
3. Remove glass. (see Glass Removal)
4. Remove logs,



LOGS MAY BE HOT

5. Vacuum burner compartment especially around orifice primary air openings.
6. Visually inspect pilot. Brush or blow away any dust or lint accumulation.
7. Reinstall logs.
8. Ignite pilot - see Operating Section of Manual.
8. Reinstall glass.

To obtain proper operation, it is imperative that the pilot and burner's flame characteristics are steady, not lifting or floating.

Typically, the top 3/8" or 1/2" of the thermopile should be engulfed in the pilot flame. See Fig. 39.


To adjust pilot burner (by a Qualified Service Representative)

1. Remove pilot adjustment cap.
2. Adjust pilot screw to provide properly sized flame.
3. Replace pilot adjustment cap.

The primary air shutter is set at factory and should only be adjusted (if necessary) by a qualified service person.

FLAME ADJUSTMENT



For units equipped with Hi/Lo valves, flame adjustment is accomplished by rotating the Hi/Lo adjustment knob located near the centre of the gas control. (Fig. 40)

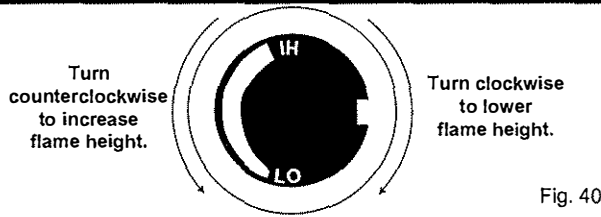


FLAME CHARACTERISTICS




It is important to periodically perform a visual check of the pilot and the burner flames. Compare them to the pictorials illustrated below (Fig. 41, 42, 43 and 44). If any of the flames appear abnormal call a service person.

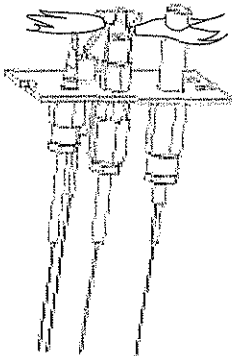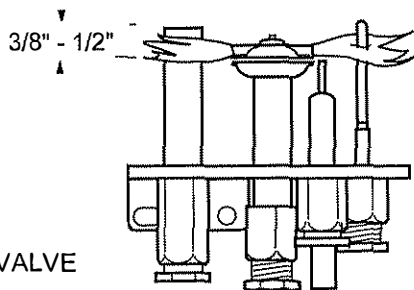


DVT36

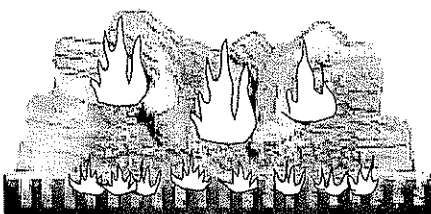

DVT39

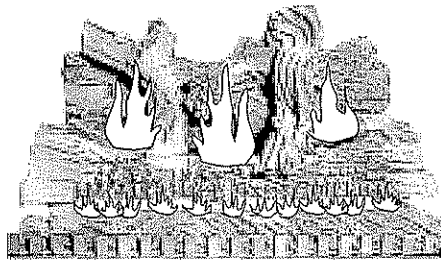

DVT43

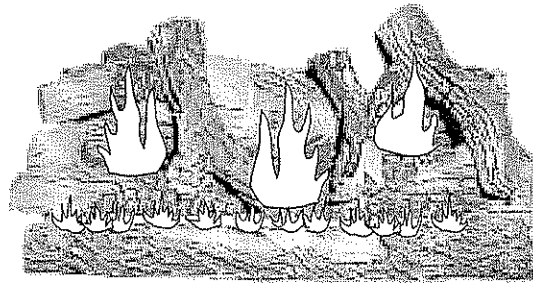

INSPECTING THE VENTING SYSTEM

This appliance venting system was designed and constructed to develop a positive flow adequate to remove flue gases to the outside atmosphere.

Any foreign objects in the venting system, except those designed specifically for the venting system, may cause spillage of flue gases.

To inspect the venting system, make sure the main gas valve is off. Remove glass door (See Glass Door Removal). Using a flashlight, check the area above the baffle in the combustion dome. Clean if necessary.

LIGHTING AND OPERATING INSTRUCTIONS

FOR YOUR SAFETY READ BEFORE LIGHTING

WARNING If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This fireplace has a pilot which must be lit manually. When lighting the pilot follow these instructions exactly.
- B. BEFORE LIGHTING smell all around the fireplace area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


WHAT TO DO IF YOU SMELL GAS

- Do not try to light any fireplace.
- Do not touch any electric switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the Fire Department.

- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, do not try to repair it, call a qualified service technician. Applying force or any attempted repair may result in a fire or explosion.
- D. Do not use this fireplace if any part has been underwater. Immediately call a qualified service technician to inspect the fireplace and to replace any part of the control system and any gas control which has been underwater.

LIGHTING INSTRUCTIONS


1. STOP! Read the safety information above on this label.
2. Turn off all electrical power to the fireplace.
3. For MN/MP/TN/TP appliances ONLY, go onto Step 4. For RN/RP appliances turn the On/Off switch to off position or set thermostat to lowest level.
4. Open control access panel.
5. Push in gas control knob slightly and turn clockwise to "OFF". Do not force.

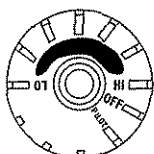

EURO SIT




SIT NOVA

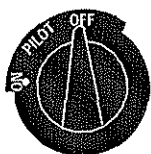

HONEYWELL

6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, **STOP!** Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
7. Remove glass door before lighting pilot. (See Glass Frame Removal in manual).
8. Visibly locate pilot by the main burner.
9. Turn knob on gas control counterclockwise to "PILOT".

10. Push the control knob all the way in and hold. Immediately light the pilot by repeatedly depressing the piezo spark ignitor until a flame appears. Continue to hold the control knob in for about one (1) minute after the pilot is lit. Release knob and it will pop back up. Pilot should remain lit. If it goes out, repeat steps 5 through 8.



OR

- If knob does not pop up when released, stop and immediately call your service technician or gas supplier.
 - If after several tries, the pilot will not stay lit, turn the gas control knob to "OFF" and call your service technician or gas supplier.
11. Replace glass door.
 12. Turn gas control knob to "On" position.
 13. For Rn/RP appliance turn the On/Off switch to "On" position or set thermostat to desired setting.
 14. Turn on all electrical power to the fireplace.

TO TURN OFF GAS TO FIREPLACE

1. Turn the On/Off switch to Off position or set the thermostat to lowest setting.
2. Turn off all electric power to the fireplace if service is to be performed.
3. Open control access panel.
4. Push in gas control knob slightly and turn clockwise to "OFF". Do not force.
5. Close control access panel.

TROUBLE SHOOTING THE GAS CONTROL SYSTEM

SIT NOVA 820 MILLIVOLT VALVE

Note: Before trouble shooting the gas control system, be sure external gas shut off is in the "On" position.

WARNING: BEFORE DOING ANY GAS CONTROL SERVICE WORK, REMOVE GLASS FRONT.

SYMPTOM	POSSIBLE CAUSES	CORRECTIVE ACTION
1. Spark ignitor will not light	A. Defective or misaligned electrode at pilot.	Using a match, light pilot. If pilot lights, turn off pilot and push the red button again. If pilot will not light - check gap at electrode and pilot-should be 1/8" to have a strong spark.
	B. Defective ignitor (Push Button)	Push Piezo Ignitor Button. Check for spark at electrode and pilot. If no spark to pilot, and electrode wire is properly connected, replace ignitor.
2. Pilot will not stay lit after carefully following lighting instructions.	A. Defective pilot generator (thermocouple)	1. Check pilot flame. Must impinge on thermocouple/thermopile. Note: this pilot burner assembly utilizes both a thermocouple and a thermopile. The thermocouple operates the pilot flame. Tighten thermocouple. The thermopile operates the main valve operation (On and Off). Clean and/or adjust pilot for maximum flame impingement on thermopile and thermocouple.
	B. Defective automatic valve operator.	Turn valve knob to "Pilot". Maintain flow to pilot; millivolt meter should read greater than 10 mV. If the reading is okay and the pilot does not stay on, replace the gas valve. Note: An interrupter block (not supplied) must be used to conduct this test.
3. Pilot burning, no gas to burner, Valve knob "ON", Wall Switch "ON".	A. Wall switch or wires defective.	Check wall switch and wires for proper connections. Jumper wire across terminals at wall switch, if burner comes on, replace defective wall switch. If okay, jumper wires across wall switch wires at valve, if burner comes on, wires are faulty or connections are bad.
	B. Thermopile may not be generating sufficient millivoltage.	1. Be sure wire connections from thermopile at gas valve terminals are tight and thermopile is fully inserted into pilot bracket. 2. One of the wall switch wires may be grounded. Remove wall switch wires from valve terminals if burner now stays lit, trace wall switch wiring for ground. May be grounded to appliance or gas supply. 3. Check thermopile with millivolt meter. Take reading at thermopile terminals of gas valve. Should read 250-300 millivolts (minimum 150) while holding valve knob depressed in pilot position and wall switch "Off". Replace faulty thermopile if reading is below specified minimum.
	C. Plugged burner orifice.	Check burner orifices for debris and remove.
	D. Defective automatic valve operator.	Turn valve knob to "On", place wall switch to "On" millivolt meter should read greater than 100 mV. If the reading is okay and the burner does not come on, replace the gas valve.
4. Frequent pilot outage problem.	A. Pilot flame may be too low or blowing (high) causing the pilot safety to drop out.	Clean and/or adjust pilot flame for maximum flame impingement on thermopile and thermocouple.
	B. Possible blockage of the vent terminal.	Check the vent terminal for blockage (recycling flue gases).


REPLACEMENT PARTS LIST - DVT SERIES

	DESCRIPTION	DVT36	DVT39	DVT43
1.	Log Set Complete	10000282	10000397	10000448
1a.	Log Ember Front	B6	C7	D8
1b.	Log Front Left	B7	C8	D9
1c.	Log Front Right	B8	C9	D10
1d.	Log Rear	B9	C10	D11
1e.	Log Top Left	B10	C11	D12
1f.	Log Top Right	B11	C12	D13
1g.	Log Top Centre Left	-	-	D14
1h.	Log Top Centre Right	-	C13	D15
2.	Lava Rock (package)	10001454	10001454	10001454
3.	Ember (package)	51915	51915	51915
4a.	Burner Housing with Tiles Nat.	10000283	10000418	10000457
4b.	Burner Housing with Tiles Prop.	10000284	10000419	10000458
5.	Ceramic Tile (single)	57803	57803	57803
6a.	Orifice Burner Nat.	SEE RATING PLATE FOR ORIFICE SIZE		
6b.	Orifice Burner Prop.	SEE RATING PLATE FOR ORIFICE SIZE		
7a.	Orifice Pilot SIT Nat.	54273	54273	54273
7b.	Orifice Pilot SIT Prop.	54272	54272	54272
8a.	Orifice Pilot PSE Nat.	10001822	10001822	10001822
8b.	Orifice Pilot PSE Prop.	10001823	10001823	10001823
9.	Pilot SIT	10001295	10001295	10001295
10.	Pilot w/ignitor & cable PSE	10001824	10001824	10001824
11a.	Pilot Assembly SIT Nat.	10000672	10000672	10000672
11b.	Pilot Assembly SIT Prop.	10000673	10000673	10000673
12a.	Pilot Assembly PSE Nat.	10001739	10001739	10001739
12b.	Pilot Assembly PSE Prop.	10001740	10001740	10001740
13.	Pilot Tubing w/fittings	53211	53211	53211
14.	Manifold Tubing w/fittings	57318	57318	57318
15.	Thermocouple SIT	53373	53373	53373
16.	Thermocouple PSE	10001825	10001825	10001825
17.	Thermopile	51827	51827	51827
18.	Electrode Ignitor with cable SIT	10001297	10001297	10001297
19.	Ignitor Piezzo	52464	52464	52464
20a.	Valve SIT Nat.	52677	52677	52677
20b.	Valve SIT Prop.	52678	52678	52678
21.	Fan with Bracket	54103	54103	54103
22.	Electrical Cord (6ft.)	51865	51865	51865
23.	Fan Temperature Sensor	51704	51704	51704
24.	Speed Control	51738	51738	51738
25.	Speed Control Knob	51882	51882	51882
26.	Glass with Gasket	54427	54445	54564
27.	Gasket Glass	57317	57317	57317
28.	Frame Window	10001425	10001425	10001425
29.	Clamp - Frame Window	54174	54174	54174
30.	Top Louvre Assembly	10000037	10000039	10000041
31.	Bottom Louvre Assembly	10000038	10000040	10000042
32.	Access Door Hinge	52356	52356	52356
33.	Ceramic Refractory Lining Kit	Optional	Optional	10000459
34.	Remote Switch	51842	51842	51842
35.	Remote Switch Kit (Not Shown)	53875	53875	53875


Table 9

REPLACEMENT PARTS - DVT SERIES


FOR UNITS EQUIPPED WITH SIT 820 MILLIVOLT GAS VALVE

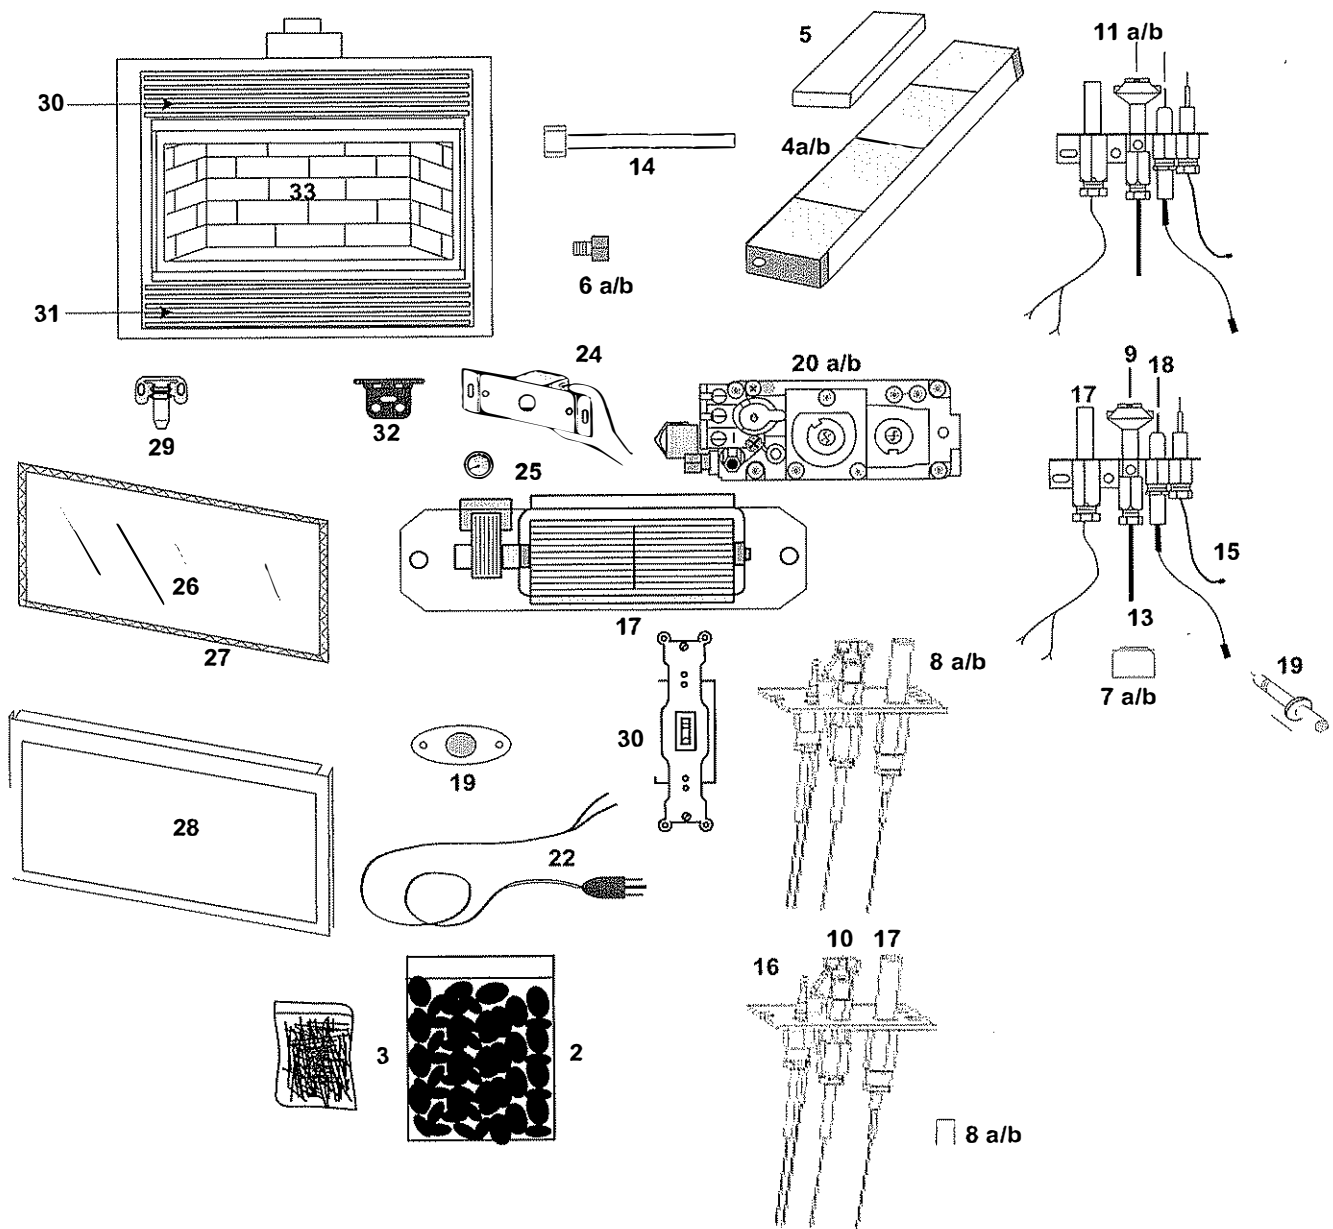


#1 Complete Log Set DVT36

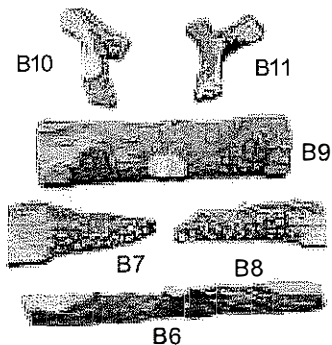

#1 Complete Log Set DVT39

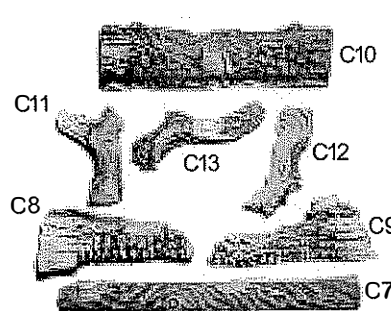

#1 Complete Log Set DVT43

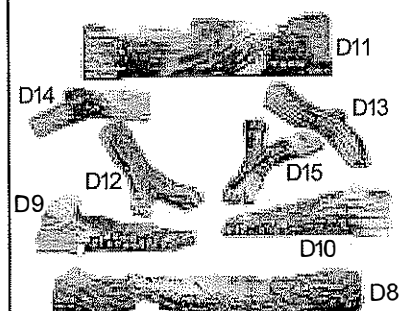

OPTIONS

FAN KIT - FK24

Fan Specifications: 115 Volt 60 HZ 56W.

This fan does not need regular maintenance, however periodic cleaning is required. Check the area under the control door and in front of the fan and wipe or vacuum at least once a month during the operating season.



Should this fan require servicing, the power supply must be disconnected.

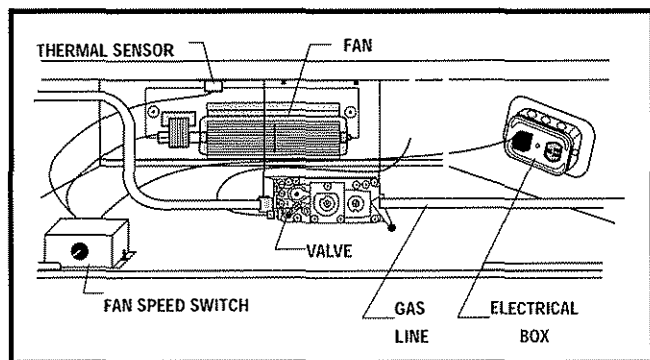


Fig. 45



The FK-24 comes with the electrical cord attached.

INSTALLATION (Fig. 45):

1. Slide fan assembly from the left side into fireplace opening, line up mounting holes with screw studs on back of fireplace and fasten with #10-24 hex nuts.
2. Install thermal sensor on bottom of firebox using #10-24 hex nuts.
3. **(Option A)** - Place electronic fan speed control box on bottom of fireplace base, lining up mounting holes with screw studs. Fasten fan speed control box with #10-24 hex nuts.
(Option B) - The speed control can be installed in an electrical box at normal wall switch height for convenient access.
4. Remove electrical knockout on the side of the fireplace. (See hard wire or receptacle hook up instructions).
5. Whether wiring directly to the fan junction box (Option A) or into the EB1 (electrical receptacle box, P/N ZA1200, Option B) first ensure cable is secured using box connector.

WIRING INSTRUCTIONS - A

Hard (Direct) Wire Hook-Up (Option A):

First connect ground wire to ground stud located on the base of either box. Black wire from supply should connect to the variable speed switch. Alternate speed switch wire connects to temperature sensor. Alternate lead from sensor connects to fan. Alternate fan lead connects back to the white supply wire. (Fig. 46).

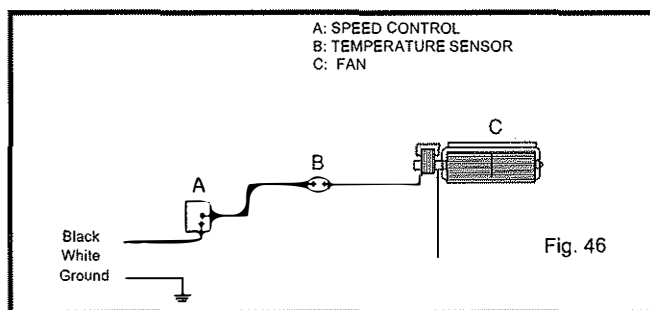


Fig. 46



THE FIREPLACE, WHEN INSTALLED MUST BE ELECTRICALLY CONNECTED AND GROUNDED IN ACCORDANCE WITH LOCAL CODES OR, IN THE ABSENCE OF LOCAL CODES, WITH THE CURRENT CSA C22.1 CANADIAN ELECTRICAL CODE.

FOR U.S.A. INSTALLATIONS, FOLLOW LOCAL CODES AND THE NATIONAL ELECTRICAL CODE, ANSI/NFPA NO. 70.



Should this fan require servicing, the power supply must be disconnected. For rewiring of any replacement components see Fig. 46.

WIRING INSTRUCTIONS - B



Any electrical re-wiring of this fan must be done by a qualified electrician.

Turn off all power before hook-up.

EB1 (Receptacle) Hook-Up (Option B):

1. Remove 2" knock out. Slide the electrical box back plate into the back and bottom lances (clips) while fitting the box connector into the knock out. Fasten into place with fastening screws provided. Fig. 47.
2. Connect the black positive wire to brass screw (polarized side) of the receptacle. The white wire is connected to the chrome screw. The ground wire is connected to the green ground screw of the receptacle. Fit the receptacle into the electrical box.
3. Screw the cover plate provided to the electrical box.
4. Plug in the FK24 Fan Kit.

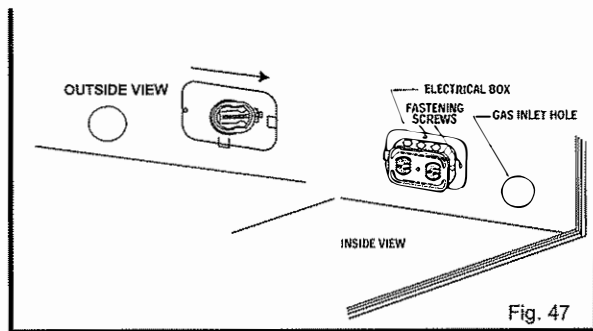


Fig. 47

CERAMIC REFRACTORY INSTALLATION

DVT36CR Optional for DVT36
DVT39CR Optional for DVT39
DVT43CR Standard with DVT43

1. Remove glass, logs.
2. Place refractory side supports so that the hole fits over the screw head on the firebox floor.
3. Place refractory base sides on the floor of the firebox.
4. Place back refractory - small brick edge down into support (See Fig. 49).
5. Attach adjustable tabs, packed with refractory, onto the studs found on the top of the firebox using the 2-10/24 nuts provided.
6. Slide side panels into side supports and behind side tab and adjust, fitting the ceramic tight to the side of the firebox. Tighten nuts. Fig. 48.



Mortar lines must be lined up.

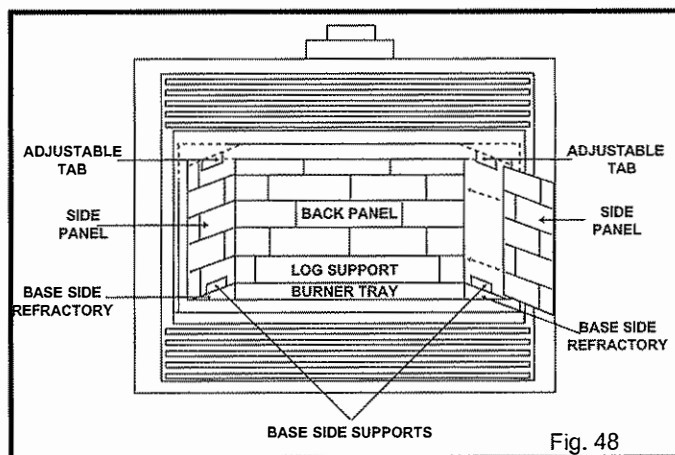


Fig. 48

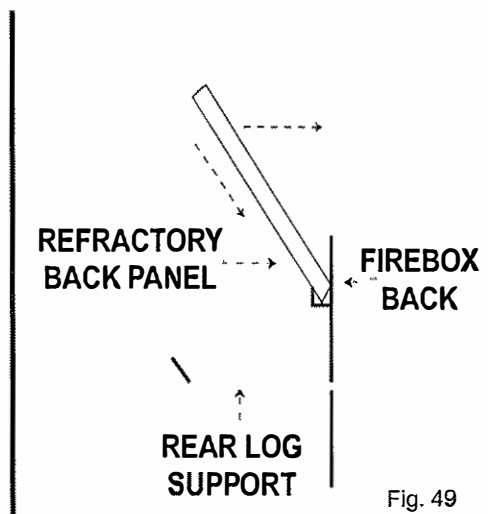


Fig. 49

BAY WINDOW INSTALLATION FOR DVT36/ DVT39



DO NOT REMOVE EXISTING GLASS
WITH FRAME.

1. Remove existing bottom louvre and hinges from fireplace. (Set aside the two (2) self tapping screws).
2. Remove existing top louvre from fireplace.
3. Assemble Bay Window Kit according to instructions.
4. Insert two (2) pieces of ceramic refractory into the bay window as per drawing below.
5. Hang bay window unit over existing glass frame.




Do not remove existing glass with frame.

6. Re-install upper louvre assembly.



Remove all plastic from brass trims.

7. Bottom brass trim is removable when unit is installed with marble or tile surround which covers the fireplace bottom.

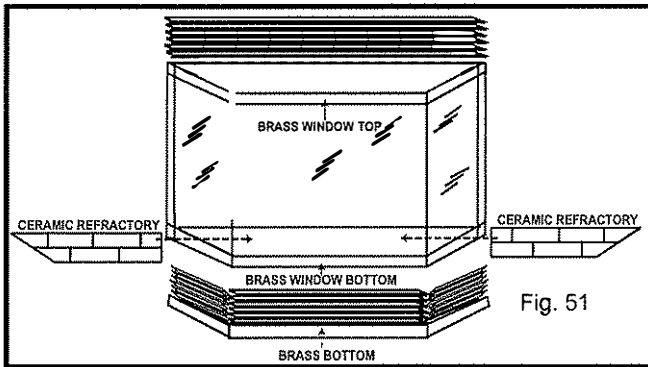

REMOTE CONTROL

- MRC1 - On/Off Button Remote Control
- MRC2 - Temperature Control Remote
- MRC3 - Temperature Control w/digital display & 24 hour programmable clock
- IMT - Wall mounted thermostat control.