

1. Using a 7/16 open end wrench, turn the pilot target hex counterclockwise.



2. Push the orifice strip tab all the way against the hex fitting as shown below.




Note: Orifice strip may be randomly located on any side of the hex fitting.

IMPORTANT:

When the **LP** tab is visible, the pilot burner is configured for LP gas.

When the **NAT** tab is visible, the pilot burner is configured for natural gas.

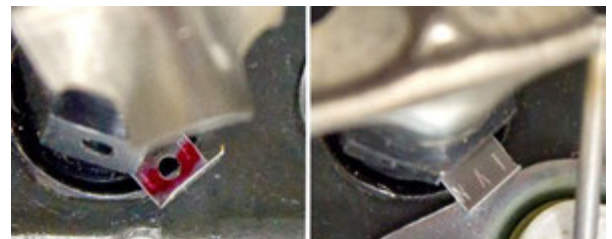

3. Retighten the pilot target hex fitting until the pilot target aligns with the thermocouple and thermopile.
4. This completes the installation.