


Instructions for repair of FAIP Chemical Injector Assembly

Part Number 16028, FA-50381300, KTRI91351, and 7104228

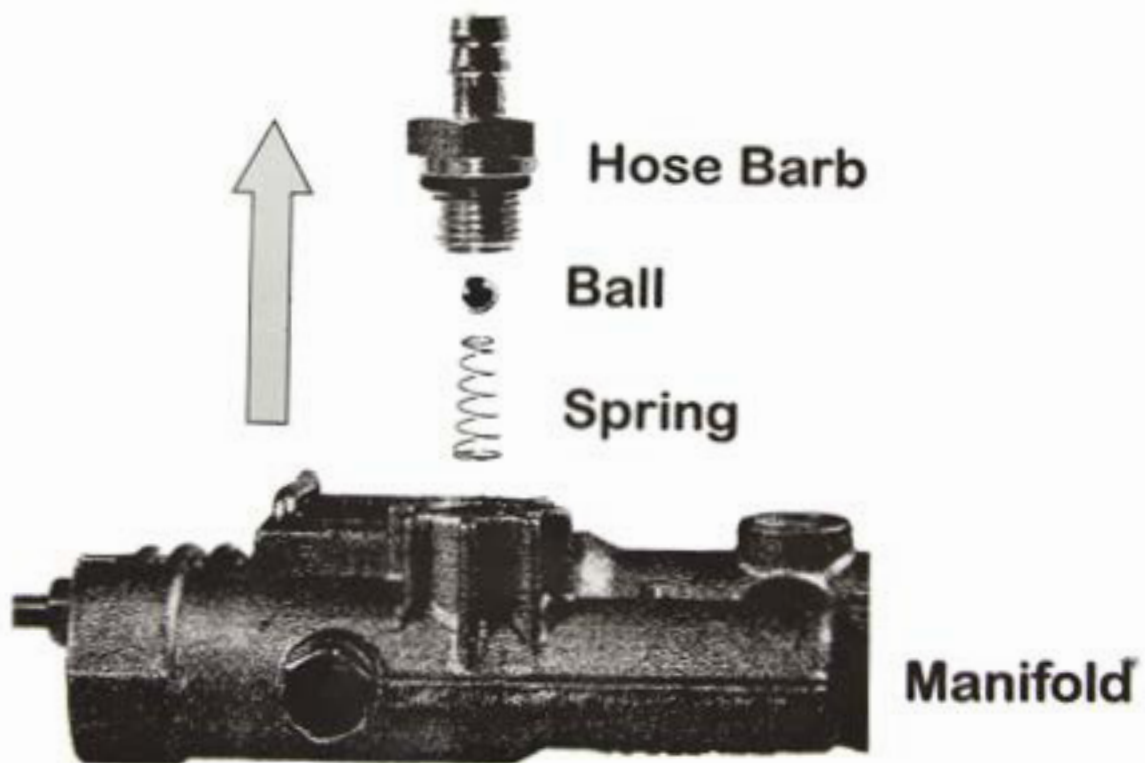

- 1.) Apply a small amount of grease to the Ball.
- 2.) Holding the Hose Barb upside down, drop the Ball into the Hose Barb on top of the small O-ring inside.
- 3.) Apply a small amount of grease to the small top of the Spring, push the Spring down onto the Ball.
- 4.) Carefully install the assembly back onto the Manifold making sure no parts fall out of assembly. Carefully tighten Hose Barb assembly.