

133400

Illustrated Parts List

Model Series

133400

TYPE NUMBERS
0001 through 2011.

For Use On Engines Built Before Date Code – 02011800

TABLE OF CONTENTS


Air Cleaner	8
Alternator	7
Blower Housing/Shrouds	9
Cam	3
Carburetors	5
Controls	7
Crankcase Cover/Sump	4
Crankshaft	3
Cylinder	2
Electric Starter	10
Flywheel	9
Fuel Tank	6
Gear Reducer	11
Governor Spring	7
Head	2
Ignition	7
Kits/Gaskets – Carburetor	5
Kits/Gaskets – Engine	6
Kits/Gaskets – Valves	2
Muffler	8
Oil Group	11
Piston Group	3
Rewind Starters	10
Valves	3

PRINTED IN U.S.A.


BRIGGS & STRATTON




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

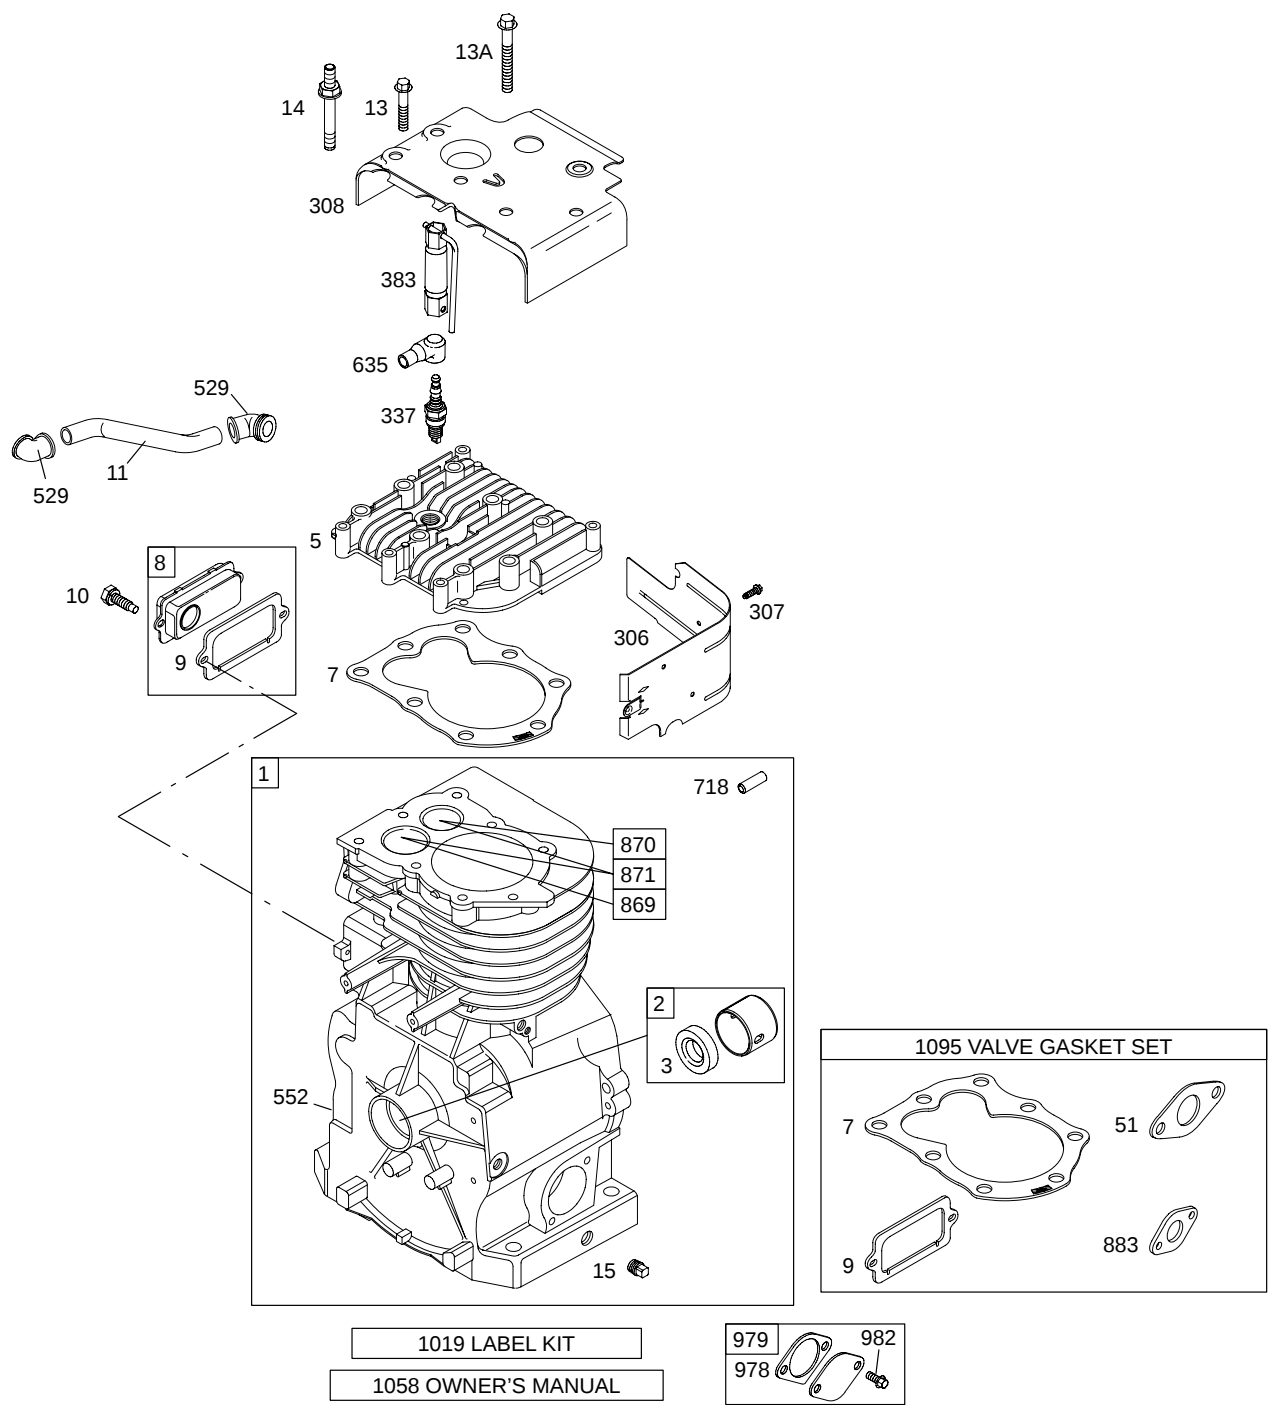


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6219-2 Assemblies include all parts shown in frames. 5C-9/2002

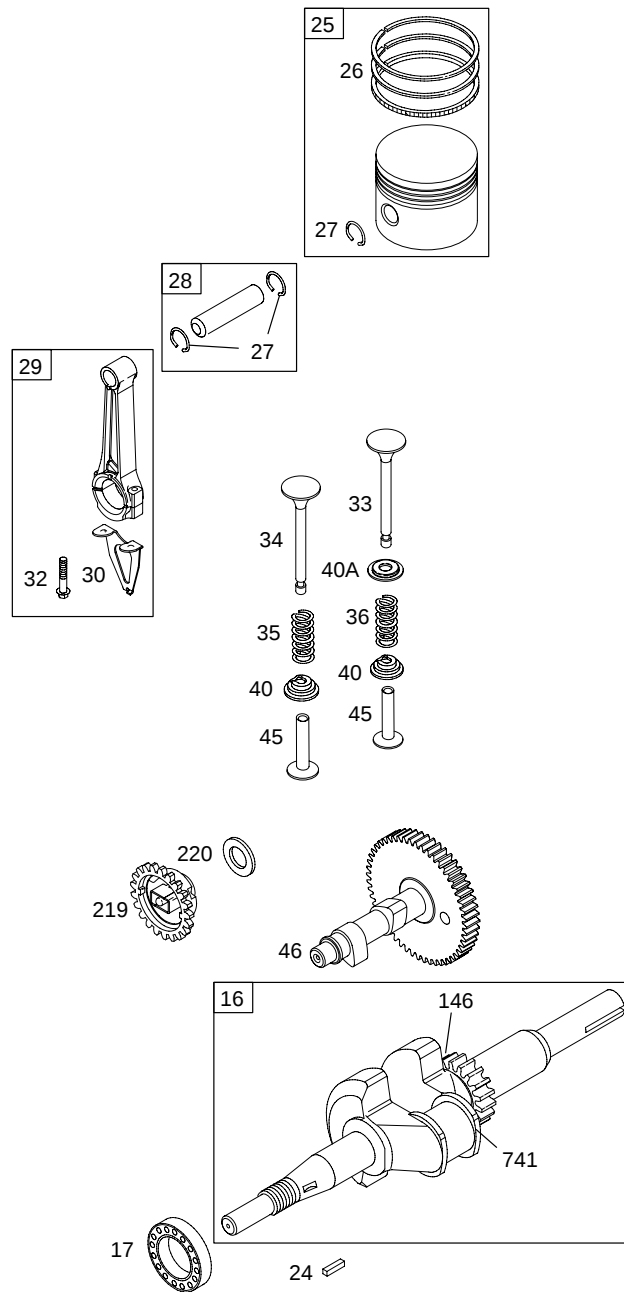


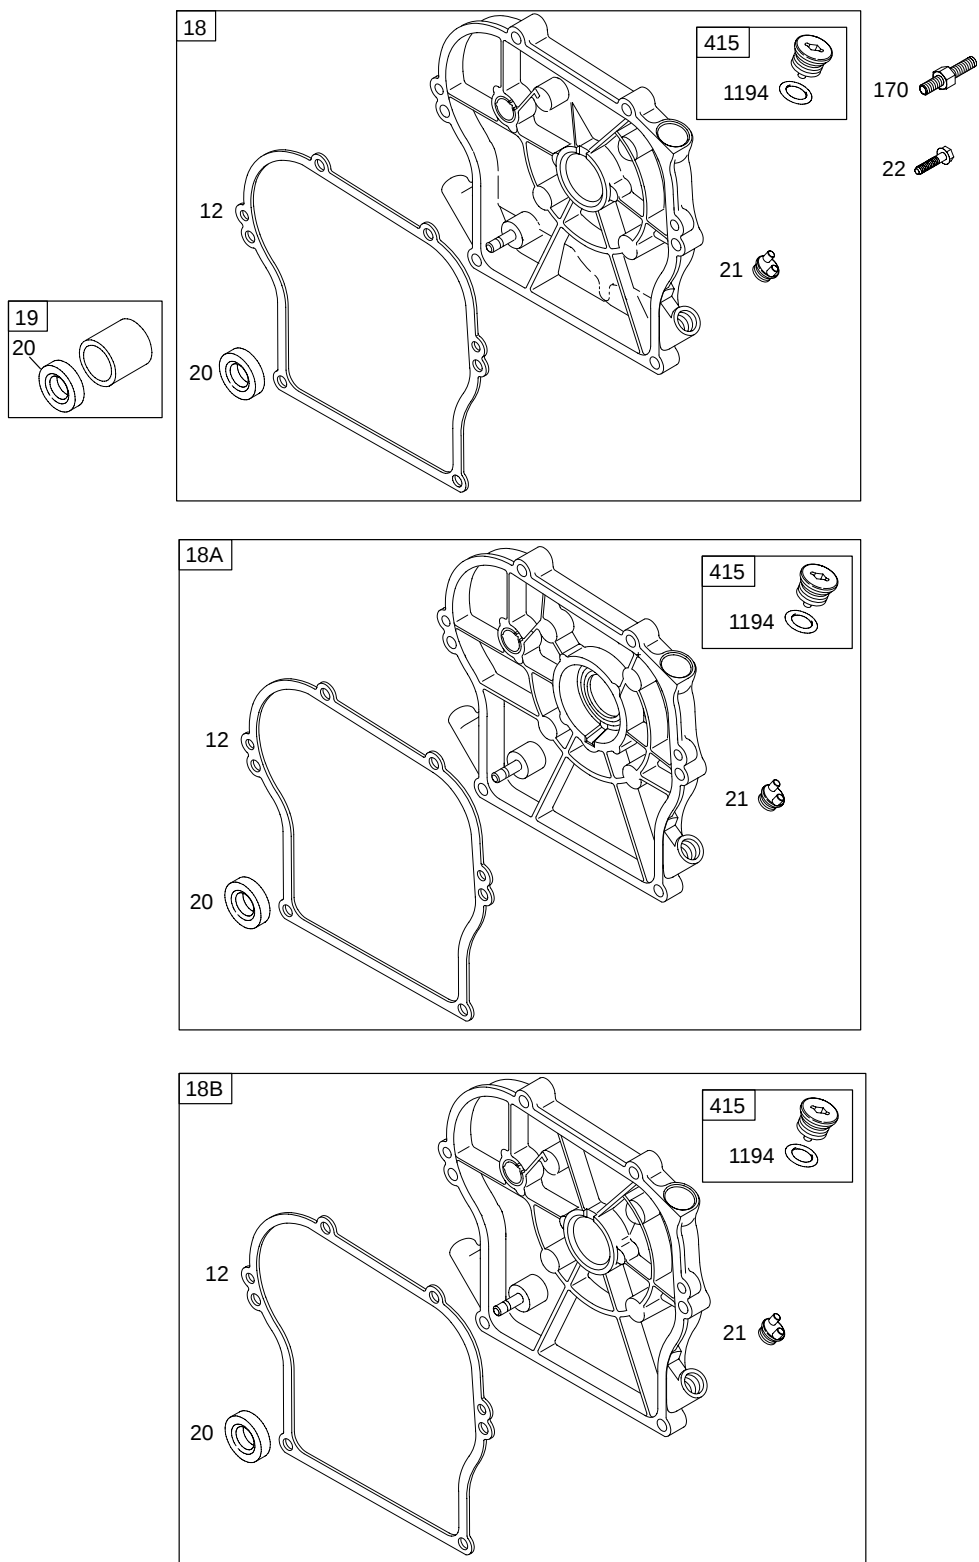


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

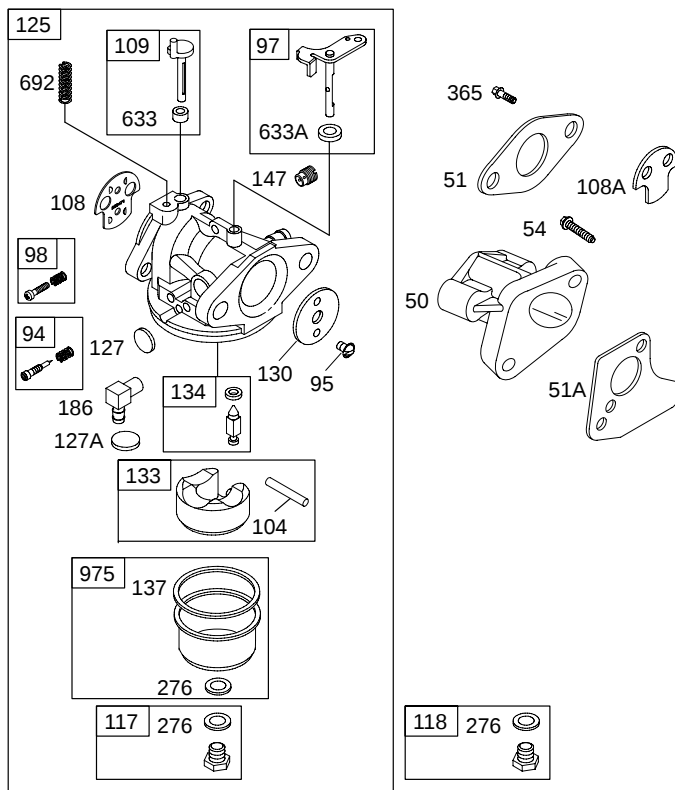


121 CARBURETOR OVERHAUL KIT				
94 	127 	134 	137 	
104 	127A 		276 	
			633 	
			633A 	



977 CARBURETOR GASKET SET			
137	633		
276	633A		

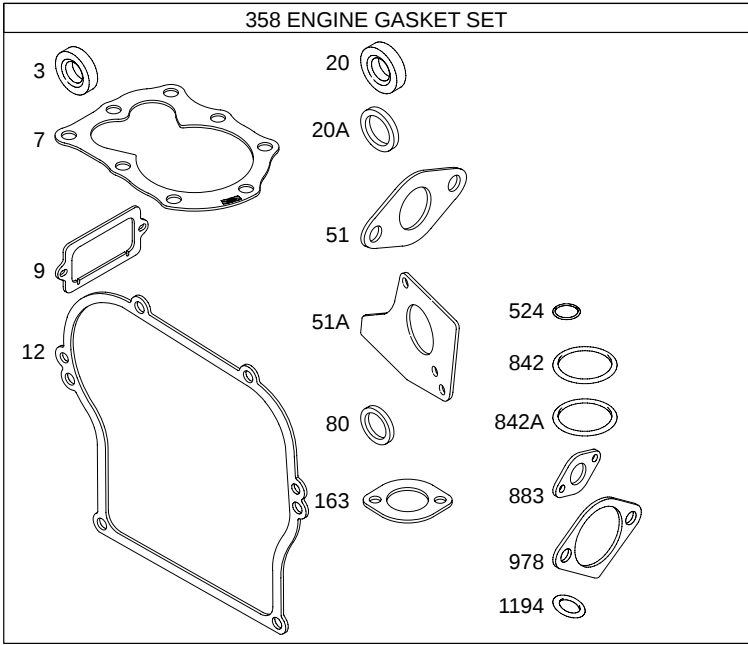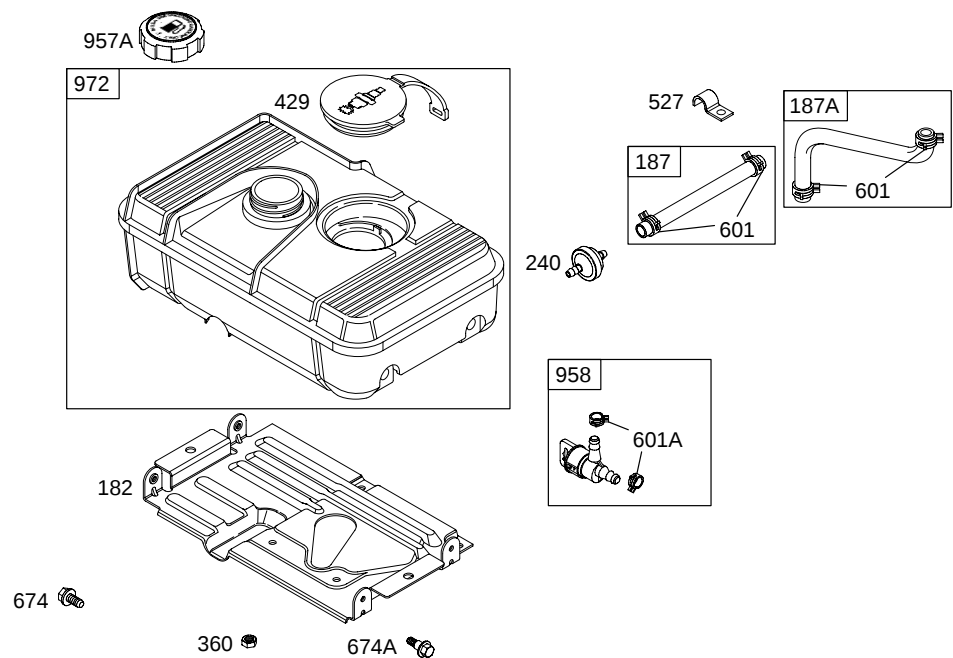


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6219-6 Assemblies include all parts shown in frames. 5C-9/2002

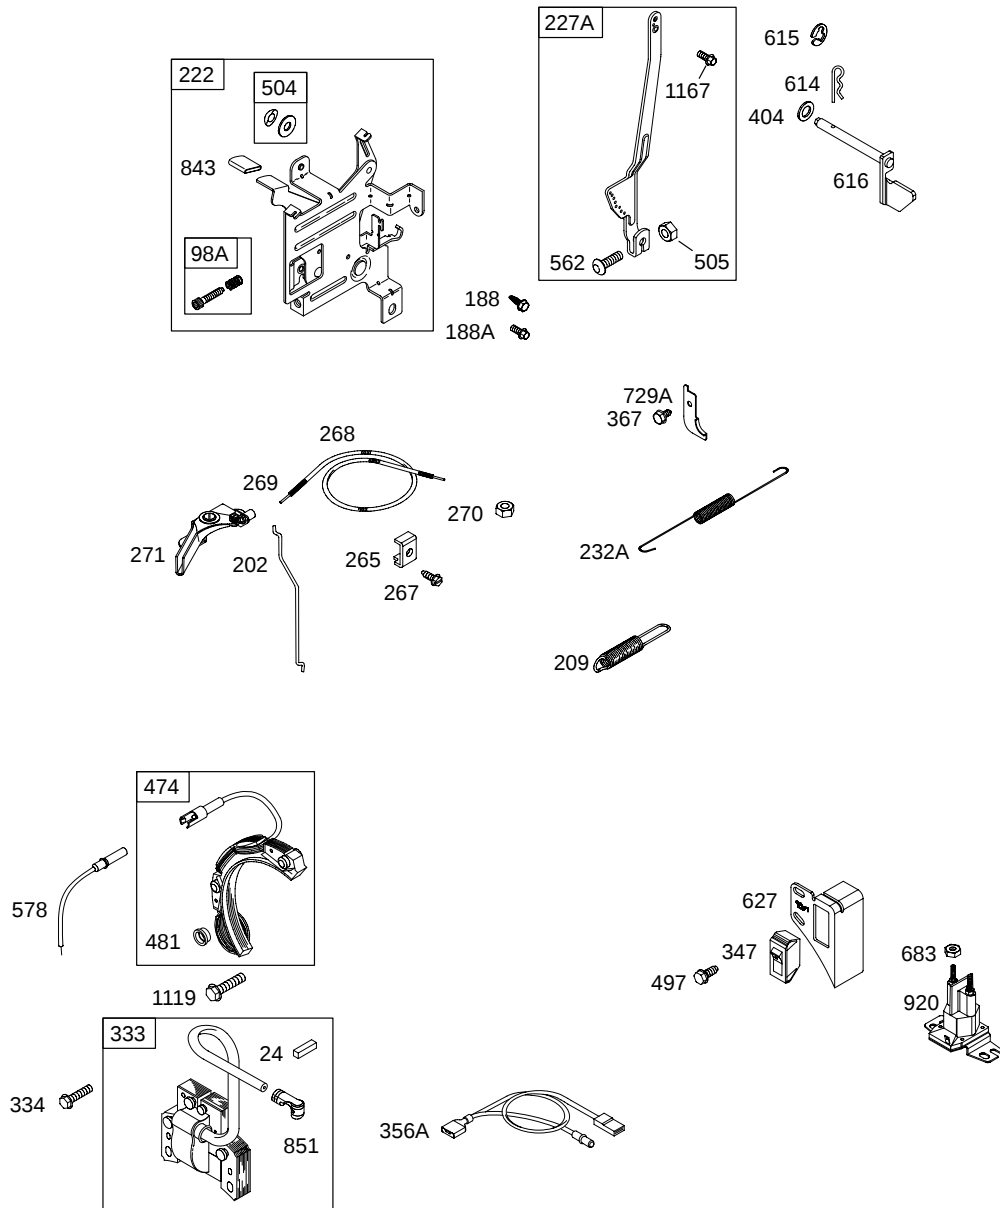


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6219-7 Assemblies include all parts shown in frames. **5C-9/2002**

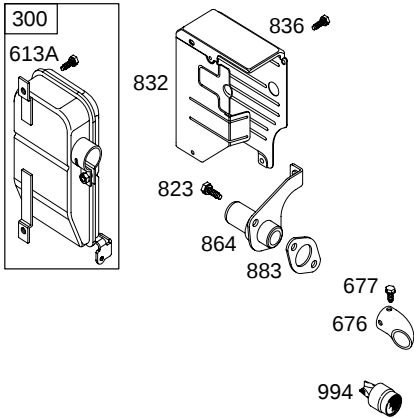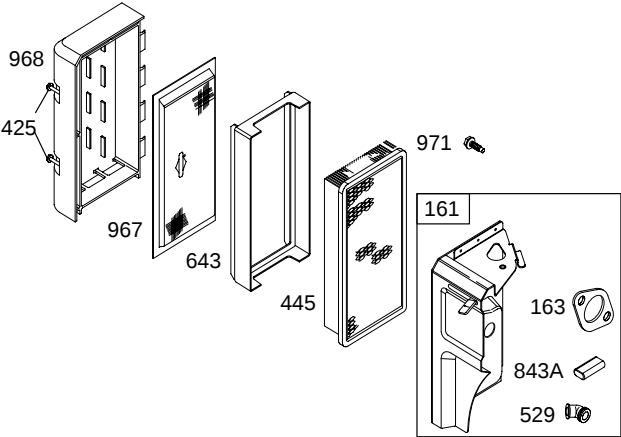


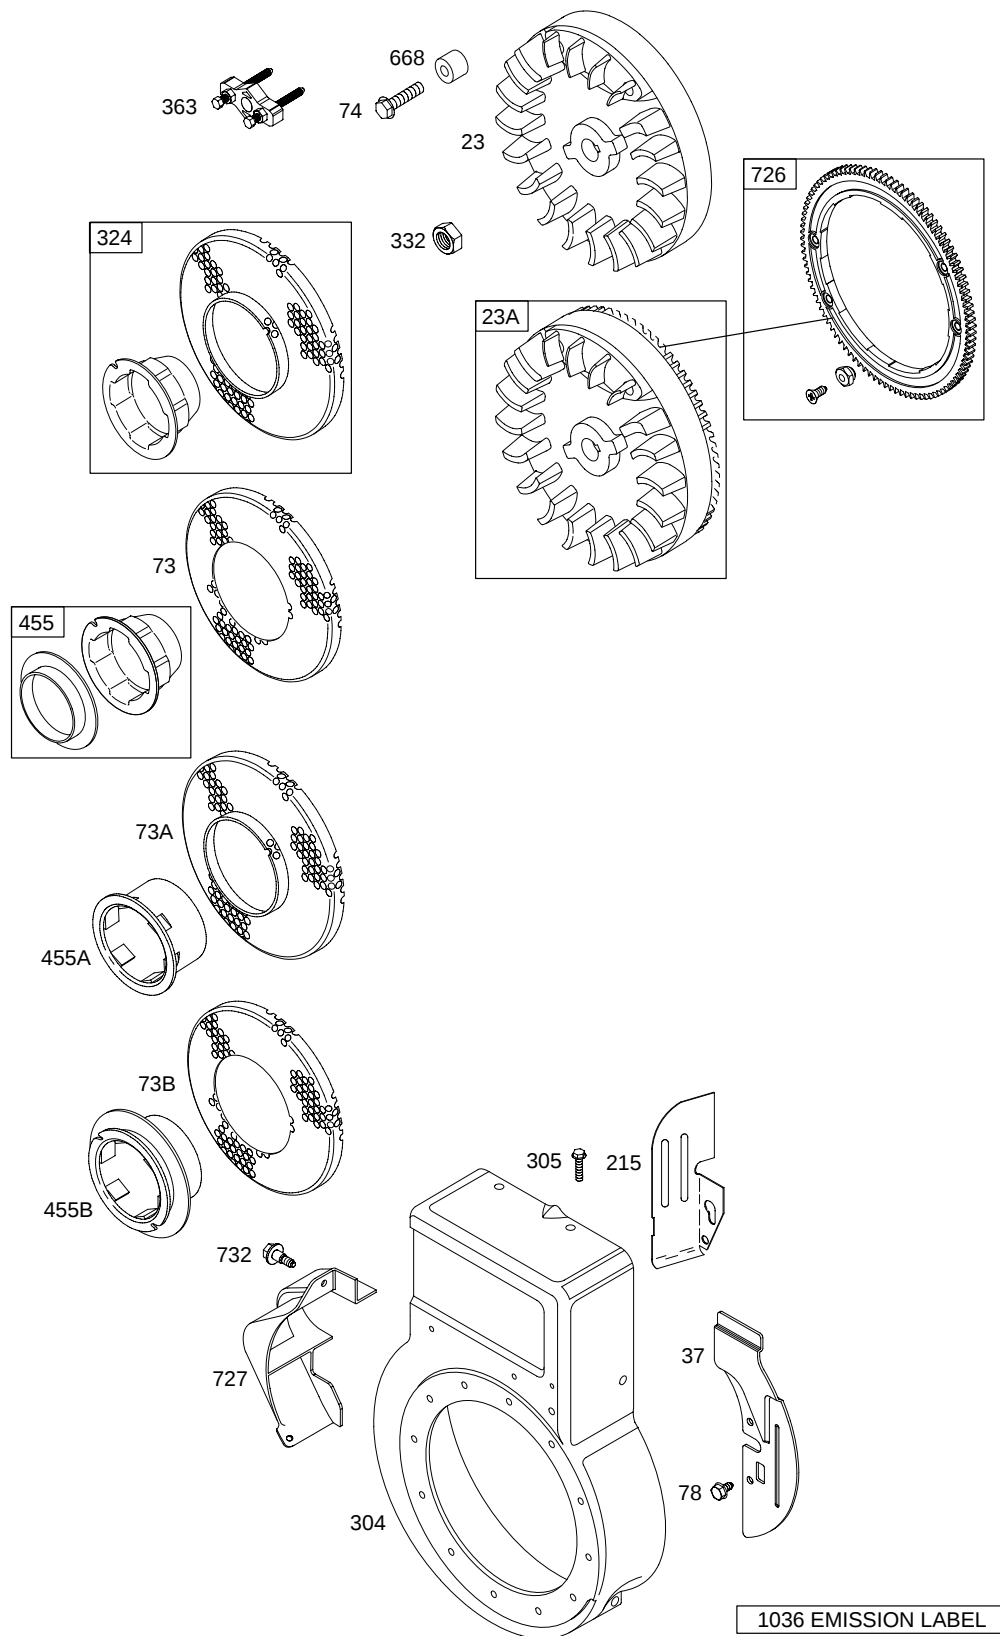

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6219-9 Assemblies include all parts shown in frames. **5C-9/2002**

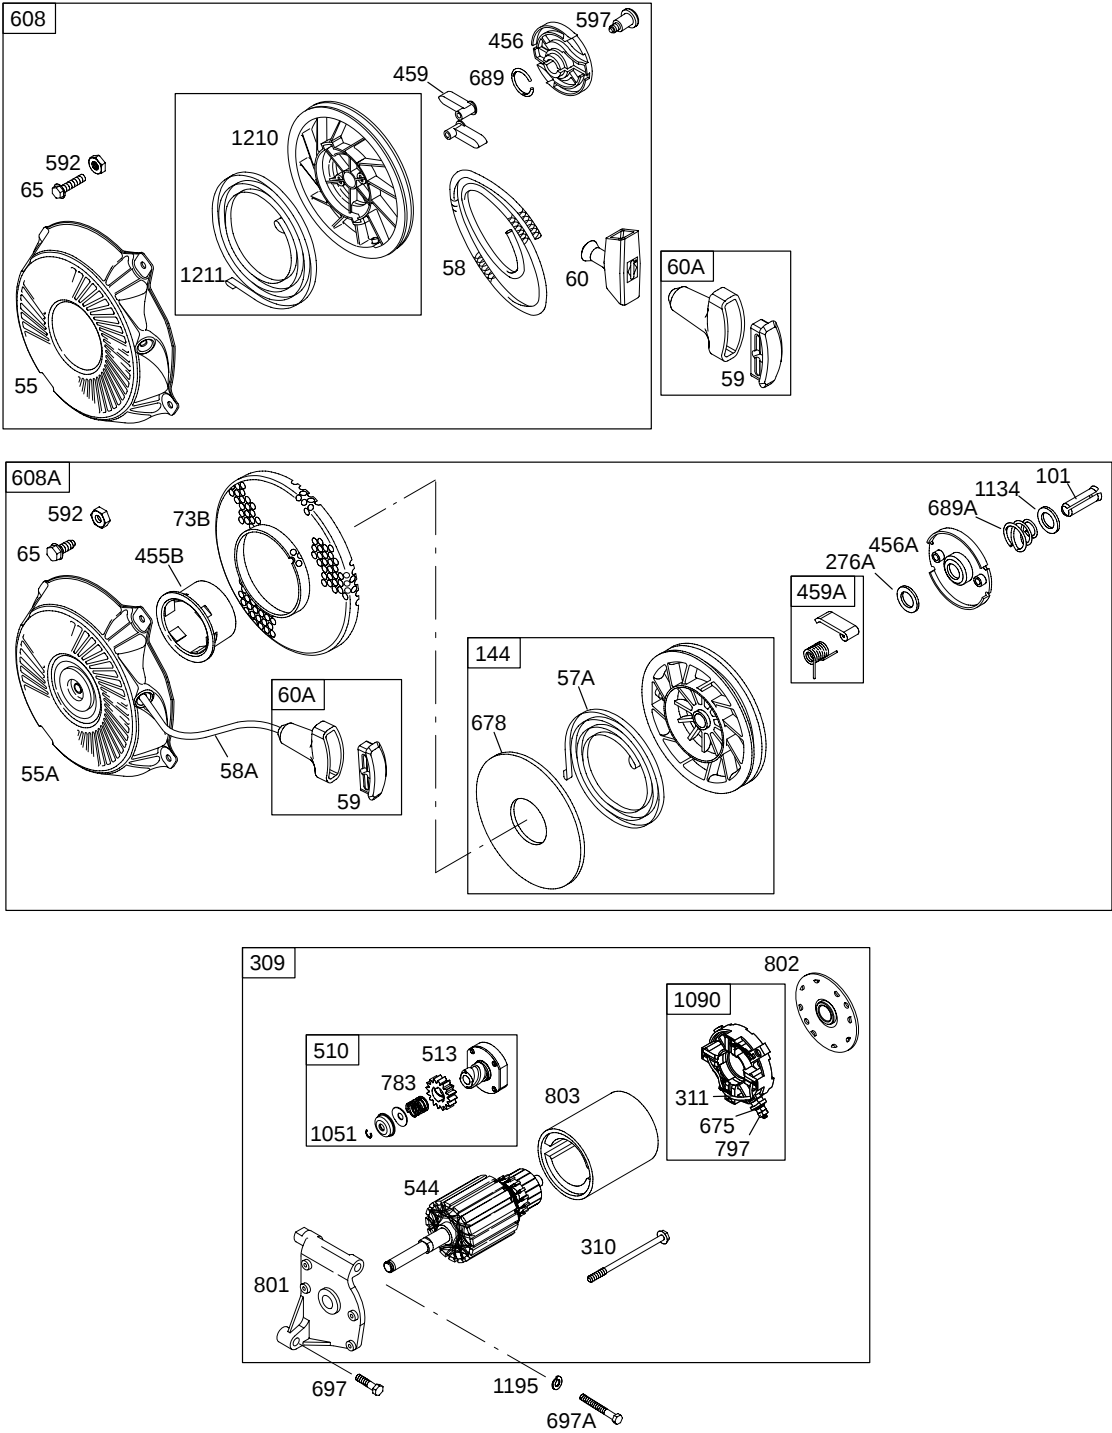

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

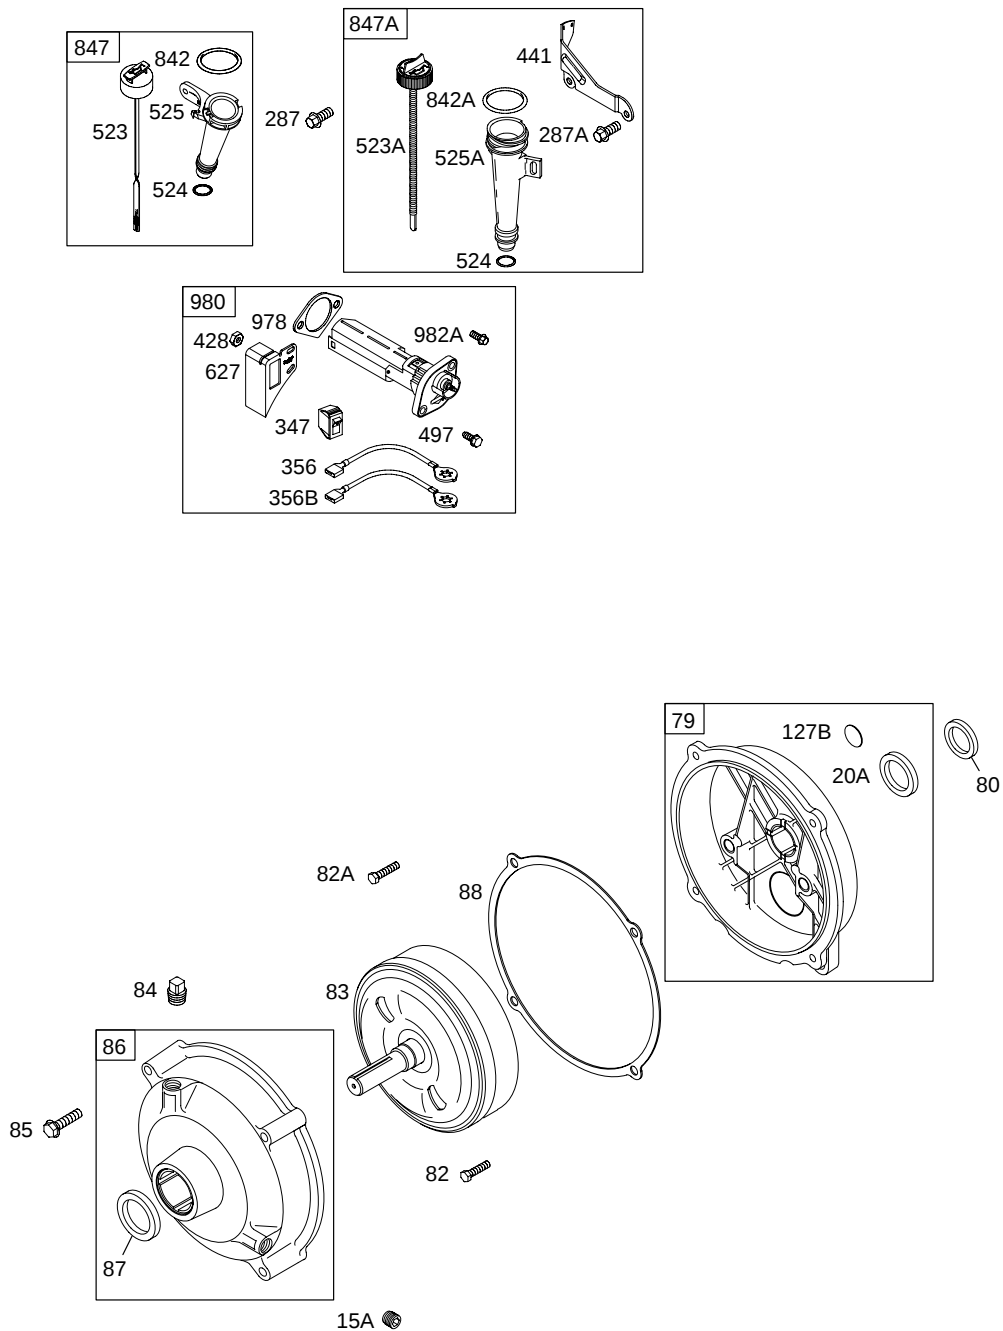

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6219-11 Assemblies include all parts shown in frames. 5C-9/2002

133400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	495133	Cylinder Assembly	14	690368	Stud (Cylinder Head)			494035 Crankshaft Used On Type No(s). 0039, 0040, 0070, 0340, 0571, 1040, 1070, 1171.
2	399269	Kit-Bushing/Seal (Magneto Side)	15	691686	Plug-Oil Drain (Square Head) (1/4" Diameter)			495642 Crankshaft Used On Type No(s). 0071, 0072, 1071, 1072.
3	★299819	Seal-Oil (Magneto Side)			----- Note -----			495643 Crankshaft Used On Type No(s). 0010, 0025, 0026, 0038, 0051, 0111, 0115, 0310, 0338, 1010, 1025, 1038, 1115, 1175.
5	691716	Head-Cylinder			691663 Plug-Oil Drain (Square Head) (1/4" Diameter) (Magnetic)			495644 Crankshaft Used On Type No(s). 0035, 0112, 0335, 1035, 1118, 1132.
7	Ø★272157	Gasket-Cylinder Head			15A 691682 Plug-Oil Drain (Hex Socket) (1/4" Diameter)			495649 Crankshaft Used On Type No(s). 0030, 0060, 0080, 0360, 1030, 1060.
8	495774	Breather Assembly			16 495645 Crankshaft			499764 Crankshaft Used On Type No(s). 0059, 0085, 0359, 1059.
9	Ø★27549	Gasket-Breather			----- Note -----			
10	691666	Screw (Breather Assembly)			397095 Crankshaft Used On Type No(s). 0024, 0049, 0324, 0349, 1024, 1049, 1177.			
11	691246	Tube-Breather			397103 Crankshaft Used on Type No(s). 0011, 0511, 1011.			
12	★692213	Gasket-Crankcase (.015" Thick, Standard)			492088 Crankshaft Used On Type No(s). 0083, 0084, 0555, 1084.			
		----- Note -----						
		★270125 Gasket-Crankcase (.005" Thick)						
		★270126 Gasket-Crankcase (.009" Thick)						
13	691640	Screw (Cylinder Head) (2-3/64" Long)						
13A	691659	Screw (Cylinder Head) (2-27/64" Long)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

◆ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6219-12

Assemblies include all parts shown in frames.

5C-9/2002

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
17	692007	Bearing–Ball	18B	694375	Cover–Crankcase (Used After Code Date 99031400). Used On Type No(s). 0084, 1084. ----- Note ----- 694350 Cover– Crankcase (Used Before Code Date 99031400). Used On Type No(s). 0011, 0083, 0511, 0555.	20A	★299819	Seal–Oil (PTO Side)
18	694377	Cover–Crankcase Used On Type No(s). 0003, 0006, 0007, 0008, 0024, 0030, 0039, 0040, 0049, 0059, 0060, 0070, 0080, 0085, 0324, 0340, 0349, 0359, 0360, 0571, 1024, 1030, 1040, 1049, 1059, 1060, 1070, 1171, 1177.				21	281658	Cap–Oil Fill
						22	691662	Screw (Crankcase Cover/ Sump)
18A	694319	Cover–Crankcase Used On Type No(s). 0001, 0002, 0004, 0009, 0010, 0013, 0025, 0026, 0035, 0036, 0038, 0041, 0042, 0043, 0050, 0051, 0071, 0072, 0082, 0101, 0111, 0112, 0115, 0117, 0310, 0335, 0336, 0338, 0350, 0536, 0573, 0574, 1010, 1013, 1025, 1035, 1036, 1038, 1041, 1050, 1071, 1072, 1112, 1115, 1117, 1118, 1132, 1172, 1173, 1174, 1175, 1176.	19	495660	Kit–Bushing/Seal	23	399673	Flywheel
			20	★495307	Seal–Oil (PTO Side) ----- Note ----- 294606 Seal–Oil (PTO Side) Used On Type No(s). 0011, 0083, 0084, 0511, 0555, 1011, 1084. 691952 Seal–Oil (PTO Side) Used on Type No(s). 0084, 1084. 692019 Seal–Oil (PTO Side) Used On Type No(s). 0039, 0040, 0070, 0340, 0571, 1040, 1070, 1171.	23A	690820	Flywheel

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

Ø Included in Valve Gasket Set–Ref. No 1095.

◆ Included in Carburetor Gasket Set–Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

133400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698	Key–Flywheel	35	690520	Spring–Valve (Intake)	73		Screen–Rotating (For Replacement Rotating Screen, See Ref 324 for Service) (Used After Code Date 95010800).
25	298904	Piston Assembly (Standard)	36	692180	Spring–Valve (Exhaust)			
		----- Note -----	37	691732	Guard–Flywheel	73A		Screen–Rotating (For Replacement Rotating Screen, See Ref 324 for Service) (Used Before Code Date 95020300).
		393820 Piston Assembly (.010" Oversize)	40	692194	Retainer–Valve	73B		Screen–Rotating (For Replacement Rotating Screen, See Ref 324 for Service) (Used Before Code Date 95010900).
		393821 Piston Assembly (.020" Oversize)	40A	691760	Retainer–Valve			
		393822 Piston Assembly (.030" Oversize)	45	690509	Tappet–Valve			
26	399067	Ring Set (Standard)	46	695006	Camshaft (Used After Code Date 00020700)			
		----- Note -----			----- Note -----			
		399014 Ring Set (.010" Oversize)			691164 Camshaft (Used Before Code Date 00020800).			
		399015 Ring Set (.020" Oversize)			692526 Camshaft Used On Type No(s). 0084, 1084.			
		399016 Ring Set (.030" Oversize)	50	691922	Manifold–Intake	74	690306	Screw (Rotating Screen) (Used After Code Date 00022100)
27	691588	Lock–Piston Pin	51	Ø★692283	Gasket–Intake	78	691660	Screw (Flywheel Guard)
28	298909	Pin–Piston (Standard)	51A	★273113	Gasket–Intake	79	690605	Reduction–Gear Case
		----- Note -----	54	691689	Screw (Intake Manifold)	80	★691602	Gasket–Gear Case
		298908 Pin–Piston (.005" Oversize)	55	691422	Housing–Rewind Starter	82	690369	Screw (Gear Reduction Case) (7/8" Long)
29	299430	Rod–Connecting (Standard)	55A	497830	Housing–Rewind Starter	82A	691122	Screw (Gear Reduction Case) (1 1/2" Long)
		----- Note -----	57A	491889	Spring–Rewind Starter	83	690374	Shaft–Auxiliary Drive
		390459 Rod–Connecting (.020" Undersize)	58	693389	Rope–Starter (Cut to Required Length)	84	691121	Plug–Breather
30	691759	Dipper–Connecting Rod	58A	280406	Rope–Starter (Cut to Required Length)	85	691117	Screw (Gear Cover to Gear Reduction)
32	691664	Screw (Connecting Rod)	59	396892	Insert–Grip	86	690608	Cover–Gear
33	211119	Valve–Exhaust	60	691915	Grip–Starter Rope (1 Piece)	87	691582	Seal–Gear Reduction
34	261044	Valve–Intake	60A	393152	Grip–Starter Rope (2 Piece)	88	★691600	Gasket–Gear Reduction Cover
			65	690837	Screw (Rewind Starter)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

Ø Included in Valve Gasket Set–Ref. No 1095.

◆ Included in Carburetor Gasket Set–Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6219–14

Assemblies include all parts shown in frames.

5C–9/2002

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
94	●493765	Kit-Idle Mixture	109	498593	Shaft-Choke	118	493869	Jet-Main
95	691636	Screw			----- Note -----			(High Altitude)
		(Throttle Valve)		495651	Shaft-Choke			----- Note -----
97	493556	Shaft-Throttle			Used On Type No(s).		495981	Jet-Main
98	398185	Kit-Idle Speed			0001, 0002, 0003,			(High Altitude)
		(Carburetor Mounted)			0004, 0006, 0007,			Used On Type No(s).
98A	493280	Kit-Idle Speed			0008, 0009, 0010,			0001, 0002, 0003,
		(Bracket Mounted)			0011, 0013, 0024,			0004, 0006, 0007,
101	262626	Pin-Shaft			0025, 0026, 0030,			0008, 0009, 0010,
104	●691242	Pin-Float Hinge			0035, 0036, 0038,			0011, 0013, 0024,
108	691182	Valve-Choke			0039, 0040, 0041,			0025, 0026, 0030,
108A	224783	Valve-Choke			0042, 0043, 0049,			0035, 0036, 0038,
		Used On Type No(s).			0050, 0051, 0059,			0039, 0040, 0041,
		0001, 0002, 0003,			0060, 0070, 0071,			0042, 0043, 0049,
		0004, 0006, 0007,			0072, 0080, 0082,			0050, 0051, 0059,
		0008, 0009, 0010,			0083, 0084, 0085,			0060, 0070, 0071,
		0011, 0013, 0024,			0101, 0111, 0112,			0072, 0080, 0082,
		0025, 0026, 0030,			0113, 0115, 0117.			0083, 0084, 0085,
		0035, 0036, 0038,	117	690048	Jet-Main			0101, 0111, 0112,
		0039, 0040, 0041,			(Standard)			0113, 0115, 0117.
		0042, 0043, 0049,			----- Note -----	121	498260	Kit-Carburetor
		0050, 0051, 0059,			497434 Jet-Main			Overhaul
		0060, 0070, 0071,			(Standard)			
		0072, 0080, 0082,			Used On Type No(s).			
		0083, 0084, 0085,			0001, 0002, 0003,			
		0101, 0111, 0112,			0004, 0006, 0007,			
		0113, 0115, 0117.			0008, 0009, 0010,			
					0011, 0013, 0024,			
					0025, 0026, 0030,			
					0035, 0036, 0038,			
					0039, 0040, 0041,			
					0042, 0043, 0049,			
					0050, 0051, 0059,			
					0060, 0070, 0071,			
					0072, 0080, 0082,			
					0083, 0084, 0085,			
					0101, 0111, 0112,			
					0113, 0115, 0117.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

◆ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

133400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125	498599	Carburetor ----- Note ----- 495652 Carburetor Used On Type No(s). 0001, 0002, 0003, 0004, 0006, 0007, 0008, 0009, 0010, 0011, 0013, 0024, 0025, 0026, 0030, 0035, 0036, 0038, 0039, 0040, 0041, 0042, 0043, 0049, 0050, 0051, 0059, 0060, 0070, 0071, 0072, 0080, 0082, 0083, 0084, 0085, 0101, 0111, 0112, 0113, 0115, 0117.	182	690469	Bracket-Fuel Tank	269	691589	Wire-Control (54" Length) (Cut to Required Length) ----- Note ----- 691026 Wire-Control (78" Length) (Cut to Required Length)
			186	692317	Connector-Hose			
			187	691050	Line-Fuel (Cut to Required- Length)	270	691027	Nut (Control Wire Casing)
			187A	495218	Line-Fuel (Molded)	271	691028	Lever-Control
			188	690297	Screw (Control Bracket)	276 ♦	271716	Washer-Sealing
			188A	691693	Screw (Control Bracket)	276A	280973	Washer-Sealing
			202	691282	Link-Mechanical Governor	287	94807	Screw (Dipstick Tube) (Used After Code Date 99031400).
			209	691816	Spring-Governor (Black)			
			215	691745	Guide-Air ----- Note ----- 690472 Guide-Air (Used on Engines With Electric Start)	287A	691693	Screw (Dipstick Tube) (Used Before Code Date 99031500).
127	♦691739	Plug-Welch (5/16" Diameter)	219	494845	Gear-Governor			
127A	♦694468	Plug-Welch (3/8" Diameter)	220	691724	Washer (Governor Gear)	300	692006	Muffler
127B	691585	Plug-Welch (7/8" Diameter)	222	691383	Bracket Control	304	495759	Housing-Blower (Black) ----- Note ----- 495760 Housing- Blower (Black) Used On Type No(s). 0042, 0050, 0051, 0350, 0574, 1050.
130	691181	Valve-Throttle	227A	690842	Lever-Governor Control ----- Note ----- 691433 Lever- Governor Control Used On Type No(s). 0070, 0571.	305	691108	Screw (Blower Housing)
133	398187	Float-Carburetor	232A	691784	Spring-Governor Link	306	694514	Shield-Cylinder
134	♦398188	Kit-Needle/Seat	240	298090	Filter-Fuel	307	691660	Screw (Cylinder Shield)
137	♦♦693981	Gasket-Float Bowl	265	691024	Clamp-Casing	308	690473	Cover-Cylinder Head
144	493824	Pulley/Spring Assembly	267	690804	Screw (Casing Clamp)	309	690658	Motor-Starter
146	690979	Key-Timing (Used with Timing Gear 691847) ----- Note ----- 499047 Key-Timing (Used with Timing Gear 261696)	268	691072	Casing-Control Wire (48" Length) (Cut to Required Length) ----- Note ----- 691025 Casing- Control Wire (72" Length) (Cut to Required Length)	310	690323	Bolt (Starter Motor)
147	692886	Jet-Pilot				311	497608	Brush Set
161	691384	Base-Air Cleaner (Metal)				324	695161	Screen/Cup Assembly
163	Ø♦272948	Gasket-Air Cleaner				332	690662	Nut (Flywheel)
170	691120	Stud (Crankcase Cover/ Sump) Used On Type No(s). 0083.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

♦ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6219-16

Assemblies include all parts shown in frames.

5C-9/2002

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	397358	Armature–Magneto	358	495661	Gasket Set–Engine	456	692299	Plate–Pawl Friction
334	691621	Screw (Magneto Armature)	360	690958	Nut (Fuel Tank Bracket)	456A	224321	Plate–Pawl Friction
337	802592	Plug–Spark (Resistor)	363	19069	Puller–Flywheel	459	281505	Pawl–Ratchet
347	495098	Switch–Rocker	365	691688	Screw (Carburetor)	459A	492833	Pawl–Ratchet
		----- Note -----	367	691660	Screw (Wire Clip)	474	494254	Alternator
		691995 Switch–Rocker	383	89838	Wrench–Spark Plug	481	231767	Bushing–Alternator
		Used On Type No(s).	404	691691	Washer (Governor Crank)	497	690661	Screw (Stop Switch Bracket)
		0011, 0041, 0059,	415	691363	Plug (High Oil Fill Hole)	504	495659	Washer–Set–Friction
		0060, 0072, 0080,	425	690670	Screw (Air Cleaner Cover)	505	691251	Nut (Governor Control Lever)
		0083, 0084, 0085,	427	690355	Nut (Control Bracket)	510	499308	Drive–Starter
		0360, 0555, 0573,	428	691612	Nut (Oil Gard Kit)	513	692024	Clutch–Drive
		0574, 1059, 1060,	429	692354	Cover–Spark Plug	523	495264	Dipstick (Used After Code Date 99031400).
		1177.	441	690448	Bracket–Oil Fill			----- Note -----
356	690817	Wire–Stop (1 Wire, 6–1/4" Long)(Push–On Insulated Female Blade Terminal, And Internal Tooth Lockwasher Ring Terminal)	445	494511	Filter–Air Cleaner Cartridge	523A	691388	Dipstick (Used Before Code Date 99031500).
356A	690818	Wire–Stop (2 Wires, 5–5/8" And 4–1/4" Long)(Push–On Insulated Female Blade Terminal, Snap Connect Insulated Pin Socket, And Snap Connect Insulated Female Blade Terminal)	455		Cup–Flywheel (For Replacement Flywheel Cup, See Ref 324 for Service) (Used After Code Date 95020200).			690777 Dipstick Used On Type No(s). 0080,0085.
356B	692363	Wire–Stop (1 Wire, 9–1/2" Long)(Push–On Insulated Female Blade Terminal, And Internal Tooth Lockwasher Ring Terminal)	455A		Cup–Flywheel (For Replacement Flywheel Cup, See Ref 324 for Service) (Used Before Code Date 95020300).	524	★691876	Seal–Dipstick Tube
			455B		Cup–Flywheel (For Replacement Flywheel Cup, See Ref 324 for Service) (Used Before Code Date 95010900).	525	694379	Tube–Dipstick (Used After Code Date 99031400).
								----- Note -----
						525A	690587	Tube–Dipstick Used On Type No(s). 0080, 0085.
						527	690423	Clamp–Tube

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

Ø Included in Valve Gasket Set–Ref. No 1095.

◆ Included in Carburetor Gasket Set–Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6219–17

Assemblies include all parts shown in frames.

5C–9/2002

133400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
529	692187	Grommet			(Fuel Tank Bracket)	803	693757	Housing–Starter
544	692966	Armature–Starter	674A	692199	Screw	823	691665	Screw
552	690508	Bushing–Governor Crank			(Fuel Tank Bracket)			(Muffler Adapter)
562	691119	Bolt	675	691261	Washer	832	690811	Guard–Muffler
		(Governor Control Lever)			(Brush Retainer)			----- Note -----
578	692306	Wire Assembly	676	692010	Deflector–Muffler			691432 Guard–Muffler
592	690800	Nut	677	690661	Screw			Used On Type No(s). 0070.
		(Rewind Starter)			(Muffler Deflector)	836	691693	Screw
597	691696	Screw	678	224278	Spacer–Rewind			(Muffler Guard)
		(Pawl Friction Plate)	683	691029	Nut	842	★691031	Seal–O Ring
601	95162	Clamp–Hose			(Starter Solenoid)			(Dipstick)
		(Green)	689	691855	Spring–Friction			(Used After Code Date 99031400).
601A	691038	Clamp–Hose	689A	262625	Spring–Friction	842A	★691870	Seal–O Ring
		(Black)	692	690572	Spring–Detent			(Dipstick)
608	497830	Starter–Rewind	697	693972	Screw			(Used Before Code Date 99031500).
608A		(For Replacement Rewind Starter, See Ref 608 For Service)			(Drive Cap)	843	691322	Sleeve–Lever
			697A	690298	Screw	843A	691895	Sleeve–Lever
					(Drive Cap)	847	694381	Dipstick/Tube Assembly
613A	691693	Screw	718	690959	Pin–Locating			(Used After Code Date 99031400).
		(Muffler)	726	495765	Gear–Ring	847A	691379	Dipstick/Tube Assembly
614	691620	Pin–Cotter			(Includes Mounting Hardware)			(Used Before Code Date 99031500).
615	93307	Retainer Governor Shaft	727	690600	Cover–Starter Drive			
616	692016	Crank–Governor	729A	690471	Clip–Wire			
627	690474	Bracket–Stop Switch	732	691097	Screw			
633	◆693867	Seal–Choke/Throttle Shaft			(Starter Drive Cover)			
633A	◆691321	Seal–Choke/Throttle Shaft	741	691847	Gear–Timing			
					(Uses Woodruff Key)			
635	66538	Boot–Spark Plug			----- Note -----			
643	691908	Retainer–Air Filter			261696 Timing Gear			
668	690531	Spacer	783	692353	(Uses Locating Pin)			
674	690810	Screw	797	691029	Gear–Pinion			
					Nut			
					(Brush Retainer)			
			801	690835	Cap–Drive			
			802	691286	Cap–End			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

Ø Included in Valve Gasket Set–Ref. No 1095.

◆ Included in Carburetor Gasket Set–Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6219–18

Assemblies include all parts shown in frames.

5C–9/2002

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
851	493880	Terminal-Spark Plug	978	★273326	Gasket-Oil Gard®	1051	691265	Ring-Retaining
864	690812	Adapter-Muffler	979	691382	Cover-Oil Gard®	1058	274267	Owner's Manual
869	691705	Seat-Valve (Intake)	980	496605	Kit-Oil Gard®	1090	691293	Retainer-Brush
870	691856	Seat-Valve (Exhaust)(Cobalite®)	982	690351	Screw (Oil Gard® Cover)	1095	493531	Gasket Set-Valve
871	262001	Bushing-Valve Guide (Exhaust)	982A	690350	Screw (Oil Gard® Kit)	1119	691183	Screw (Alternator)
		----- Note -----	994	690813	Arrestor-Spark	1134	224322	Washer (Pawl Friction Plate)
		63709 Bushing-Valve Guide (Intake)	1019	495861	Kit-Label	1167	691693	Screw (Governor Control Lever)(Remote Link Attachment)
			1036	695099	Label-Emissions (Used After Code Date 99093000).			
883	Ø★692237	Gasket-Exhaust			----- Note -----	1194	691876	Seal-O Ring (Plug)
920	691656	Solenoid-Starter			694516 Label- Emissions (Used After Code Date 98123100 and Before Code Date 99100100).	1195	691075	Washer (Drive Cap)
957	493988	Cap-Fuel Tank (Plastic)			499348 Label- Emissions (Used After Code Date 97052500 and Before Code Date 99010100).	1210	498144	Pulley/Spring Assembly (Pulley)
958	494769	Valve-Fuel Shut-Off (Plastic)			499347 Label- Emissions (Used Before Code Date 97052600).	1211	498144	Pulley/Spring Assembly (Spring)
967	492889	Filter-Pre Cleaner						
968	691327	Cover-Air Cleaner						
971	690370	Screw (Air Cleaner Base To Carburetor)						
972	495345	Tank-Fuel (Plastic)						
975	493640	Bowl-Float						
977	498261	Gasket Set-Carburetor						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

◆ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.