


AC-0007 4 Port Regulator Installation

In some cases, the new style AC-0007 Regulator may be too tall to allow the regulator to be installed without hitting the air compressor tank.

If this is the case with your installation you will need to simply remove the "Black Adjusting Knob" from the regulator with the following procedure.

1. Remove the Mounting Ring from the Regulator turning the mounting ring counterclockwise until it is removed from the threads of Black the regulator knob.

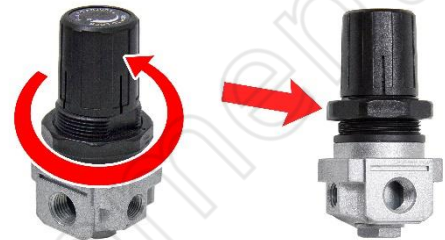

2. Turn the Black adjusting knob counterclockwise to expose the flat spots on each side of the regulator mounting threads.



3. Place the Silver regulator metal body into a vise and secure the metal regulator body. Being careful not to damage any threads of the metal regulator body.

4. With a 1-1/8 Smooth wrench, locate the flat spots on the regulator mounting thread area of the Black plastic portion of the regulator. Turn this portion of the plastic regulator counterclockwise until the Black plastic adjustment body is removed from the Silver metal body.



Note:

No loose parts will be exposed during this process, so there is not a risk of anything falling out during this procedure.

5. After the Silver regulator body is in the desired position, reassemble the Black plastic position on the regulator back into the Silver body and reassemble all removed components.