

PARTS MANUAL - MODEL NO. GFTVC6030

SPECIFICATION CHART

Model No.	FTVC6030
Bore	2 3/8"
Stroke	1.2"
Voltage-Single Phase	240*
Minimum Branch Circuit Requirement	15 amps**
**Fuse Type	"Fusetron" Type T
Air Tank Capacity - GAL	30 Gal. ASME
Approximate Cut-in Pressure	100
Approximate Cut-out Pressure	125
SCFM@40psig	14.0
SCFM@90psig	10.5

* This unit was not designed to operate on 208 volts.

* Esta unidad no ha sido diseñada para funcionar co alimentación de 208 V.


* Cet appareil n'est pas destiné à fonctionner à 280 volts.

**A circuit breaker is preferred. Use only a fuse or circuit breaker that is the same rating as the branch circuit the air compressor is operated on. If the air compressor is connected to a circuit protected by fuses, use dual element time delay fuses (Buss Fusetron Type "T" only).

**Se prefiere el uso de un rompecircuito o disyuntor eléctrico. Use solamente un fusible o rompecircuito que tenga la misma capacidad de corriente que el circuito ramal que alimenta el compresor de aire. Si el compresor de aire está conectado a un circuito protegido por fusibles, use solamente fusibles con doble elemento de demora de tiempo (fusibles Fusetron tipo "T" de Buss).

**Un disjoncteur est préférable. Employer seulement un fusible ou un disjoncteur du même taux que le circuit de dérivation sur lequel le compresseur fonctionne. Si le compresseur est connecté à un circuit protégé par des fusibles, employer des fusibles retardés à double éléments (Buss Fusetron de type T seulement).

KEY NO.	PART NUMBER	DESCRIPTION
1	DAC-243	Shroud, Rear
2	DAC-244	Shroud, Front
3	ACG-408	Fastener Assembly (3 used: Torque 33-38 in.-lbs.)
4	ACG-13	Cover, Intake Muffler
5	ACG-12	Filter Element
6	SSF-554	Screw, #10-14 x 2.5 Pan Head (2 used)
7	AC-0011	Console, Cover
8	CAC-61	Ring, Panel Mounting
9	AC-0009-1	Gauge, RT Hand
10	AC-0010-1	Gauge, LT Hand
11	AC-0027-1	Manifold
12	SSP-480	Nipple, 1/4 x 2.5"
13	CAC-4290-3	Check Valve
14	SSP-485	Reducer
15	AC-0007	Regulator
16	97503734	Safety Valve
17	H-2101	Adaptor
18	SSP-7813	Nut/Sleeve Assy.
19	AC-0008	Pressure Switch
20	SS-8553	Connector Body
21	SSP-7811	Nut/Sleeve Assy. (2 used)
22	AC-0028	Pressure Relief Tube
23	SUDL-415-1	Cord Assembly
24	AC-0126	Outlet Tube
25	SSP-7821-1	Nut Brass Compression (3 used)
26	SSG-3105	Silicone Sleeve (3 used)
27	SSF-990	Screw, 1/4 - 2 ounc - 2A THD Forming (2 used)
28	ACG-18	Cup, Saddle Mount (2 used)
29	AC-0099	Crossover Tube
30	ACG-19	Isolator (3 used)
31	SSP-470	Hex Reducer Bushing
32	SS-2707	Drain Valve
33	SUDL-6-1	Strip, Rubber Foot
34	CAC-60	Shoulder Bolt (2 used)
35	CAC-4313	Wheel - 10" (2 used)
36	SSF-8080-ZN	Nut, Hex 3/8" (2 used)
37	AC-0002-1	Handle
38	SSF-981	Screw (4 used)

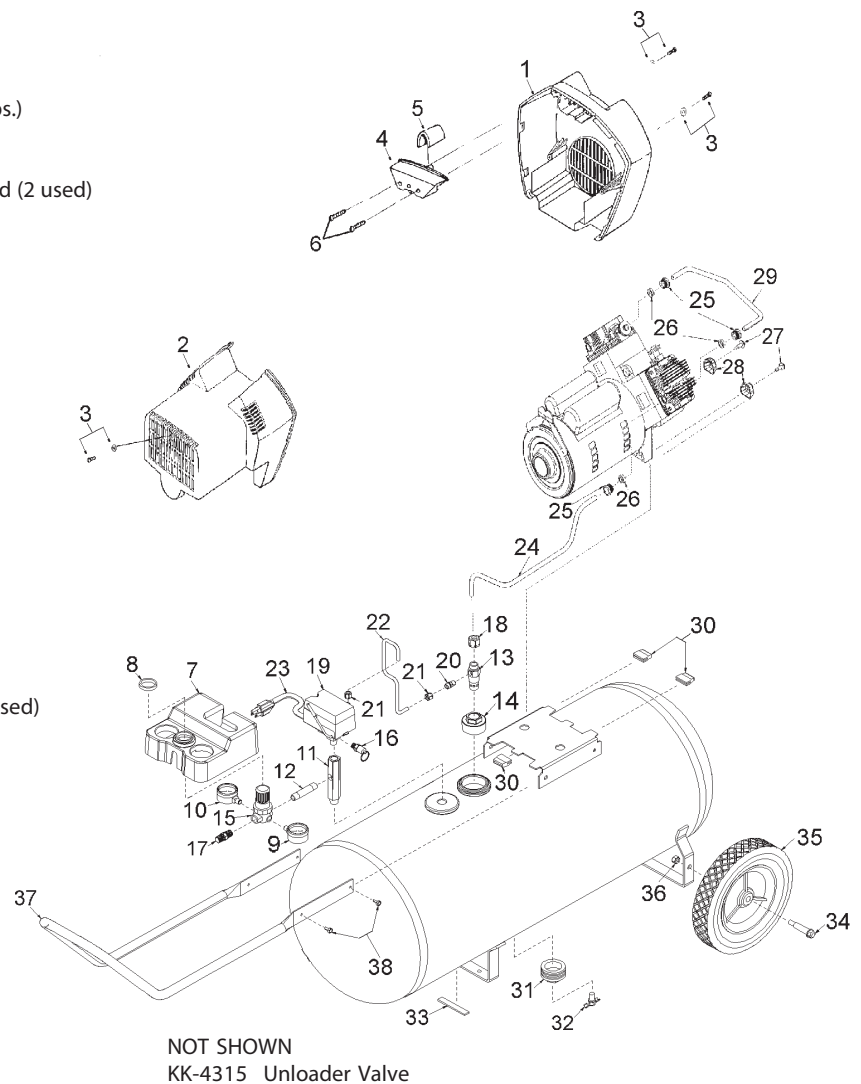

Call our Toll Free Number 1-800-888-2468, Ext 2 , to obtain the location of the nearest Authorized Service Center for ordering repair parts and for warranty repairs.

When ordering repair parts from your local Authorized Service Center, always give the following information:

- Model number of your product
- Part number and description of the item you wish to purchase