



General Power Products

Portable Electric Generator

Owners Manual

MODEL: APP 6000



IMPORTANT – Please make certain the person who uses this Generator thoroughly reads these instructions and all other instructions provided to ensure proper safety, use, and care of your new GPP product.

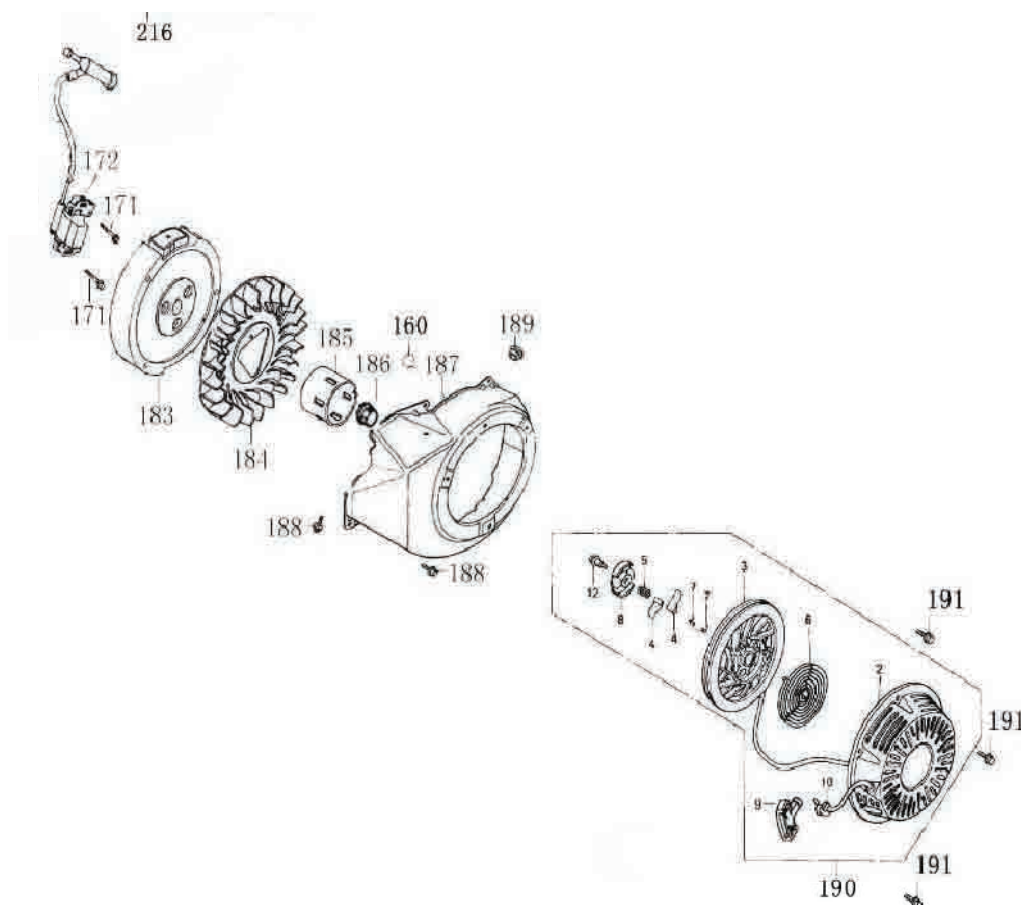


Table of Contents

Recoil and Ignition.....	3
Carburetor	4
Governor Control.....	5
Engine Block Assembly	6
Cylinder Head and Valves	7
Engine Cover	9
Generator Assembly.....	10
Control Panel	11
Muffler and Air Filter Assembly	12
Fuel Tank Assembly.....	13
Frame Assembly	14




Recoil and Ignition




Recoil, Ignition, and Fan Housing			
No.	Part No.	Description	Quantity
160	10061-9999-0000	WIRE HARNESS CLIP, 6MM	1
171	B057890006002770B	BOLT,M6X27	2
172	81200-PB52-0600	IGNITION COIL ASSY.	1
183	21520-PB52-0000	COMP. FLYWHEEL	1
184	19102-PB52-0000	COOLING FAN	1
185	19102-PB52-0000	STARTER PULLEY	1
186	82150-PB52-0000	NUT,M16	1
187	21530-PB52-0600	FAN COVER COMP.	1
188	B057890006001270B	BOLT M6X12	6
189	19111-KB03-0000	DRAIN HOLE GROMMET	1
190	21500-PB52-4100	RECOIL STARTER ASSY.	1
191	B057890006000870B	BOLT M6X8	3
190-10	21517-MB30-0000	RECOIL STARTER ROPE	1
190-12	21521-MB30-0000	CENTER SCREW	1
190-2	21510-PB50-1100	CASE COMP.RECOIL STARTER	1
190-3	21520-PB52-0000	RECOIL STARTER PULLEY	1
190-4	21512-MB30-0000	STARTER RATCHET	2
190-5	21518-MB30-0000	FRICTION SPRING	1
190-6	21514-MB30-0000	STARTER RETURN SPRING	1
190-7	21515-MB30-0000	RATCHET SPRING	2
190-8	21513-MB30-0000	SPRING RETAINER	1
190-9	21516-MB30-0000	STARTER GRIP	1

Carburetor

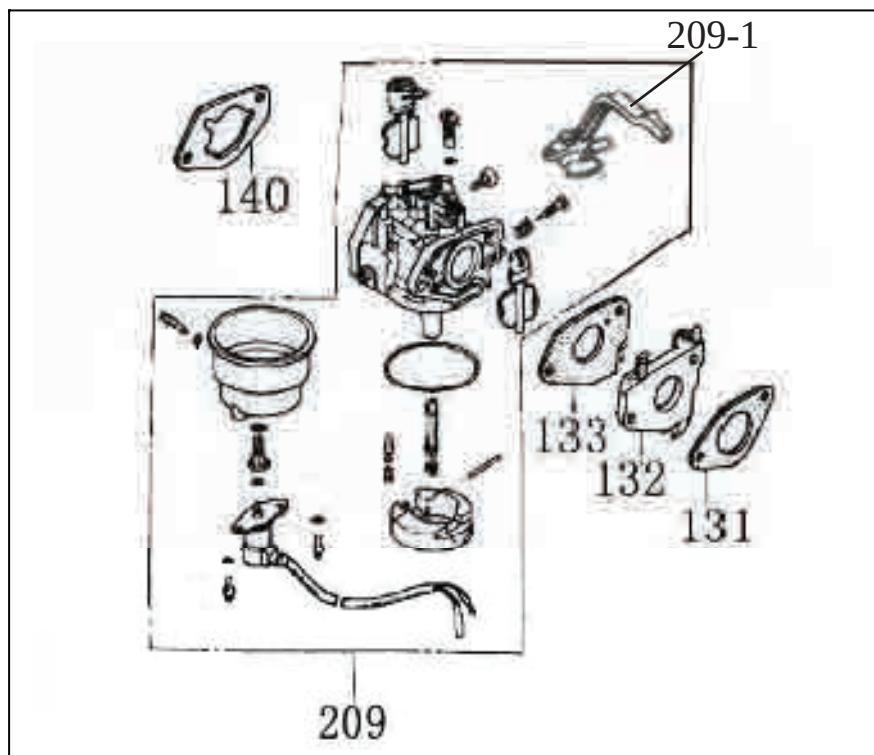


Carburetor Assembly			
No.	Part No.	Description	Quantity
131	17182-QB60-0000	CARBURETOR PAKING A	1
132	17112-QB62-0000	CARBURETOR INSULATOR	1
133	17107-PB50-0000	CARBURETOR PAKING B	1
137	17100-QB62-0000	TUBEASSY, 3.5X65	1
138	52609-PB52-0000	WIRE HARNESS CLIP	1
140	17183-PB52-0000	AIR CLEANER PACKING	2
209	17100-QB62-1100	CARBURETOR ASSY	1
209-1	23030-Q001-0000	CHOKE ARM	1

Governor Control

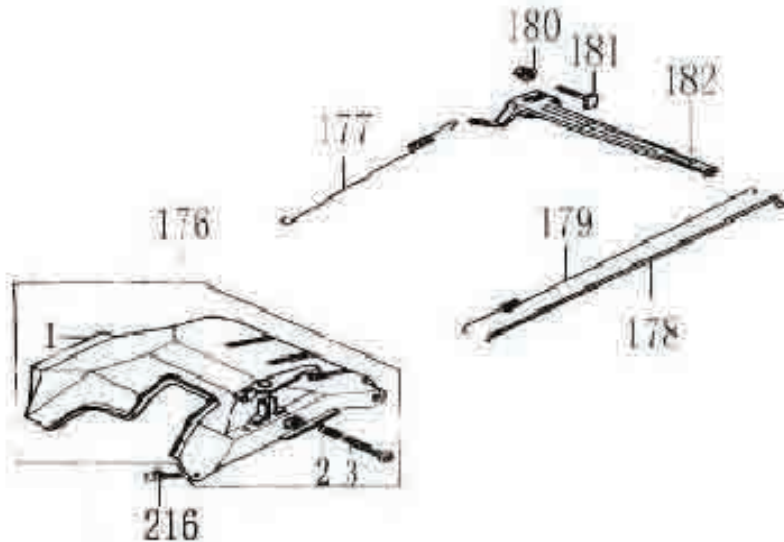


Governor Control Arm Assembly			
No.	Part No.	Description	Quantity
176	24610-PB52-0000	CONTROL ASSY	1
177	24602-PB52-0000	GOVERNOR SPRING	1
178	24604-PB52-0000	ROD	1
179	24603-MB30-0000	THROTTLE RETURN SPRING	1
180	B061770106000060B	NUT,M6	1
181	91121-1060-02120B	GOVERNOR ARM BOLT	1
182	24607-PB52-0000	GOVERNOR ARM	1
216	B057890006001270B	BOLT,M6X12	3
176-1	24611-PB52-0000	SHROUD	1
176-2	2461F-PB52-0000	ADJUSTING SPRING	1

Engine Block Assembly

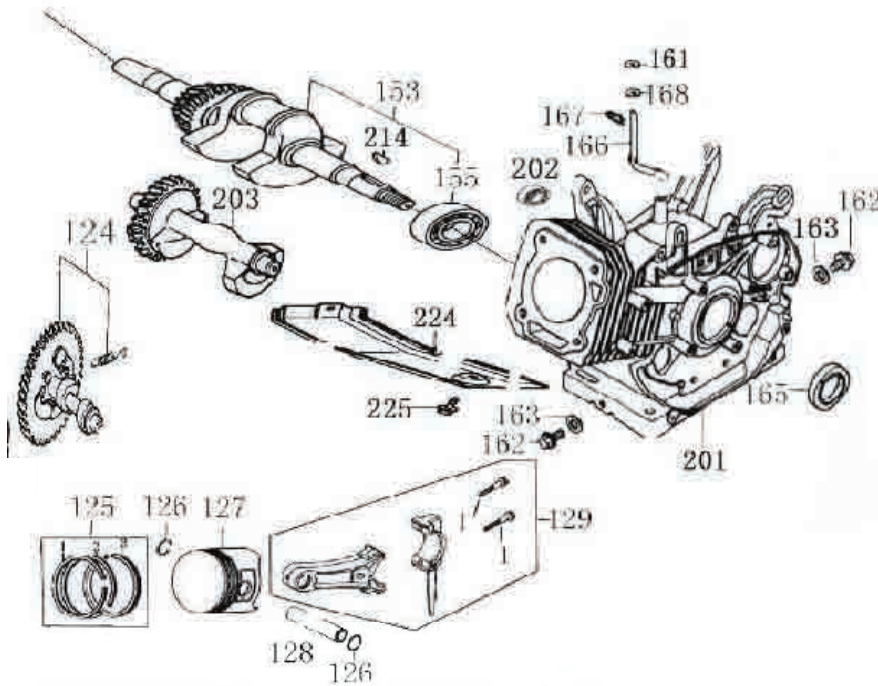


Engine Block Assembly			
No.	Part No.	Description	Quantity
125	1310A-QB62-0000	PISTON RING SET	1
126	13105-PB52-0000	PISTON PIN CLIP	2
127	13101-QB62-0000	PISTON	1
128	13102-PB52-0000	PISTON PIN	1
129	13204-PB52-0000	CONNECTING ROD ASSY.	1
153	13230-PB52-0000	CRANKSHAFT COMP.	1
155	92102-00000006207	RADIAL BALL BEARING, 6207	1
161	91306-90820817000	WASHER, 8.2×17×0.8	1
162	91103-MB30-0000	BOLT, DRAIN PLUG	2
163	91302-91202020000	DRAIN PLUG WASHER	2
165	T1105035005200800	OIL SEAL, 35×52×8	1
166	24605-PB52-0000	GOVERNOR ARM SHAFT	1
167	24606-MB30-0000	LOCK PIN	1
168	T1101008001400500	OIL SEAL, 8×14×5	1
201	12007-QB60-0100	BARREL ASSY., CYLINDER	1
202	92102-00000006202	RADIAL BALL BEARING, 6202	1
203	91601-MB30-0000	WEIGHT BALANCER	1
214	13300-PB52-0000	KEY	1
224	19113-PB50-0000	SHROUD	1
225	B057890006001670B	BOLT M6X16	1
125-1	13103-QB62-0000	FIRST RING SET, PISTON	1
125-2	13104-QB62-0000	SECOND RING SET, PISTON	1
125-3	13108-QB62-0000	THIRD RING SET, PISTON	1
129-1	B057890008003870B	BOLT M8X38	2

Cylinder Head and Valves

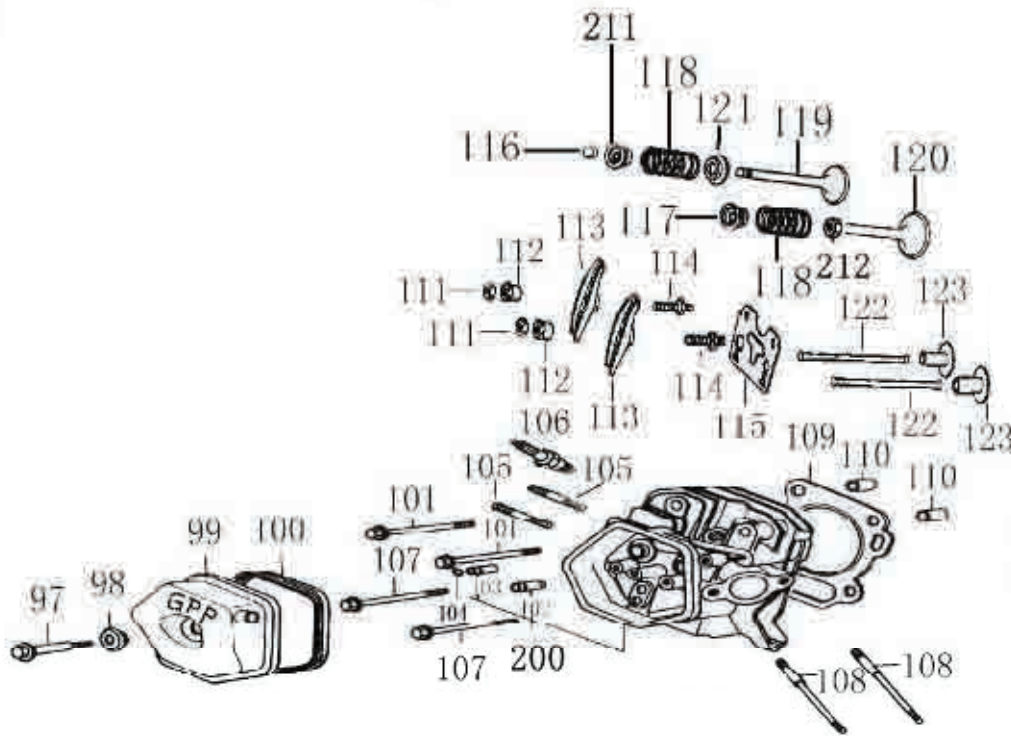


Cylinder Head Assembly			
No.	Part No.	Description	Quantity
97	91132-1060-06170B	BOLT, HEAD COVER	1
98	91135-MB-0000	WASHER COMP., HEAD COVER	1
99	11221-MB30-0700	COVER COMP., HEAD	1
100	90229-MB30-0200	PACKING, HEAD COVER	1
101	B057890E10008070B	BOLT, FLANGE, M10X80	4
102	11246-PB52-0000	GUIDE, IN. VALVE	1
103	11247-PB52-0000	GUIDE, EX. VALVE	1
104	11248-MB30-0000	CLIP, VALVE GUIDE	1
105	91138-PB52-0000	BOLT, STUD, M8X34	2
106	81300-KB01-0000	SPARK PLUG NGK BP6ES	1
108	91127-PB52-0000	BOLT, STUD, M8X106	2
109	9022B-QB60-0000	GASKET, CYLINDER HEAD	1
110	91521-12002000000	PIN, DOWEL, 12X20	2
111	15414-MB30-0000	NUT, ARM, VALVE ROCKER	2
112	15403-MB30-0000	PIVOT ADJUSTING NUT	2
113	15401-MB30-0000	ARM, VALVE ROCKER	2
114	15415-MB30-0000	PIVOT BOLT	2
115	15406-MB30-0000	PUSH ROD GUIDE PLATE	1
116	15713-MB30-0000	VALVE ROTATOR	1
117	15711-MB30-0100	IN. VALVE SPRING RETAINER	1
118	15703-MB30-0000	VALVE SPRING	2
119	15701-PB52-0000	EXHAUST VALVE	1
120	15701-PB52-0000	INTAKE VALVE	1
121	15705-MB30-0000	VALVE SPRING SEAT	1
122	15321-PB52-0000	PUSH ROD	2
123	15002-MB30-0000	LIFTER, VALVE	2
124	15100-QB62-0000	CAMSHAFT ASSY	1
200	11245-PB50-0000	HEAD COMP., CYLINDER	1
211	15712-MB30-0100	EX. VALVE SPRING RETAINER	1
212	1572B-MB30-0000	OIL SEAL	1

Engine Cover

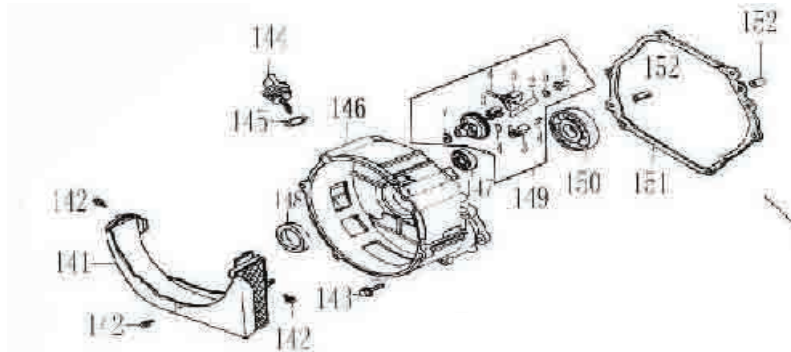


Crankcase Cover			
No.	Part No.	Description	Quantity
141	TD2511-C01-0000	DUCT COVER	1
142	B057890005001270B	BOLT, FLANGE M5X12	3
143	B057890008003570B	BOLT M8X35	7
144	14301-QB62-0300	OIL FILLER CAP	1
145	14303-PB52-0000	O-RING,26×2.7	1
146	12301-PB52-000	CRANKCASE COVER ASSY.	1
147	92102-00000006202	RADIAL BALL BEARING, 6202	1
148	T1105035005200800	OIL SEAL,35×52×8	1
149	24620-PB52-0000	GOVERNOR KIT	1
149-1	24626-PB52-0000	GOVERNOR	1
149-2	24621-PB52-0000	GOVERNOR HOLDER	1
149-3	24624-PB52-0000	GOVERNOR WEIGHT	3
149-4	24625-PB52-0000	GOVERNOR WEIGHT PIN	3
149-5	24623-PB52-0000	GOVERNOR HOLDER CLIP	1
149-6	24622-PB52-0000	GOVERNOR SLIDE	1
149-7	B0009601060000K0B	PLAIN WASHER,W6	1
150	92102-00000006207	RADIAL BALL BEARING, 6207	1
151	90208-PB52-0000	CASE COVER PACKING	1
152	91521-08001200000	DOWEL PIN ,8×12	2

Generator Assembly

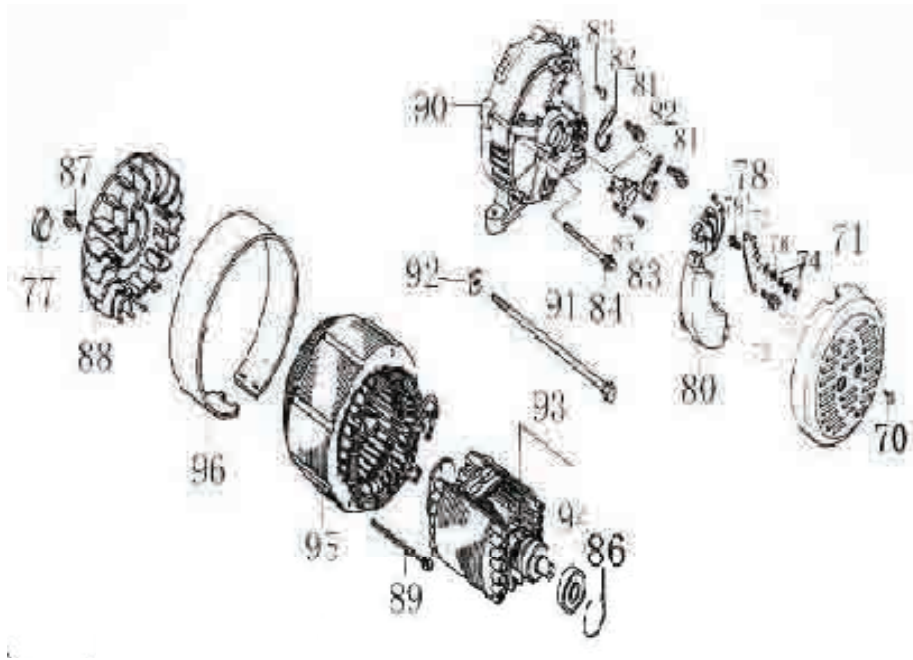


Stator / Housing Assembly			
No.	Part No.	Description	Quantity
70	B057890006001670B	BOLT, FLANGE M6×16	2
71	TD1441-B98-0500	COVER, GENERATOR END	1
72	B057890005001270B	BOLT, FLANGE M5×12	2
73	B061700005000060B	NUT, HEX. ,M5	4
74	B000970205000000B	WASHER, PLAIN, W5	4
76	B000930005000000B	WASHER, SPRING, W5	4
77	TD1461-B98-0000	GROMMET, CRANKCASE	1
78	TD1451-B98-0000	TERMINAL, VOLT CHANGE	1
79	B057890005002070B	BOLT, HEX. , M5×20	2
80	TD1431-C03-0200	REGULATOR ASSY. AUTOMATIC VOLTAGE	1
81	B057890E10026570B	BOLT, FLANGE M5×12	2
82	TD1471-B98-0000	TIE, CABLE	2
83	B057890005001270B	BOLT, FLANGE M 5×12	2
84	B057890006017970B	BOLT, FLANGE M6×125	4
85	TD1421-B98-0000	BRUSH ASSY	1
87	B057890E10026570B	BOLT, FLANGE M5×12	3
88	TD1412-B98-0000	FAN, GENERATOR COOLING	1
89	B057890005021070B	BOLT-WASHER, M5×210	4
90	TD1411-B98-0000	STATOR/HOUSING ASSY	1
91	B057890010026570B	BOLT, HEX. , M10×265	1
92	B000970210000000B	WASHER, W10×5	1
93	TD1200-C03-0000	ROTOR COMP	1
94	92102-00000006204	BEARING ASSY. , 6204	1
95	TD1100-C03-0000	STATOR ASSY	1
96	TD1110-C03-0000	COVER, STATOR	1
97	TD1210-B98-0000	CLIP,BEARING	1

Control Panel

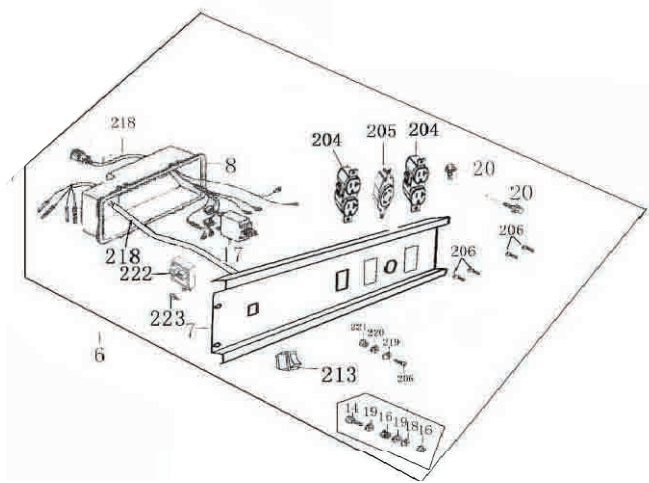


Control Panel Assembly			
No.	Part No.	Description	Quantity
6	TD2000-C03-2000	CONTROL PANEL ASSY	1
7	TD2006-C03-0100	CONTROL PANEL COMP	1
8	TD9001-C03-0000	CASE,CONTROL PANEL	1
14	B057890006002070B	BOLT , HEX , M6×20	1
16	B061770006000060B	NUT , HEX , M6	2
17	TD2310-C03-0000	CIRCUIT BREAKER 23A	1
18	B000970206000000B	WASHER , PLAIN , W6	1
19	B000930006000000B	WASHER , SPRING , W6	2
20	B057890006002070B	BOLT , M6×20	4
61	TD2611-C03-0100	HARNESS ASSY B., WIRE	1
204	TD2410-C03-0100	SOCKET,120V	2
205	TD2410-C03-0200	SOCKET,(120V 240V)	1
206	B06170004000060B	SCREW M4	6
213	TD2016-B92-0000	SWITCH	1
218	TD2611-C03-0000	HARNESS ASSY A., WIRE	1
219	B000930004000000B	WASHER, SPRING, W4	6
220	B000970204000000B	WASHER, PLAIN, W4	6
221	B061770004000060B	NUT , M4	6
222	TD2018-C03-0100	DIODE ASSY	1
223	B057890006001470B	BOLT , M6×14	1

Muffler and Air Filter Assembly

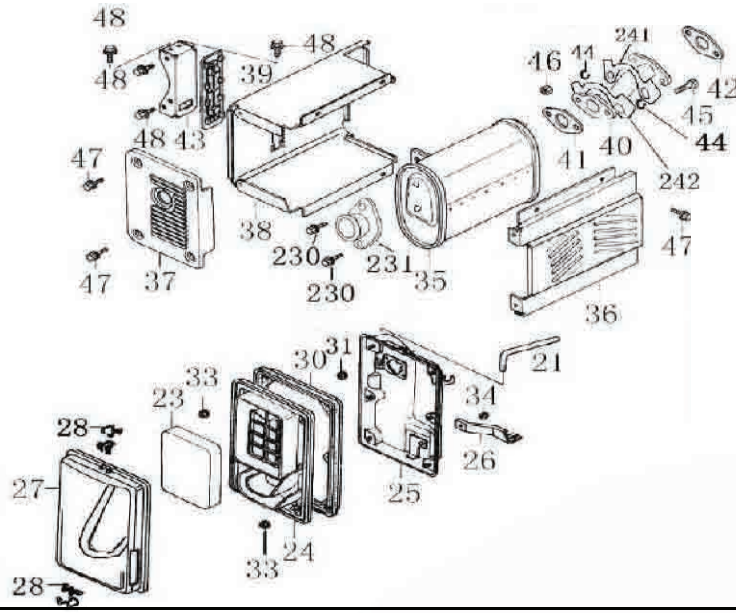


Muffler and Air Filter Assembly			
No.	Part No.	Description	Quantity
21	12104-MB32-0000	BREATHER TUBE	1
23	16101-MB32-0100	AIR CLEANER ELEMENT	1
24	16106-MB32-0000	AIR CLEANER SEPRATOP (PLASTIC)	1
25	16127-MB32-0000	AIR CLEANER CASE REAR	1
26	TD4121-C01-0000	AIR CLEANER STAY	1
27	16105-MB32-0200	AIR CLEANER COVER CASE FRONT	1
28	16109-MB32-0000	GEMEL	1
30	16102-MB32-0000	AIR CLEANER SEAL	1
31	B061770106000060B	NUT,M6	1
33	B061700004000060B	NUT 4MM	6
34	B061770106000060B	NUT,M6	1
35	18000-QC03-0000	MUFFLER COMP	1
36	TD5004-B98-0000	MUFFLER SIDE PROTECTOR	1
37	TD5003-B98-0000	MUFFLER OUTER PROTECTOR COMP.	1
38	TD5002-C03-0000	MUFFLER INNER PROTECTOR COMP.	1
39	TD5006-B98-0000	PROTECTOR MUFFLER SEAL	1
40	18100-PB52-0000	EXHAUST PIPE COMP.	1
41	18066-MB32-0100	EX. PIPE GASKET(A)	1
42	18066-MB32-0000	EX. PIPE GASKET (B)	1
43	TD5001-B98-0000	MUFFLER STAY COMP.	1
44	B000930008000000B	SPRING WASHER W8	4
45	B057890008002570B	BOLT M8×25	2
46	B061700008000060B	NUT 8MM	2
47	B057890006001270B	BOLT M6×12	1
48	B057890008001670B	BOLT M8×16	4
230	B057890005002070B	BOLT M5×20	2
231	18000-QC03-0100	SPARK ARRESTOR	1
241	TD5006-PB50-0000	LOCK PLATE 50mm	1
242	TD500 7 -PB50-0000	LOCK PLATE 60mm	1

Fuel Tank Assembly

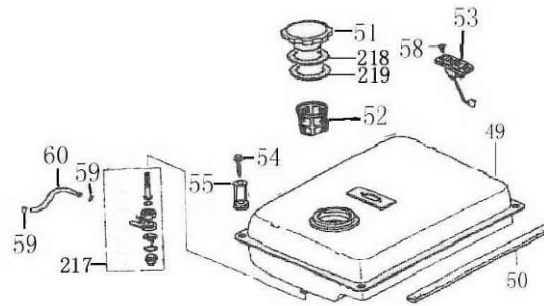


Fuel Tank Assembly			
No.	Part No.	Description	Quantity
49	TD6110-B98-0400	TANK COMP. , FUEL	1
50	TD6008-B98-0000	FUEL TANK SEAL	1
51	TD6120-B98-0000	FUEL FILLER CAP COMP.	1
52	TD6130-B93-0000	FUEL FILTER	1
53	TD6140-B93-0000	METER ASSY.,FUEL	1
54	B057890006003070B	BOLT, FLANGE, M6×30	4
55	TD6003-B93-0000	TANK CUSHION WASHER	4
56	TD6002-B93-0000	BUSH	4
58	B090740005001000B	SCREW, FLAT, M5×10	2
59	17020-JC79-0200	TUBE CLIP, (B8)	2
60	T2999706300130185	FUEL TUBE, W3.5×W10×165	1
217	TD6040-B98-0400	FUEL COCK ASSY.	1
218	TD6121-B93-0100	FUEL FILLER CAP PACKING (RUBBER)	1
219	TD6122-B93-0100	FUEL FILLER CAP PACKING (PLASTIC)	1

Frame Assembly

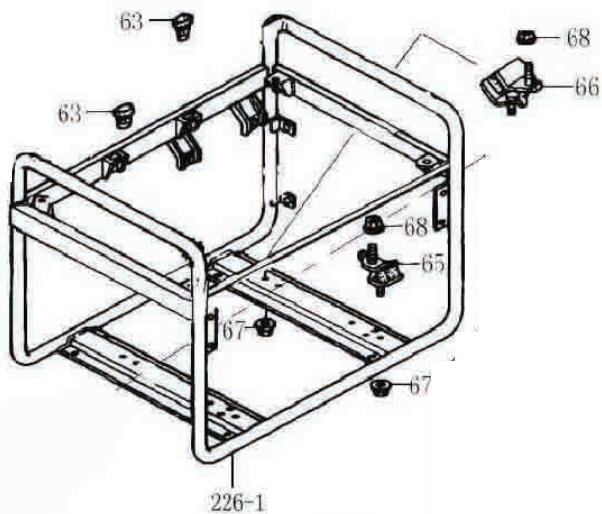

226

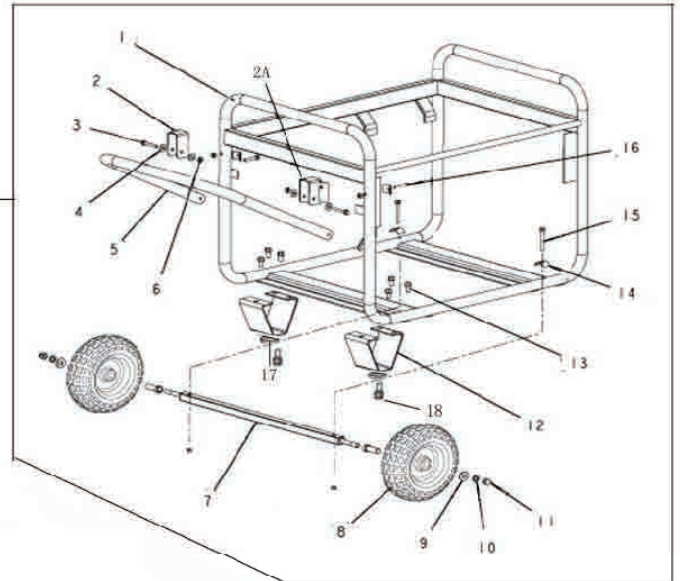

Frame Assembly			
No.	Part No.	Description	Quantity
63	TD6007-B98-0000	FUEL TANK MOUNTING RUBBER	2
65	TD4111-B98-0000	BOTTOM RUBBER , L	2
66	TD4112-B98-0000	BOTTOM RUBBER , R	2
67	B061770010000060B	NUT M10	4
68	B061770008000060B	NUT M8	4
226	TD4010-C03-1200	WHEEL AND HANDLE ASSY	1
226-1	TD4010-C03-2100	FRAME KIT	1
226-10	B0009300010000000B	WASHER, SPRING, W10	2
226-11	B0092300060000000B	NUT,M10	2
226-12	TD4012-C03-0600	FOOT	2
226-14	TD7051-C06-0000	TILE	4
226-15	B057890006005570B	BOLT,M6×40	2
226-16	B057890006003570B	BOLT,M6×35	2
226-17	TD4113-B98-0000	RUBBER BUMPER FOR FOOT	2
226-18	B094410006001870B	M6×18	2
226-2	TD4013-C03-0200	LEFT GEMEL	1
226-2A	TD4013-C03-0300	RIGHT GEMEL	1
226-3	B057890006004070B	BOLT,M6×40	2
226-4	B0009702060000000B	FLAT WASHER,W6	4
226-5	TD4011-C03-0200	HANDLE	1
226-6	B0618700060000000B	NUT, M6	2
226-7	TD4015-C03-0400	AXLE OF WHEEL	1
226-8	TD4014-C05-0400	WHEEL	2
226-9	91302-91002030000	FLAT WASHER,W10	2
227-13	B094410006001870B	BOLT,M6×18	6