
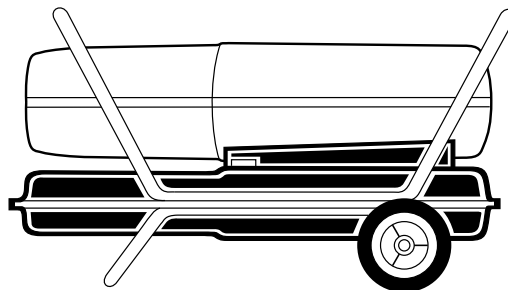
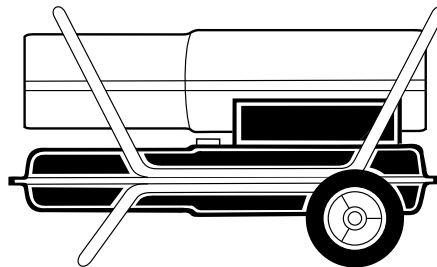


# PORTABLE FORCED AIR HEATERS

## OWNER'S MANUAL

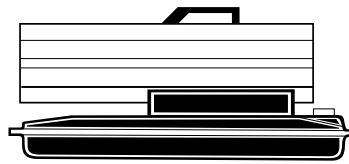

**Heater Sizes: 8,8 (30,000) 20,5 (70,000)  
26,4 (90,000) 44 kW (150,000 BTU/Hr)**

### IMPORTANT

Read and understand this manual before assembling, starting or servicing heater. Improper use of heater can cause serious injury. Keep this manual for future reference.

# CONTENTS

SECTION	PAGE
Safety Information .....	3
Product Identification .....	5
Unpacking .....	6
Assembly .....	6
Theory of Operation .....	7
Fuels .....	7
Ventilation .....	8
Operation .....	8
Storage .....	9
Preventative Maintenance Schedule .....	9
Troubleshooting .....	10
Service Procedures .....	11
Upper Shell Removal .....	11
Fuel Filter (8,8/20,5 kW [30/70,000 BTU/Hr] Models) .....	11
Fuel Filter (26,4 kW [90,000 BTU/Hr] Model) .....	12
Fuel Filter (44 kW [150,000 BTU/Hr] Model) .....	12
Spark Plug (8,8 kW [30,000 BTU/Hr] Model) .....	13
Spark Plug (20,5/26,4/44 kW [70/90/150,000 BTU/Hr] Models) ..	14
Air Output, Air Intake, and Lint Filters .....	15
Pump Pressure Adjustment .....	15
Nozzle (8,8 kW [30,000 BTU/Hr] Model) .....	16
Nozzle (20,5/26,4 kW [70/90,000 BTU/Hr] Models) .....	17
Nozzle (44 kW [150,000 BTU/Hr] Model) .....	18
Pump Rotor .....	19
Fan .....	20
Specifications .....	20
Wiring Diagrams .....	21
Accessories .....	22
Illustrated Parts Breakdown and Parts List .....	23
Wheels and Handles (26,4/44 kW [90/150,000 BTU/Hr] Models)	23
8,8 kW (30,000 BTU/Hr) Model .....	24
20,5 kW (70,000 BTU/Hr) Model .....	26
26,4 kW (90,000 BTU/Hr) Model .....	28
44 kW (150,000 BTU/Hr) Model .....	30
Warranty and Repair Service .....	Back Cover

## SAFETY INFORMATION

### WARNINGS

**IMPORTANT:** Read this owner's manual carefully and completely before trying to assemble, operate, or service this heater. Improper use of this heater can cause serious injury or death from burns, fire, explosion, electrical shock, and carbon monoxide poisoning.

### DANGER

**Carbon monoxide poisoning may lead to death!**

**Carbon Monoxide Poisoning:** Early signs of carbon monoxide poisoning resemble the flu, with headaches, dizziness, or nausea. If you have these signs, the heater may not be working properly. **Get fresh air at once!** Have heater serviced. Some people are more affected by carbon monoxide than others. These include pregnant women, persons with heart or lung disease or anemia, those under the influence of alcohol, and those at high altitudes.

Make certain you read and understand all warnings. Keep this manual for reference. It is your guide to safe and proper operation of this heater.

- Use only kerosene or No. 1 fuel oil to avoid risk of fire or explosion. Never use gasoline, naphtha, paint thinners, alcohol, or other highly flammable fuels.
- Fueling
  - a) Personnel involved with fueling shall be qualified and thoroughly familiar with the manufacturer's instructions and applicable regional regulations regarding the safe fueling of heating units.
  - b) Only the type of fuel specified on the heater's data plate shall be used.
  - c) All flame, including the pilot light, if any, shall be extinguished and the heater allowed to cool, prior to fueling.
  - d) During fueling, all fuel lines and fuel-line connections shall be inspected for leaks. Any leaks shall be repaired prior to returning the heater to service.
  - e) At no time shall more than one day's supply of heater fuel be stored inside a building in the vicinity of the heater. Bulk fuel storage shall be outside the structure.
  - f) All fuel storage shall be located a minimum of 25 feet from heaters, torches, welding equipment, and similar sources of ignition (exception: the fuel reservoir integral with the heater unit).
  - g) Whenever possible, fuel storage shall be confined to areas where floor penetrations do not permit fuel to drip onto or be ignited by a fire at lower elevation.
  - h) Fuel storage shall be in accordance with the regional authority having jurisdiction.


*Continued*

# SAFETY INFORMATION


*Continued*

- Never use heater where gasoline, paint thinner, or other highly flammable vapors are present.
- Follow all local ordinances and codes when using heater.
- Heaters used in the vicinity of tarpaulins, canvas, or similar enclosure materials shall be located a safe distance from such materials. The recommended minimum safe distance is 10 feet. It is further recommended that these enclosure materials be of a fire retardant nature. These enclosure materials shall be securely fastened to prevent them from igniting or from upsetting the heater due to wind action.
- Use only in well-vented areas. Provide at least a three-square foot (2800 square cm) opening of fresh, outside air for each 29,3 kW (100,000 BTU/Hr) of rating.
- Use only in places free of flammable vapors or high dust content.
- Use only with the electrical voltage and frequency specified on model plate.
- Use only a grounded (earthed) extension cord.
- Minimum heater clearances from combustibles:  
Outlet: 250 cm (8 Ft.)      Sides, Top, and Rear: 125 cm (8 Ft.)
- Locate heater on a stable and level surface while hot or running or a fire may occur.
- When moving or storing heater, keep heater in a level position or fuel spillage may occur.
- Keep children and animals away from heater.
- Unplug heater when not in use.
- When used with thermostat, heater may start anytime.
- Never use heater in living or sleeping areas.
- Never block air inlet (rear) or air outlet (front) of heater.
- Never move, handle, refuel, or service a hot, operating, or plugged-in heater.
- Never attach duct work to front or rear of heater. Using duct work could reduce the necessary air flow of heater. Heater would produce excessive carbon monoxide.


**PRODUCT  
IDENTIFICATION**

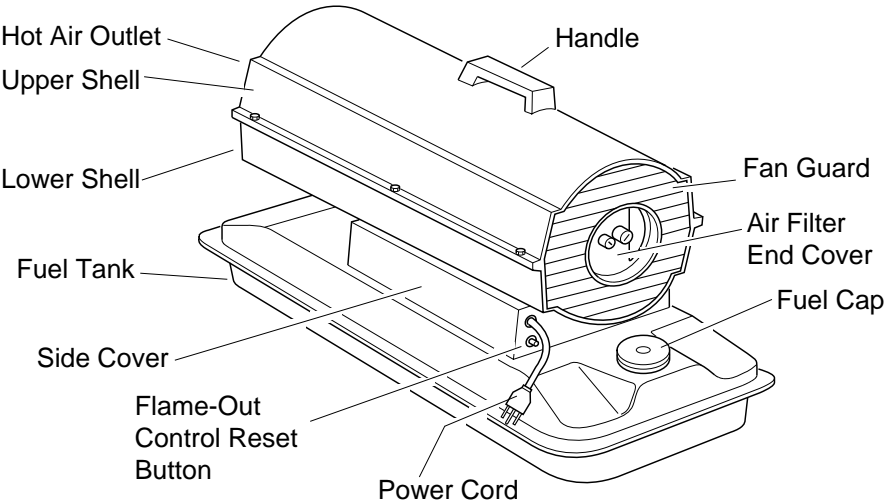

**Figure 1 - 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

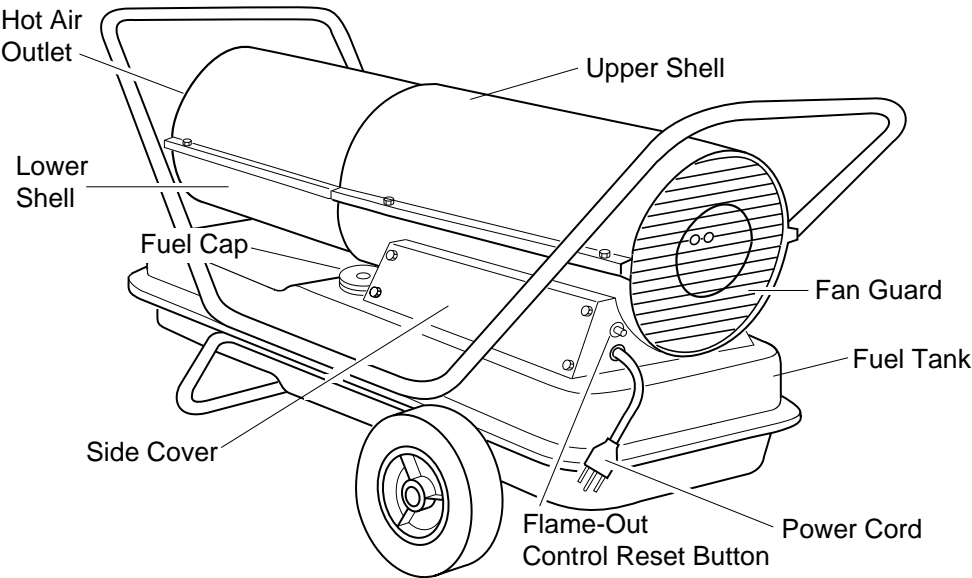

**Figure 2 - 26,4 kW (90,000 BTU/Hr) Model**

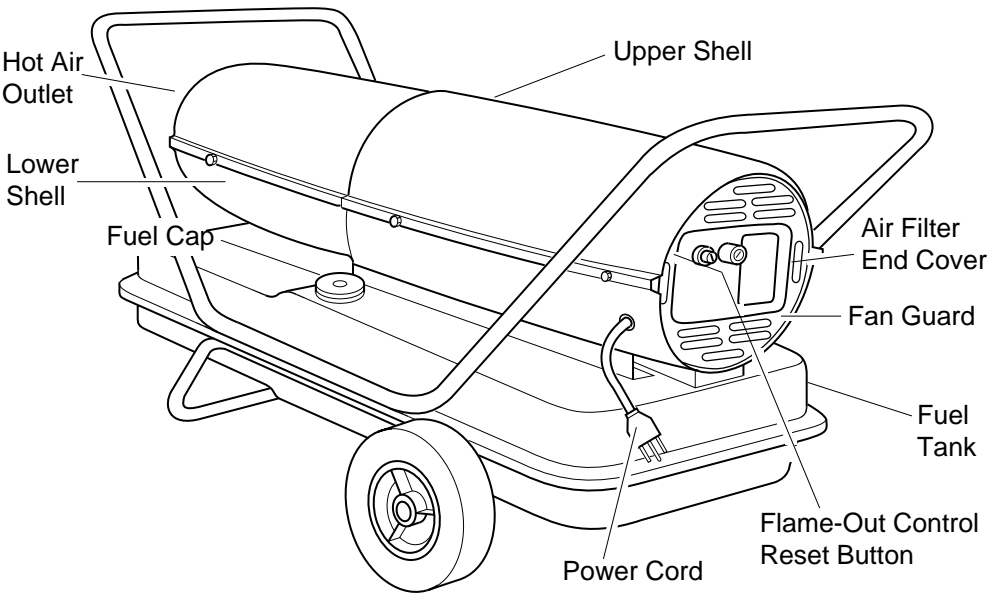

**Figure 3 - 44 kW (150,000 BTU/Hr) Model**

## UNPACKING

## ASSEMBLY

(For 26,4 and 44 kW [90,000  
and 150,000 BTU/Hr]  
Models Only)


1. Remove all packing items applied to heater for shipment.
2. Remove all items from carton.
3. Check items for any shipping damage. If heater is damaged, promptly inform dealer where you bought heater.

These models are furnished with wheels and handles. Wheels, handles, and the mounting hardware are found in the shipping carton.

### Tools Needed

- Medium Phillips Screwdriver
- 3/8" Open or Adjustable Wrench
- Hammer

1. Slide axle through wheel support frame. Install wheels on axle.  
**IMPORTANT:** When installing wheels, point extended hub of wheels toward wheel support frame (see Figure 4).
2. Place cap nuts on axle ends. Gently tap with hammer to secure.
3. Place heater on wheel support frame. Make sure air inlet end (rear) of heater is over wheels. Line up holes on fuel tank flange with holes on wheel support frame.
4. Place front handle and rear handle on top of fuel tank flange. Insert screws through handles, fuel tank flange, and wheel support frame. Attach nut finger tight after each screw is inserted.
5. After all screws are inserted, tighten nuts firmly.

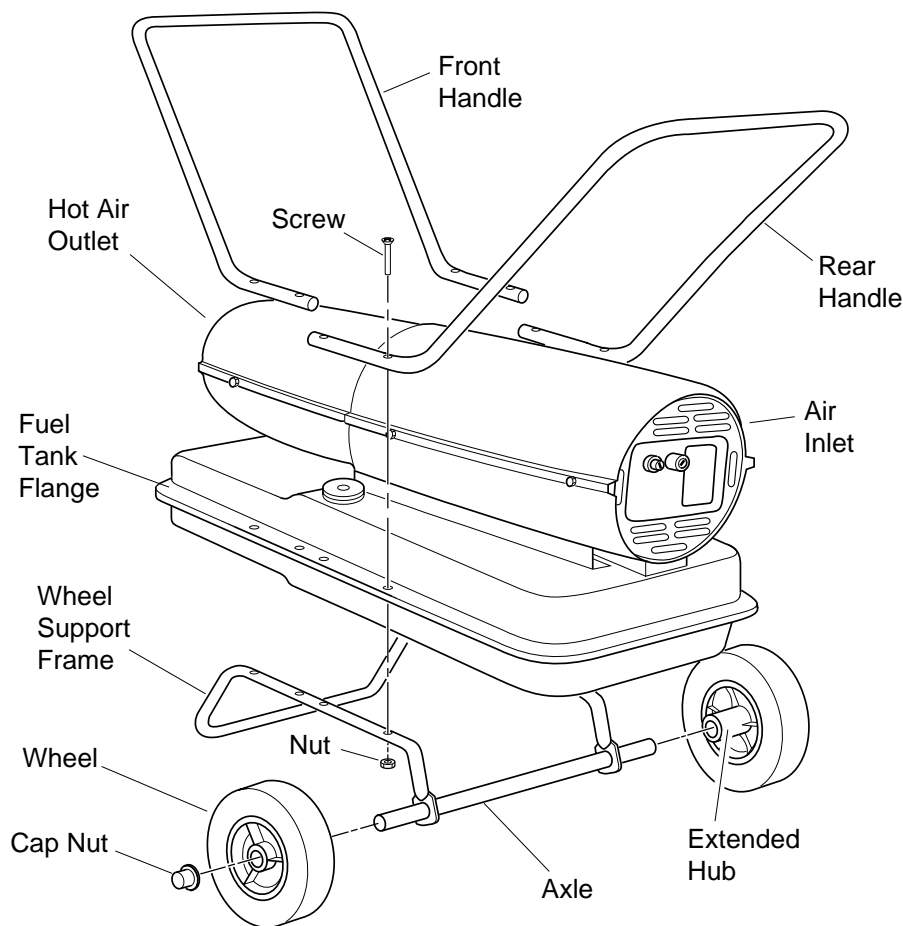

**Figure 4 - Wheel and Handle Assembly, 26,4/44 kW  
(90/150,000 BTU/Hr Models) Only**


# THEORY OF OPERATION

**The Fuel System:** The air pump forces air through the air line. The air is then pushed through the burner head nozzle. This air causes fuel to lift from the tank. A fine mist of fuel is sprayed into the combustion chamber.

**The Air System:** The motor turns the fan. The fan pushes air into and around the combustion chamber. This air is heated and provides a stream of clean, hot air.

**The Ignition System:** The electronic ignitor sends voltage to the spark plug. The spark plug ignites the fuel and air mixture.

**The Flame-Out Control System:** This system causes the heater to shut down if the flame goes out.

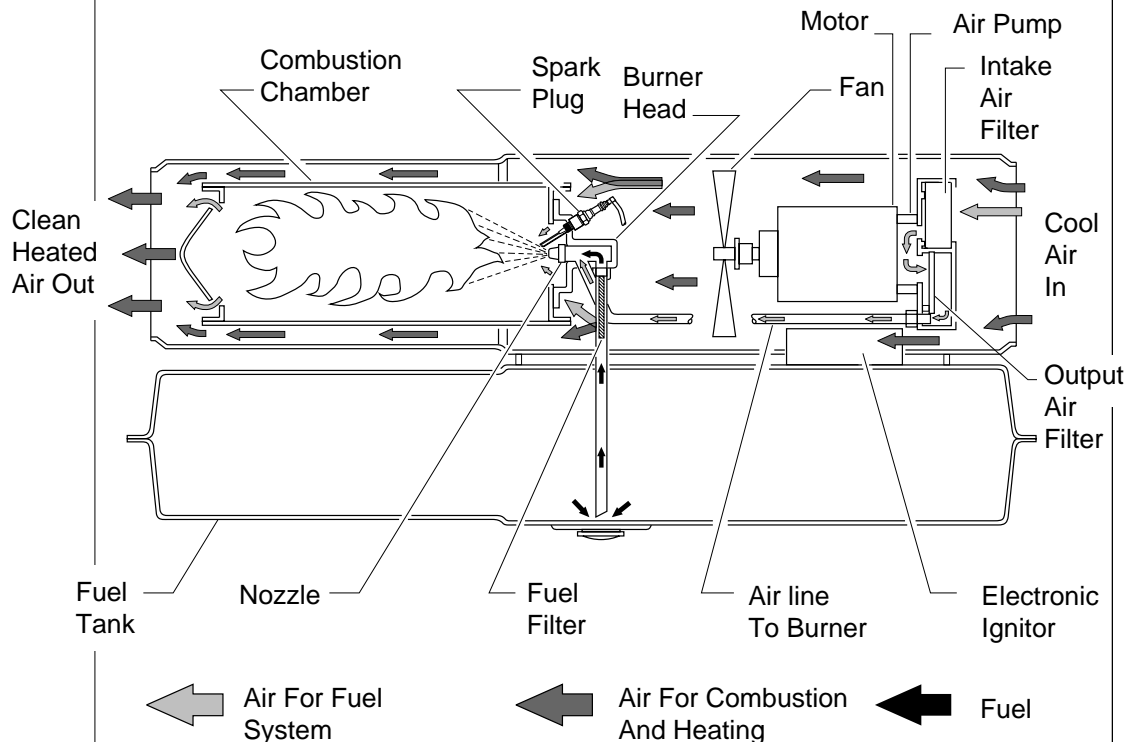

**Figure 5 - Cross Section Operational View**

## FUELS

### **⚠ WARNING**

**Use only kerosene or No. 1 fuel oil to avoid risk of fire or explosion. Never use gasoline, naphtha, paint thinners, alcohol or other highly flammable fuels.**

Do not use heavy fuels such as No. 2 fuel oil or No. 2 Diesel. Using heavy fuels will result in:

- clogged fuel filter and nozzle
- carbon build up on spark plug
- use of non-toxic anti-icer in fuel during very cold weather

**IMPORTANT:** Use a KEROSENE ONLY container. Be sure storage container is clean. Foreign matter such as rust, dirt, or water will cause the flame-out control to shut down heater. Foreign matter may also require you to clean fuel system often.

## VENTILATION

### WARNING

**Follow the minimum fresh, outside air ventilation requirements. If proper fresh, outside air ventilation is not provided, carbon monoxide poisoning can occur. Provide proper fresh, outside air ventilation before running heater.**

Provide a fresh air opening of at least 2800 square cm (three square feet) for each 29,3 kW (100,000 BTU/Hr) rating. Provide extra fresh air if more heaters are being used.

*Example:* A 44 kW (150,000 BTU/Hr) heater requires one of the following:

- a 4,88 m (16 foot) wide two-car garage door raised 8,59 cm (3.38 inches)
- a 2,75 m (9 foot) wide single-car garage door raised 15,24 cm (6 inches)
- two, 76,20 cm (thirty-inch) wide windows raised 28 cm (11 inches)

## OPERATION

### WARNING

**Review and understand the warnings in the Safety Information Section. They are needed to safely operate this heater. Follow all local codes when using this heater.**

### To Start Heater


1. Follow all ventilation and safety information.
2. Fill fuel tank with kerosene or No. 1 fuel oil.
3. Attach fuel cap.
4. Plug power cord of heater into standard 230 volt/50 hertz, grounded (earthed) outlet. Use an extension cord if needed. Use only a grounded (earthed) extension cord.

### Extension Cord Wire Size Requirements


Up to 100 feet (30.5 meters) long, use 16 AWG (1.0 mm<sup>2</sup>) conductor

101 to 200 feet (30.6 to 61 meters) long, use 14 AWG (1.5 mm<sup>2</sup>) conductor

Heater will start when power cord is plugged into outlet. If not, push in flame-out control reset button (see Figures 6 thru 8).

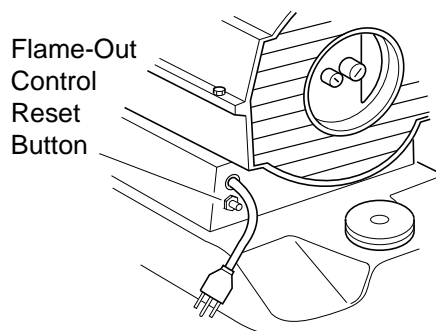

**Figure 6 - Flame-Out Control Reset Button, 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

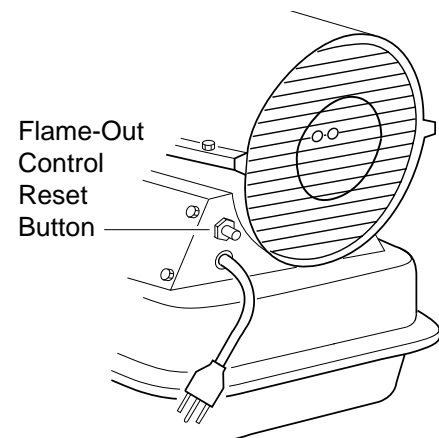


**Figure 7 - Flame-Out Control Reset Button, 26,4 kW (90,000 BTU/Hr) Model**



## OPERATION

Flame-Out  
Control  
Reset Button  
(Fan Guard  
Removed)

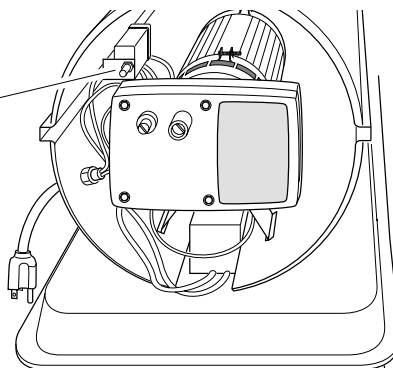

**Figure 8 - Flame-Out Control Reset Button, 44 kW (150,000 BTU/Hr) Model**

### To Stop Heater

1. Unplug power cord from outlet.

### To Restart Heater

1. Wait 2 minutes after stopping heater.
2. Repeat steps under *To Start Heater*, page 8.

## STORAGE

1. Drain fuel tank.  
*Note:* Some models have drain plug on underside of fuel tank. If so, remove drain plug to drain all fuel. If heater does not have drain plug, drain fuel through fuel cap opening. Be sure all fuel is removed.
2. Replace drain plug if used.
3. Add one gallon (4 liters) of clean kerosene to fuel tank.
4. Attach fuel cap.
5. Move heater forwards and backwards to stir fuel.
6. Remove fuel cap or drain plug and drain fuel tank. Be sure all fuel is removed.
7. Replace fuel cap or drain plug. Properly dispose of old and dirty fuel.
8. Store heater in dry place. Make sure storage place is free of dust and corrosive fumes.

**IMPORTANT:** Do not store kerosene over summer months for use during next heating season. Using old fuel could damage heater.

## WARNING

**Never service heater while it is plugged in, operating, or hot. Severe burns and electrical shock can occur.**

## PREVENTATIVE MAINTENANCE SCHEDULE

<u>Item</u>	<u>How Often</u>	<u>How To</u>
Fuel tank	Flush every 150-200 hours of operation or as needed.	See <i>Storage</i> above.
Air output and lint filters	Replace every 500 hours of operation or once a year.	See <i>Air Output, Air Intake, and Lint Filters</i> , page 15.
Air intake filter	Wash and dry with soap and water every 500 hours of operation or as needed.	See <i>Air Output, Air Intake, and Lint Filters</i> , page 15.
Fuel filter	Clean twice a heating season or as needed.	See <i>Fuel Filter</i> , pages 11 and 12.

Continued


## TRUBLE-SHOOTING

**Continued**

<u>Item</u>	<u>How Often</u>	<u>How To</u>
Spark plug	Clean and regap every 600 hours operation or replace as needed.	See <i>Spark Plug</i> , pages 13 and 14.
Fan blades	Clean every season or as needed. See <i>Fan</i> , page 20.	
Motor	Not required/permanently lubricated	

### **WARNING**


**Never service heater while it is plugged in, operating, or hot. Severe burns and electrical shock can occur.**

<u>OBSERVED FAULT</u>	<u>POSSIBLE CAUSE</u>	<u>REMEDY</u>
Heater ignites, but flame-out control shuts off heater after a short period of time.	Wrong pump pressure	See <i>Pump Pressure Adjustment</i> , page 15.
	Dirty air output, air intake, and lint filters	See <i>Air Output, Air Intake and Lint Filters</i> , page 15.
	Dirty fuel filter	See <i>Fuel Filter</i> , pages 11 and 12.
	Dirt in nozzle	See <i>Nozzle</i> , pages 16 thru 18.
	Dirty photocell lens	Clean photocell lens.
	Bad flame-out control	Replace flame-out control.
Heater will not ignite, but motor runs for a short period of time.	Wrong pump pressure	See <i>Pump Pressure Adjustment</i> , page 15.
	Carbon deposits on spark plug and/or improper gap	See <i>Spark Plug</i> , pages 13 and 14.
	Dirty fuel filter	See <i>Fuel Filter</i> , pages 11 and 12.
	Dirt in nozzle	See <i>Nozzle</i> , pages 16 thru 18.
	Water in fuel tank	Drain and flush fuel tank with clean kerosene. See <i>Storage</i> , page 9.
<h3> <b>WARNING: High voltage!</b></h3>		
	Electronic ignitor not grounded (earthed)	Make sure electronic ignitor mounting is tight.
	Bad electronic ignitor	Replace electronic ignitor.
Motor does not start when heater is plugged in, fan rotates slowly or does not turn.	Flame-out control not reset	Reset flame-out control button, see Figures 6 thru 8, pages 8 and 9.
	Binding pump rotor	If fan is hard to turn, see <i>Pump Rotor</i> , page 19.


# SERVICE PROCEDURES

## Upper Shell Removal


1. Remove screws along each side of heater using 5/16" nut-driver. These screws attach upper and lower shells together.
2. Lift upper shell off.
3. Remove fan guard.

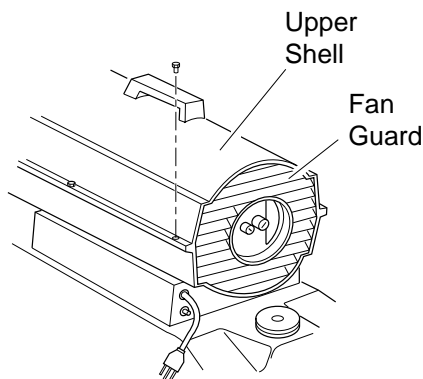

**Figure 9 - Upper Shell Removal, 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

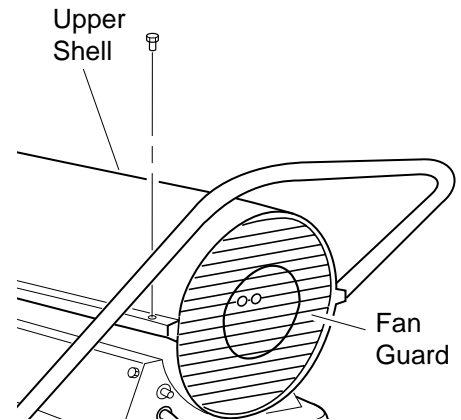

**Figure 10 - Upper Shell Removal, 25,4 kW (90,000 BTU/Hr) Model**

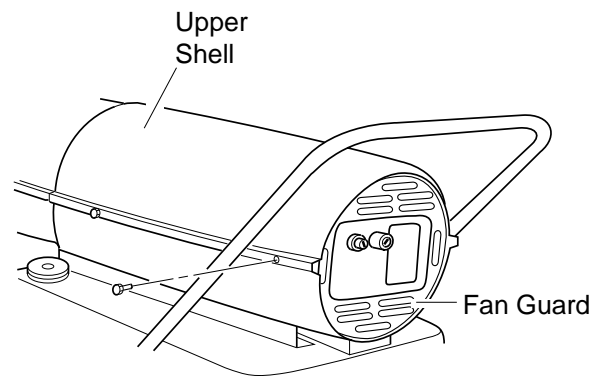


**Figure 11 - Upper Shell Removal, 44 kW (150,000 BTU/Hr) Model**

## Fuel Filter

(8,8/20,5 kW [30/70,000 BTU/Hr] Models)

1. Remove side cover screws using 5/16" nut-driver.
2. Remove side cover.
3. Pull rubber fuel line off fuel filter neck.
4. Carefully pry bushing and fuel filter out of fuel tank.
5. Wash fuel filter with clean fuel and replace in tank.
6. Attach rubber fuel line to fuel filter neck.
7. Replace side cover.

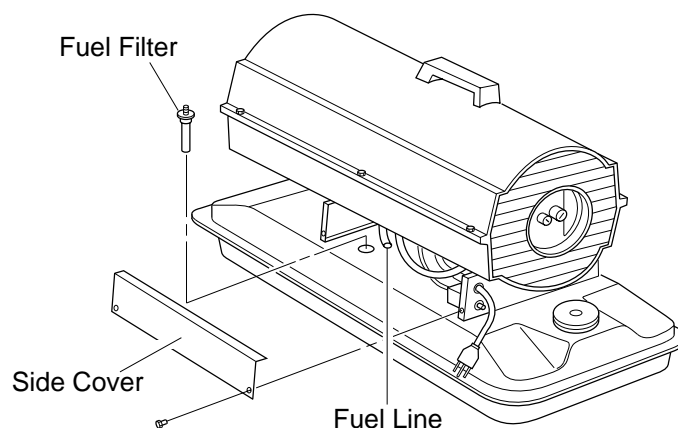


**Figure 12 - Fuel Filter Removal, 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

## Fuel Filter

(26,4 kW [90,000 BTU/Hr]  
Model)

1. Remove side cover screws using 5/16" nut-driver.
2. Remove side cover.
3. Pull upper fuel line off fuel filter neck.
4. Carefully pry bushing, lower fuel line, and fuel filter out of fuel tank.
5. Wash fuel filter with clean fuel and replace in tank.
6. Attach upper fuel line to fuel filter neck.
7. Replace side cover.

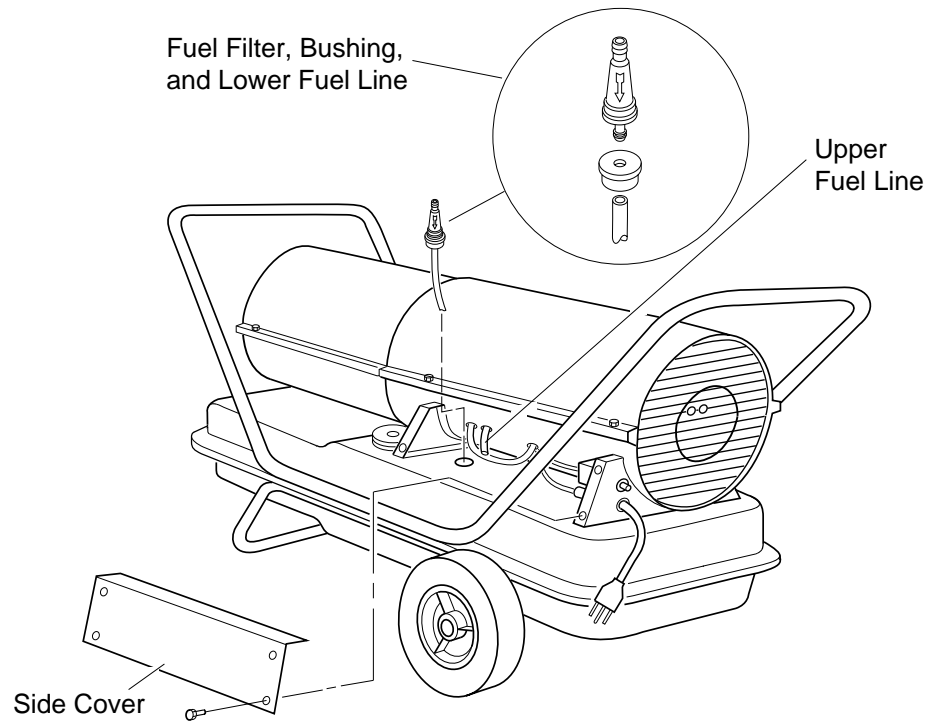


**Figure 13 - Fuel Filter Removal, 26,4 kW (90,000 BTU/Hr) Model**

## Fuel Filter

(44 kW [150,000 BTU/Hr] Model)

1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Loosen flare nut using 3/4" open-end wrench. Push fuel tube down, away from burner head. Fuel filter is located inside of fuel tube.
4. Lift out fuel filter.
5. Wash fuel filter with clean fuel and replace in fuel tube.
6. Connect fuel tube to burner head. Attach flare nut until nut seats against fuel tube and fitting. Tighten 1/4 turn more using 3/4" open-end wrench (100-130 inch-pounds/11.3-14.7 n-m).
7. Replace fan (see page 20).
8. Replace fan guard and upper shell.

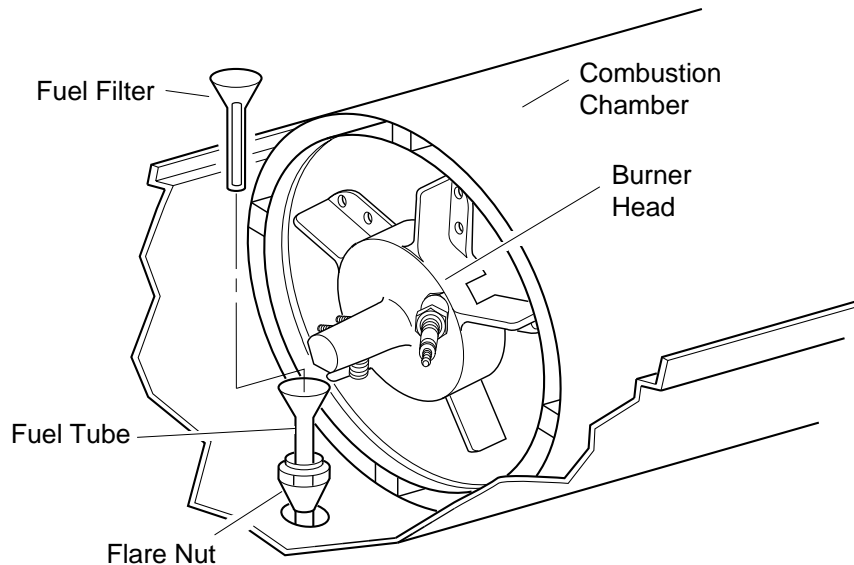


**Figure 14 - Fuel Filter Removal, 44 kW (150,000 BTU/Hr) Model**


## Spark Plug

(8,8 kW [30,000 BTU/Hr] Model)


1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Remove fuel and air line hoses from nozzle assembly.
4. Remove spark plug wire from spark plug.
5. Remove two screws using 5/16" nut-driver and remove burner strap.
6. Place hex-body of spark plug into vise and tighten.
7. Remove spark plug mounting nut using 11/16" open-end wrench.
8. Remove burner strap from spark plug.
9. Clean and regap spark plug electrodes to .055" (1.4 mm) gap.
10. Replace burner strap onto spark plug. Rotate burner strap to position spark plug electrodes (see Figure 17).
11. Tighten spark plug with spark plug mounting nut.
12. Release hex-body of spark plug from vise.
13. Replace burner strap onto combustion chamber.
14. Attach spark plug wire to spark plug.
15. Attach fuel and air line hoses to nozzle assembly.
16. Replace fan (see page 20).
17. Replace fan guard and upper shell.

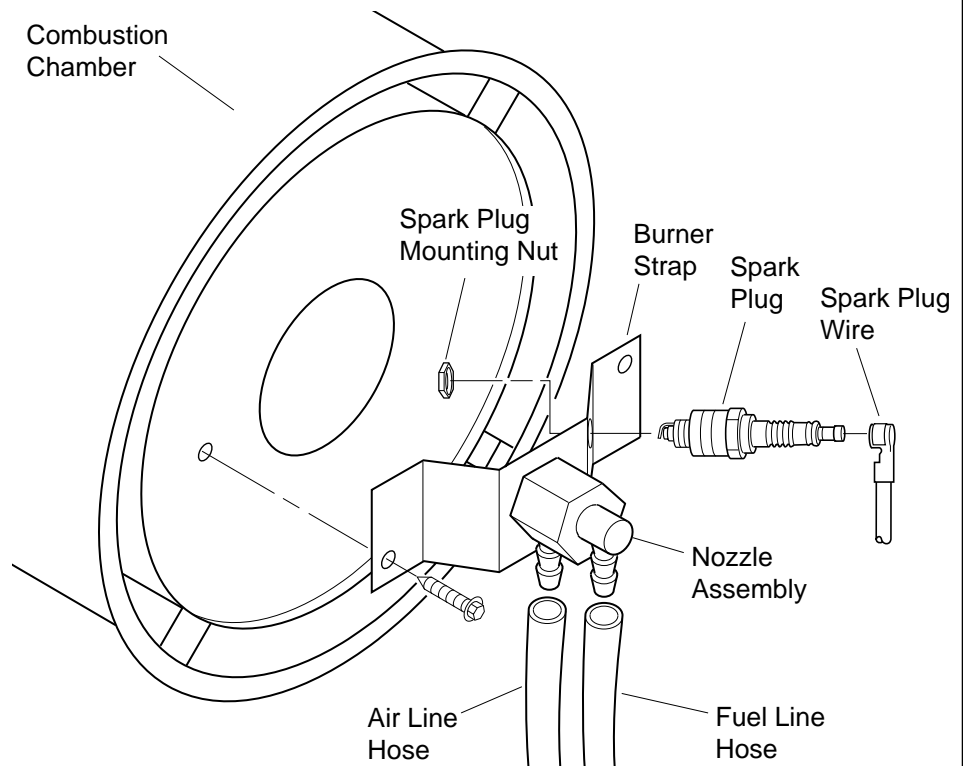

**Figure 15 - Spark Plug Removal, 8,8 kW (30,000 BTU/Hr) Model**

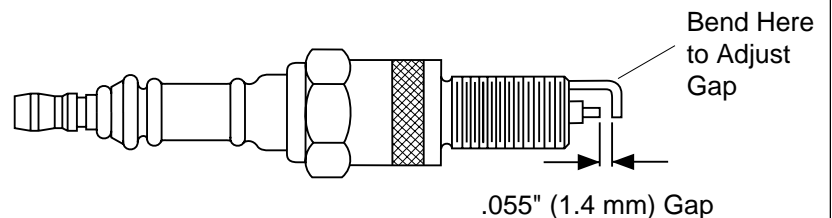

**Figure 16 - Spark Plug Gap, 8,8 kW (30,000 BTU/Hr) Model**

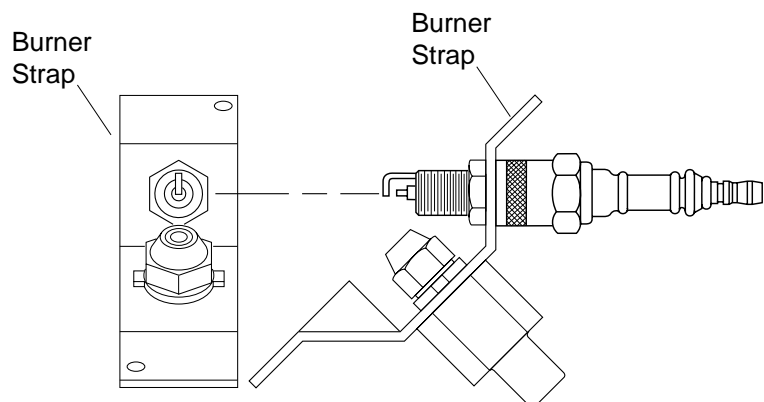


**Figure 17 - Spark Plug Rotation, 8,8 kW (30,000 BTU/Hr) Model Only**


## Spark Plug

(20,5/26,4/44 kW [70/90/150,000 BTU/Hr] Models)

1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Remove spark plug wire from spark plug.
4. Remove spark plug from burner head using 13/16" open-end wrench.
5. Clean and regap spark plug electrodes to .055" (1.4 mm) gap.
6. Install spark plug in burner head.
7. Attach spark plug wire to spark plug.
8. Replace fan (see page 20).
9. Replace fan guard and upper shell.

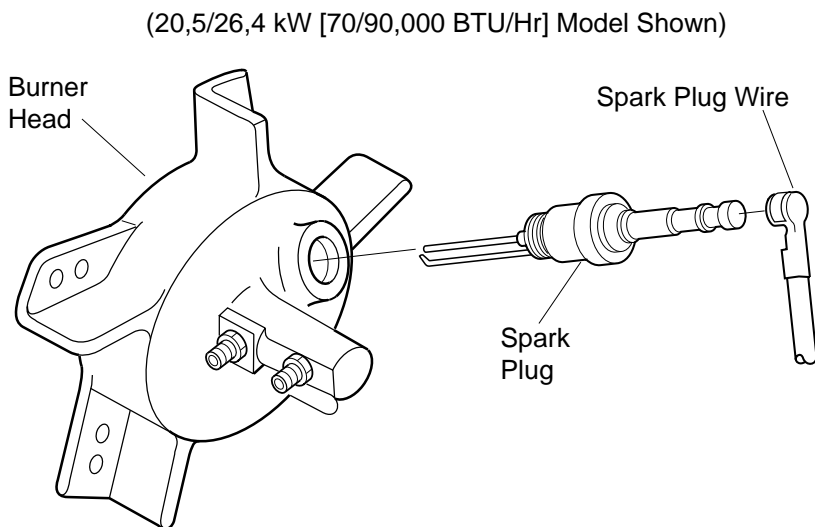

**Figure 18 - Spark Plug Removal, 20,5/26,4/44 kW (70/90/150,000 BTU/Hr) Models**

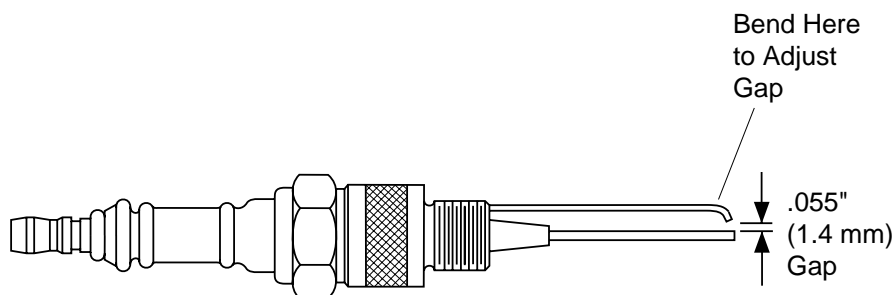


**Figure 19 - Spark Plug Gap, 20,5/26,4/44 kW (70/90/150,000 BTU/Hr) Models**


## Air Output, Air Intake, and Lint Filters

1. Remove upper shell (see page 11).
2. Remove filter end cover screws using 5/16" nut-driver.
3. Remove filter end cover.
4. Replace air output and lint filters.
5. Wash or replace air intake filter (see *Preventative Maintenance Schedule*, page 9).
6. Replace filter end cover.
7. Replace fan guard and upper shell.


**IMPORTANT:** Do not oil filters

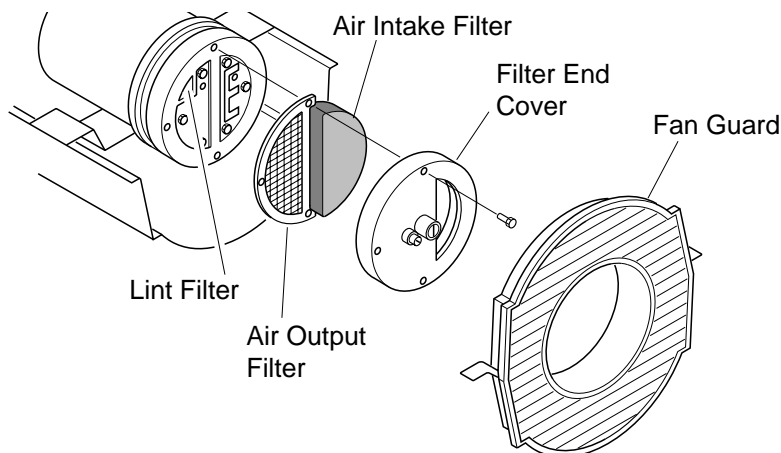


**Figure 20 - Air Output, Air Intake, and Lint Filters, 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

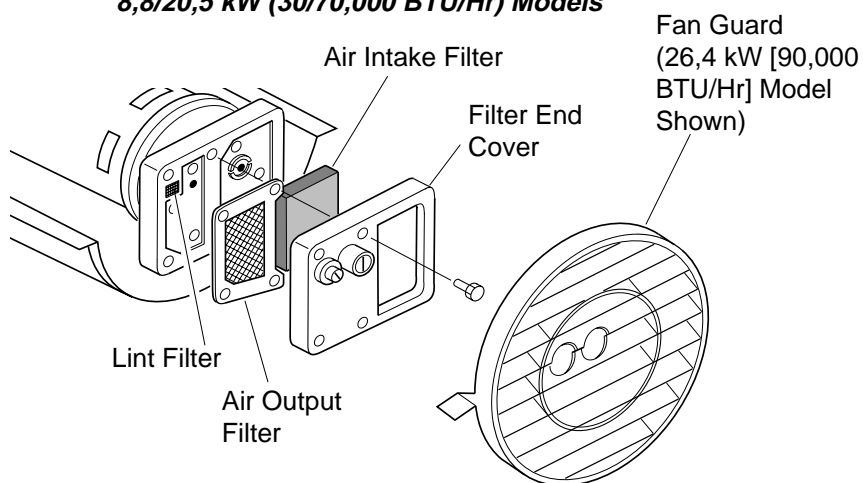

**Figure 21 - Air Output, Air Intake, and Lint Filters, 26,4/44 kW (90/150,000 BTU/Hr) Models**

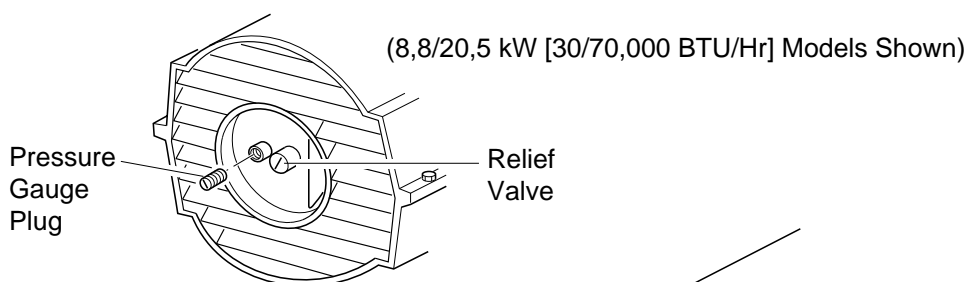

**Figure 22 - Pressure Gauge Plug Removal**

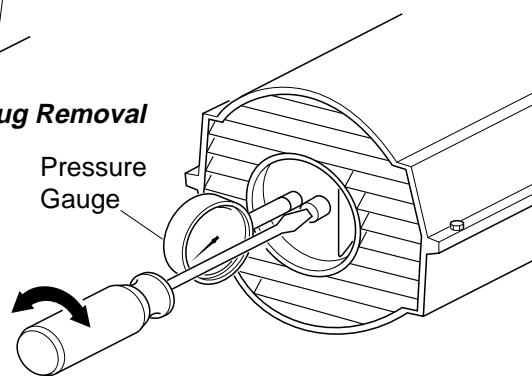

**Figure 23 - Adjusting Pump Pressure**

## Pump Pressure Adjustment


1. Remove pressure gauge plug from filter end cover.
2. Install accessory pressure gauge (part number HA1180).
3. Start heater (see *Operation*, page 8). Allow motor to reach full speed.
4. Adjust pressure. Turn relief valve to right to increase pressure. Turn relief valve to left to decrease pressure. See specifications at right for correct pressure for each model.
5. Remove pressure gauge. Replace pressure gauge plug in filter end cover.

Model	Pump Pressure
8,8 kW (30,000 BTU/Hr)	17,93 kPa (2.6 PSI)
20,5 kW (70,000 BTU/Hr)	26,20 kPa (3.8 PSI)
26,4 kW (90,000 BTU/Hr)	30,34 kPa (4.4 PSI)
44 kW (150,000 BTU/Hr)	33,78 kPa (4.9 PSI)


## Nozzle

(8,8 kW [30,000 BTU/Hr] Model)


1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Remove fuel and air line hoses from nozzle assembly.
4. Turn nozzle assembly 1/4 turn to left and pull toward motor to remove.
5. Place plastic hex-body into vise and lightly tighten.
6. Carefully remove nozzle from the nozzle adapter using 5/8" socket wrench.
7. Blow compressed air thru face of nozzle. This will free any dirt in nozzle area.
8. Inspect nozzle seal for damage.
9. Replace nozzle into nozzle adapter until nozzle seats. Tighten 1/3 turn more using 5/8" socket wrench (40-45 inch-pounds/4.5-5.1 n-m).
10. Attach nozzle assembly to burner strap.
11. Attach fuel and airline hoses to nozzle assembly.
12. Replace fan (see page 20).
13. Replace fan guard and upper shell.

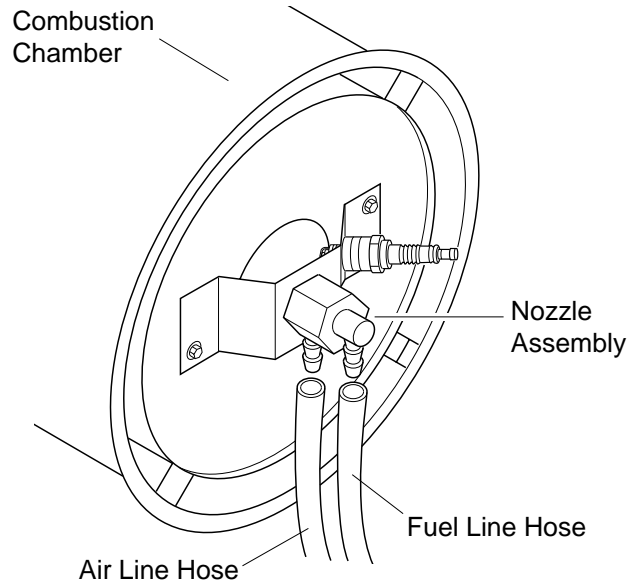

**Figure 24 - Removing Air and Fuel Line Hoses, 8,8 kW (30,000 BTU/Hr) Model**

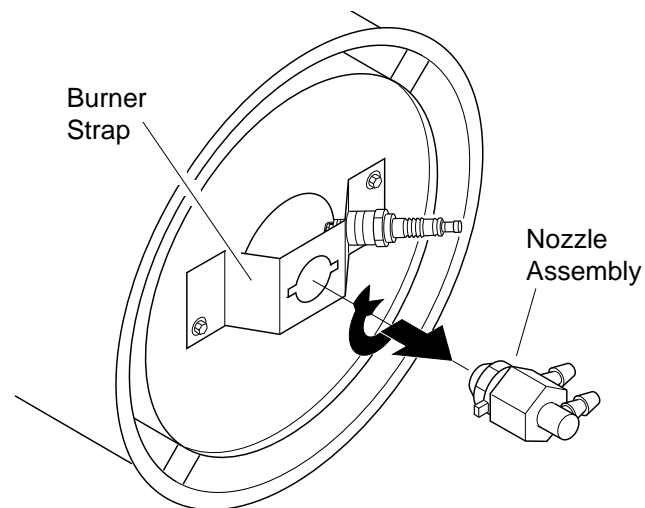

**Figure 25 - Removing Nozzle Assembly, 8,8 kW (30,000 BTU/Hr) Model**

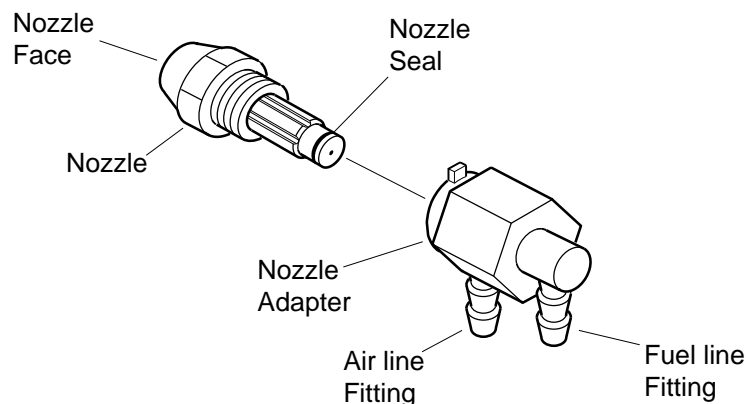


**Figure 26 - Nozzle and Nozzle Adapter, 8,8 kW (30,000 BTU/Hr) Model**




## Nozzle

(20,5/26,4 kW [70/90,000 BTU/Hr] Models)

1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Remove fuel and air line hoses from burner head.
4. Remove spark plug wire from spark plug.
5. Remove spark plug from burner head using 13/16" open-end wrench.
6. Remove three screws using 5/16" nut-driver and remove burner head from combustion chamber.
7. Place burner head into vise and lightly tighten.
8. Carefully remove nozzle from burner head using 5/8" socket wrench (see Figure 28).
9. Blow compressed air thru face of nozzle. This will free any dirt in nozzle area.
10. Inspect nozzle seal for damage.
11. Replace nozzle into burner head and tighten firmly (80-110 inch-pounds/9.1-12.4 n-m).
12. Attach burner head to combustion chamber.
13. Install spark plug in burner head.
14. Attach spark plug wire to spark plug.
15. Attach fuel and airline hoses to burner head.
16. Replace fan (see page 20).
17. Replace fan guard and upper shell.

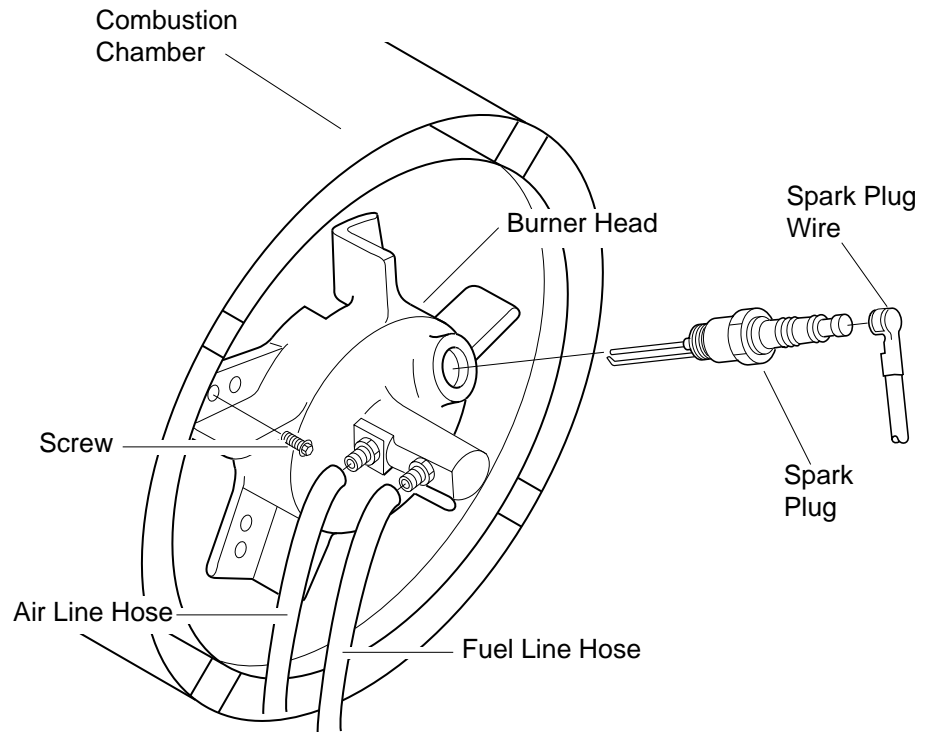

**Figure 27 - Removing Burner Head, 20,5/26,4 kW (70/90,000 BTU/Hr) Models**

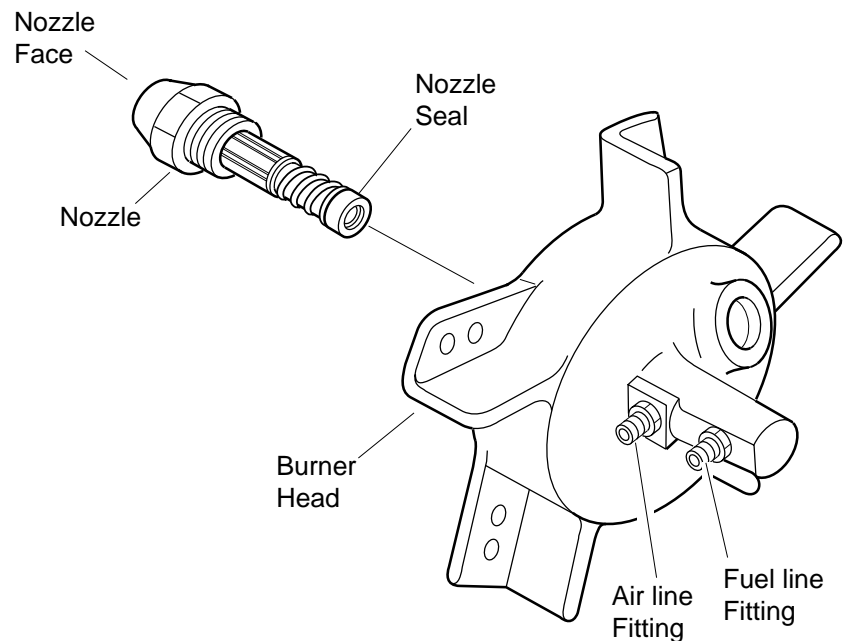


**Figure 28 - Removing Nozzle, 20,5/26,4 kW (70/90,000 BTU/Hr) Models**


## Nozzle

### (44 kW [150,000 BTU/Hr] Model)

1. Remove upper shell (see page 11).
2. Remove fan (see page 20).
3. Remove spark plug wire from spark plug.
4. Remove spark plug from burner head using 13/16" open-end wrench.
5. Loosen flare nut using 3/4" open-end wrench. Push fuel tube down.
6. Remove air line hose from burner head.
7. Remove three screws using 5/16" nut-driver and remove burner head from combustion chamber.
8. Place burner head into vise and lightly tighten.
9. Carefully remove nozzle from burner head using 5/8" socket wrench (see Figure 30).
10. Blow compressed air thru face of nozzle. This will free any dirt in nozzle area.
11. Inspect nozzle seal for damage.
12. Replace nozzle into burner head and tighten firmly (80-110 inch-pounds/9.1-12.4 n-m).
13. Attach burner head to combustion chamber.
14. Install spark plug in burner head.
15. Attach spark plug wire to spark plug.
16. Attach fuel tube and airline hose to burner head. Attach flare nut until nut seats against fuel tube and fitting. Tighten 1/4 turn more using 3/4" open-end wrench (100-130 inch-pounds/11.3-14.7 n-m).
17. Replace fan (see page 20).
18. Replace fan guard and upper shell.

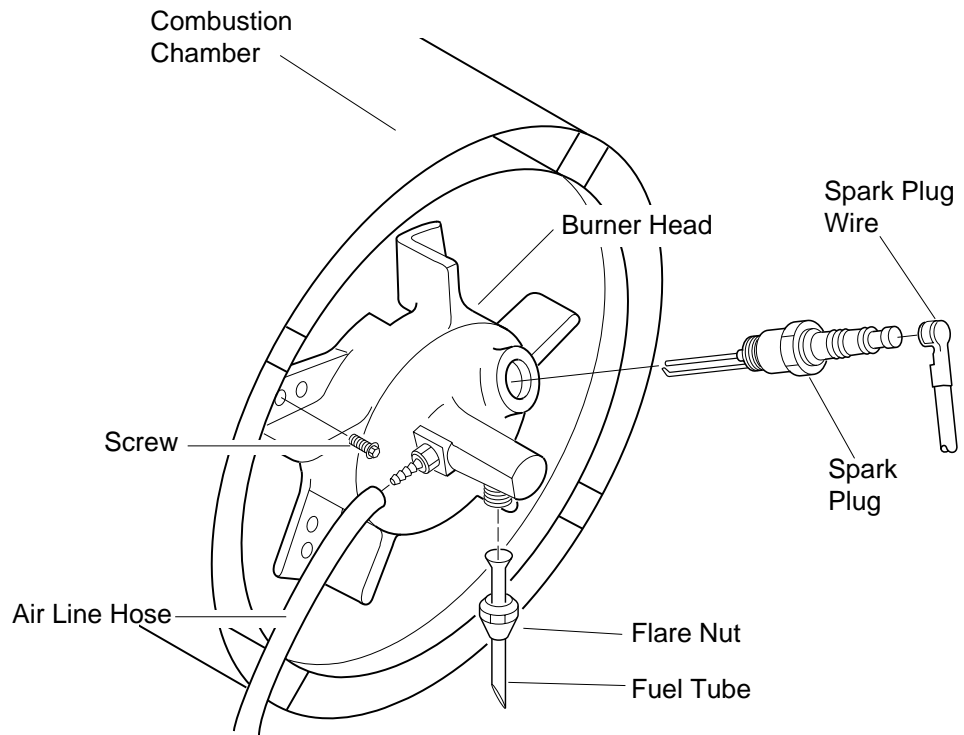

**Figure 29 - Removing Burner Head, 44 kW (150,000 BTU/Hr) Model**

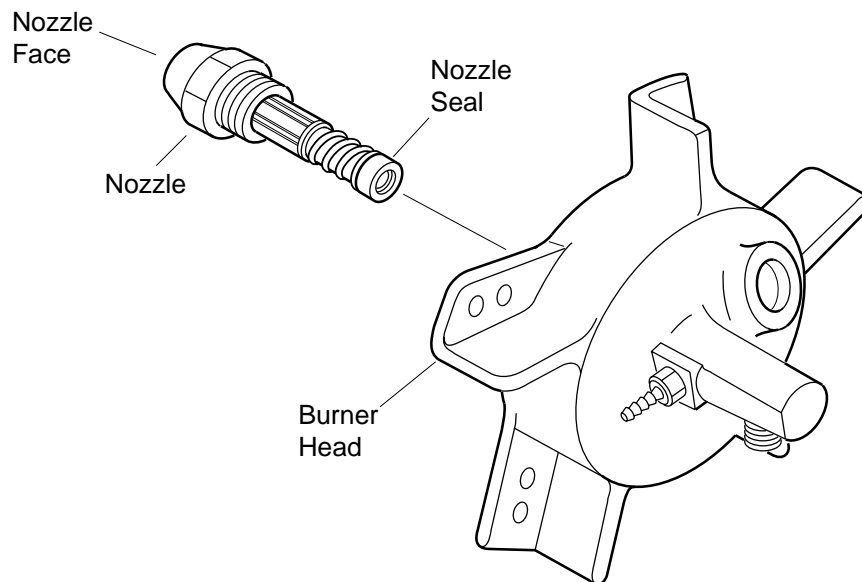

**Figure 30 - Removing Nozzle, 44 kW (150,000 BTU/Hr) Model**

## Pump Rotor

### (Procedure if rotor is binding)


1. Remove upper shell (see page 11).
2. Remove filter end cover screws using 5/16" nut-driver.
3. Remove filter end cover and air filters.
4. Remove pump plate screws using 5/16" nut-driver.
5. Remove pump plate.
6. Remove rotor, insert, and blades.
7. Check for debris in pump. If debris is found, blow out with compressed air.
8. Install insert and rotor.
9. Check gap on rotor. Adjust to .003"/.004" (.076/.101 mm) if needed (see Figure 33).

**Note:** Rotate rotor one full turn to insure the gap is .003"/.004" (.076/.101 mm) at tightest position. Adjust if needed.


10. Install blades, pump plate, air filters, and filter end cover.
11. Replace fan guard and upper shell.
12. Adjust pump pressure (see page 15).

**Note:** If rotor is still binding, proceed as follows.


13. Perform steps 1 thru 6 above.
14. Place fine grade sandpaper (600 grit) on flat surface. Sand rotor lightly in "figure 8" motion four times (see Figure 34).
15. Reinstall insert and rotor.
16. Perform steps 10 thru 12 above.

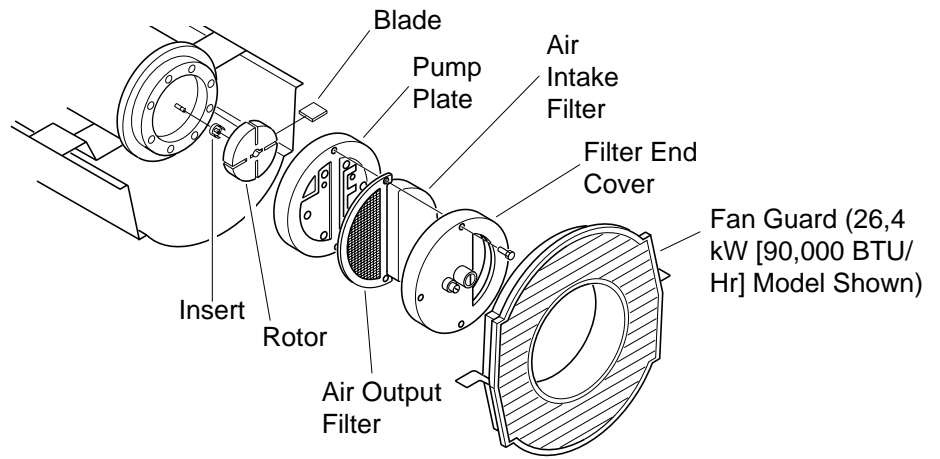


**Figure 31 - Rotor Location, 8,8/20,5 kW (30/70,000 BTU/Hr) Models**

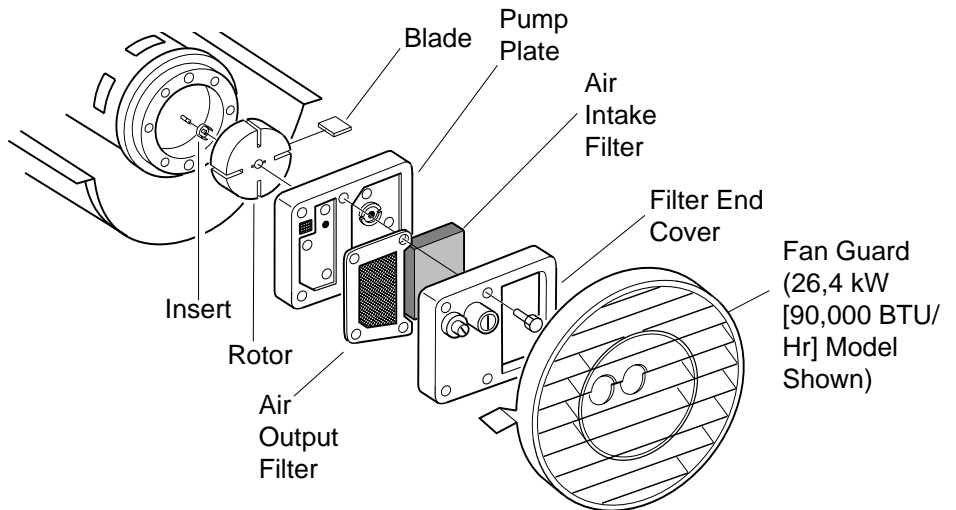

**Figure 32 - Rotor Location, 26,4/44 kW (90/150,000 BTU/Hr) Models**

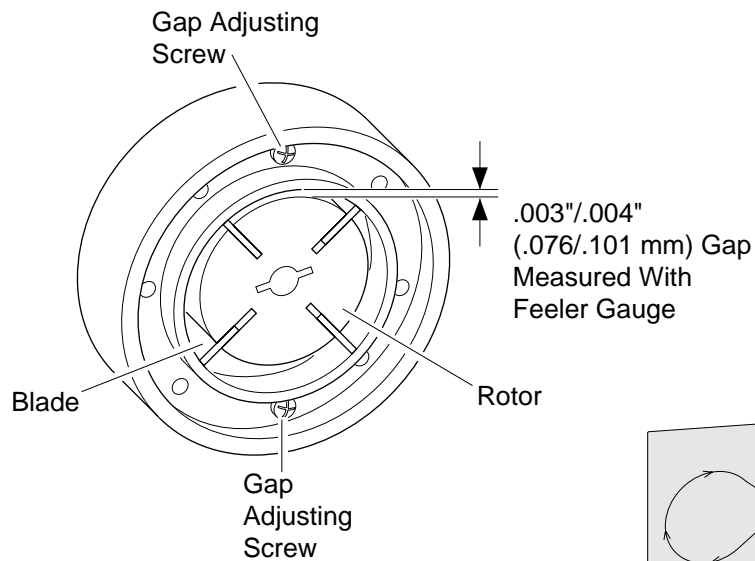

**Figure 33 - Gap Adjusting Screw Locations**

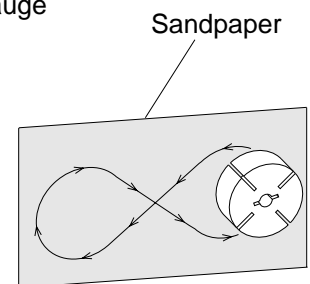

**Figure 34 - Sanding Rotor**

Fan

**IMPORTANT:** Remove fan from motor shaft before removing motor from heater. The weight of the motor resting on the fan could damage the fan pitch.

- 1. Remove upper shell (see page 11).
- 2. Use 1/8" allen wrench to loosen setscrew which holds fan to motor shaft.
- 3. Slip fan off motor shaft.
- 4. Clean fan using a soft cloth moistened with kerosene or solvent.
- 5. Dry fan thoroughly.
- 6. Replace fan on motor shaft. Place fan hub flush with end of motor shaft (see Figure 36).
- 7. Place setscrew on flat of shaft. Tighten setscrew firmly (40-50 inch-pounds/ 4.5-5.6 n-m).
- 8. Replace fan guard and upper shell.

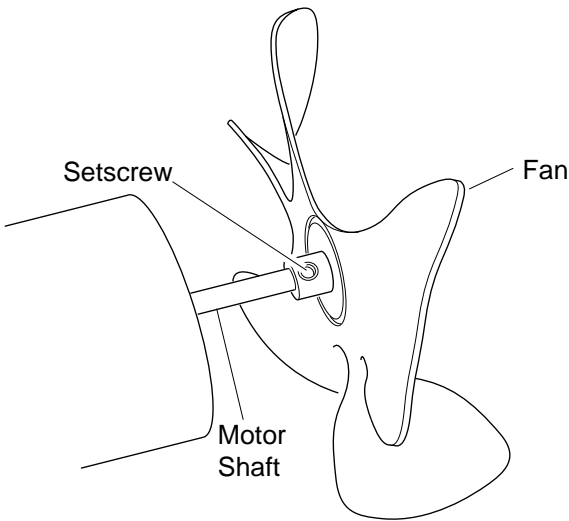


Figure 35 - Fan, Motor Shaft, and Setscrew Location


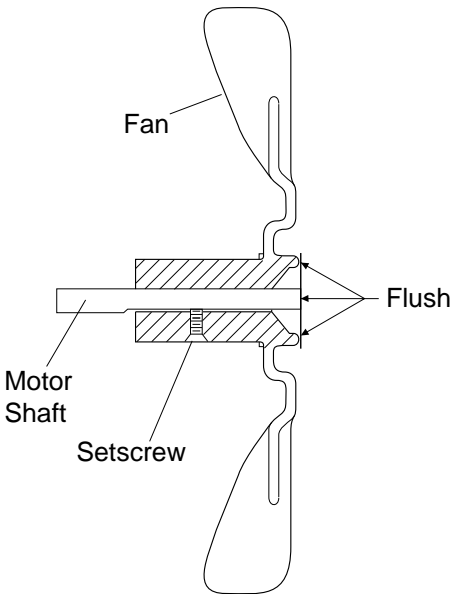


Figure 36 - Fan Cross Section


SPECIFICATIONS

Output Rating (kW)	8,8	20,5	26,4	44
(BTU/Hr)	30,000	70,000	90,000	150,000
Fuel	Use Only Kerosene or No. 1 Fuel Oil			
Fuel Tank Capacity (U.S. Gal./Liters)	3.0/11.35	5.0/18.92	9.0/34.06	13.5/51.09
Fuel Consumption (Gal. Per Hr./Liters Per Hr.)	.23/.87	.49/1.85	.66/2.5	1.10/4.16
Electric Requirements	230 V/50 Hz (Same All Models)			
Amperage (Normal Run)	.8	1.0	1.58	1.5
Hot Air Output (CFM/CMM)	140/3.96	225/6.36	425/12	600/17
RPM	1425	2850	2850	2850


# WIRING DIAGRAMS

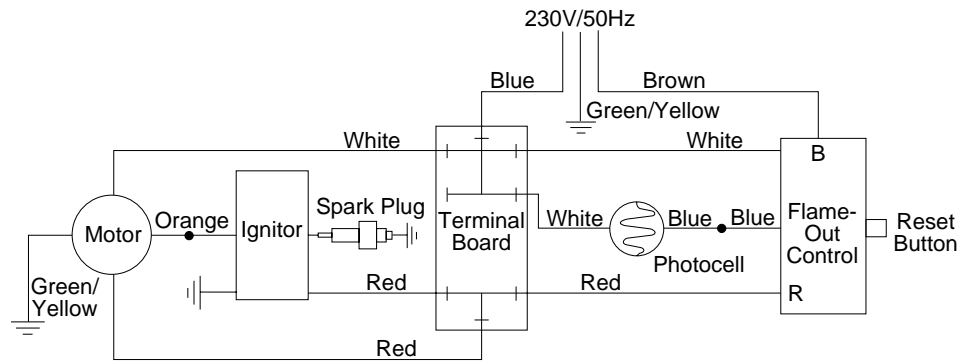

**Figure 37 - Wiring Diagram, 8,8 kW (30,000 BTU/Hr) Model**

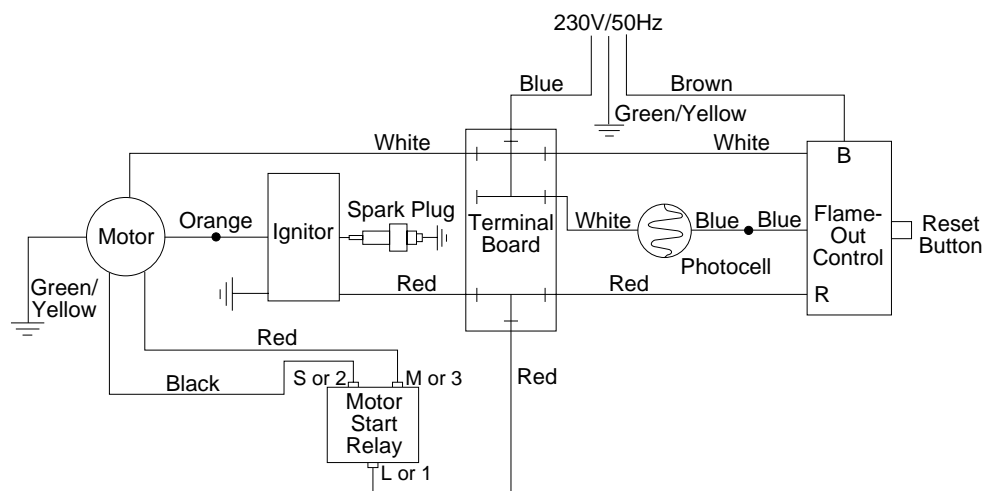


**Figure 38 - Wiring Diagram, 20,5/26,4 kW (70/90,000 BTU/Hr) Models**

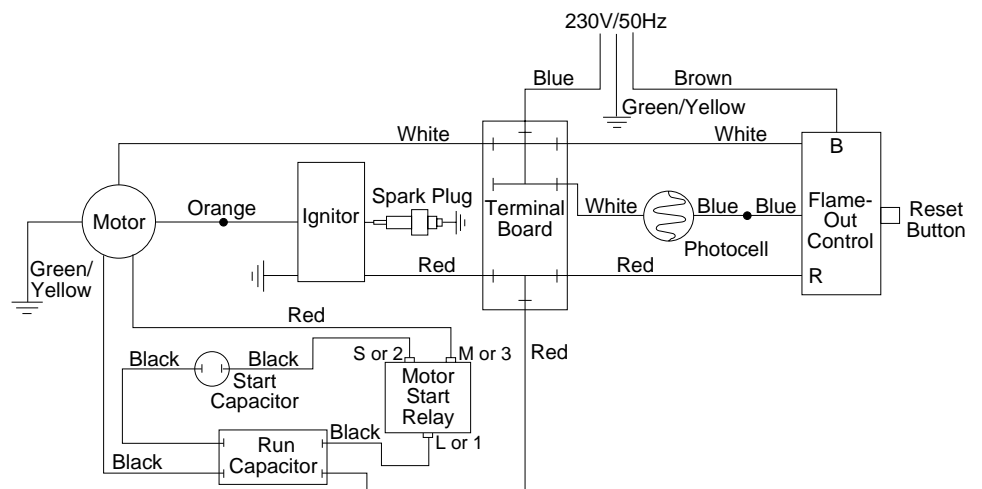

**Figure 39 - Wiring Diagram, 44 kW (150,000 BTU/Hr) Model**


## ACCESSORIES

Purchase accessories from your local dealer.

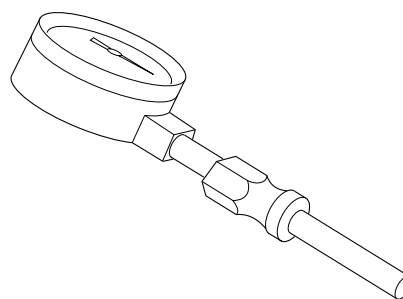


### **AIR GAUGE KIT - HA1180**

For all models. Special tool to check pump pressure.

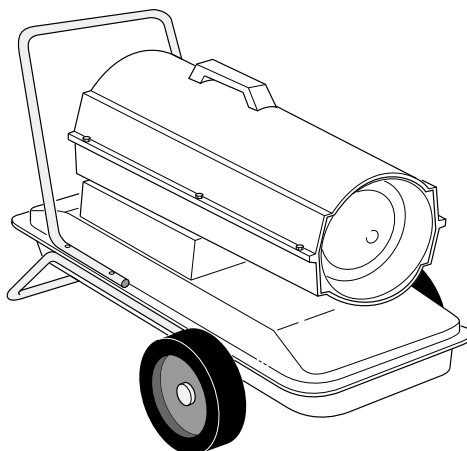

### **HEAVY DUTY WHEELS AND HANDLE KIT - HA1202**

For heavy duty applications.  
Makes your heater even more portable and convenient. For 8,8/20,5 kW (30/70,000 BTU/Hr) models.

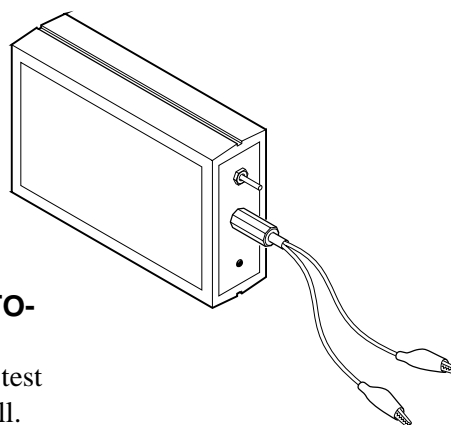


### **FLAME-OUT CONTROL/PHOTO-CELL TESTER - HA1170**

For all models. Special tool used to test the flame-out control and photocell.

# ILLUSTRATED PARTS BREAKDOWN AND PARTS LIST


## WHEELS AND HANDLES FOR 26,4 and 44 kW (90,000 AND 150,000 BTU/Hr) MODELS

KEY NO.	PART NUMBER	PART DESCRIPTION	26,4 90,000 QTY.	44 150,000 QTY.
1	HA2203	Handles	2	—
	HA2205	Handles	—	2
2	M12345-33	Screw, #10-24 x 1 3/4"	8	8
3	M12342-3	Wheel Support Frame	1	—
	M12831-3	Wheel Support Frame	—	1
4	NTC-3C	Hex Nut, #10-24	8	8
5	097896-01	Wheel	2	2
6	M28526	Cap Nut	2	2
7	M51015-01	Axle	1	—
	M16801-2	Axle	—	1

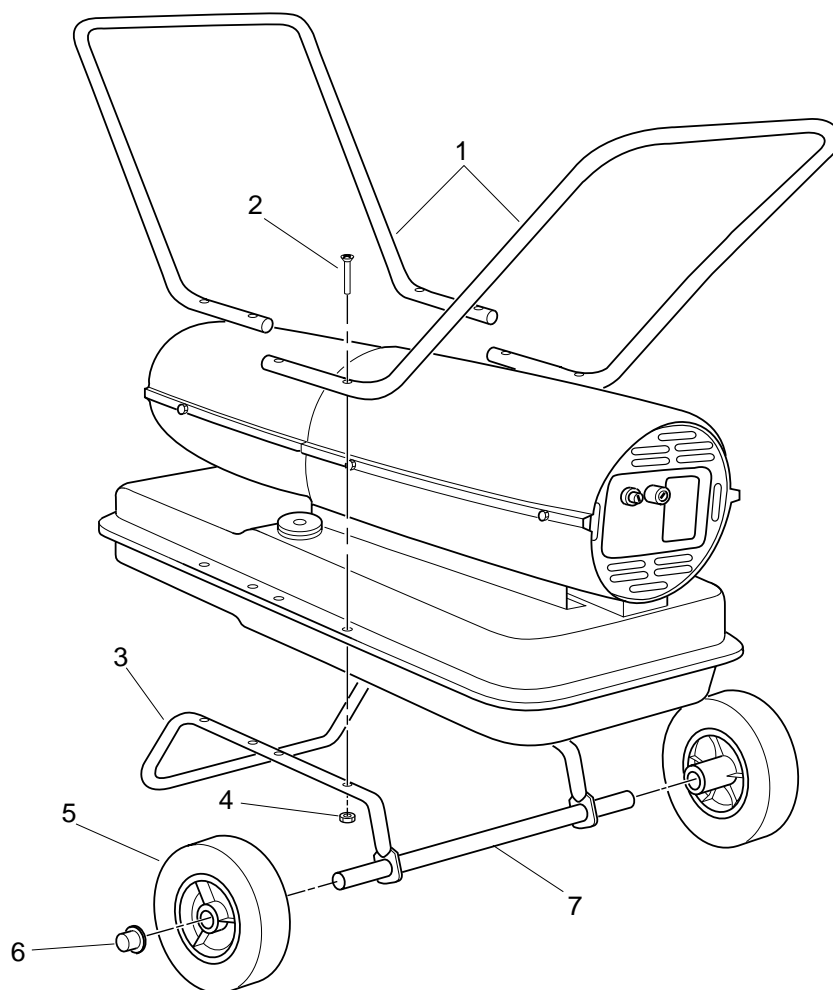

# ILLUSTRATED PARTS BREAKDOWN

8,8 kW (30,000 BTU/Hr)

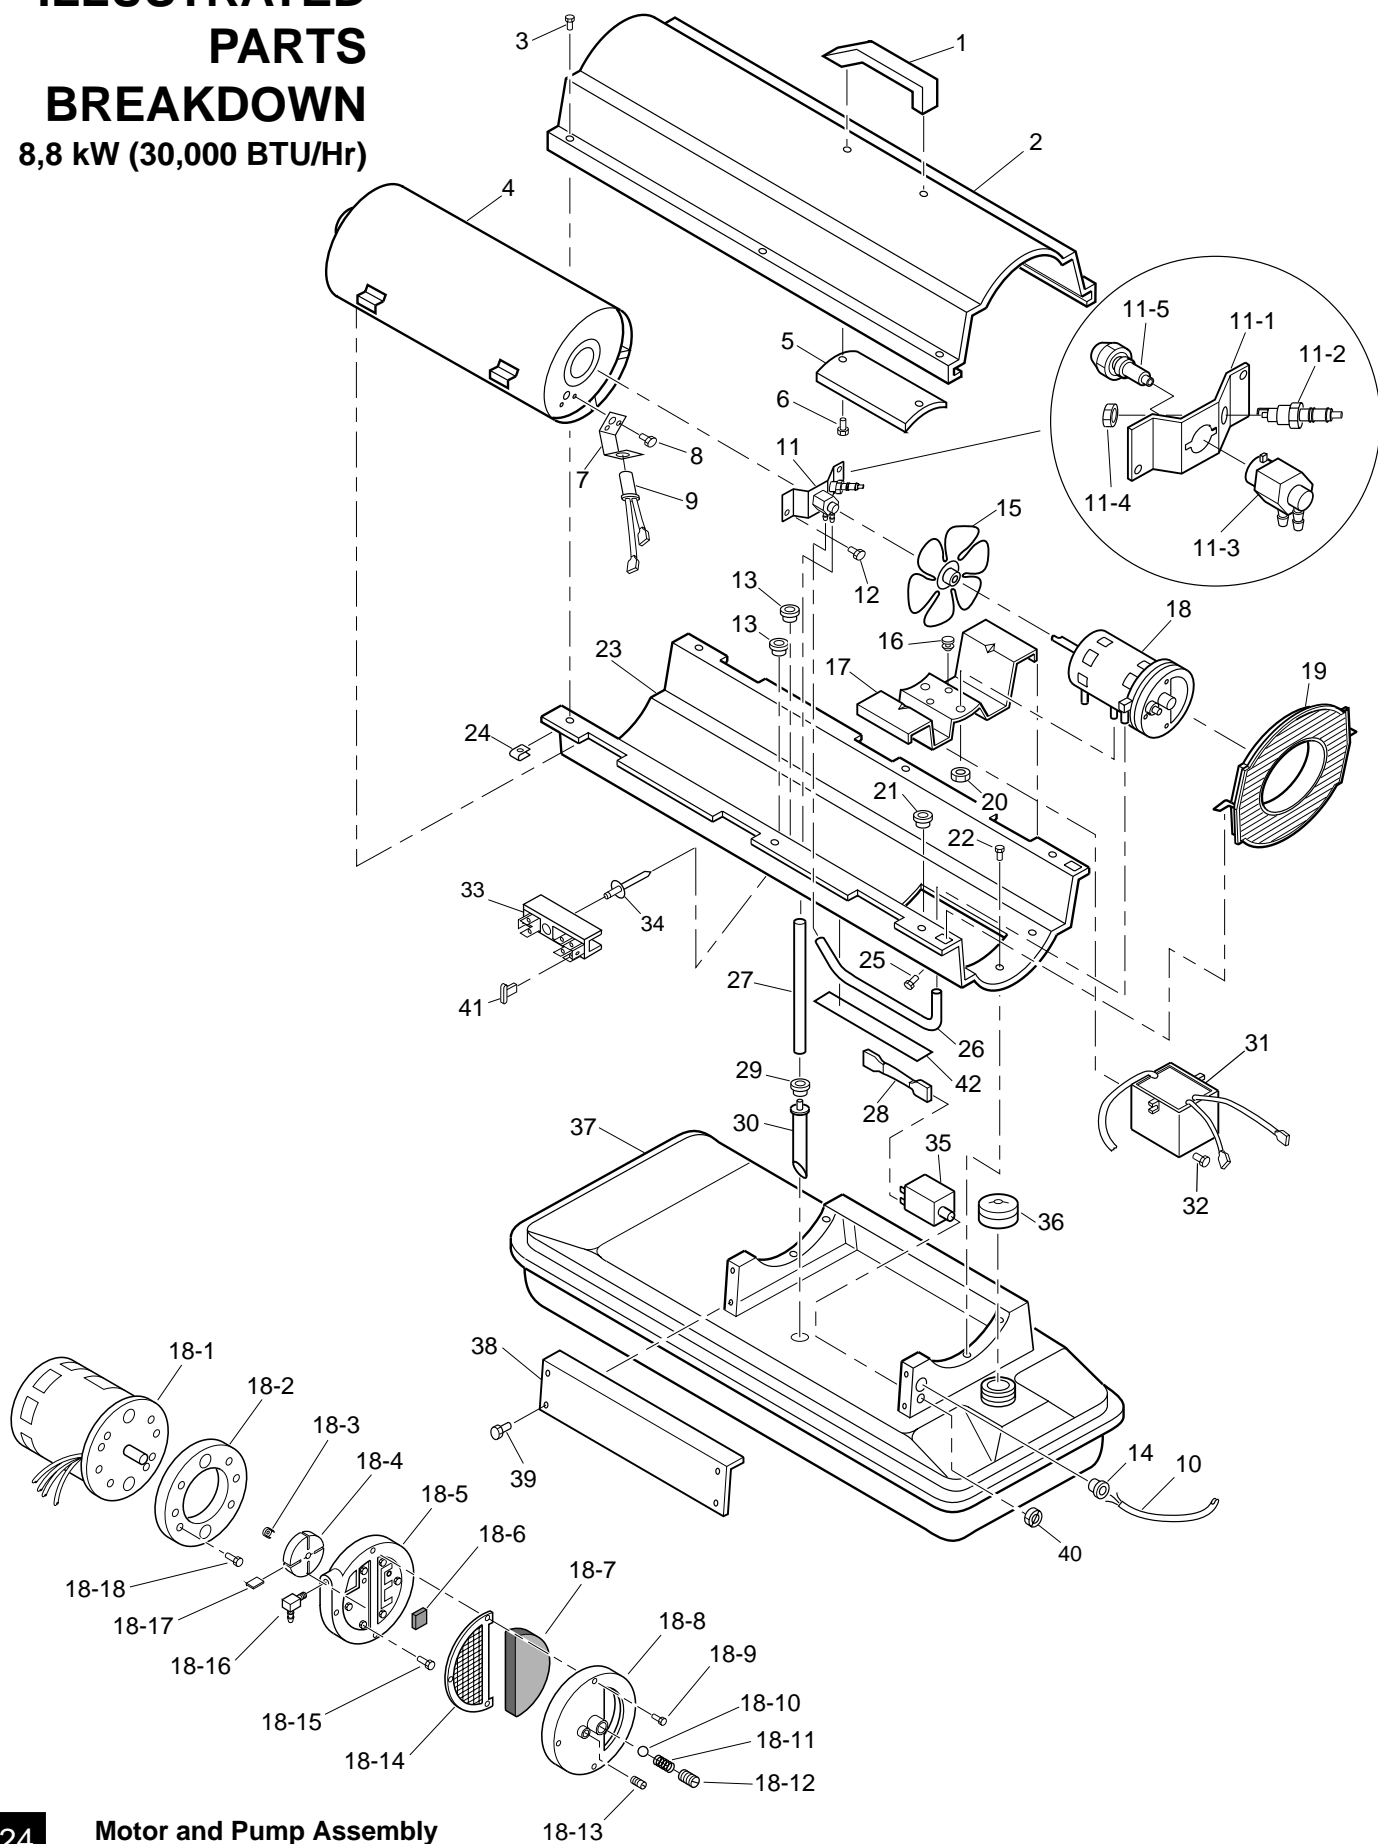



# PARTS LIST

8,8 kW (30,000 BTU/Hr)


This list contains replaceable parts used in your heater. When ordering parts, be sure to provide the correct model and serial numbers (from the model plate), then the part number and description of the desired part.

KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.	KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.
1	M51104-01	Handle	1	19	M51105-01	Fan Guard	1
2	098511-67	Upper Shell	1	20	NTC-4C	Hex locknut	2
3	M15823-27	Screw, #10-16 x 1/2"	6	21	M50104-02	Bushing (wires)	1
4	098512-05	Combustion Chamber	1	22	M11084-26	Screw, #10-16 x 3/8"	6
5	M51108-01	Heat Shield	1	23	098511-81	Lower Shell	1
6	M11084-29	Screw, #10-16 x 3/4"	2	24	M11271-8	Clip Nut	6
7	M16660	Photocell Bracket	1	25	M15823-37	Screw, #8-18 x 1/4"	1
8	M10908-2	Screw, #6-32 x 3/8"	2	26	M29652-04	Rubber Airline	1
9	HA3019	Photocell Assembly	1	27	M29652-05	Fuel Line	1
10	101909-01	Power Cord	1	28	M16841-57	Wire Assembly (red 8 1/2")	1
11	**	Burner Strap Assembly	1	29	M10990-3	Rubber Bushing	1
11-1	097124-01	Bracket	1	30	M50876-04	Fuel Filter Assembly (Includes bushing)	1
11-2	M29835-2	Spark Plug	1	31	098557-07	Electronic Ignitor	1
11-3	079980-01	Nozzle Adapter	1	32	M11084-29	Screw, #10-16 x 3/4"	2
11-4	M29824	Nut, 14mm	1	33	099125-02	Terminal Board	1
11-5	M29681	Nozzle	1	34	099157-01	Rivet	1
12	M11084-26	Screw, #10-16 x 3/8"	2	35	097630-02	Flame-Out Control	1
13	M30865-02	Bushing	2	36	097702-01	Fuel Tank Cap	1
14	M11143-1	Strain Relief Bushing	1	37	098513-23	Fuel Tank	1
15	M30884	Fan	1	38	M50899-03AA	Side Cover	1
16	M50631	Rubber Bumper	2	39	M11084-26	Screw, #10-16 x 3/8"	2
17	098138-01	Motor Bracket	1	40	099177-01	Hex Nut	1
18	**	Motor and Pump Assembly	1	41	078918-01	Terminal Board Tab Cap	1
18-1	098642-02	Motor (230V/50Hz)	1	42	097785-01	Vinyl Foam Gasket	1
18-2	M8645-2	Pump Body	1	<b>PARTS AVAILABLE - NOT SHOWN</b>			
18-3	M22009	Insert	1		M18053	Filler Neck Screen	1
18-4	M22456-2	Rotor	1		097764-04	Tradename Decal	2
18-5	M29608	End Pump Cover	1		098234-54	General Info. Decal (English)	1
18-6	M29632	Lint Filter	1		100941-07	General Info. Decal (Spanish)	1
18-7	M29633	Intake Filter	1				
18-8	M29609	End Filter Cover	1				
18-9	M12461-31	Screw, #10-32 x 1"	3				
18-10	M8940	Steel Ball (1/4" Dia.)	1				
18-11	M10993-1	Pressure Relief Spring	1				
18-12	M27694	Adjusting Screw	1				
18-13	M22997	Plug	1				
18-14	M29612-01	Output Filter	1				
18-15	M12461-32	Screw, #10-32 x 1 1/8"	6				
18-16	M50016	Elbow, 90° (Barb Fitting)	1				
18-17	M8643-2	Blade	4				
18-18	FHPF3-6C	Screw, #10-32 x 3/4"	2				

\*\*Not available as an assembly, order parts separately.

# ILLUSTRATED PARTS BREAKDOWN

20,5 kW (70,000 BTU/Hr)

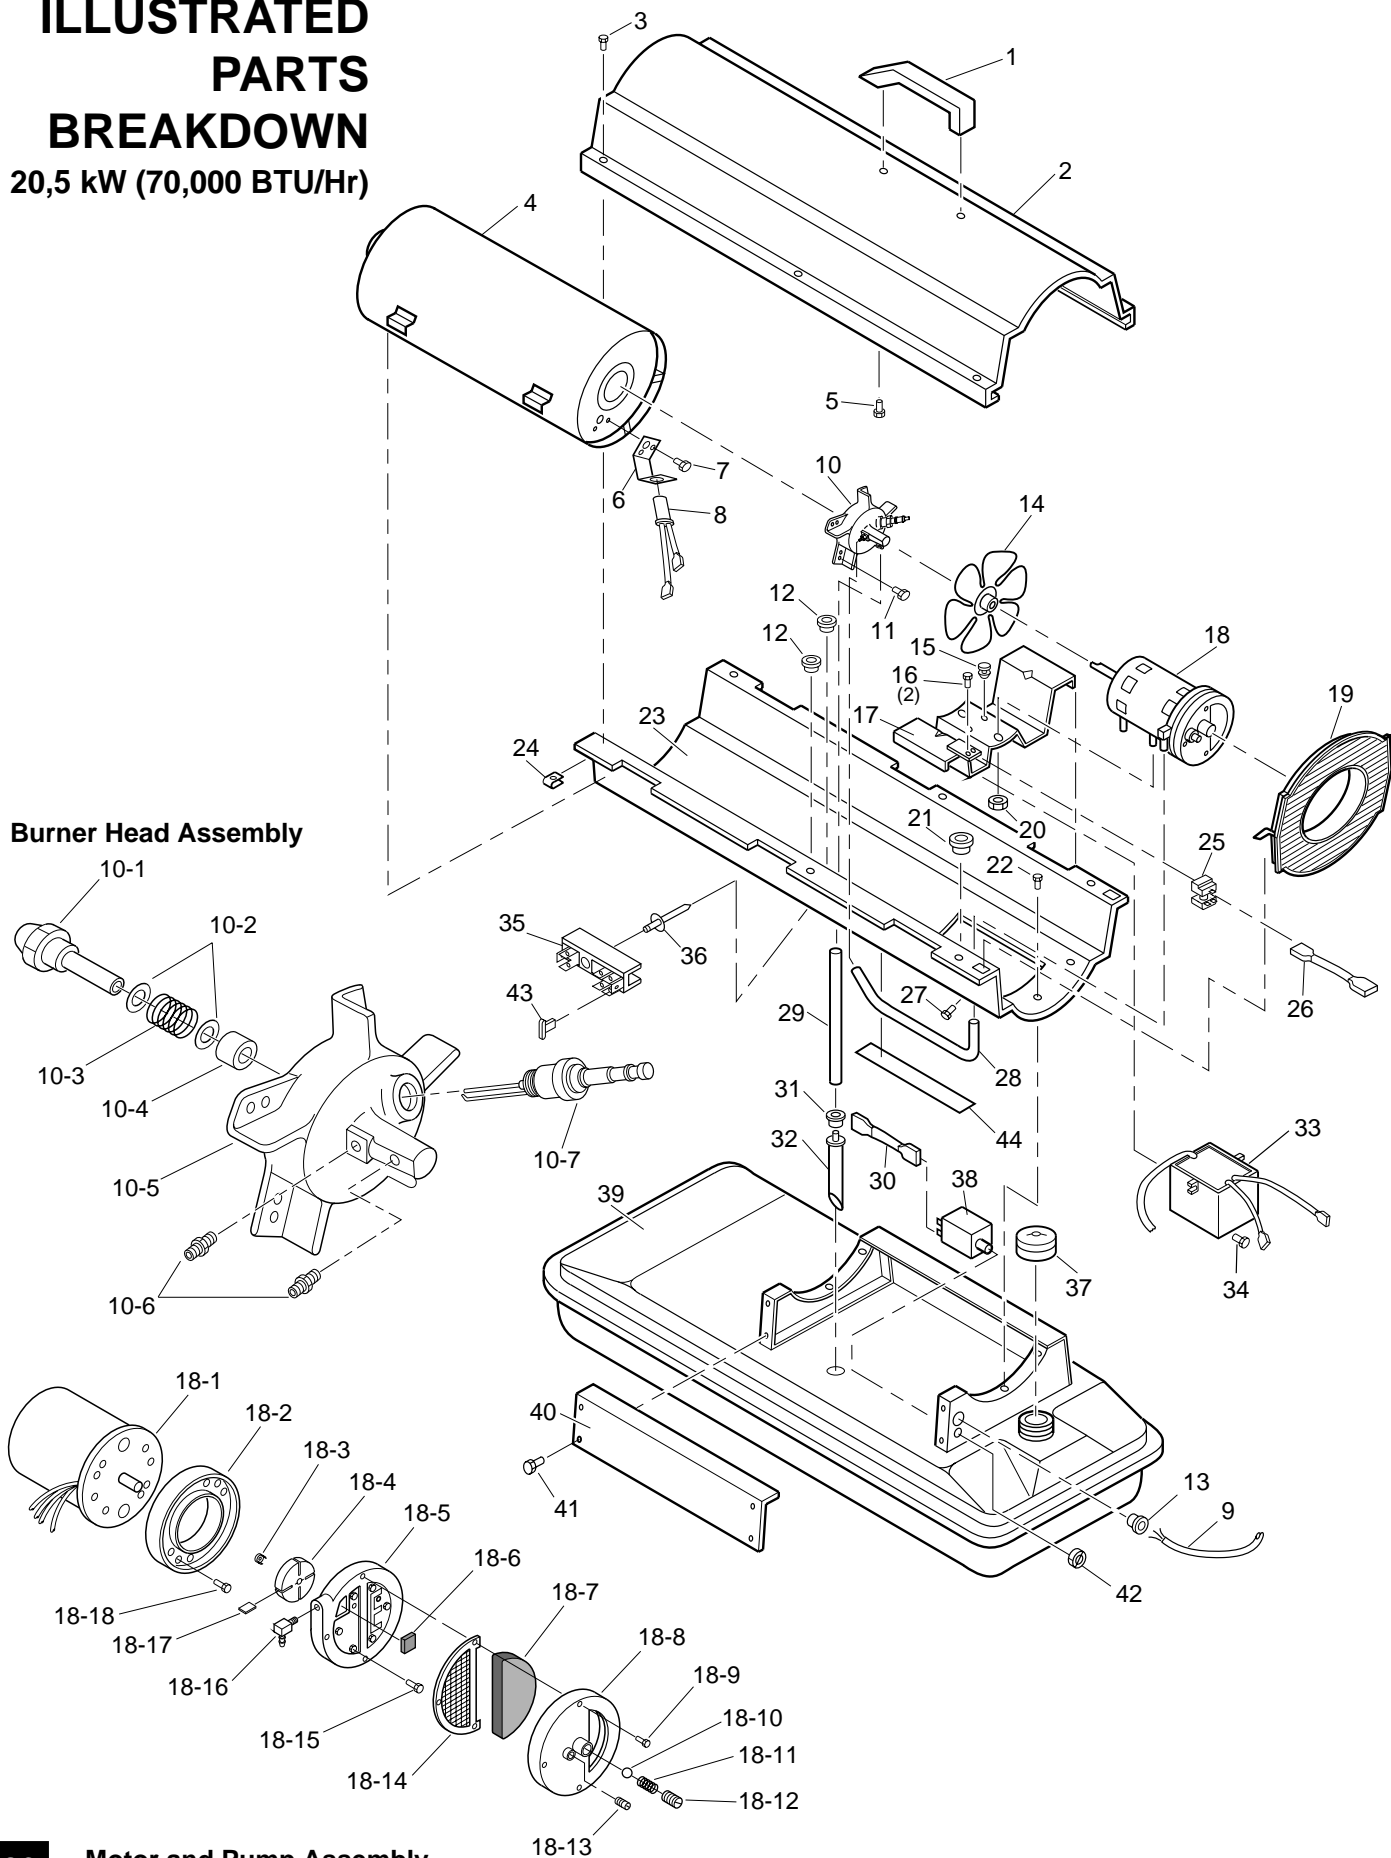

# PARTS LIST

20,5 kW (70,000 BTU/Hr)


This list contains replaceable parts used in your heater. When ordering parts, be sure to provide the correct model and serial numbers (from the model plate), then the part number and description of the desired part.

KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.	KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.
1	M51104-01	Handle	1	19	M51105-01	Fan Guard	1
2	098511-67	Upper Shell	1	20	NTC-4C	Hex locknut	2
3	M15823-27	Screw, #10-16 x 1/2"	6	21	M50104-02	Bushing (wires)	1
4	098512-12	Combustion Chamber	1	22	M11084-26	Screw, #10-16 x 3/8"	6
5	M11084-29	Screw, #10-16 x 3/4"	2	23	098511-81	Lower Shell	1
6	M16660	Photocell Bracket	1	24	M11271-8	Clip Nut	6
7	M10908-2	Screw, #6-32 x 3/8"	2	25	098136-02	Relay (motor start)	1
8	HA3019	Photocell Assembly	1	26	M16841-58	Wire Assembly (red 9 1/2")	1
9	101909-01	Power Cord	1	27	M15823-37	Screw, #8-18 x 1/4"	1
10	**	Burner Head Assembly	1	28	M29652-04	Rubber Airline	1
10-1	M50880-01	Nozzle	1	29	079973-01	Fuel Line	1
10-2	M10659-1	Nozzle Seal Washer	2	30	M16841-57	Wire Assembly (red 8 1/2")	1
10-3	M10809-1	Nozzle Seal Spring	1	31	M10990-3	Rubber Bushing	1
10-4	M8882	Nozzle Seal Sleeve	1	32	M50876-05	Fuel Filter Assembly (Includes bushing)	1
10-5	M51098-02	Burner Head Body	1	33	098557-07	Electronic Ignitor	1
10-6	M50820-01	Barb Fitting	2	34	M11084-29	Screw, #10-16 x 3/4"	2
10-7	M10962-2	Spark Plug	1	35	099125-02	Terminal Board	1
11	M11084-27	Screw, #10-16 x 1/2"	3	36	099157-01	Rivet	1
12	M30865-02	Bushing	2	37	097702-01	Fuel Tank Cap	1
13	M11143-1	Strain Relief Bushing	1	38	097630-02	Flame-Out Control	1
14	097026-01	Fan	1	39	098513-24	Fuel Tank	1
15	M50631	Rubber Bumper	2	40	M50899-03AA	Side Cover	1
16	M12461-13	Screw, #8-32 x 1/4" (holds relay in position)	2	41	M11084-26	Screw, #10-16 x 3/8"	2
17	098138-01	Motor and Relay Bracket Assembly	1	42	099177-01	Hex Nut	1
18	**	Motor and Pump Assembly	1	43	078918-01	Terminal Board Tab Cap	1
18-1	098782-02	Motor (230V/50Hz)	1	44	097785-01	Vinyl Foam Gasket	1
18-2	079975-01	Pump Body	1	<b>PARTS AVAILABLE - NOT SHOWN</b>			
18-3	M22009	Insert	1		M18053	Filler Neck Screen	1
18-4	M22456-1	Rotor	1		097764-03	Tradename Decal	2
18-5	M29608	End Pump Cover	1		098234-55	General Info. Decal (English)	1
18-6	M29632	Lint Filter	1		100941-08	General Info. Decal (Spanish)	1
18-7	M29633	Intake Filter	1				
18-8	M29609	End Filter Cover	1				
18-9	M12461-31	Screw, #10-32 x 1"	3				
18-10	M8940	Steel Ball (1/4" Dia.)	1				
18-11	M10993-1	Pressure Relief Spring	1				
18-12	M27694	Adjusting Screw	1				
18-13	M22997	Plug	1				
18-14	M29612-01	Output Filter	1				
18-15	M12461-31	Screw, #10-32 x 1"	6				
18-16	M50016	Elbow, 90° (Barb Fitting)	1				
18-17	M8643	Blade	4				
18-18	FHPF3-2C	Screw, #10-32 x 1/4"	2				

\*\*Not available as an assembly, order parts separately.

# ILLUSTRATED PARTS BREAKDOWN

26,4 kW (90,000 BTU/Hr)

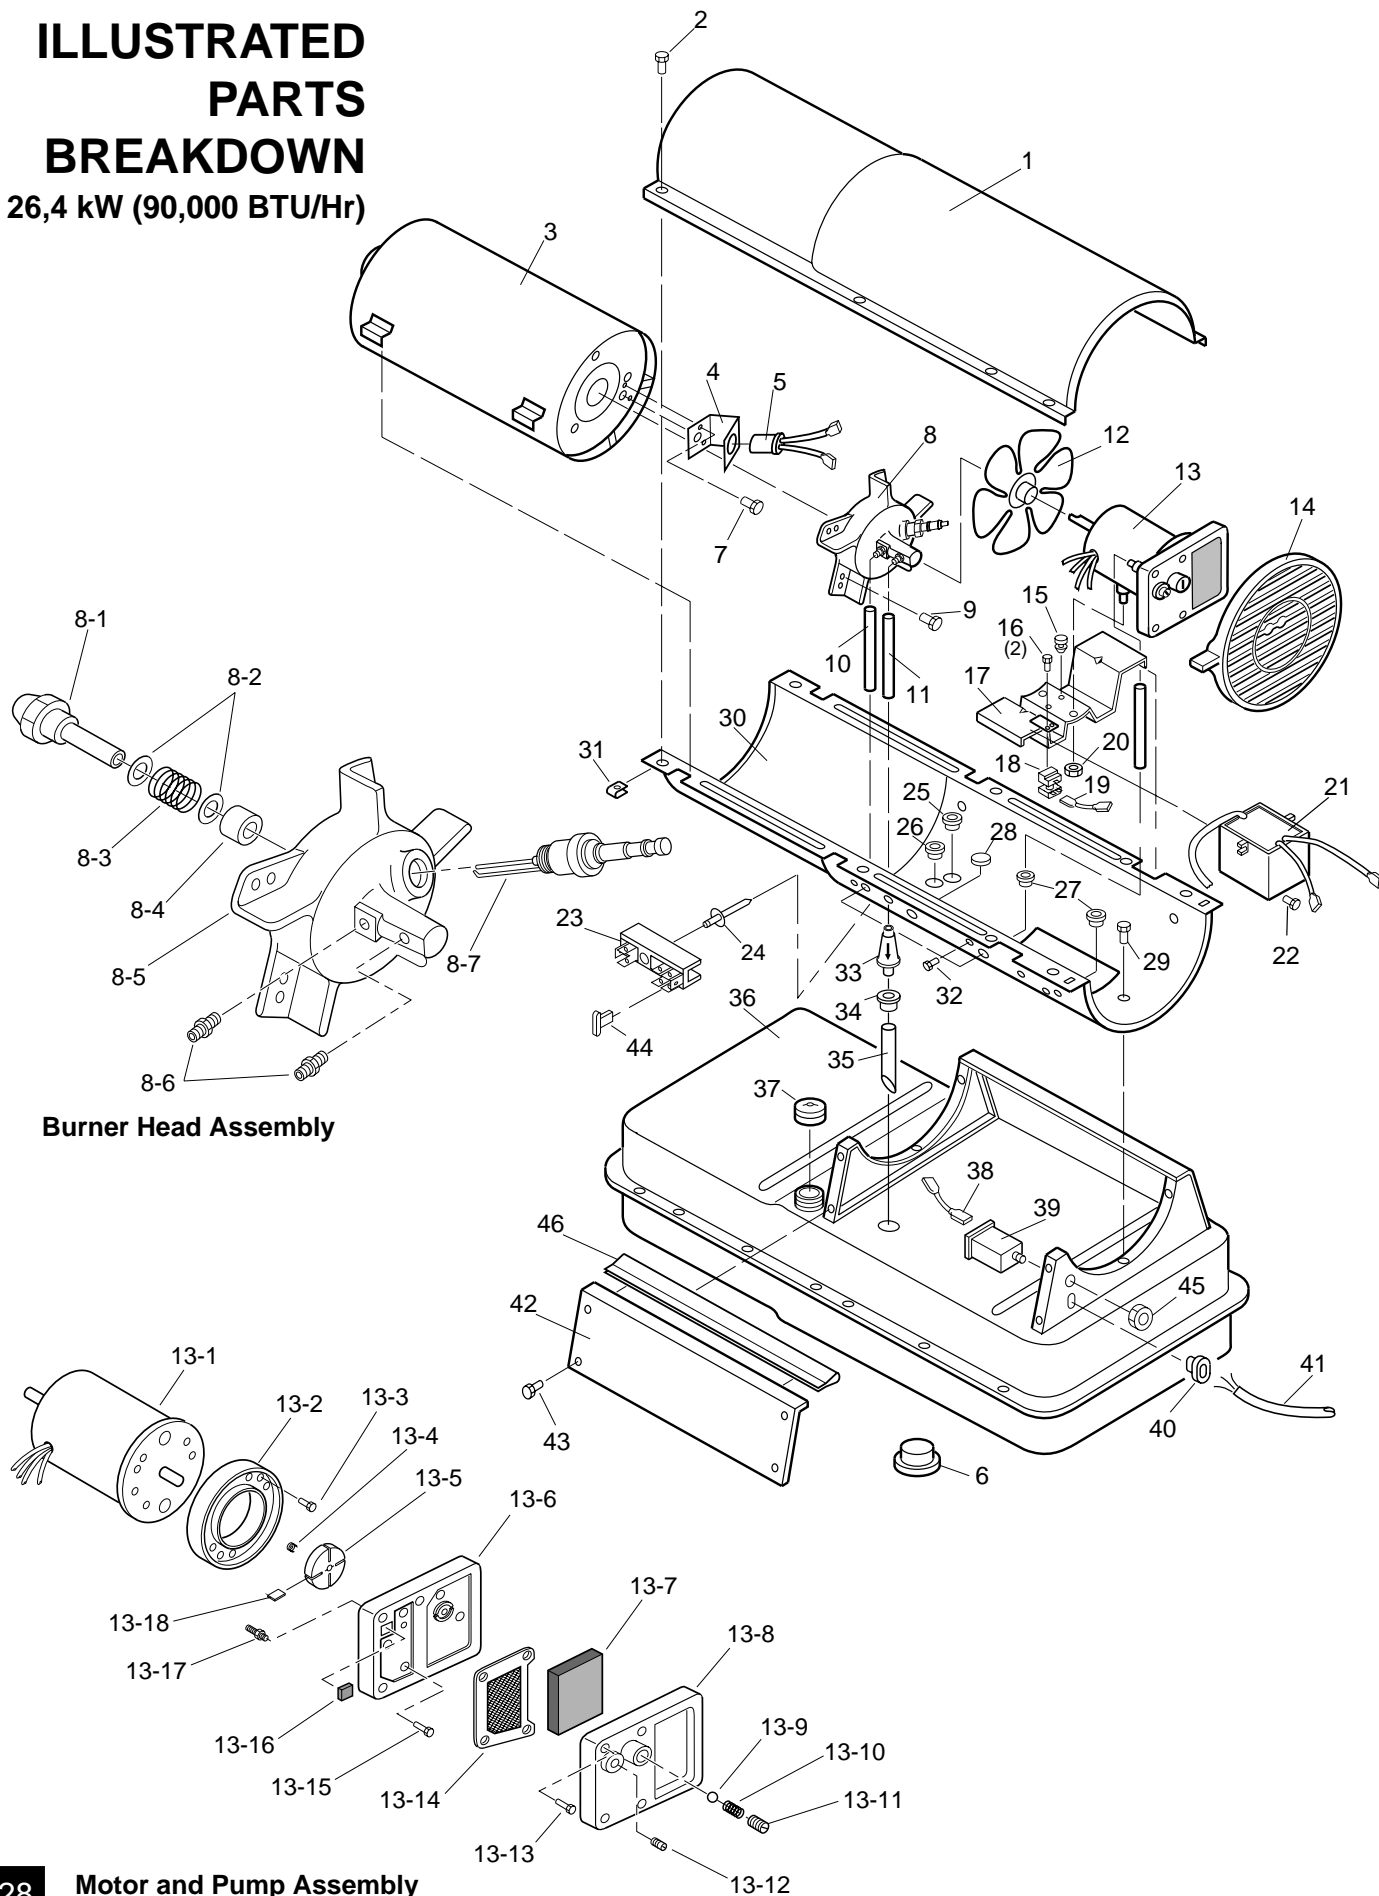

**Burner Head Assembly**

**Motor and Pump Assembly**

# PARTS LIST

## 26,4 kW (90,000 BTU/Hr)


This list contains replaceable parts used in your heater. When ordering parts, be sure to provide the correct model and serial numbers (from the model plate), then the part number and description of the desired part.

KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.	KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.
1	098511-66	Upper Shell	1	19	M16841-59	Wire Assembly (red 13 1/2")	1
2	M15823-27	Screw, #10-16 x 1/2"	6	20	NTC-4C	Hex locknut	2
3	098512-07	Combustion Chamber	1	21	098557-07	Electronic Ignitor	1
4	M16660	Photocell Bracket	1	22	M11084-29	Screw, #10-16 x 3/4"	2
5	HA3019	Photocell Assembly	1	23	099125-02	Terminal Board	1
6	M27417	Drain Plug	1	24	099157-01	Rivet	1
7	M10908-2	Screw, #6-32 x 3/8"	2	25	M30865-02	Bushing	1
8	**	Burner Head Assembly	1	26	M30865-02	Bushing	1
8-1	M23103	Nozzle	1	27	M50104-01	Bushing	2
8-2	M10659-1	Nozzle Seal Washer	2	28	099213-01	Button Plug	1
8-3	M10809-1	Nozzle Seal Spring	1	29	M11084-27	Screw, #10-16 x 1/2"	6
8-4	M8882	Nozzle Seal Sleeve	1	30	098511-82	Lower Shell	1
8-5	M50924-03	Burner Head Body	1	31	M11271-8	Clip Nut	6
8-6	M50820-02	Barb Fitting	2	32	M15823-37	Screw, #8-18 x 1/4"	1
8-7	M10962-2	Spark Plug	1	33	M51150-01	Fuel filter	1
9	M11084-27	Screw, #10-16 x 1/2"	3	34	M10990-3	Rubber Bushing	1
10	M50814-06	Air Line	1	35	M51151-01	Fuel Line	1
11	M51345-01	Fuel Line	1	36	098513-21	Fuel Tank	1
12	097293-01	Fan	1	37	097702-01	Fuel Tank Cap	1
13	**	Motor and Pump Assembly	1	38	M16841-57	Wire Assembly (red 8 1/2")	1
13-1	098783-02	Motor (230V/50Hz)	1	39	097630-02	Flame-Out Control	1
13-2	079975-01	Pump Body	1	40	M11143-1	Strain Relief Bushing	1
13-3	FHPF3-2C	Screw, #10-32 x 1/4"	2	41	101909-01	Power Cord	1
13-4	M22009	Insert	1	42	M51077-01AA	Side Cover	1
13-5	M22456-1	Rotor	1	43	M11084-27	Screw, #10-16 x 1/2"	4
13-6	M50545	End Pump Cover	1	44	078918-01	Terminal Board Tab Cap	1
13-7	M12179	Intake Filter	1	45	099177-01	Hex Nut	1
13-8	M16545	End Filter Cover	1	46	097468-01	Edge Liner	1
13-9	M8940	Steel Ball (1/4" Dia.)	1	<b>PARTS AVAILABLE - NOT SHOWN</b>			
13-10	M10993-1	Pressure Relief Spring	1		M18053	Filler Neck Screen	1
13-11	M27694	Adjusting Screw	1		097773-01	Tradename Decal	2
13-12	M22997	Plug	1		098234-56	General Info. Decal (English)	1
13-13	M12461-31	Screw, #10-32 x 1"	4		100941-09	General Info. Decal (Spanish)	1
13-14	M12244-1	Output Filter	1				
13-15	M12461-31	Screw, #10-32 x 1"	6				
13-16	M11637	Lint Filter	1				
13-17	M50820-02	Barb Fitting	1				
13-18	M8643	Blade	4				
14	M51114-01	Fan Guard	1				
15	M50631	Rubber Bumper	2				
16	M12461-13	Screw, #8-32 x 1/4"	2				
17	098138-02	Motor and Relay Bracket Assembly	1				
18	098136-04	Relay (motor start)	1				

\*\*Not available as an assembly, order parts separately.

# ILLUSTRATED PARTS BREAKDOWN

44 kW (150,000 BTU/Hr)

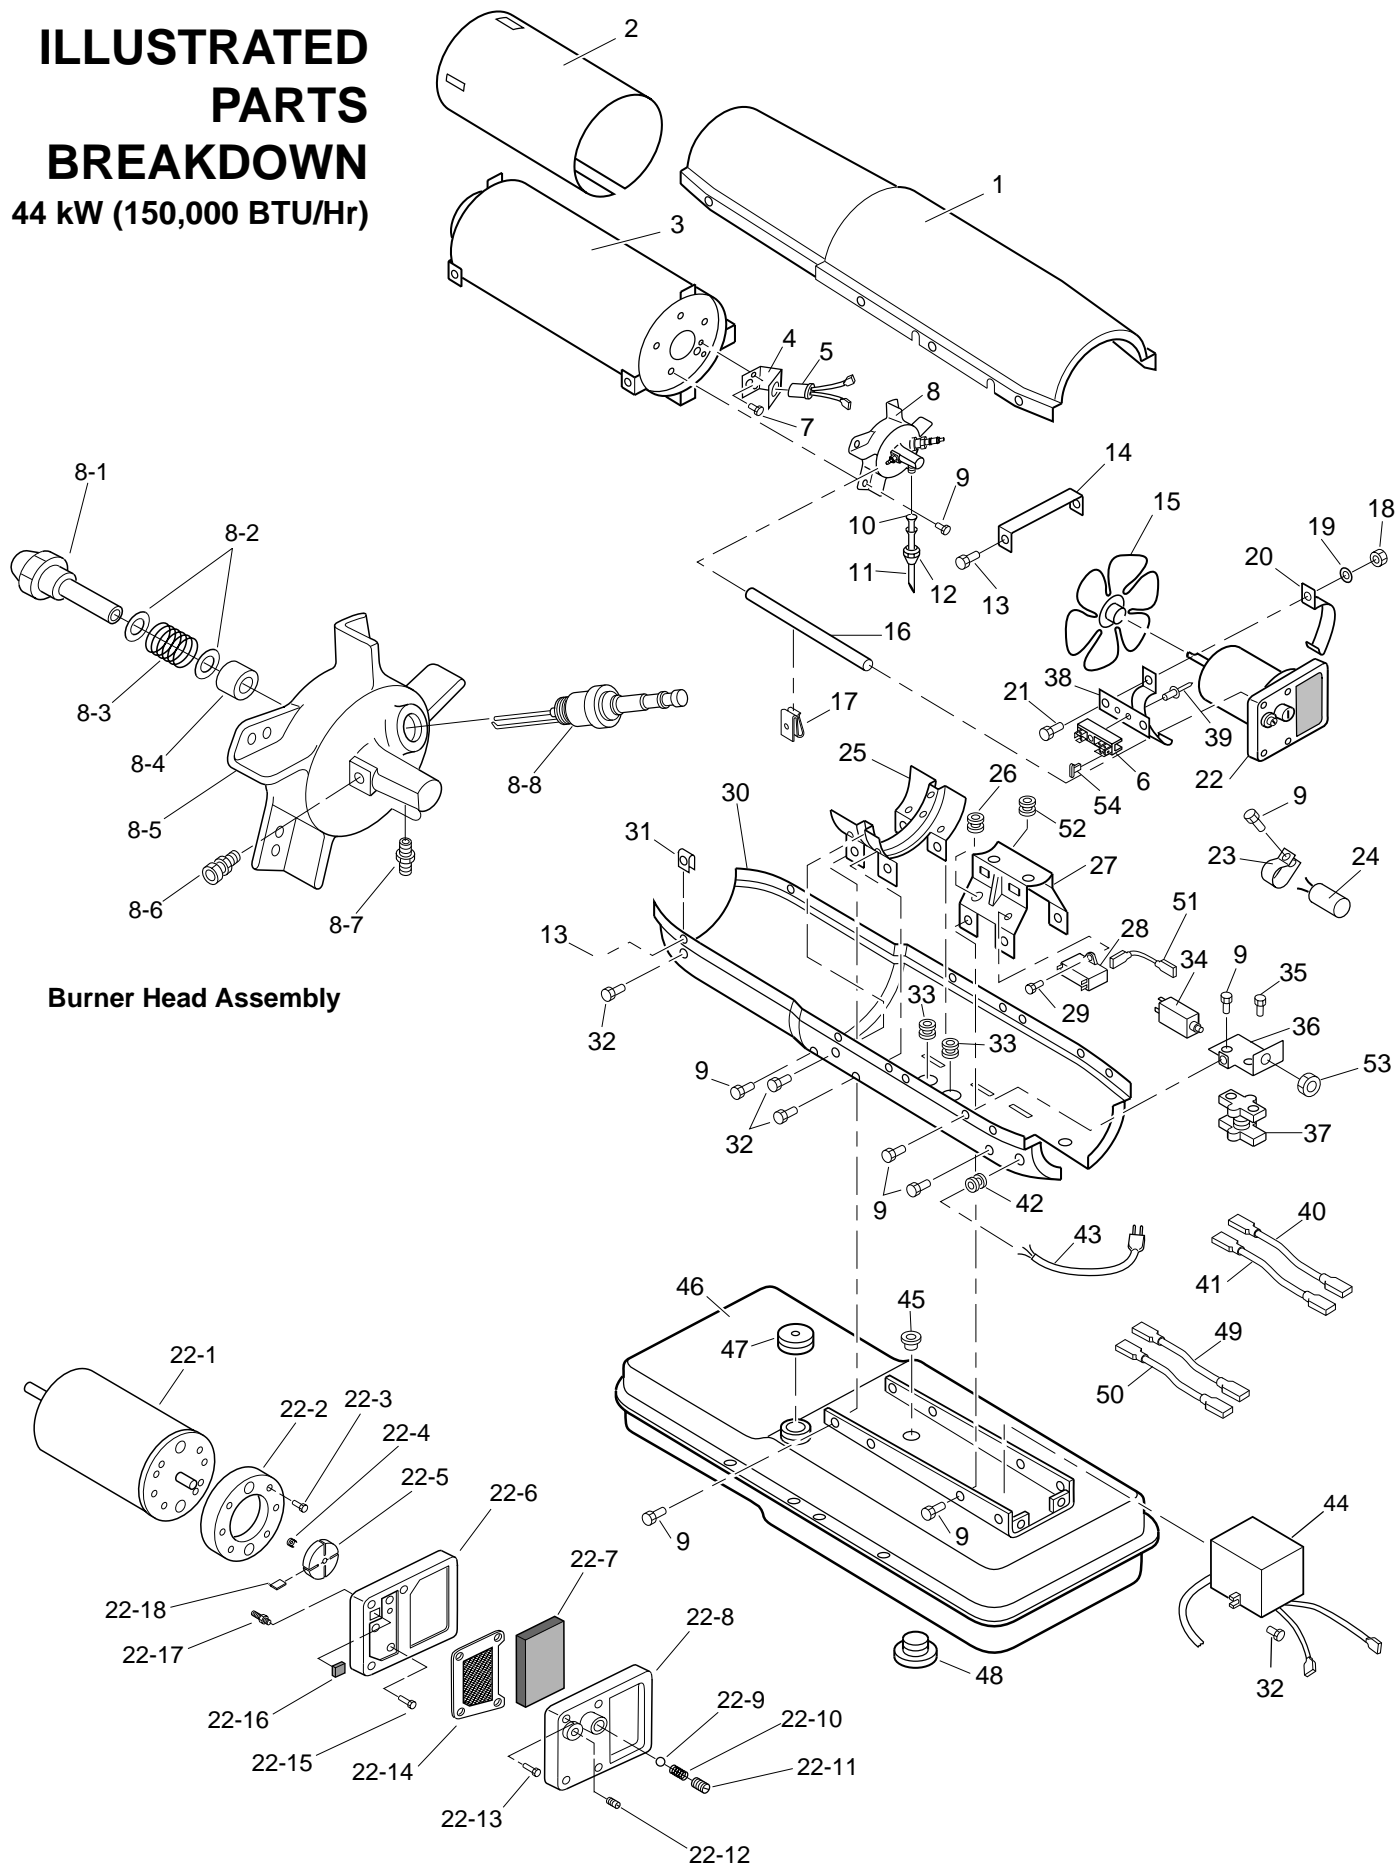

**Burner Head Assembly**

# PARTS LIST

44 kW (150,000 BTU/Hr)

This list contains replaceable parts used in your heater. When ordering parts, be sure to provide the correct model and serial numbers (from the model plate), then the part number and description of the desired part.

KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.	KEY NO.	PART NUMBER	PART DESCRIPTION	QTY.
1	098511-68	Upper Shell	1	23	M12651-1	Capacitor Clamp	1
2	098068-01	Heat Deflector	1	24	M12650-3	Capacitor	1
3	098512-02	Combustion Chamber	1	25	M12828	Shell Support Bracket	1
4	M16660	Photocell Bracket	1	26	M30865-04	Open/Closed Bushing	1
5	HA3019	Photocell Assembly	1	27	M16645	Motor Support Bracket	1
6	099125-02	Terminal Board	1	28	M51357-01	Capacitor (Run)	1
7	M10908-2	Screw, #6-32 x 3/8"	2	29	M15823-39	Screw, #8-18 x 1/2"	1
8	**	Burner Head Assembly	1	30	098511-80	Lower Shell	1
8-1	M18022	Nozzle	1	31	M11271-8	Nut Clip	9
8-2	M10659-1	Nozzle Seal Washer	2	32	M11084-29	Screw, #10-16 x 3/4"	8
8-3	M10809-1	Nozzle Seal Spring	1	33	M50104-03	Shorty Bushing	2
8-4	M8882	Nozzle Seal Sleeve	1	34	097630-02	Flame-Out Control	1
8-5	M50924-01	Burner Head Body	1	35	M12461-13	Screw, #8-32 x 1/4"	2
8-6	M50820-02	Barb Fitting	1	36	097060-01	Mounting Bracket	1
8-7	079685-01	Male Connector	1	37	M12462-13	Relay-Motor Start	1
8-8	M10962-2	Spark Plug	1	38	099607-01	Terminal Board Bracket	1
9	M11084-27	Screw, #10-16 x 1/2"	18	39	099157-01	Rivet	1
10	M19630	Fuel Filter	1	40	M9900-183	Wire Assembly (black 6")	1
11	M16790-12	Fuel Tube	1	41	M9900-184	Wire Assembly (black 15")	1
12	M50660-05	Flared 45° Nut	1	42	M11143-1	Strain Relief Bushing	1
13	M15823-27	Screw, #10-16 x 1/2"	10	43	101909-01	Power Cord	1
14	M16871	Retainer Strap	1	44	098557-07	Electronic Ignitor	1
15	M17920	Fan	1	45	M10990-03	Rubber Bushing	1
16	M50814-03	Air Line	1	46	098513-08	Fuel Tank	1
17	M50873-01	Clip	9	47	097702-01	Fuel Tank Cap	1
18	NPC-4C	Hex Nut, 1/4-20	2	48	M27417	Drain Plug	1
19	WLM-4C	Lockwasher, 1/4"	2	49	079010-14	Wire Assembly (red 8 7/8")	1
20	M16661	Motor Clamp	4	50	M9900-77	Wire Assembly (black 15")	1
21	M51043-01	Bolt, 1/4-20 x 1 1/2"	2	51	M16841-57	Wire Assembly (red 8 1/2")	1
22	**	Motor and Pump Assembly	1	52	M30865-02	Open/Closed Bushing	1
22-1	098784-02	Motor (230V/50Hz)	1	53	099177-01	Hex Nut, 3/8-27	1
22-2	M8645-3	Pump Body	1	54	078918-01	Terminal Board Tab Cap	1
22-3	FHPF3-7C	Screw, #10-32 x 7/8"	2	<b>PARTS AVAILABLE - NOT SHOWN</b>			
22-4	M22009	Insert	1				
22-5	M22456-3	Rotor	1		M50140	Fan Guard	1
22-6	M50545	End Pump Cover	1		097773-02	Tradename Decal	2
22-7	M12179	Intake Filter	1		M18053	Filler Neck Screen	1
22-8	M16545	End Filter Cover	1		098235-27	General Info. Decal (English)	1
22-9	M8940	Steel Ball (1/4" Dia.)	1		100942-03	General Info. Decal (Spanish)	1
22-10	M10993-1	Pressure Relief Spring	1				
22-11	M27694	Adjusting Screw	1				
22-12	M22997	Plug	1				
22-13	M12461-31	Screw, #10-32 x 1"	4				
22-14	M12244-1	Output Filter	1				
22-15	M12461-34	Screw, #10-32 x 1 1/2"	6				
22-16	M11637	Lint Filter	1				
22-17	M50820-02	Barb Fitting	1				
22-18	M8643-3	Blade	4				

\*\*Not available as an assembly, order parts separately.

# WARRANTY AND REPAIR SERVICE

## CERTIFICATE OF GENERAL EQUIPMENT - LIMITED 90 DAY WARRANTY

DESA International warrants new Products sold by it to be free from defects in material or workmanship for a period of ninety days after date of delivery to the first user and subject to the following conditions:

DESA International's obligation and liability under this Warranty is expressly limited to repairing or replacing at DESA International's option, any parts which appear to DESA International upon inspection to have been defective in material or workmanship when shipped from the factory. Such parts shall be provided at no cost to the user, at the business establishment of any factory authorized service center or the factory during regular working hours. The Warranty shall not apply to component parts or accessories of Products not manufactured by DESA International and which carry the warranty of the manufacturer thereof, or to normal maintenance (such as pressure adjustments) or to normal maintenance parts (such as filters and spark plugs). Replacement or repair parts installed in the Product covered by this Warranty are warranted only for the remainder of this Warranty as if such parts were original components of said Product. DESA INTERNATIONAL MAKES NO OTHER EXPRESS WARRANTY. TO THE EXTENT PERMITTED BY LAW DESA INTERNATIONAL MAKES NO IMPLIED WARRANTY AND MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

IN ANY EVENT IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.

Any transportation charges, costs of installation, duty, taxes or any other charges whatsoever must be borne by the user. DESA International's obligation under this limited Warranty shall not include any liability for direct, indirect, incidental, or consequential damage or delay. If requested by DESA International, Products or parts for which a warranty claim is made are to be returned transportation prepaid by user to the factory. Any improper use, including operation after discovery of defective or worn parts, operation beyond capacity, substitution of parts not approved by DESA International, or any alteration or repair by others in such manner as in DESA International's judgement affects the Product materially and adversely, shall void this Warranty.

NO EMPLOYEE OR REPRESENTATIVE IS AUTHORIZED TO CHANGE THIS WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY UNLESS SUCH CHANGE IS MADE IN WRITING AND SIGNED BY AN OFFICER OF DESA INTERNATIONAL AT ITS HOME OFFICE.

### WARRANTY SERVICE

Always specify model and serial numbers when communicating with the factory.

We reserve the right to amend these specifications at any time without notice. The only Warranty applicable is our standard written Warranty. We make no other Warranty, expressed or implied.

A Service Manual is available by writing to the Technical Service Department at:

# DESA

**INTERNATIONAL**  
Corporate Headquarters

2701 Industrial Drive  
P.O. Box 90004  
Bowling Green, Kentucky 42102-9004  
U.S.A.